



To use UART1_OUT, please switch S1 and S0 to 0 and 1