


OmniBreeze

OWNER'S MANUAL
ITM. / ART. 3333004

101.6 cm / 40 in
TOWER FAN

MODEL (DC2018)

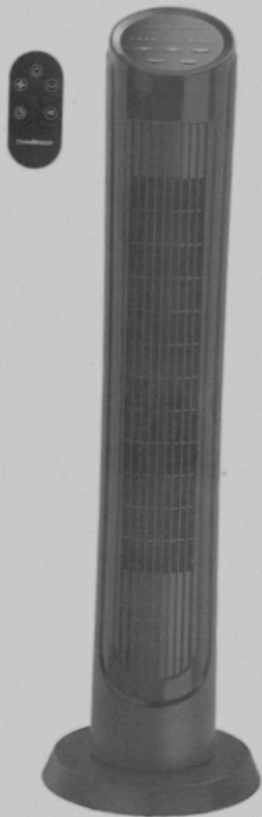

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.
Use only with a fuse rated as specification listed on page 2.

TROUBLE SHOOTING

Problem	Possible Cause	Solution
The fan is not operating	The plug is not fully inserted into the wall outlet.	Make sure that the plug is fully inserted into the base AC wall outlet.
	The wall outlet experienced an overload.	Unplug the fan. Inspect the main electrical breaker box. If you find a tripped breaker, reset it. If the problem persists, contact a qualified, licensed electrician.
	Fuse in plug failed. (For US, Mexico and UK)	Remove and inspect the fuse located in the plug. If the fuse is tripped, replace with the appropriated fuse rated as specification listed on page 2. If the problem persists, contact a qualified, licensed electrician.
	The fan is defective.	Contact customer service at service@singfun.com.cn or call 1-866-505-1001 for assistance.
The remote control does not operate the fan	Inspect the battery to ensure it is correctly installed.	Make sure remote is pointed toward front infrared window of fan. Replace the battery. For best performance we recommend using a DL2032 battery.
	The battery is expired.	If the problem persists, contact customer service at service@singfun.com.cn or call 1-866-505-1001 for assistance.
The fan(s) are missing parts	Omitted parts are extremely rare due to stringent quality control during assembly; however there is a possibility that parts can be omitted.	Contact customer service at service@singfun.com.cn or call 1-866-505-1001 for assistance.

CUSTOMER SERVICE

HAVE A PROBLEM? DO NOT RETURN TO PLACE OF PURCHASE. PLEASE CONTACT CUSTOMER SERVICE.

Customer Service for North America (English, Spanish)

1-866-505-1001

8 am to 4 pm, EST

service@singfun.com.cn

WARRANTY: This fan includes a one (1) year warranty, which covers manufacturer defects and workmanship under normal use. Warranty is offered only to the original purchaser. Proof of purchase is required. Proof of purchase constitutes a dated sales receipt. This warranty is void if the fan(s) have been subject to abuse such as: being dropped which could result in damage to the fan cabinets, motors, fan controls, etc., immersion in or exposure to water, exposure to excessive heat, outdoor usage, any use other than household use, disassembly, repair or alteration by anyone other than an authorized service provider, use on improper voltage or current, or any use contrary to the user instructions.

Batteries and battery life are not covered in this warranty. No other warranties are expressed or implied. To receive coverage under this warranty, contact customer service for consultation and/or replacement. **DO NOT** attempt to repair any electrical or mechanical functions of this product; doing so will void this warranty and could lead to injury.