

# R-Pi configuration file

From eLinux.org

How to edit the boot configuration file for Raspberry Pi

## Contents

- 1 A quick overview
- 2 How to edit from OS X
- 3 How to edit from the Raspberry Pi
- 4 How to edit from a Windows PC
- 5 An example configuration file
- 6 What configuration options are available?
- 7 References

## A quick overview

While booting up, the Raspberry Pi reads some configuration parameters from the SD card. These parameters are stored in a file named `config.txt` and located in the `/boot` partition at `/boot/config.txt`. You can edit this configuration file from a Mac, from a Linux PC, or from within the Raspberry Pi itself. Depending on the partitioning scheme of your SD card, the `/boot` partition may not be visible to Windows PCs. In this case, you will need use either a Mac, a Linux PC or the Raspberry Pi to edit the configuration file.

This configuration file contains instructions which are necessary to setup the display. If you have severe problems with the display, you will need to connect the SD card to a PC so that you can edit the configuration file. If the display is working but you wish to make minor adjustments, you may find it more convenient to edit the file from within the Raspberry Pi itself.

## How to edit from OS X

This method is most useful if you cannot see anything on the display of the Raspberry Pi.

- Shut down your Raspberry Pi, remove the power and remove the SD card.
- Put the SD card in your Mac's card reader and wait for the card to appear on the Desktop.
- Open the card in Finder.
- Look to see if there is a file called config (or possibly config.txt).
- If this file exists, open it with TextEdit. If not, create a new file in Textedit as Plain Text format.
- Add the necessary configuration parameters.
- Save the file as "config" and quit TextEdit.
- In Finder eject the SD card by dragging it to the Trash or clicking the eject button in the Finder window.
- Remove the SD card from the PC and insert it in the Raspberry Pi.

## How to edit from the Raspberry Pi

This method is most useful if you can see the display of the Raspberry Pi and you wish to make minor adjustments.

- Reboot the Raspberry Pi and enter your username and password.
- To edit the configuration file, enter the command

```
sudo nano /boot/config.txt
```

- Type in the necessary configuration parameters
- Save the edited file

```
Press Control-x  
Press y  
Press [enter]
```

- After exiting the editor, restart using the command

```
sudo reboot
```

NOTE: You may find that your changes to config.txt disappear after a reboot. This is a very rare problem and seems to depend on the type of SD card. In this case, use a Windows/Linux/OS X PC to edit the file, see instructions above.

## How to edit from a Windows PC

This method is most useful if you cannot see anything on the display of the Raspberry Pi.

NOTE: Depending on the partitioning scheme of your SD card, you may not be able to edit the configuration file using Windows.

- Shut down your Raspberry Pi, remove the power and remove the SD card.
- Put the SD card in your PC's card reader and wait for the folder to open automatically.
- If the folder does not open automatically, open "My Computer" and then open the drive marked "SD".
- Look to see if there is a file called config (or possibly config.txt).
- If this file exists, open it with Notepad. If not, create the file with Notepad (One way to do this, in Windows XP or Windows 7, is to right-click where you see the other files,

select New and then Text document. Then change "New Text Document" to "config"). Note: Do not use the Wordpad editor or Microsoft Word to edit the file. If you are creating the file, make sure you create it in the /boot partition (approximate size 56 MB). If you create the file in a partition other than the /boot one, it will not be taken into account by Raspberry Pi.

- Change the necessary configuration parameters.
- Save the file (menu item File, Save)
- Exit Notepad
- In Windows Explorer, go to "My Computer". Right-click on the SD card and select "Safely Remove".
- Remove the SD card from the PC and insert it in the Raspberry Pi.

## An example configuration file

This example show how to reduce the size of the display to prevent text spilling off the edge of the screen.

```
# Uncomment if you get no picture on HDMI for a default "safe" mode
#hdmi_safe=1

# Uncomment this if your display has a black border of unused pixels visible
# and your display can output without overscan.
#disable_overscan=1

# Uncomment the following to adjust overscan. Use positive numbers if console
# goes off screen, and negative if there is too much border.
#overscan_left=20
#overscan_right=20
#overscan_top=20
#overscan_bottom=20

# Uncomment to force a console size. By default it will be display's size minus
# overscan.
```

```
#framebuffer_width=1280
#framebuffer_height=720

# Uncomment if an HDMI display is not detected and composite is being output.
#hdmi_force_hotplug=1

# Uncomment to force a specific HDMI mode (this will force VGA).
#hdmi_group=1
#hdmi_mode=1

# Uncomment to force an HDMI mode rather than DVI. This can make audio work in
# DMT (computer monitor) modes.
#hdmi_drive=2

# Uncomment to increase signal to HDMI, if you have interference, blanking, or
# no display.
#config_hdmi_boost=4

# Uncomment for composite PAL
#sdtv_mode=2

# Uncomment to overclock the ARM. 700 MHz is the default.
#arm_freq=800

# For more options, see http://elinux.org/RPi_config.txt
```

## What configuration options are available?

For a list of all the configuration options available, click [here](http://elinux.org/RPi_configuration_file)

## References



- E ([http://elinux.org/index.php?title=Template:Raspberry\\_Pi&action=edit](http://elinux.org/index.php?title=Template:Raspberry_Pi&action=edit))

Startup	Buying Guide - SD Card Setup - Basic Setup - Advanced Setup - Beginners Guide - Troubleshooting
Hardware	Hardware - Hardware History - Low-level peripherals - Expansion Boards
Peripherals	Screens - Cases - Other Peripherals (Keyboard, mouse, hub, wifi...)
Software	Software - Distributions - Kernel - Performance - Programming - VideoCore APIs - Utilities
Projects	Tutorials - Guides - Projects - Tasks - DataSheets - Education - Communities



Retrieved from "[http://elinux.org/index.php?title=R-Pi\\_configuration\\_file&oldid=366356](http://elinux.org/index.php?title=R-Pi_configuration_file&oldid=366356)"

Category: RaspberryPi

- This page was last modified on 31 December 2014, at 11:40.
- This page has been accessed 406,348 times.
- Content is available under a Creative Commons Attribution-ShareAlike 3.0 Unported License unless otherwise noted.