


Photodiode and IR sensor Tester Kit Report

This kit has a basic circuit connected between:


- I. IR and photodiode female connector
- II. Potentiometer
- III. Green LED (for indicator)
- IV. Resistor 100ohm
- V. LM358AN IC operational-amplifier

Below show the function prototype of the circuit powered by Arduino 5V:

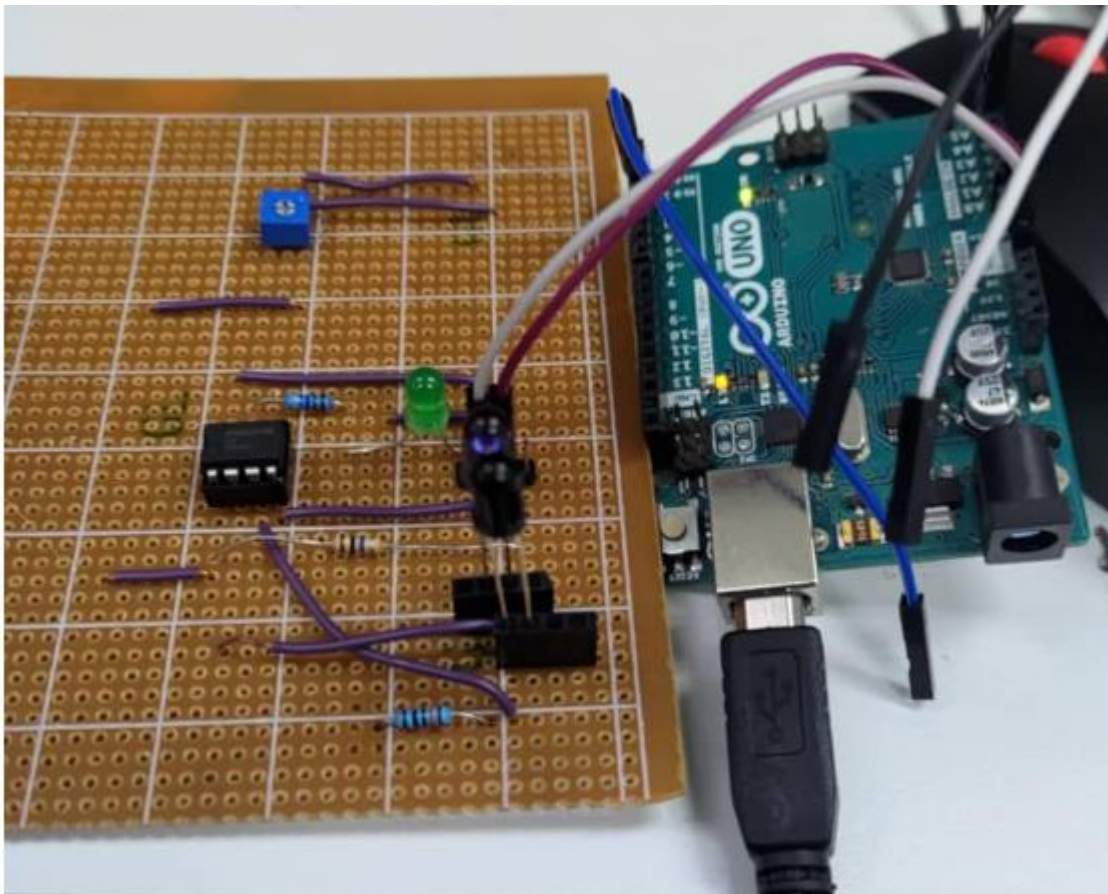


Result of the tester:

- When the circuit tester is power up , adjust the potentiometer to suitable current supply:

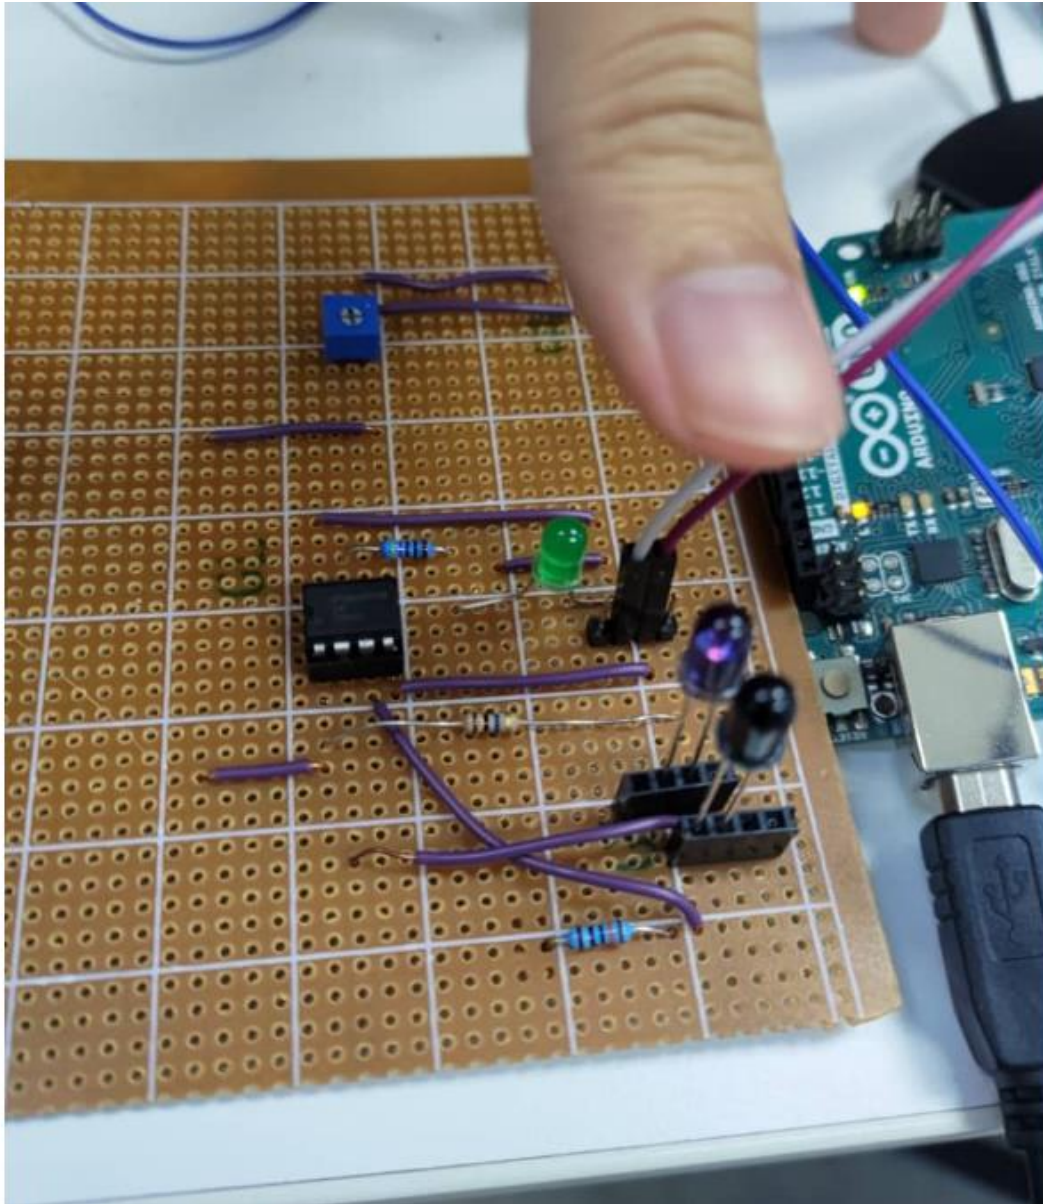

As in the image above, see the IR light is visible in the image camera state the circuit is ready.

- Then, close the light receiver or photodiode and the IR :

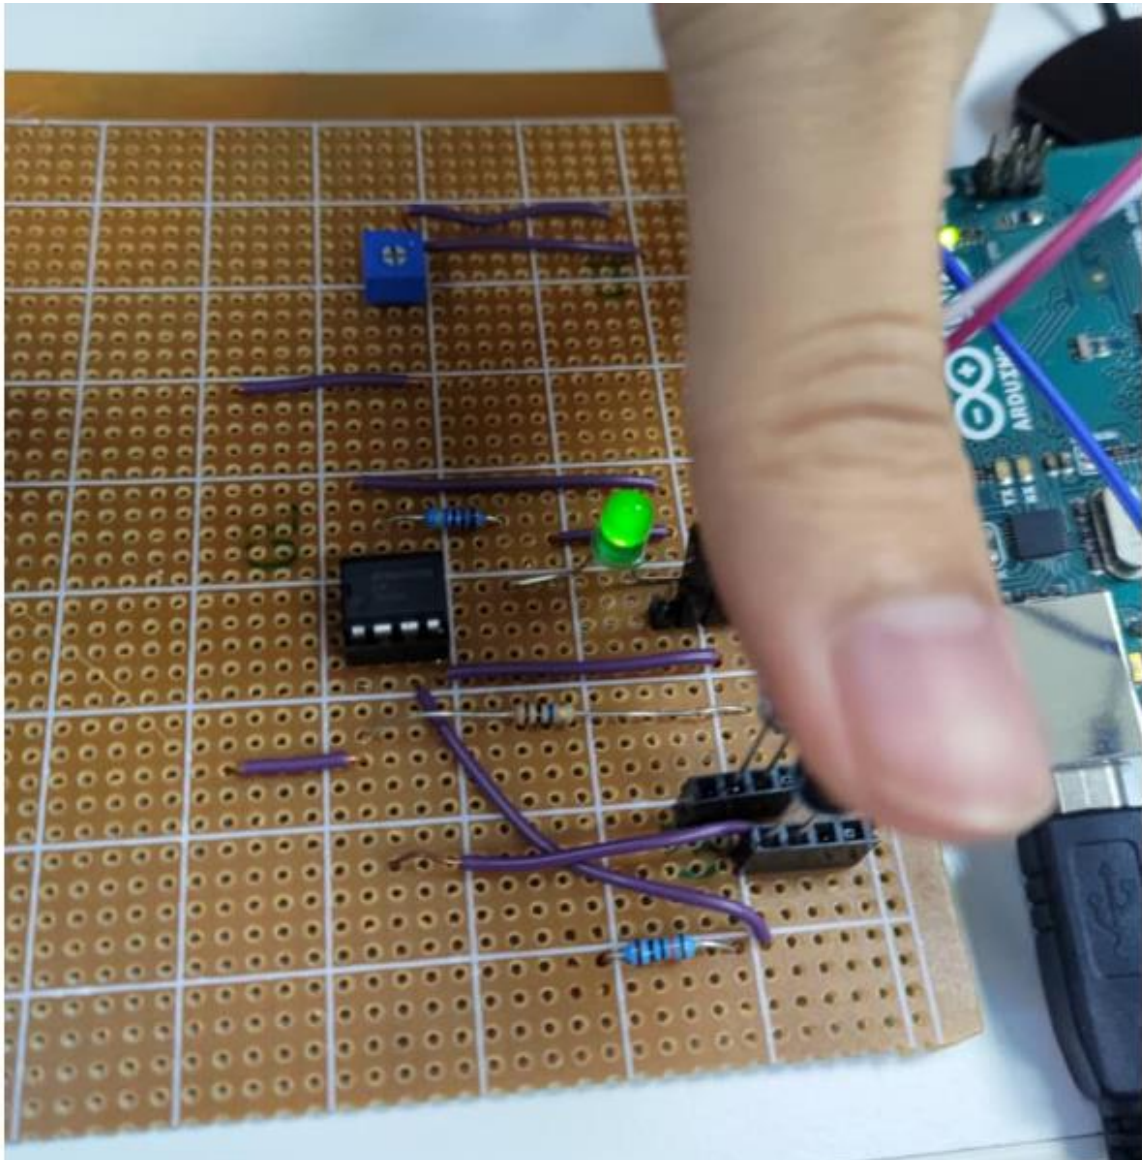

Result: The green light LED is ON indicates that the IR and photodiode is in the good condition.

END