



PLANTA DE LOCALIZACIÓN DE COLUMNAS
ESC 1 : 100

MODULO 1

C-101 (0.40X0.85) PISO 6 A CIM	C-102 (0.40X0.85) PISO 6 A CIM	C-103 (0.40X0.85) CUB. A CIM	C-104 (0.40X0.625) CUB. PISO 6 A CIM (0.40X0.85)
C-105 (0.40X0.85) PISO 6 A CIM	C-106 (0.40X0.85) PISO 6 A CIM	C-107 (0.40X0.85) CUB. A CIM	C-108 (0.40X0.85) PISO 6 A CIM
C-109 (0.40X0.85) PISO 6 A CIM	C-110 (0.40X0.85) PISO 6 A CIM	C-111 (0.40X0.85) PISO 6 A CIM	C-112 (0.40X0.85) PISO 6 A CIM
C-113 (0.40X0.85) PISO 6 A CIM	C-114 (0.40X0.85) PISO 6 A CIM	C-115 (0.40X0.85) PISO 6 A CIM	C-116 (0.40X0.85) PISO 6 A CIM
C-117 (0.40X0.85) PISO 6 A CIM	C-118 (0.40X0.85) PISO 6 A CIM	C-119 (0.40X0.85) PISO 6 A CIM	C-120 (0.40X0.85) PISO 6 A CIM

MODULO 2

C-201 (0.40X0.80) PISO 6 A CIM	C-202 (0.40X0.80) PISO 6 A CIM	C-203 (0.40X0.80) PISO 6 A CIM	C-204 (0.40X0.80) PISO 6 A CIM	C-205 (0.40X0.80) PISO 6 A CIM
C-206 (0.40X0.80) PISO 6 A CIM	C-207 (0.40X0.80) PISO 6 A CIM	C-208 (0.40X0.80) PISO 6 A CIM	C-209 (0.40X0.80) CUB. A CIM	C-210 (0.40X0.80) PISO 6 A CIM
C-211 (0.40X0.80) PISO 6 A CIM	C-212 (0.40X0.80) PISO 6 A CIM	C-213 (0.40X0.80) PISO 6 A CIM	C-214 (0.40X0.80) PISO 6 A CIM	C-215 (0.40X0.80) PISO 6 A CIM
C-216 (0.40X0.80) PISO 6 A CIM	C-217 (0.40X0.90) NE +16.01 A CIM	C-218 (0.40X0.80) NE +16.01 A CIM	C-219 (0.40X0.80) NE +16.01 A CIM	C-220 (0.40X0.80) NE +17.30 A CIM
C-221 (0.40X0.80) NE +17.30 A CIM	C-222 (0.40X0.90) NE +17.30 A CIM	C-223 (0.40X0.90) CUB. A CIM	C-224 (0.40X0.90) CUB. A CIM	C-225 (0.30X0.30) CIM

NOTAS:
1. VER NOTAS GENERALES EN PLANO IND