


RE: Enable Commtel's Production Mode

The steps below show how to enable Production Mode of the Commtel. In this mode Commtel can write all radio's EEPROM locations even if they are masked out as locations for radio's calibration values.

1. Start the Commtel s/w; establish its communication with the radio.
2. On the Commtel's "Diagnostics" tab click a rightmost small square in the lower right corner of the "Ethernet Port Statistics" frame.

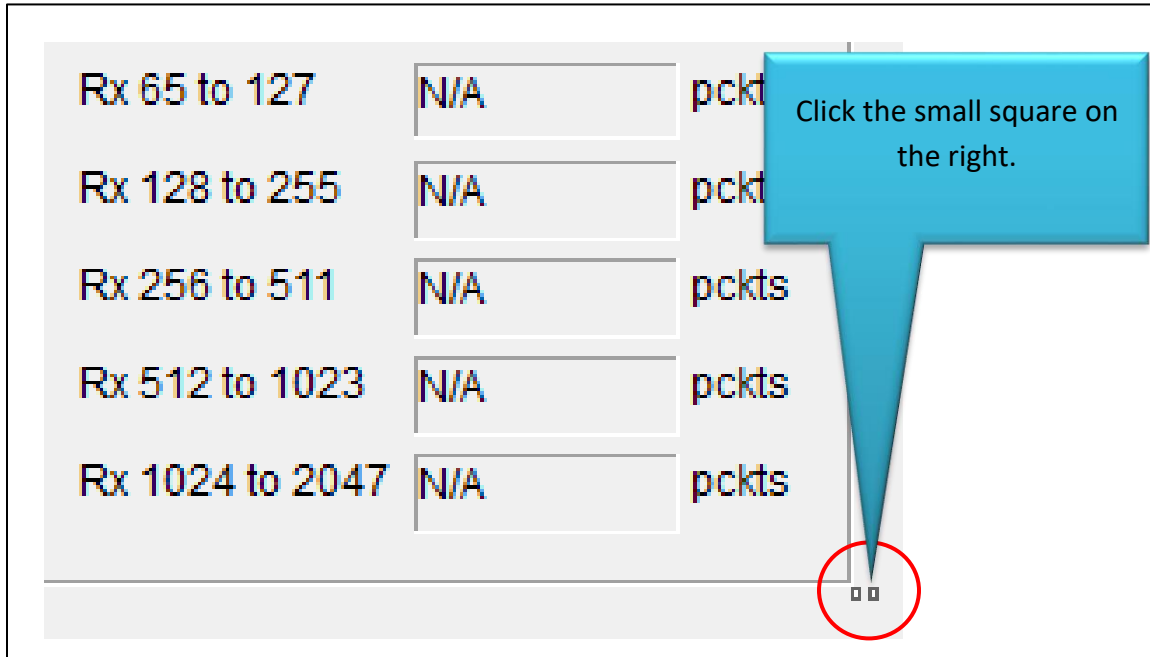

3. The 'Transmission log' window will read 'Production Mode is enabled'. Additional clicks on the same square button will toggle the Production Mode between Enabled and Disabled. Make sure it is left at Enabled state. Closing and restarting Commtel will disable this mode.

