



MZ-80B Port Address 0D8,0D9,0DA,0DB,0DC,0DD = Floppy CTRL ports		
MZ-80B Port Address 0F0, 0F1, 0F2, 0F3 = Teensy EX PORT Handling		
MZ-80B Port Address 0F5, 0F6, 0F7, 0FA, 0FB = Teensy RAM/EEPROM Space Access		
WARNING: RX1 and TX1 pins on EX PORT are 3.3v ONLY, NEVER APPLY 5v signal to those pins!		
Sheet: /		
File: MZ_80B Teensy Interface.sch		
Title: Interface Card SHARP MZ-80B to Teensy 4.1 board		
Size: A4	Date: 13/02/2021	Rev: 1.0
KiCad E.D.A. kicad (5.1.8-0-10_14)	Alain Lowet - ELITECH	Id: 1/1