




Sheet: /		
File: Motio.sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. kicad 4.0.7-e2-637661ubuntu18.04.1		Id: 1/4

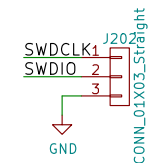


Rev:
Id: 2/4

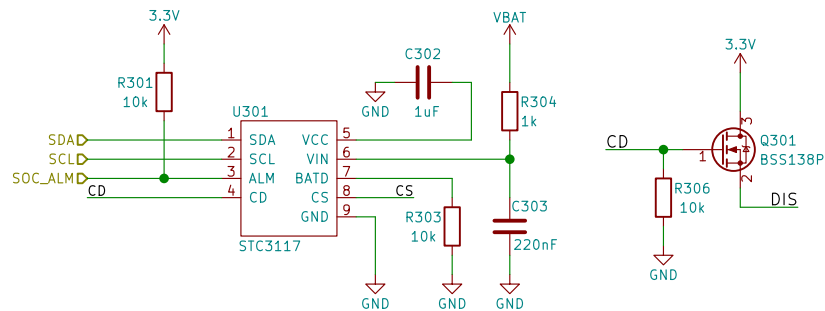


STATE OF CHARGE

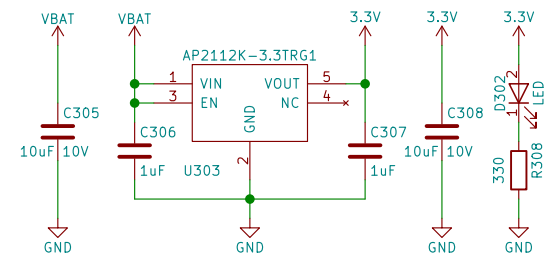

3.3V REG

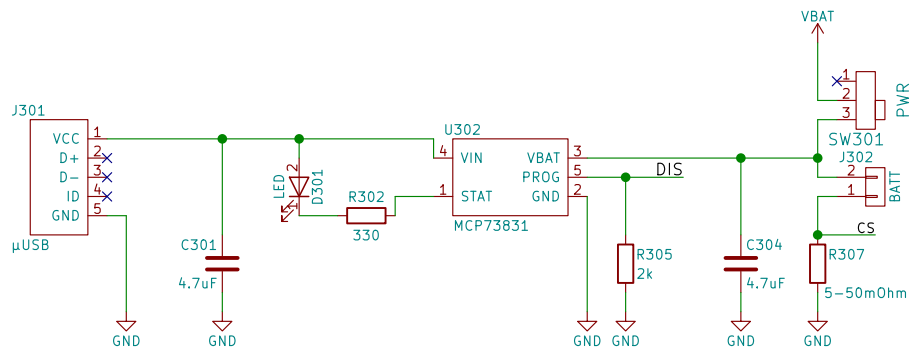

BAT CHARGER

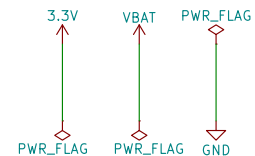

PWR FLAGS

Sheet: /Power/
File: Motio_Power.sch

Title:


Size: A4

Date:



KiCad E.D.A. kicad 4.0.7-e2-637661ubuntu18.04.1

Rev:

Id: 3/4

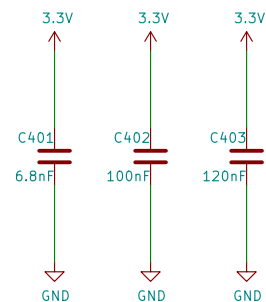

IMU

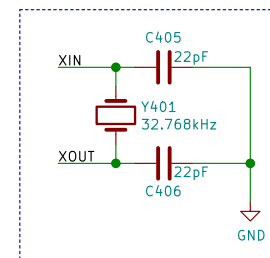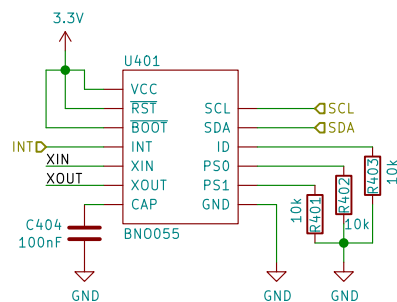

Optional:
By default the internal oscillator is selected, to use the external one set CLK_SEL bit in the SYSTEM_TRIGGER register.

Sheet: /BNO055/
File: Motio_BNO055.sch

Title:

Size: A4

Date:

KiCad E.D.A. kicad 4.0.7-e2-637661ubuntu18.04.1

Rev:

Id: 4/4