


NOTES

Circuit connection for Rc control car Project-001

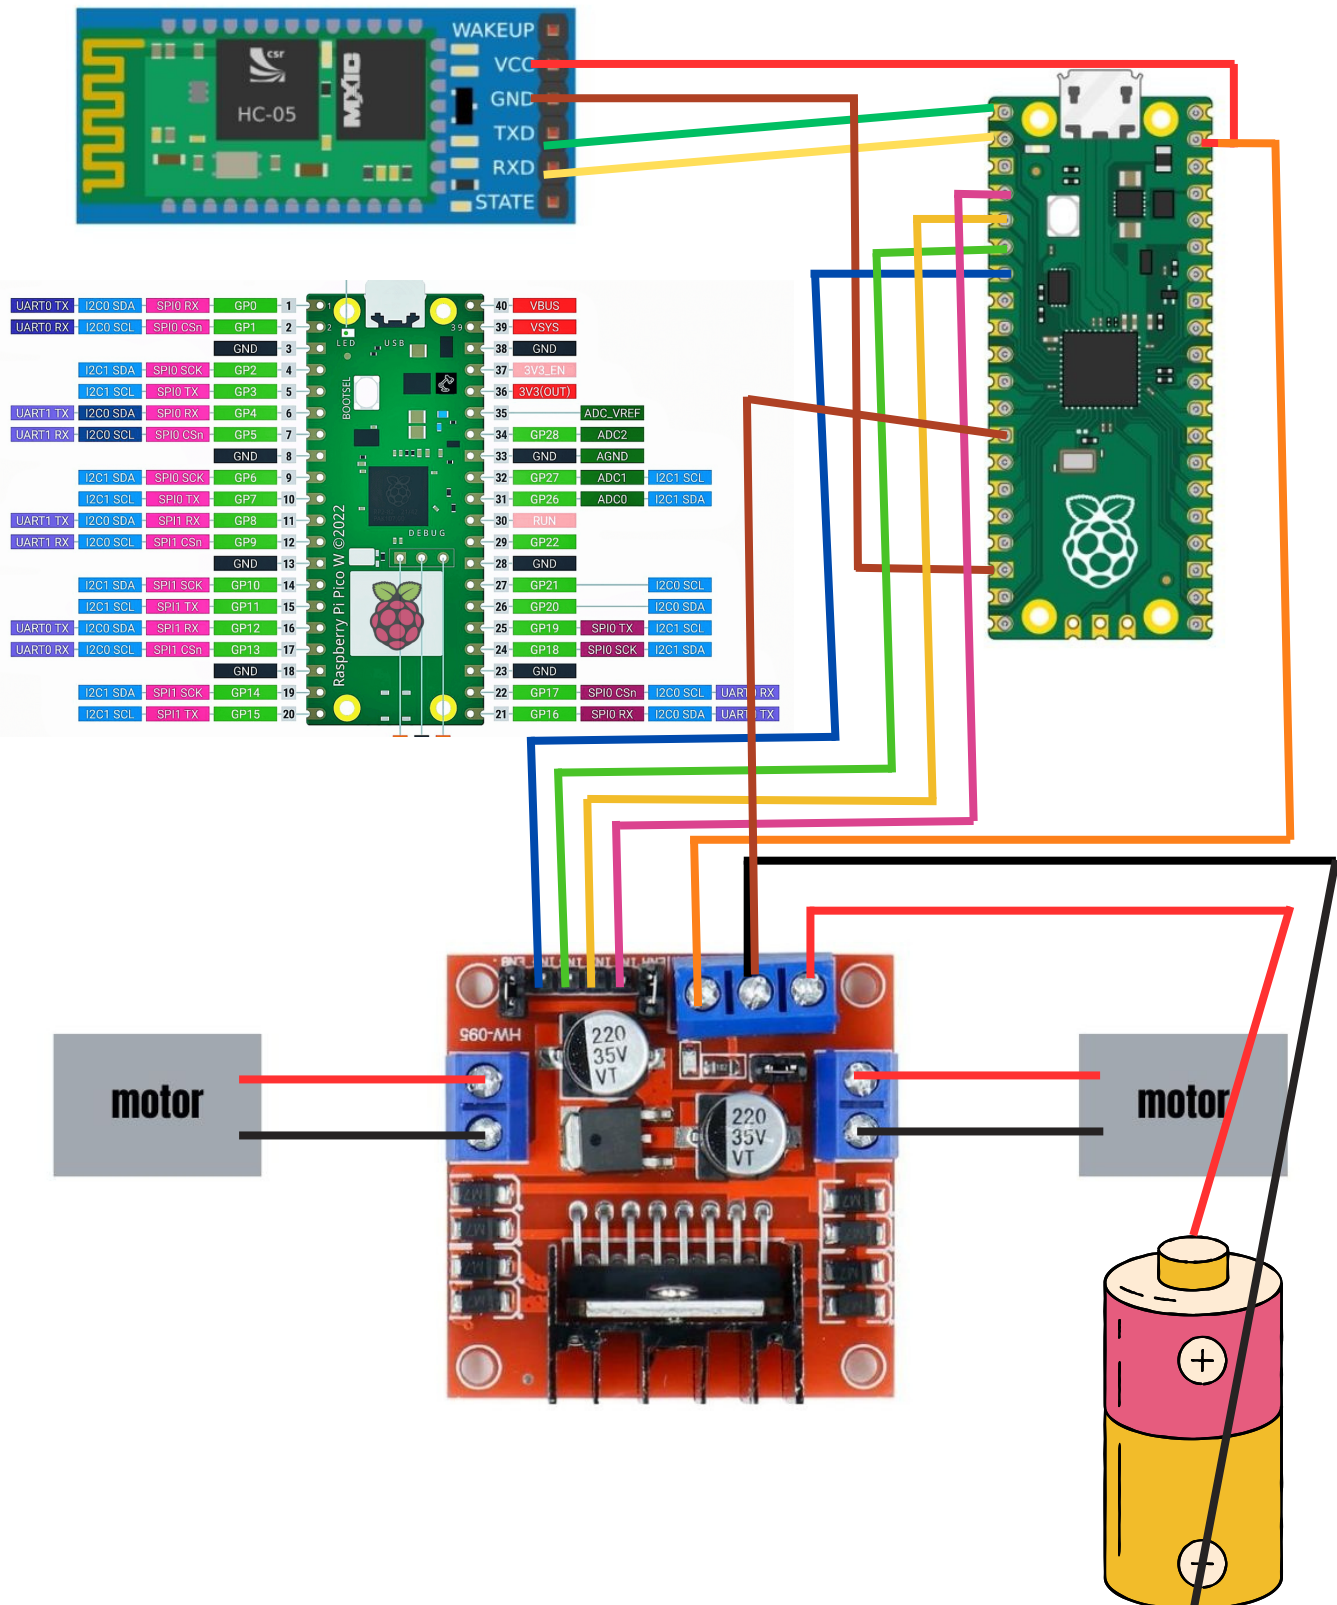

Bluetooth Connection with Pico

VCC -----> PIN 39

GND -----> GND PIN (ANY WORKS)

TXD -----> GP0 PIN (LOOK THE PIN DIAGRAM)

RXD -----> GP1 PIN

Motor Driver connection to Pico

IN1----> PIN 4

IN2----> PIN 5

IN3----> PIN 6

IN4----> PIN 7

5V ----> PIN 39 (FOR POWERING THE PICO)

GND ----> PIN 13 (GND PIN)



Possible errors

bluetooth not connection , getting errors . try switching the txd and rxd wires

Make sure to connect the driver's GND to the pico's GND pin, or else it won't turn on.

Battery voltage 5 - 10 volts. (if the charge is in between 5-12 v only then connect the 5v of the motor driver to PIN 39, if the charge is more than that it can fry the pico.

Support guide

- [video 1](#)
- [video 2](#)

I also learned from these tutorials ,follow through and you will make it