

## Tutorial for High-rise project

Prepared by Mátyás Obreczán in 2006  
(Erasmus student from Budapest University of Technology and Economics)

TU Delft Faculty of Architecture  
Building Services Chair  
Teaching Staff : Elisa Boelman and Leo de Ruijscher

Through the following tutorial we will make the elevator-calculations for a 20 floor office building. I will explain in a few chapters how to set up the calculations in the program and how to use the program's several analysis and simulation modes in the case of your building to have in the end a safe, but economically well designed elevator system.

How to use this tutorial:

Usually one main analysis mode is one chapter. The chapters explain how to add the data of your building into the program, and it's really recommended to start at the first chapter and go through step by step. There are example files available for every chapter for the easier use of the tutorial.

In the tutorial I will recommend certain analysis and simulation modes, because the program itself is for professional use, so it can solve much more difficult and detailed problems than yours. Of course it would take too much time, and you need to take care of the other parts of your Building Services Report.

The program itself works in a step by step way. There are 6 main screens where you can set all the data for the calculations, usually you will fill these one by one, but also you can reach them directly with buttons or from the Analysis menu.

These are:

Job Data



Analysis Data



Building Data



Elevator Data



Passenger Data



Report Options



In this tutorial the calculations will be only about the passenger elevators, but please think also about the freight and the fire-fighter elevators.

## Table of contents:

I. Tutorial for the first rough calculations .....	4
1.1 Analysis type: Up peak calculation .....	6
1.2 Setting up the Building Data .....	9
1.3 The Elevator Data screen.....	10
1.4 Setting up the building population in the Passenger Data screen .....	11
1.5 The Report Options screen.....	13
1.6 Calculation and the results .....	14
II. Up peak simulation .....	15
2.1 Analysis type: Simulation .....	15
2.1.1 Recommended simulation mode .....	17
2.1.2 Other simulation modes .....	18
2.2 The Building Data screen .....	21
2.3 The Elevator Data screen.....	22
2.4 The Passenger Data screen.....	23
2.5 Report Options in simulation mode .....	25
III. Multiple zones .....	26
3.1 Elevator Data screen: Advanced mode .....	28
3.2 Setting up mechanical floors.....	31
IV. Twin elevators .....	34
V. Shuttle elevators .....	35
5.1 Calculating a simple shuttle elevator group: .....	36
5.2 Calculating a double-decker shuttle elevator group:.....	38

## **I. Tutorial for the first rough calculations**

For a reference concerning the use of this option see the example file:

<Tutorial1\_up\_peak\_simple\_analysis.elv>. Please keep in mind that there may be some small differences in content between the data in the file and the data on the screenshots.

The aim is to get a number and size of elevator shafts, after the first few weeks. In the High Rise project you can give this information to the architect, who will get a rough idea about the space in the core needed for elevator shafts. This will be really important for you in the beginning, because during the elevator calculations you can decrease the number or the size of the elevators. It's much better than if you find out in the end of the project, that you can't provide the necessary elevator capacity, because at that time this big change (like to change the size of the core) is impossible.

With the Elevate program you can easily and quickly get the first idea about size/number of shafts, and groups.

These examples are mainly for office buildings.

**Job Data**

Cancel < Back Next > Finish

Job title: Tutorial

Job No.: 01

Calculation Title: Up peak calculation

Made by: Matyas Obreczan

Checked by:

Company: High Rise Buildings

Logo image: select

**ELEVATE**

You can access **Job Data** by selecting **Edit/ Job Data**, or by pressing the  button on the Toolbar.

**Job data** allows you to record details of the project, and who has performed the calculations. This information, the date, and document name is included in the header of all Elevate print outs.

You can reach the next screen with the **Next** button.

## 1.1 Analysis type: Up peak calculation

The screenshot shows a software window titled "Analysis Data" with a close button (X) in the top right corner. At the top, there are four buttons: "Cancel", "< Back", "Next >", and "Finish". The main area is divided into several sections:


- Analysis type:** A dropdown menu set to "Up peak calculation".
- Measurement system:** Two radio buttons, "Metric" (selected) and "U.S.".
- Dispatcher:** A section containing:
  - Algorithm:** Two radio buttons, "Standard" (selected) and "Custom".
  - Mode:** A dropdown menu set to "Group Collective".
  - Advanced settings...** A button.
- Simulation parameters:** A section with four input fields:
  - "Time slice between simulation calculation (s)" with a value of "0.1".
  - "No of time slices between screen updates" with a value of "10" and a spin button.
  - "No of simulations to run for each configuration" with a value of "10".
  - "Random number seed for passenger generator" with a value of "1".
- Round Trip Time calculations:** A section with one input field:
  - "Losses (%)" with a value of "5".

For the first rough calculations we will use the **Up peak calculation**.

The following part is from *The Vertical Transportation Handbook*, edited by George R. Strakosch. You also could find other parts of the book in the *High Rise readers*, or the book itself in the library. It's really worth to take a look into this book.

The up-peak or start-to-work period has traditionally been the basis for establishing the quantity of elevator handling capacity for an office building. This is usually a critical period, as surface transportation and subways discharge passengers at the building and arrivals are at their highest level. It is essential to clear the lobby and get people to their desks so they can begin work.(...)

The traffic will usually peak during a 5-min period before the time most people start work. The intensity of this peak, consisting primarily of up traffic with some down traffic, is stated as a percentage of building population and forms a means of relating one building to another and the basis of establishing the elevating of each (Figure 10.1.)

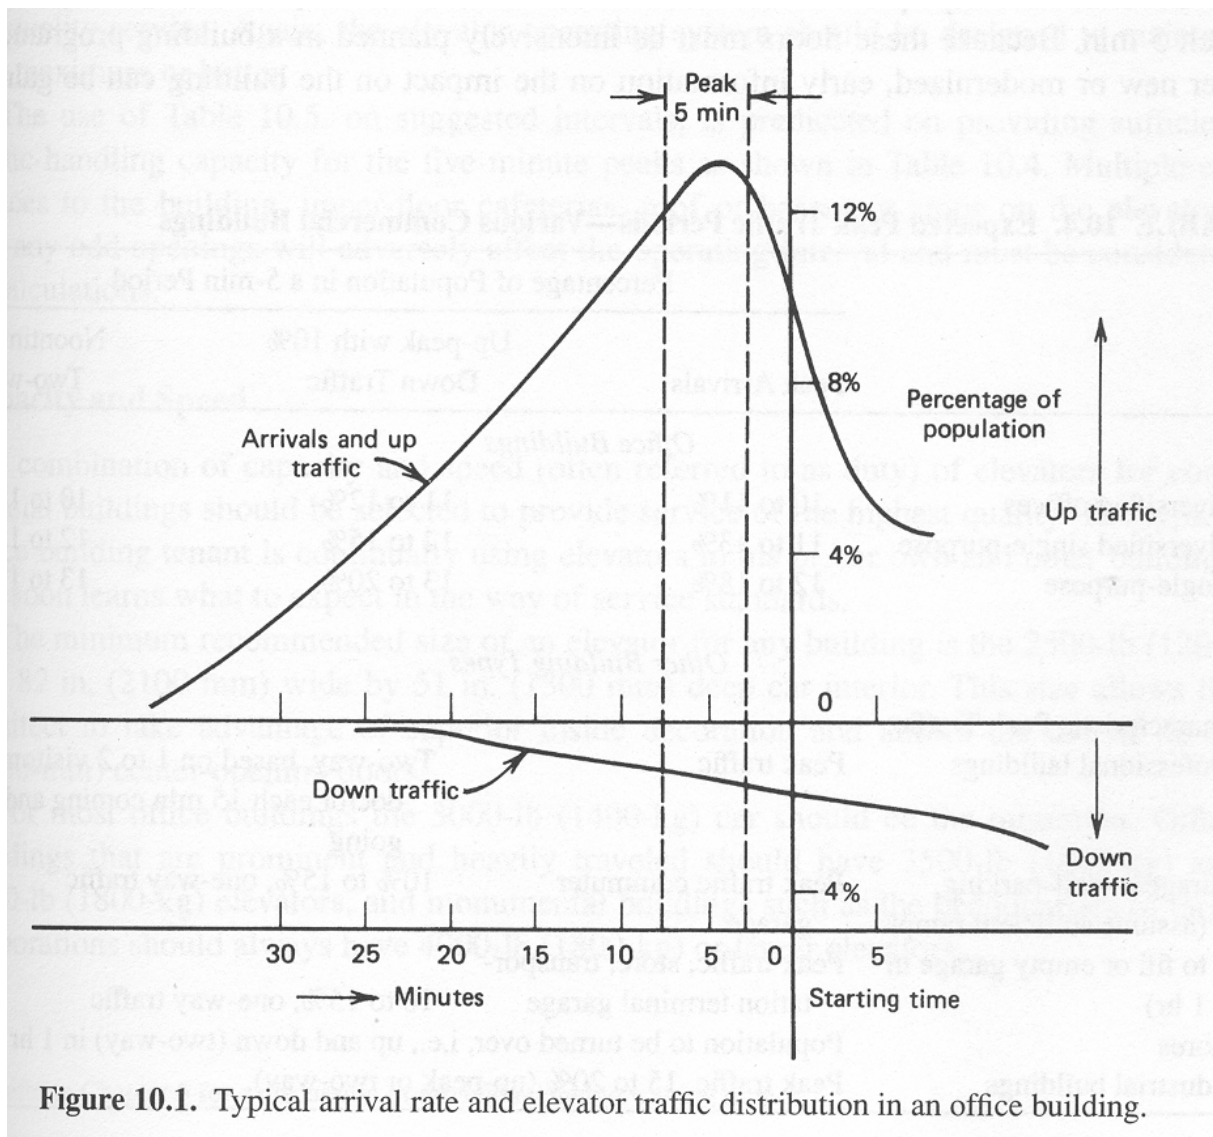

**Figure 10.1.** Typical arrival rate and elevator traffic distribution in an office building.

You can see these percentages in Table 10.4. In an office building you can use about 15% of the building population will come in during this 5 min period.

**TABLE 10.4. Expected Peak Traffic Periods—Various Commercial Buildings**

	Percentage of Population in a 5-min Period		
	Peak Arrivals	Up-peak with 10% Down Traffic	Noontime or Two-way
<i>Office Buildings</i>			
Diversified offices	10 to 11%	11 to 12%	10 to 12%
Diversified single-purpose	11 to 13%	12 to 15%	12 to 15%
Single-purpose	12 to 18%	13 to 20%	13 to 17%
<i>Other Building Types</i>			
Characteristic Peak Traffic:			
Professional buildings	Peak traffic	Two-way, based on 1 to 2 visitors per doctor each 15 min coming and going	
Garages—self-parking (assume sufficient ramps to fill or empty garage in 1 hr)	Peak traffic commuter garage	10% to 15%, one-way traffic	
	Peak traffic, store, transpor- tation terminal garage	10 to 15%, one-way traffic	
Stores	Population to be turned over, i.e., up and down (two-way) in 1 hr		
Industrial buildings	Peak traffic, 15 to 20% (up-peak or two-way).		

**Measurement System** – Choose whether you want to use **Metric** or **U.S.** (Imperial) units for this analysis. Your selection here will determine whether Elevate uses “metres and kilograms” or “feet and pounds” in the other dialog boxes, and for output of results.

**Losses** – Some designers add a % to the calculated value of Round Trip Time (RTT) to allow for controller inefficiencies and people holding doors, etc. To increase RTT in this way, enter a value here. Alternatively, enter zero.

The default value for the program is 5%, we also can use this.

You can reach the next screen with the **Next** button.



## 1.2 Setting up the Building Data

Building Data

Cancel < Back Next > Finish

	Floor Name	Floor Height (m)
1	Level 1	3,8
2	Level 2	3,8
3	Level 3	3,8
4	Level 4	3,8
5	Level 5	3,8
6	Level 6	3,8
7	Level 7	3,8
8	Level 8	3,8
9	Level 9	3,8
10	Level 10	3,8
11	Level 11	3,8
12	Level 12	3,8
13	Level 13	3,8
14	Level 14	3,8

Speed fill table  
Clear table  
Copy  
Cut  
Paste

Enter  
☒ Floor height or ☐ Floor level

Express zones need to be entered for Round Trip Time calculations only  
☐ Express zone ☒ No express zone  
Lowest floor not served by elevators  
Highest floor not served by elevators

Here you can set the number of floors and the floor heights. The easiest and fastest way if you use the **Speed fill table** button, where you can choose from the preset templates, and set the number of floors and heights quickly.

In the tutorial we set a 20 level building with 3,8 m floor height.

You also can set an **Express zone** in the building with the lowest and highest floor numbers, in this case the elevator will skip the floors between those levels.

You can reach the next screen with the **Next** button.

### 1.3 The Elevator Data screen

The screenshot shows a software window titled "Elevator Data". At the top, there is a section for "Elevator selection mode" with two radio buttons: "Standard" (selected) and "Advanced". To the right of this are four buttons: "Cancel", "< Back", "Next >", and "Finish". Below the selection mode is a "Standard data" section containing several input fields and dropdown menus. The fields are: "No. of Elevators" (dropdown set to "Select", value 4, min 4, max 8), "Capacity (kg)" (dropdown set to "Select", value 1000, min 800, max 2000, with a "list" button), "Door times (s)" (dropdown set to "Auto", with sub-fields for "Pre-open" (0), "Open" (1.8), and "Close" (2.9)), "Speed (m/s)" (dropdown set to "Specified", value 5, min 1.60, max 3.15, with a "list" button), "Acceleration (m/s²)" (dropdown set to "Auto", value 0.7), "Jerk (m/s³)" (dropdown set to "Auto", value 1.4), "Start delay (s)" (text input 0.5), and "Home floor" (dropdown set to "Level 1").

Here you can set the data of the elevators. You can specify the number, the capacity and the speed of the elevators, or you can select from a range of choices.

With the button **List** you can see the usually applied values for elevator capacity and speed.

The **Auto** option means that the computer sets the door opening times to the capacity of the elevator (so to the size of the elevator door), and sets the acceleration and jerk to the speed of the elevator.

In this example we set the number of elevators to select from a range of 2 – 8 elevators, the capacity of the elevators are within 800 and 2000 kgs. The speed of the elevators are specified with the help of this table:

Elevator speed	Class of building		
	Small	Average	Large
Up to 5 floors	1 m/s	1,5 - 2 m/s	2 m/s
5 to 10 floors	2 m/s	2 m/s	2,5 m/s
10 to 15 floors	2 m/s	2,5 m/s	2,5 m/s
15 to 25 floors	2,5 m/s	3,15 m/s	3,15 m/s
25 to 35 floors		5 m/s	5 m/s

Given the height of the elevator zone, we chose 3,15 m/s from the table.

You can reach the next screen with the **Next** button.

## 1.4 Setting up the building population in the Passenger Data screen

**Passenger Data**

Passenger Data Mode: ☒ Standard ☐ Advanced ☐ File

Buttons: Cancel < Back Next > Finish

**Passenger Details**

Loading Time (s): 1.2 Unloading Time (s): 1.2 Stair Factor (%): 0

Passenger Mass (kg): 75 Capacity Factor (%): 80

**Traffic Generator**

Start Time: 11 hrs 0 mins End Time: 11 hrs 15 mins

5 min Handling Capacity (%): 99

	No of people	Area (m²)	Area/person
Level 2	50		
Level 3	50		
Level 4	50		
Level 5	50		
Level 6	50		
Level 7	50		
Level 8	50		
Level 9	50		
Level 10	50		
Level 11	50		
Level 12	50		
Level 13	50		

Buttons: Copy Cut Paste

In this screen you can set the data of the passengers. You can set the number of occupants per floor or the floor size with the area/person ratio. In most cases in the typical office buildings this ratio is from 12,5 m²/person to 15 m²/person.

In other commercial spaces:

Professional buildings	20 m <sup>2</sup> per doctor's office
Self-parking garages	30 m <sup>2</sup> per auto (1.2 persons per auto)
Stores, shops	1 - 4 m <sup>2</sup> net selling area (net selling area is area open to the public) per customer

**Loading/unloading time** - the time taken, in seconds, for a single passenger to load the car / unload from the elevator car.

**Capacity Factor(%)** - the elevator will be loaded only till this percentage, e. g. for a 2000 kg elevator at 80% **Capacity Factor** will carry usually 21 person. (21\*75 kg = 1575 kg and this is 79% of 2000 kg)

**Stair Factor** - provides a quick and easy way to make an allowance for stair (or escalator) usage in your calculations.

If you enter a **Stair Factor** of x, Elevate assumes that x% of the passengers will walk when travelling one floor, (x% of x%) will walk when travelling two floors, and (x% of x% of x%) will walk when travelling three floors.

For example if you enter a **Stair Factor** of 40%, Elevate will assume the following split of passengers between the stairs and the elevators:

No of floors to be travelled	% passengers using stairs	% passengers using elevators
1	40	60
2	16	84
3	6	94
4	3	97
5	1	99
6	0	100

If the assumptions of the **Stair Factor** are not appropriate, use a value of 0% and modify the floor populations or arrival rates and destination probabilities instead. You should always use a **Stair Factor** of 0% if the building includes an express zone.

**Passenger Mass** - the nominal mass of a passenger in kilograms usually about 75kgs.

You can reach the next screen with the **Next** button.

## 1.5 The Report Options screen

**Report options** [X]

Cancel < Back Next > Finish

5 min Handling Capacity: discard result if less than ... 14 (%)

Interval: filter off 30 (s)

Capacity Factor: filter off 80 (%)

Show results for: Average of all runs All passengers 00:00 and 23:59


Average Waiting Time: filter off 20 (s)

Average Transit Time: filter off 90 (s)


Average Time to Destination: filter off 110 (s)

Here you can set the filters for the results of the calculations.

In this type of calculation you can set just the filter for **5 min Handling Capacity**.

With the **Finish** button you can finish the input, than you can save your settings, with the  button or **File menu/Save**

## 1.6 Calculation and the results

With the  button you can start the calculations. After a few seconds you will get the following results:

No. of Elevators	Speed (m/s)	Acceln (m/s <sup>2</sup> )	Jerk (m/s <sup>3</sup> )	Elevator Capacity (kg)	Door Type	Door Times Pre-Open, Open, Close (s)			Prob No of Stops	Highest Reversal Floor	Interval (s)	Handling Capacity (% pop/5min)
5	3.15	1.00	1.60	2000	CO 1100mm	0.00,	1.80,	2.90	12.8	18.5	45.5	14.4
6	3.15	1.00	1.60	1600	CO 1100mm	0.00,	1.80,	2.90	11.3	18.4	34.0	15.6
6	3.15	1.00	1.60	1800	CO 1100mm	0.00,	1.80,	2.90	12.3	18.5	36.4	16.7
6	3.15	1.00	1.60	2000	CO 1100mm	0.00,	1.80,	2.90	12.8	18.5	37.9	17.3
7	3.15	1.00	1.60	1000	CO 1100mm	0.00,	1.80,	2.90	8.2	17.8	22.5	14.6
7	3.15	1.00	1.60	1250	CO 1100mm	0.00,	1.80,	2.90	9.5	18.1	25.2	16.0
7	3.15	1.00	1.60	1600	CO 1100mm	0.00,	1.80,	2.90	11.3	18.4	29.1	18.2
7	3.15	1.00	1.60	1800	CO 1100mm	0.00,	1.80,	2.90	12.3	18.5	31.2	19.4
7	3.15	1.00	1.60	2000	CO 1100mm	0.00,	1.80,	2.90	12.8	18.5	32.5	20.2
8	3.15	1.00	1.60	800	CO 800mm	0.00,	1.50,	2.00	6.7	17.4	15.9	15.9
8	3.15	1.00	1.60	1000	CO 1100mm	0.00,	1.80,	2.90	8.2	17.8	19.7	16.6
8	3.15	1.00	1.60	1250	CO 1100mm	0.00,	1.80,	2.90	9.5	18.1	22.1	18.3
8	3.15	1.00	1.60	1600	CO 1100mm	0.00,	1.80,	2.90	11.3	18.4	25.5	20.8
8	3.15	1.00	1.60	1800	CO 1100mm	0.00,	1.80,	2.90	12.3	18.5	27.3	22.2
8	3.15	1.00	1.60	2000	CO 1100mm	0.00,	1.80,	2.90	12.8	18.5	28.4	23.1

### Output values:

**Interval-Time** – this period defines the time between the departure of two successive elevator cars from the lobby.

25 – 30s excellent

30 – 35s doubtful

35 – 40s just acceptable, if not downtown

In office buildings we should keep the interval time under 30s.

**Handling Capacity (HC) or 5 minutes Handling Capacity (HC5)** – the total handling capacity is defined during a certain period, mostly five minutes (300s).

5 – 10 % residential buildings

10 – 15 % hotels

12 – 15 % office buildings

In this case for the rough calculations we will accept the HC5 values above 15 %.

The highlighted results are acceptable, so we will choose one of those. In the next tutorial we will use a group of 8 elevators of 800kg with a speed of 3,15 m/s.

## II. Up peak simulation

For a reference concerning the use of this option see the example file:  
< Tutorial2\_up\_peak\_simulation.elv>. Please keep in mind that there may be some small differences in content between the data in the file and the data on the screenshots.

Before starting a simulation it is important to realize that a good building and vertical transportation design is the most effective way of saving elevator space. Only after you have a good design should you optimize this design by simulation.

As we decided after the rough calculations we will continue with 8 elevators of 800 kg in a group with the speed 3,15 m/s.

In the Elevate program you can easily set a simulation.

In a **Simulation**, Elevate models the whole process of passengers arriving, pressing the hall call buttons, getting into the elevators when they arrive, and then getting out at their destinations.

Please keep in mind that simulations usually require expert knowledge to define input values and to judge output values. For the high-rise project it is recommended to use standard simulations as much as possible. In addition to simplify your own work, it also helps to compare your results with results from your colleagues.

The first screen with the **Job Data** is not so important, so there's no screenshot from that in the following chapters.

You can access **Analysis Data** by selecting **Edit, Analysis Data**, or by pressing the



button on the Toolbar.

### 2.1 Analysis type: Simulation

**Analysis Data**

Cancel < Back Next > Finish

Analysis type: Simulation

Measurement system: ☒ Metric ☐ U.S.

Dispatcher

Algorithm: ☒ Standard ☐ Custom Group Collective

Mode: Up peak 1

Advanced settings...

Simulation parameters

Time slice between simulation calculation (s): 0.1

No of time slices between screen updates: 10

No of simulations to run for each configuration: 5

Random number seed for passenger generator: 1

Round Trip Time calculations


Losses (%): 5

If you set the **Analysis type** to **Simulation**, then now you can set a lot of other preferences.

**Dispatcher** – field: the dispatcher algorithm determines how the elevators will serve the calls placed on the system by the passengers.  
Select **Standard Algorithm** for now.

In this sketch you can see the structure of the Simulation modes, the recommended for the high-rise students is the underlined mode, the **Up peak 1** mode in the **Group Collective**, but there are also other types of simulation. We will give a short description here about those also.



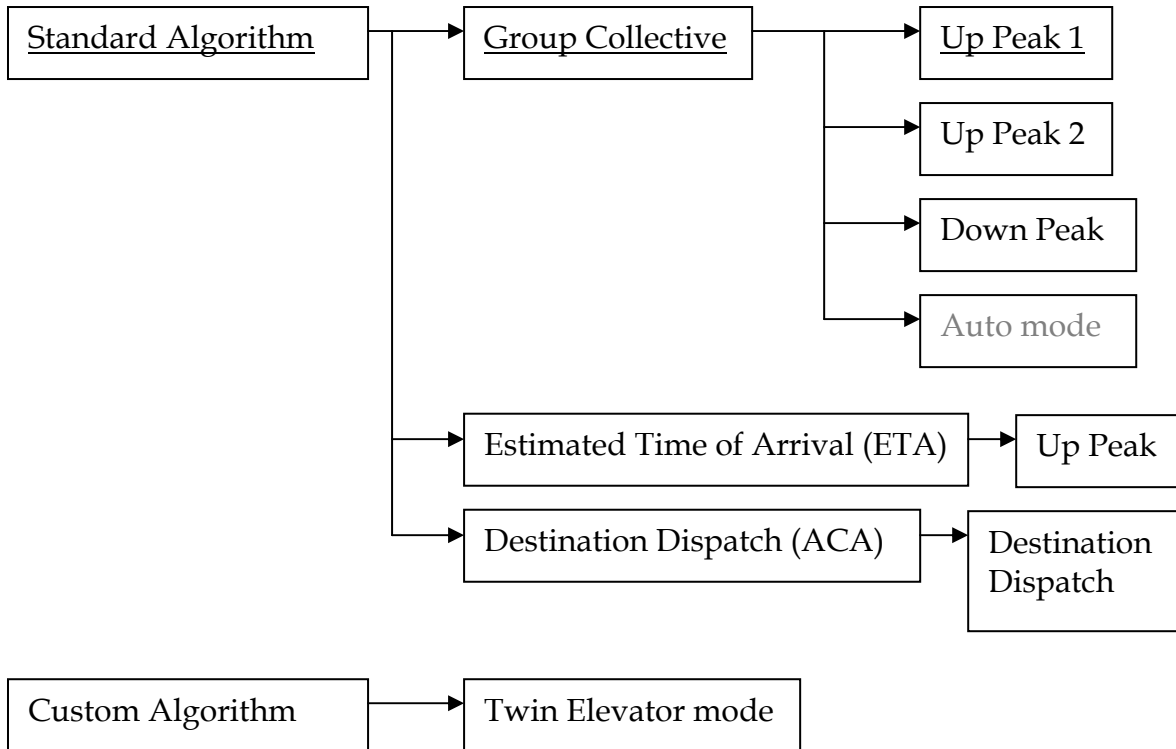

### 2.1.1 Recommended simulation mode

**Group Collective** – a control system which allocates hall calls by

- (i) estimating the expected travel distance between hall calls and each elevator;
- (ii) allocating the call to the “nearest” elevator.

Allocations are regularly reviewed in case a delay to one elevator means that another could answer the call sooner. A load bypass feature is included to avoid the elevator stopping to pick up passengers when it is already full.

In **Up peak 1** mode, “idle” cars are returned to the Home Floor with a parking call which does not open the elevator doors on arrival.

This strategy normally improves up peak traffic handling. Using this algorithm elevators are loaded one at a time. This encourages people to fill one elevator rather than part fill two or more elevators.

#### Other possibilities:

It can be interesting to try a few other simulation modes and compare the results. With the help of these simulation modes

In **Up peak 2** mode “idle” cars are returned to the Home Floor with a parking call which opens the elevator doors on arrival. This strategy improves on **Up peak 1** for particularly heavy traffic situations when it is advantageous to load more than one elevator at a time. If this is not the case, the algorithm is normally less efficient than **Up peak 1**.

In **Down peak** mode, the served floors above the Home Floor are divided into sectors, where the number of sectors is equal to the number of elevators. Elevators are dispatched to the sectors in turn. When the elevator has served the down calls in its allocated sector, it is allowed to stop for additional hall calls in its path on the trip back to the Home Floor. This strategy normally improves performance when the predominant traffic flow is in the down direction towards the home floor. For details of the Auto mode, please refer to Elevate on the Web.

### 2.1.2 Other simulation modes

It is not strictly necessary to try all these possibilities. You may try them if you want an idea of how control systems work.

#### **Estimated Time of Arrival (ETA) - mode**

A control system that allocates hall calls to the elevator with the lowest Estimate Time of Arrival.

In **Up peak** mode, “idle” cars are returned to the Home Floor with a parking call which does not open the elevator doors on arrival. This strategy normally improves up peak traffic handling. Using this algorithm elevators are loaded one at a time. This encourages people to fill one elevator rather than part fill two or more elevators.

#### **Advanced Settings - button**

**Early car announcement** can be turned on or off. When turned on, it is assumed that as soon as a passenger places a hall call, the allocated car is “announced” with a gong and or/light. This can assist in passenger loading, which can be modelled in Elevate by reducing Passenger Loading Time. However, when a call is announced it can no longer be re-allocated. This generally impairs the performance of the dispatcher.

**Load bypass** can be turned on or off. Turned on, this feature will prevent hall calls from being allocated to full cars. **The Load bypass threshold** determines how full a car is before load bypass comes into operation.

**Coincident call bonus** reduces the calculated ETA for a hall call if the elevator is already stopping at the same floor for a car call. This normally reduces the overall number of stops made by the elevator, and consequently improves performance.

**Number of cars loading simultaneously during up peak** allows you to specify the maximum number of elevators you want to be able to load at the same time, during an up peak, from the Home Floor. Normally a system would only load one car at a time. But in heavy traffic situations it can be advantageous to load more.

The **based on people counter** at home floor option assumes that there is a people counting device at the home floor. This device decides how many people are waiting, and uses this information to decide how many elevators to load simultaneously.

### **Destination Dispatch (ACA) - mode**

**Destination Dispatch** or Adaptive Hall Call Allocation (ACA) requires every passenger to enter their destination on the landing. When a call is entered the system makes an allocation, and immediately displays the selected elevator to the passenger.

When a new call is introduced, the system calculates every passenger's remaining waiting and transit times for each possible allocation. The allocation is made according to the selected Cost Function, which is either **Minimum Waiting Time** or **Minimum Journey Time**.

### **Advanced Settings - button**

**Minimum Journey Time** is generally applied during the morning up peak. Either function may be applied at other times of the day.

Minimum journey time with waiting time constraint is a **Minimum Journey Time** function. However, a penalty is applied if the dispatcher anticipates the waiting time will exceed the specified threshold level.

**Reduction in number of stops** can be applied to increase the chance of people travelling to/from the same floors being allocated to the same elevator.

For a detailed discussion of this algorithm, please refer to the *Elevator Traffic Handbook* by Dr Gina Barney. Destination Dispatch can dramatically improve performance during up peak traffic.

**Caution!** This improvement is not consistent across all traffic conditions. If you select less, slower, or smaller elevators because of the performance improvements realized by destination dispatch, it is very important to analyse other peak traffic conditions (e.g. down peak and lunchtime traffic).

After setting the Simulation modes, you can set in this screen also the **Simulation Parameters**.

### **Simulation parameters – field**

**Time Slice Between Simulation Calculations** – Elevate runs a time slice simulation. It calculates the status (position, speed, etc.) of the elevators, increments the time, re-calculates status, increments time, and so on.

The time slice between simulation calculations is the time increment in this loop.

**No of Time Slices Between Screen Updates** – Elevate does not have to update the screen after each time slice. Increasing the **No of time slices between screen updates** will speed up the simulation, but the display will be less smooth during the run. This variable has no effect on the final results calculated by Elevate.

If you want to turn off the simulation display completely, set this variable to 999.

**Random number seed for passenger generator** – when Elevate runs a simulation, it takes the information entered in **Passenger Data** and makes a list of people.

For example, if you have a total arrival rate of 10 persons per five minutes, and a simulation running for 5 minutes, then a list of 10 people will be generated.

A random number generator is used to determine what time these people arrive. For example, one person may arrive after 10 seconds, another after 23 seconds, another after 1 minute 23 seconds, and so on.

By changing the random number seed, the simulation will have the same number of people generated, but they will arrive at different times.

**Number of simulations to run for each configuration** – there is a chance element in simulation which means that changing a parameter, such as speed or handling capacity, can sometimes lead to performance results getting worse when you expect them to get better (or vice versa). For example, consider two simulations with exactly the same data, except one had 2.5 m/s elevators and the other 1.6 m/s. In a single simulation with 2.5 m/s elevators, a group of passengers may miss an elevator by less than a second, where as in the simulation with 1.6 m/s elevators they catch it. So, sometimes the faster elevators perform worse. Of course, in the long run, the faster elevators will perform better. By running multiple simulations for the same data, Elevate is mimicking real life. It is as if we are simulating Monday, Tuesday, Wednesday, etc. The results are then averaged for all the simulations, so overall we can see the benefit of the improved performance.

After setting the mode of simulation push the **Next** button to reach the Building Data screen.

## 2.2 The Building Data screen

The screenshot shows the 'Building Data' window. At the top, there are buttons for 'Cancel', '< Back', 'Next >', and 'Finish'. Below these, there is a table with two columns: 'Floor Name' and 'Floor Height (m)'. The table contains 14 rows, numbered 1 to 14, with 'Level 1' through 'Level 14' and a height of '3,8' for each. To the right of the table, there are buttons for 'Speed fill table', 'Clear table', 'Copy', 'Cut', and 'Paste'. Below these buttons, there is a section for 'Enter' with two radio buttons: 'Floor height' (selected) and 'Floor level'. At the bottom, there is a section for 'Express zones need to be entered for Round Trip Time calculations only' with two radio buttons: 'Express zone' and 'No express zone'. Below these, there are two dropdown menus for 'Lowest floor not served by elevators' and 'Highest floor not served by elevators'.

	Floor Name	Floor Height (m)
1	Level 1	3,8
2	Level 2	3,8
3	Level 3	3,8
4	Level 4	3,8
5	Level 5	3,8
6	Level 6	3,8
7	Level 7	3,8
8	Level 8	3,8
9	Level 9	3,8
10	Level 10	3,8
11	Level 11	3,8
12	Level 12	3,8
13	Level 13	3,8
14	Level 14	3,8

Express zones need to be entered for Round Trip Time calculations only

☐ Express zone ☐ No express zone

Lowest floor not served by elevators:

Highest floor not served by elevators:

Here you can set the number and height of the floors of the building, as we did in the previous chapter. The only difference is that now you can't set an **Express zone** in the building in this screen anymore. If you want to set floors not served by elevators you can make it in the next screen (**Elevator Data**), in advanced mode, but in the next chapter we will explain it more precisely. With the **Next** button you can reach the next screen.

## 2.3 The Elevator Data screen

The screenshot shows a software window titled "Elevator Data" with a close button (X) in the top right corner. Inside the window, there is a section for "Elevator selection mode" with two radio buttons: "Standard" (which is selected) and "Advanced". To the right of this section are four buttons: "Cancel", "< Back", "Next >", and "Finish". Below the mode selection is a "Standard data" section containing various input fields and dropdown menus. The fields are arranged in rows: "No. of Elevators" (Specified dropdown, value 8, Min: 4, Max: 8), "Capacity (kg)" (kg dropdown, Specified dropdown, value 800, Min: 800, Max: 1600, and a list button), "Door times (s)" (Auto dropdown, Pre-open: 0, Open: 1.8, Close: 2.9), "Speed (m/s)" (Specified dropdown, value 5, Min: 1.60, Max: 3.15, and a list button), "Acceleration (m/s²)" (Auto dropdown, value 0.7), "Jerk (m/s³)" (Auto dropdown, value 1.4), "Start delay (s)" (value 0.5), and "Home floor" (Level 1 dropdown).

Parameter	Mode	Value	Min	Max	Additional
No. of Elevators	Specified	8	4	8	
Capacity (kg)	Specified	800	800	1600	list
Door times (s)	Auto	Pre-open: 0, Open: 1.8, Close: 2.9			
Speed (m/s)	Specified	5	1.60	3.15	list
Acceleration (m/s²)	Auto	0.7			
Jerk (m/s³)	Auto	1.4			
Start delay (s)		0.5			
Home floor		Level 1			

The meaning of the expressions and the way to set the wanted values was explained in the previous chapter.

In this screen we set the data what we choose from the results of the previous chapter: 8 elevators, 800 kg loading capacity each with the speed 3,15 m/s.

In this case we don't use the **Advanced mode**, but we will explain this mode in the next chapter.

You can reach the next screen with the **Next** button.

## 2.4 The Passenger Data screen

**Passenger Data**

Passenger Data Mode: ☒ Standard ☐ Advanced ☐ File

Cancel < Back Next > Finish

Passenger Details:

Loading Time (s): 1.2 Unloading Time (s): 1.2 Stair Factor (%): 0

Passenger Mass (kg): 75 Capacity Factor (%): 80

Traffic Generator:

Start Time: 11 hrs 0 mins End Time: 11 hrs 15 mins

Arrival Rate as: % building population in 5 mins

D1	No of people	Area (m <sup>2</sup> )	Area/person	Arrival Rate % building pop/5min
Level 1	0			15
Level 2	50			0
Level 3	50			0
Level 4	50			0
Level 5	50			0
Level 6	50			0
Level 7	50			0
Level 8	50			0
Level 9	50			0
Level 10	50			0
Level 11	50			0

Copy Cut Paste

**Passenger Data Mode** – field: here you can choose **Standard**, **Advanced** or **File** mode. In this chapter we will use the **Standard** mode, but in the fourth chapter we will explain the **Advanced** mode also. In the **File** mode: you can set every single passenger's properties (arrival time, destination floor, passenger mass), but our job in the High Rise Building Project is not this detailed, so we won't use this part of the program.

**Passenger details** – field: see the description in the previous chapter.

**Traffic generator** – field: enter the **Start Time** and **End Time** for the traffic generator using the 24 hour clock. For example, assume the traffic generator is set to start at 9:00 and end at 9:10. If the total arrival rate is 20 persons per five minutes, then the traffic generator will "create" 40 people arriving at randomly distributed times between 9:00 and 9:10.

**Arrival rate as** – menu: This drop down refers to how the arrival rate is entered in the table immediately below this drop down in the dialog box. Select from the following options:

**% building population in 5 minute** – the arrival rate is taken as a percentage of the population arriving at the corresponding floor in a 5 minute period.

It's recommended to use this **Arrival rate** template during your calculations, because it's the most relevant and most commonly used during such calculations. But there are some more mode which can be used, but there you'll be find some limitation.

Here you have a short description about the other commonly used **Arrival rates**, the proper description is in the manual of the program in Appendix A.

These two are the same as the first, just the input mode is different.

**% floor population in 5 minute** – The arrival rate is taken as a percentage of the floor population.

**persons per 5 minutes** – The arrival rate is taken as the number of persons arriving in five minutes.

In this you can set down or interfloor traffic also.

**% building population per 5 minutes with split %up, %down, %interfloor**

These four has a limitation in use, because the output values like average waiting time will be usually under 10 s. The purpose of this is the long interval in between we measure the waiting time of the people. And during one hour the most of the people will wait for the next elevator nearly nothing, but during the up-peak they will wait too long. But these are also important, and you can see if your system working properly in the queuing of the people and in the longest waiting times.

**Barney one hour up peak template**

**Barney one hour down peak template**

**Barney one hour lunch template**

**Barney one hour interfloor template**

This is an important Arrival rate template, where you can set the arrival rate higher in every time period. For example you can start from 5 % and rise it with 5% more in every 5 minutes, during the calculation you will see when will your system collapse. It really worth to try this type.

**Step profile**

There are more templates in the program, but those are not so important for us. You can read more about the meaning of the templates in passenger traffic in the Elevate programs own manual's Appendix A. There you can find figures also about the passenger activity itself.



### The other templates:

Powell 2 hour lunch template  
Powell 40 minute lunch template  
Siikonen full day template  
Siikonen full day (24 hour) template  
Strakosch full day template  
Strakosch full day (24 hour) template  
CIBSE full day template  
CIBSE full day (24 hour) template

With the **Next** button you can reach the next screen with the **Report options**.

## 2.5 Report Options in simulation mode

**Report options**

Cancel < Back Next > Finish

5 min Handling Capacity: discard result if less than ... 14 (%)

Interval: filter off 30 (s)

Capacity Factor: filter off 80 (%)

Show results for: Average of all runs All passengers 00:00 and 23:59

Average Waiting Time: filter off 20 (s)

Average Transit Time: filter off 90 (s)

Average Time to Destination: filter off 110 (s)

U12	Summary	Level 1 or car 1	Level 2 or car 2	Level 3 or car 3
Passenger Demand	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Total Passenger Activity	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Passenger Transfer by Floor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Queue Lengths	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Spatial Plot	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Car Loading on Departure from Home Floor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Car Loading on Arrival at Home Floor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Dispatch Interval from Home Floor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Average Waiting and Time to Destination	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Distribution of Passenger Waiting Times	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Distribution of Passenger Transit Times	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Distribution of Time to Destination	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Graphs to plot Scales

Here you can filter the results of the simulations, and you can set the graphs you want to see in the printout of the results.

A few of them are ticked now, usually we use these graphs to appraise the results.

**Report Options** allow you to change the results and graphs that are displayed on the Elevate standard reports. You can change all of the **Report Options** and immediately regenerate the report without re-running the analysis.

When you are satisfied with the **Report Options**, print in the usual way.

### III. Multiple zones

For a reference concerning the use of this option see the example file:

< Tutorial3\_1\_up\_peak\_multiple\_zones.elv>. Please keep in mind that there may be some small differences in content between the data in the file and the data on the screenshots.

In the previous calculations we set the necessary number of elevators in our building. In the previous chapter we saw how to use traffic control strategies to decrease the number of the elevators.

Using multiple zones in the building usually also decreases the number of elevators. The main idea of the multiple zones is: not all of the elevators serve all floors, but we split the building into zones, and one group of elevators serves only one of these. This is a very efficient solution.

The following figures from the *High Rise Buildings Reader* will help to make a choice:

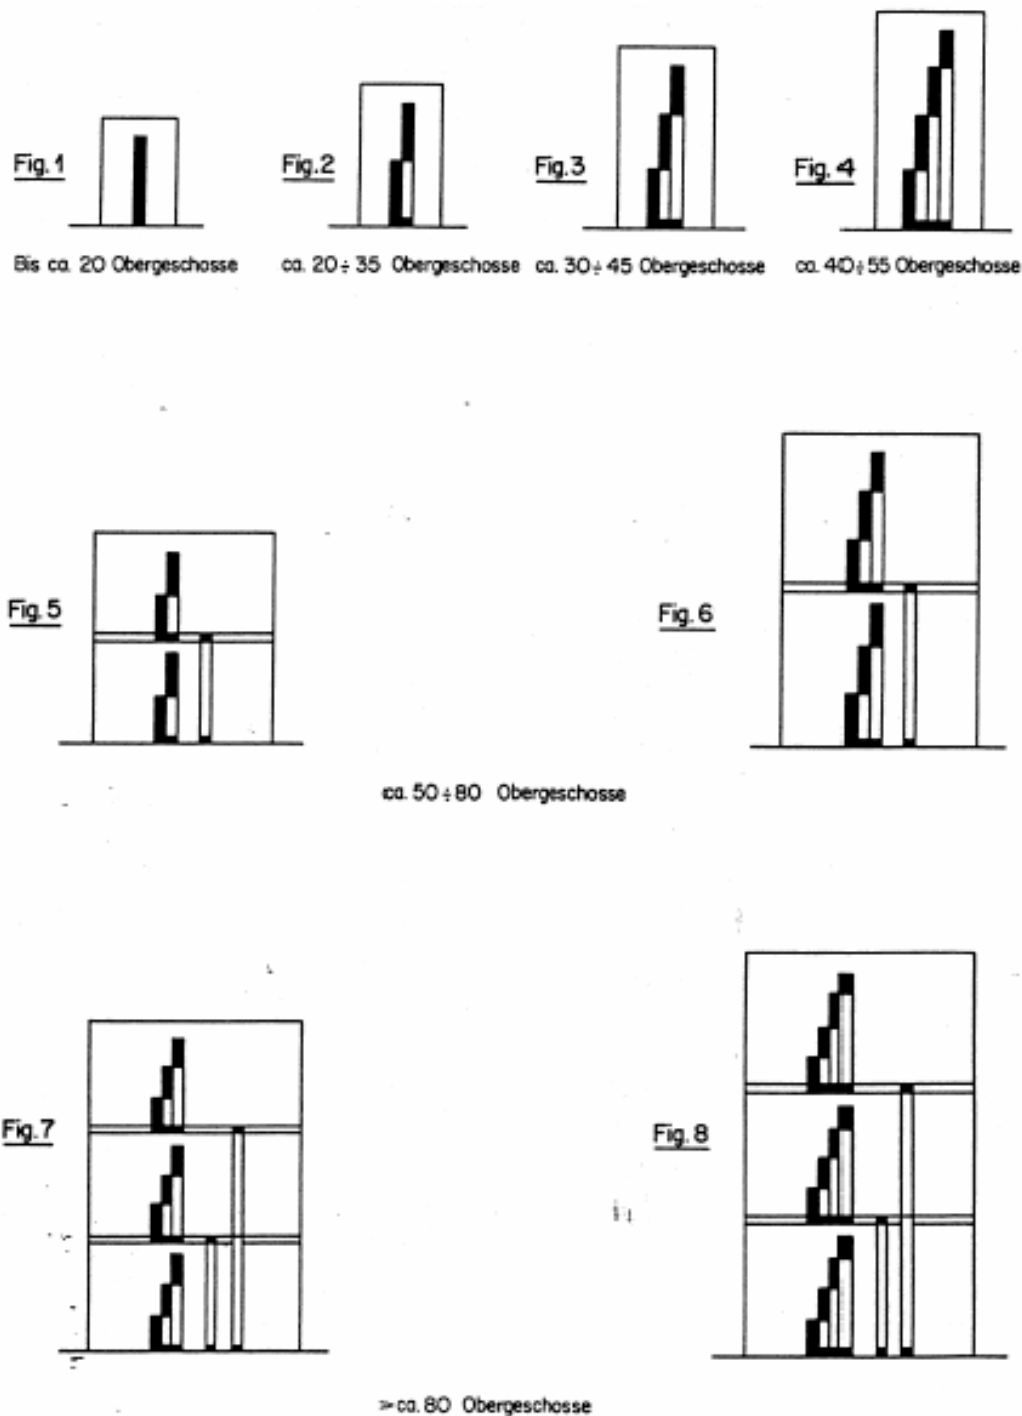



Figure 4: Typical elevator-concepts/vertical arrangements in relation to building height.

We have a 20 floor building, so we will use two zones, both about 10 floors. The lower zone will be bigger (10 floors) and the Upper zone will be smaller (9 floors).

In this chapter I'll show you just the differences of the previous chapter, because these are very close. The main difference will be in the **Elevator Data** screen, so please push the  button, to reach the screen.

### 3.1 Elvator Data screen: Advanced mode

	Car 1	Car 2	Car 3	Car 4	Car 5	Ca
Capacity (kg)	800	800	800	800	800	
Speed (m/s)	2,5	2,5	2,5	2,5	5	
Acceleration (m/s²)	1,2	1,2	1,2	1,2	1,2	
Jerk (m/s³)	1,6	1,6	1,6	1,6	1,6	
Home Floor	Level 1	Level 1	Level 1	Level 1	Level 1	Level
Door pre-opening (s)	0	0	0	0	0	
Door open time (s)	1,5	1,5	1,5	1,5	1,5	
Door close time (s)	2	2	2	2	2	
Door dwell 1 (s)	3	3	3	3	3	
Door dwell 2 (s)	2	2	2	2	2	
Start Delay (s)	0,5	0,5	0,5	0,5	0,5	
MG shut down time (s)	0	0	0	0	0	
MG restart time (s)	0	0	0	0	0	

As we said in the previous chapter, now we will use the **Advanced mode**. Here you can set the properties of the elevators one by one. For this job we need to set only **Capacity**, **Speed** and **Home floor**.

If you work in the Advanced mode you need to care about that every speed has its own jerk and acceleration. This table will help you to set the values.

Speed (m/s)	Acceleration (m/s²)	Jerk (m/s³)
0.30	0.4	0.8
0.63	0.4	0.8
1.00	0.4	0.8
1.60	0.7	1.4
2.50	0.8	1.6
3.15	1.0	1.6
5.00	1.2	1.6
6.00	1.5	1.6
7.00	1.5	1.6
8.00	1.5	1.6


When you change from **Standard** to **Advanced mode** the data you have entered are not transferred to the **Advanced mode**. However Elevate does convert the data when

you start an analysis, so having run a simulation you can switch to and continue in **Advanced mode**.

**Caution!** In **Advanced mode**, Elevate allows you to have elevators in the same group with different sizes, speeds, etc. (which is unusual, but an occasional requirement). Some manufacturers' control systems cannot cope with this level of complexity, so check with your suppliers before specifying this type of system.

We have two zones: Lower zone group: elevators 1-4. , Upper zone group: elevators 5-8.

**Capacity** and **Speed** can be set in the same way as we did in the previous chapters. The only difference will be that, the group for the lower floors will be slower, because it serves only 10 floors. And for 10 floors the usual speed is 2,5 m/s. For the upper zone group we still use the 5 m/s elevators, because this group will have an 11 floors express-zone where there will be no stops, and it will serve 9 upper floors. For better understanding I made a sketch from the elevators and the served floors:

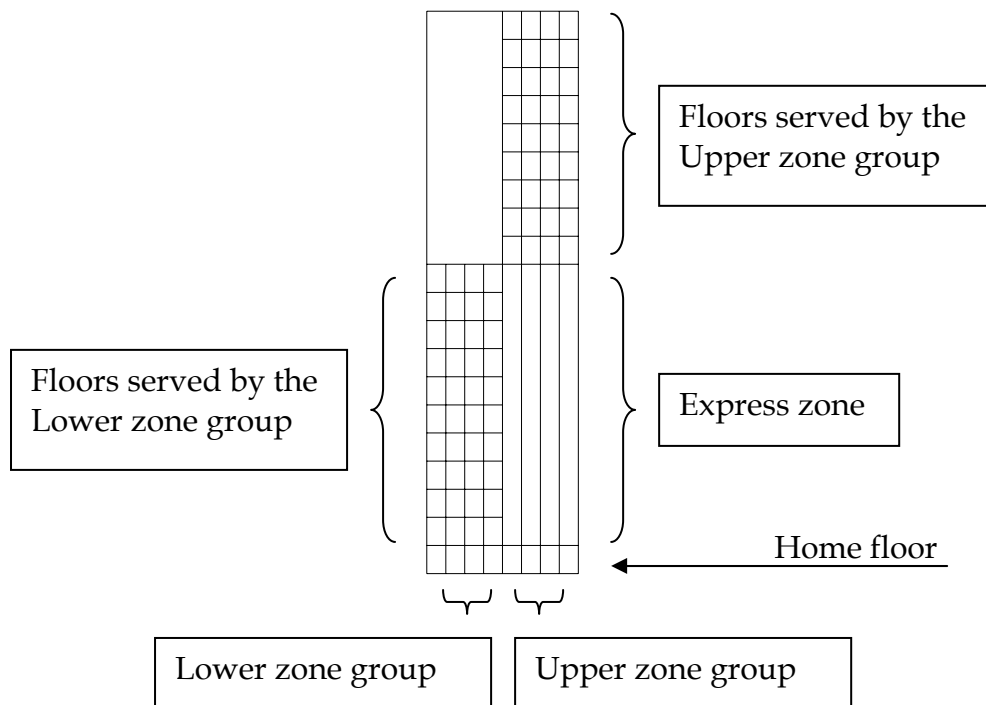

And now we can set the served floors in the program after our sketch. If you push the **Floors Served** tab you can reach this screen:

Elevator Data

Elevator selection mode

☐ Standard
☒ Advanced

Cancel

< Back

Next >

Finish

A100

	Car 1	Car 2	Car 3	Car 4	Car 5	Car 6	Car 7	Car 8	Ca
Level 1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 8	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 9	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 10	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 11	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	

Configuration

Floors Served

Copy

Cut

Paste

Here you can set the served floors with ticking the boxes.


### 3.2 Setting up mechanical floors

For a reference concerning the use of this option see the example file:

< Tutorial3\_2\_up\_peak\_multiple\_zones\_mech\_floor.elv>. Please keep in mind that there may be some small differences in content between the data in the file and the data on the screenshots.

Usually in the last few weeks of the high-rise project you will know the exact place of the mechanical floors. Here I'll show you a short example of how to set these floors, where there will be no offices, so the passenger elevators won't stop there.

If you already set the multiple zones in your building this will be very simple. Here's a sketch, how our building looks like now.

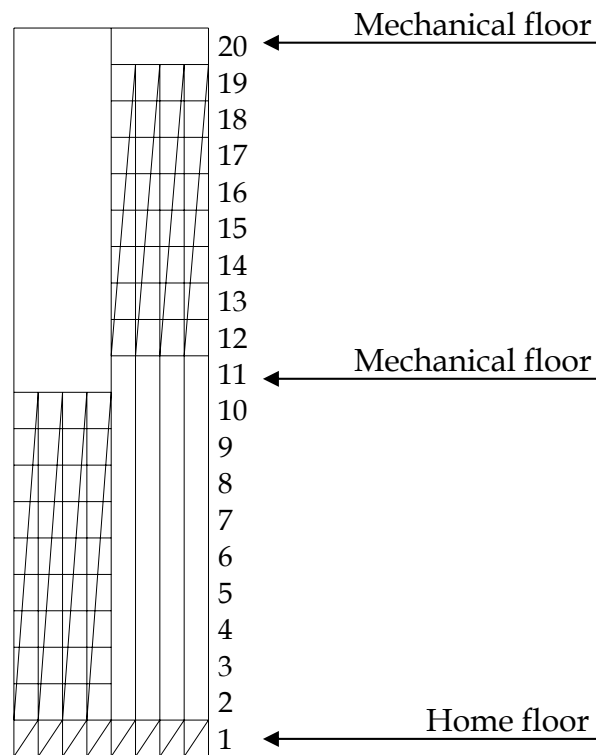

You need to change two things according to the previous example in this chapter. First you there will be changes in the Elevator Data screen:

Elevator Data

Elevator selection mode

☐ Standard
☒ Advanced

Cancel

< Back

Next >

Finish

A100

	Car 1	Car 2	Car 3	Car 4	Car 5	Car 6	Car 7	Car 8	Ca
Level 6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 8	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 9	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 10	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Level 12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 17	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 18	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 19	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Level 20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

Configuration

Floors Served

Copy

Cut

Paste

In the mechanical floors there will be no ticks.



**Passenger Data**

Passenger Data Mode  
☒ Standard    ☐ Advanced    ☐ File

Cancel    < Back    Next >    Finish

---

Passenger Details

Loading Time (s)     Unloading Time (s)     Stair Factor (%)

Passenger Mass (kg)     Capacity Factor (%)

---

Traffic Generator

Start Time  hrs  mins    End Time  hrs  mins

Arrival Rate as

---

	No of people	Area (m <sup>2</sup> )	Area/person	Arrival Rate % building pop/5min
D20	<input type="text" value="0"/>			
Level 11	0			0
Level 12	50			0
Level 13	50			0
Level 14	50			0
Level 15	50			0
Level 16	50			0
Level 17	50			0
Level 18	50			0
Level 19	50			0
Level 20	0			<input type="text" value="0"/>

Copy    Cut    Paste

## **IV. Twin elevators**


There is no detailed description for twin elevators in this tutorial. This new advanced option is not yet described in the Elevate Program manual.

The example files are included as initial references.

Please note that some data in the example files may not be directly useful.

## V. Shuttle elevators

In the previous chapter we saw how to set zones in a high rise building. But, as we saw on the figure, above 50 floors there was a sky-lobby. The sky-lobby is important because above 50 floors the large number of elevator groups would take more and more place from the floorplan. If we use a sky-lobby we can use the same elevator shaft again, as you can see in the figure:

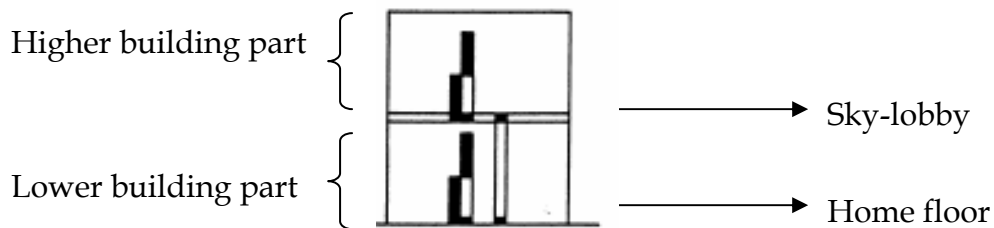

We can see that using a sky-lobby is a very efficient solution. To reach the sky-lobby we will need shuttle elevators. These elevators have no stops between the Home floor and the Sky-lobby, so these will be simple two-stop elevators.

If you make your calculations for the whole building usually it is worth to separate the calculations of the Shuttle elevators, the Higher and Lower part of the building. Sometimes the Higher and the Lower part of the building will be the same, in these cases we need only two types of calculation.

There are two usual types of shuttle elevators: simple elevators, or double-decker elevators.


In our case we will use the previous calculations, that's why our building is 40 floors now with a sky-lobby in the middle.

## 5.1 Calculating a simple shuttle elevator group:

For a reference concerning the use of this option see the example file:

< Tutorial5\_1\_simple\_shuttle.elv>. Please keep in mind that there may be some small differences in content between the data in the file and the data on the screenshots.

We will use an Up peak calculation also as we did in the first chapter. The main difference will be that in the Building Data screen we will set a 21 floor high building with an express zone:

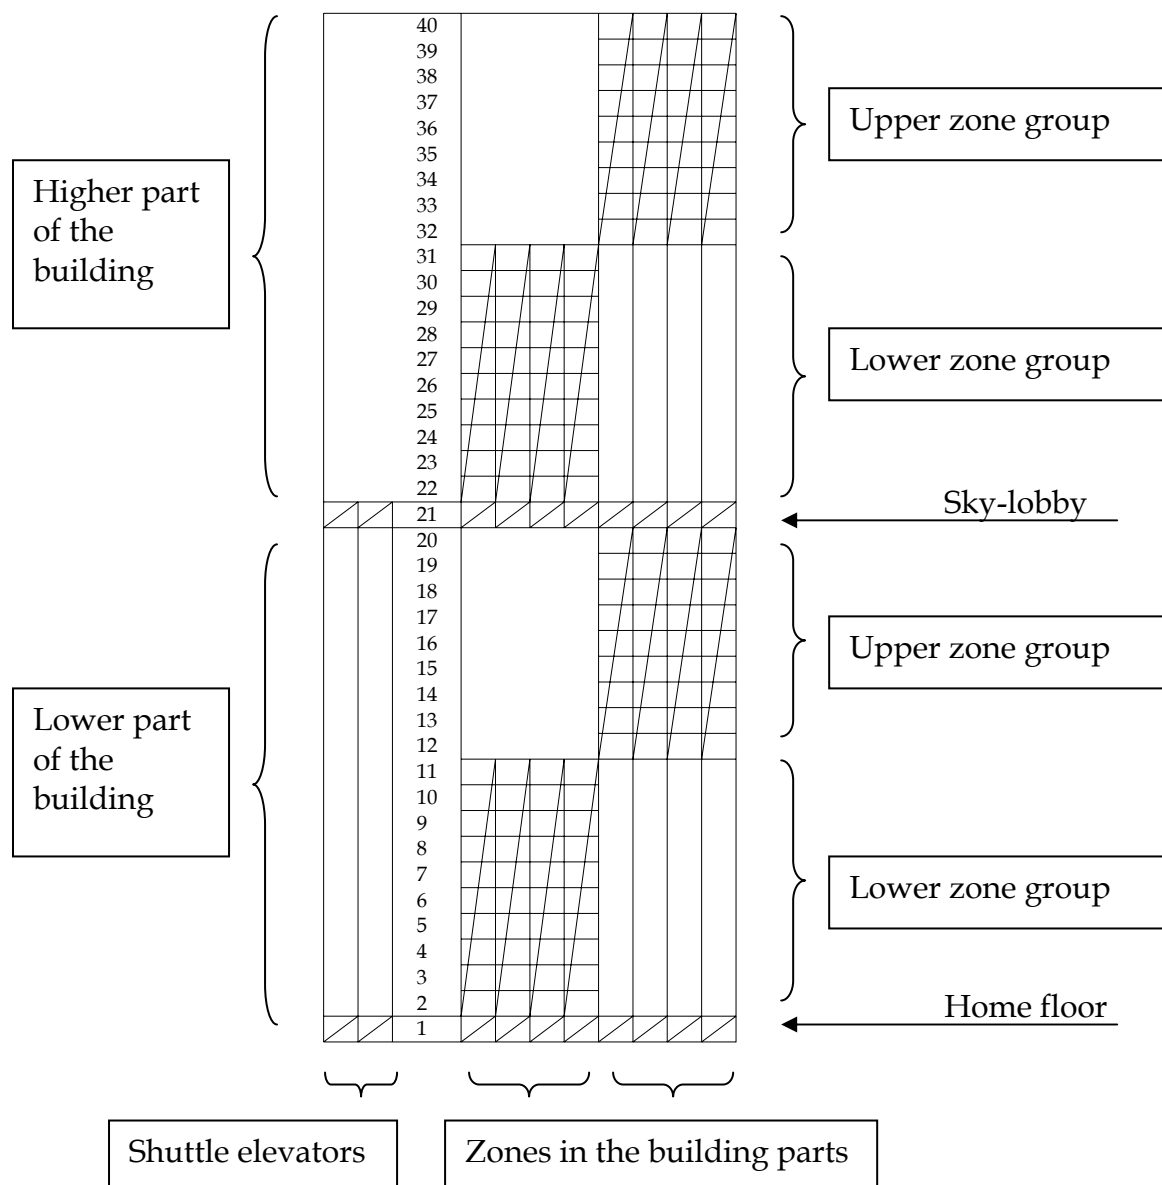

**Building Data** [X]

Cancel < Back Next > Finish

B21

	Floor Name	Floor Height (m)
9	Level 9	3,8
10	Level 10	3,8
11	Level 11	3,8
12	Level 12	3,8
13	Level 13	3,8
14	Level 14	3,8
15	Level 15	3,8
16	Level 16	3,8
17	Level 17	3,8
18	Level 18	3,8
19	Level 19	3,8
20	Level 20	3,8
21	Level 21	
22		

Speed fill table  
Clear table  
Copy  
Cut  
Paste

Enter  
☒ Floor height or ☐ Floor level

Express zones need to be entered for Round Trip Time calculations only  
☒ Express zone ☐ No express zone

Lowest floor not served by elevators: Level 2

Highest floor not served by elevators: Level 20

**Lowest floor not served by elevators:** 2<sup>nd</sup> floor  
**Highest floor not served by elevators:** 20<sup>th</sup> floor

Then you set the Elevator Data as we did in the first chapter (See 1.2.), except for the Passenger Data screen:

**Passenger Data**

Passenger Data Mode: ☒ Standard ☐ Advanced ☐ File

Cancel < Back Next > Finish

Passenger Details

Loading Time (s): 1.2 Unloading Time (s): 1.2 Stair Factor (%): 0

Passenger Mass (kg): 75 Capacity Factor (%): 80

Traffic Generator

Start Time: 11 hrs 0 mins End Time: 11 hrs 15 mins

5 min Handling Capacity (%): 99

	No of people	Area (m²)	Area/person
Level 21	950		

Copy Cut Paste

In the shuttle express zone there will be no stops between the first floor and the sky-lobby, thus all persons would go up to the 21<sup>st</sup> floor. The number of persons in the 21<sup>st</sup> floor (the sky-lobby) will be in our case 19 floors with 50 people each floor ( $19 \times 50 = 950$  pers.) this is the whole population of the Higher part of the building.

Then set the Report Options and we are ready, you can choose the number of elevators needed after the results.

## 5.2 Calculating a double-decker shuttle elevator group:

For a reference concerning the use of this option see the example file: < Tutorial5\_2\_double\_decker\_shuttle.elv>. Please keep in mind that there may be some small differences in content between the data in the file and the data on the screenshots.

The double-decker elevators are similar to the simple elevators, but they have two decks above each other. The two decks have two separated doors in two floors above each other. Passengers may only travel from odd to odd or from even to even numbered floors. You can make all your elevator system double-decker, like in the Patronas Towers, in Kuala Lumpur.

You can read more about the possibilities of zoning and placing the sky-lobby, or using double-deckers in the *Building Services Reader 1: Elevating of a 100 storey building* article. When considering these possibilities keep in mind that passenger comfort is also important during designing.

Setting the double-decker shuttle elevators will be nearly the same than in the case of the simple shuttle elevators. If the home floor(s) and the sky-lobby(ies) are well planned considering passenger traffic patterns double-decker shuttles can be an efficient solution.

In the Analysis Data screen you can set Double Deck General analysis:

The screenshot shows the 'Analysis Data' dialog box with the following settings:

- Analysis type:** Double Deck General analysis (selected in a dropdown menu)
- Measurement system:** Metric (selected with a radio button), U.S. (unselected)
- Dispatcher:**
  - Algorithm:** Standard (selected with a radio button), Custom (unselected)
  - ETA:** (selected in a dropdown menu)
  - Mode:** (empty dropdown menu)
  - Advanced settings...** (button)
- Simulation parameters:**
  - Time slice between simulation calculation (s):** 0.1
  - No of time slices between screen updates:** 10
  - No of simulations to run for each configuration:** 5
  - Random number seed for passenger generator:** 1
- Round Trip Time calculations:**
  - Losses (%):** 5

This will be a simple **Up peak** calculation, but with double-deckers. In this case because of the double-deckers we will need two home floors in the bottom of the building, and a two floor high sky-lobby in the middle. In the **Building Data** screen now we need to set 22 levels with an **Express zone**: 3<sup>rd</sup> to 20<sup>th</sup> level. There will be no changes in the **Elevator Data**, but in the Passenger Data screen:

**Passenger Data** [X]

Passenger Data Mode: ☒ Standard ☐ Advanced ☐ File

Cancel < Back Next > Finish

Passenger Details

Loading Time (s) 1.2 Unloading Time (s) 1.2 Stair Factor (%) 0

Passenger Mass (kg) 75 Capacity Factor (%) 80

Traffic Generator

Start Time 11 hrs 0 mins End Time 11 hrs 15 mins

Arrival Rate as [v]

	No of people	Area (m <sup>2</sup> )	Area/person	D
Level 1	0			8
Level 2	0			7
Level 21	450			0
Level 22	450			0

Copy Cut Paste

You need to set the number of people of the 21<sup>st</sup> and the 22<sup>nd</sup> floors in another way. Now the Higher part of the building will have 18 floors, which we divided into two zones: upper zone and lower zone, each having 9 floors. This means that we need to set the population of the 21<sup>st</sup> and the 22<sup>nd</sup> floors to 450 (9\*50=450 pers.) each.

**Column D** means the percentage of the people arriving into the building during the time of the calculation. For example if there are 3000 people in the building, the number of the arriving people will be 450 (15% of 3000) during the calculation time.

Usually in a normal Up peak calculation this percentage is 15 % of the building population (as you can see in the 5<sup>th</sup> page). Here we just split the 15% to 8%+7%.

#### References:

- [1] Getting started with Elevate, version 6.01 ( last updated: 08.04.2004), Peters Research Ltd. 2004.
- [2] The Vertical Transportation Handbook (third edition 1998), Edited by George R. Strakosch, ISBN 0-471-16291-4
- [3] High Rise Course Reader