

Right


From Back

0-User

Wiring


Reset: GND and RST

Link: RX 1, VCC, & GND

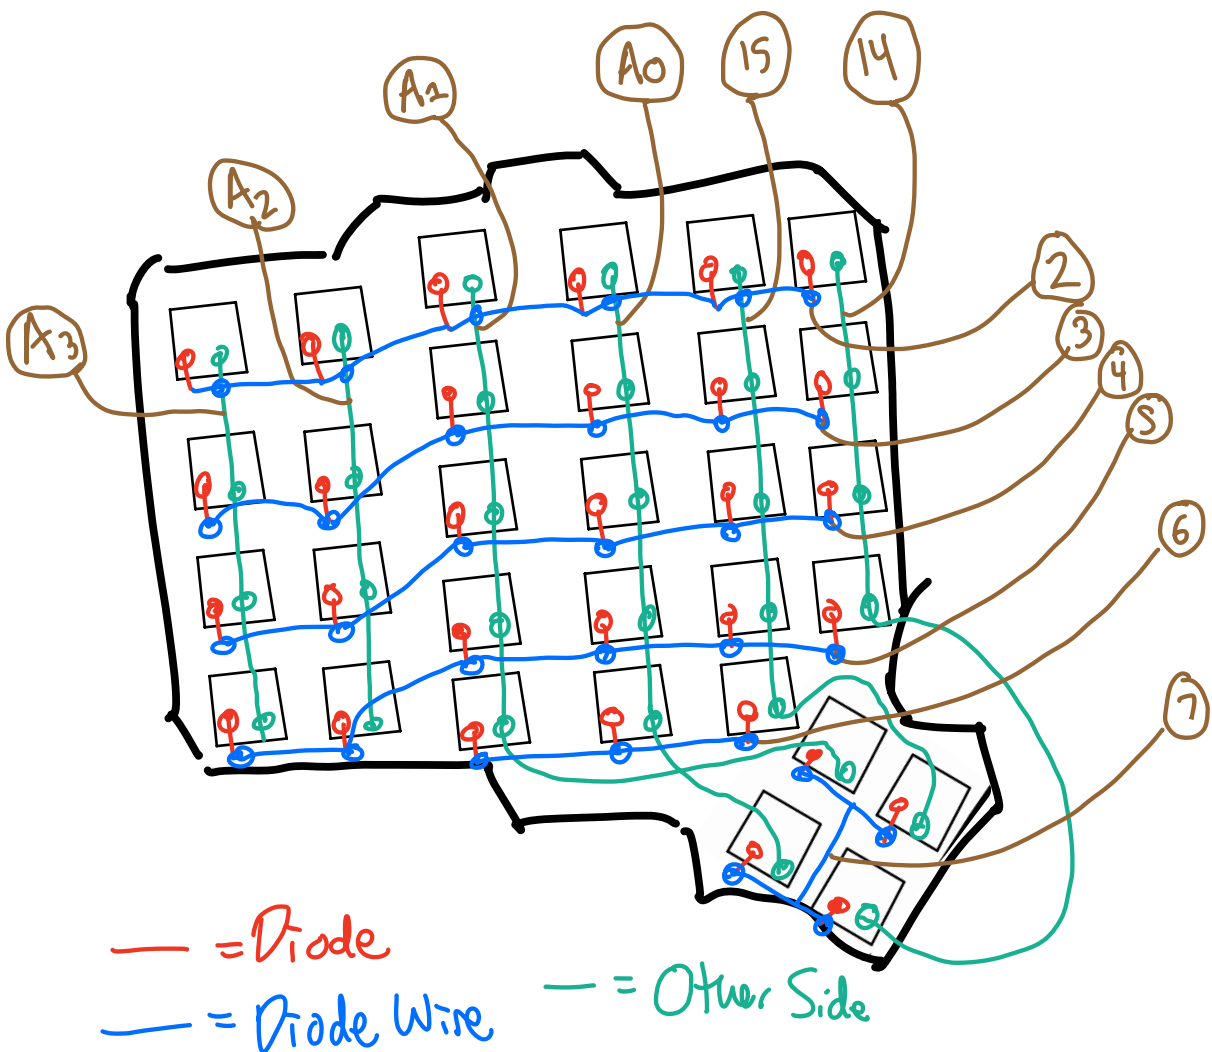

Left


From Back

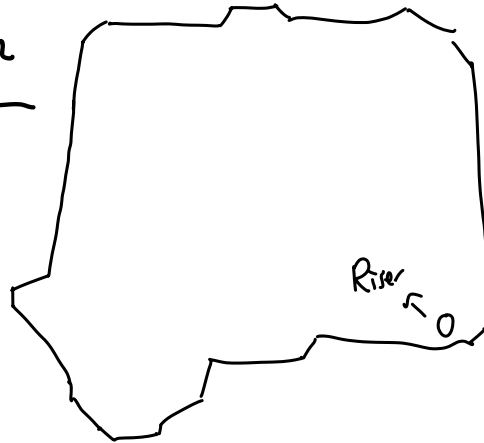


Wiring

Reset: GND and RST

Link: RX 1, VCC, & GND

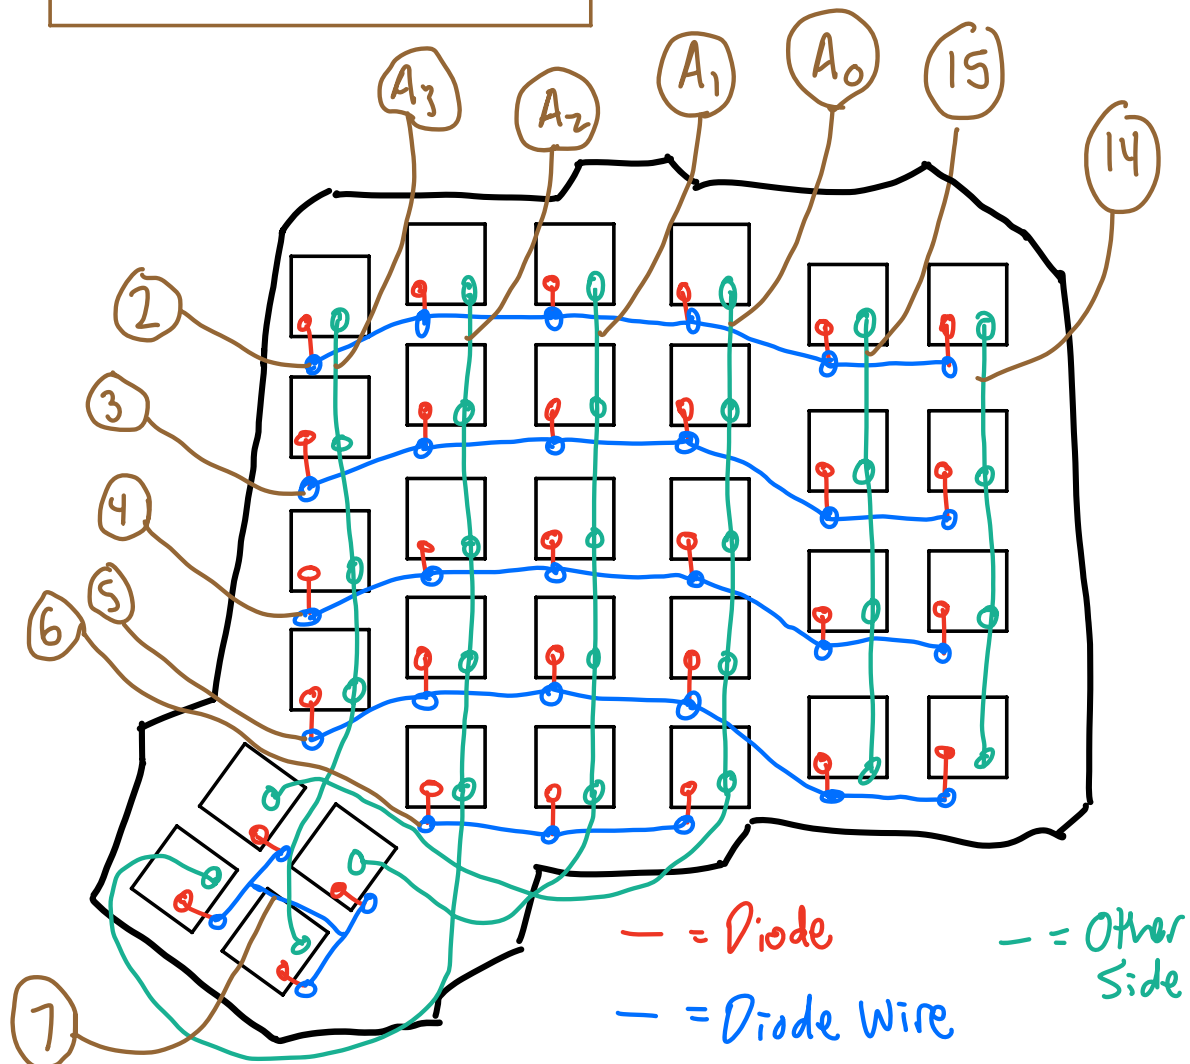

Closed for 5V boards
Open for 3.3V boards

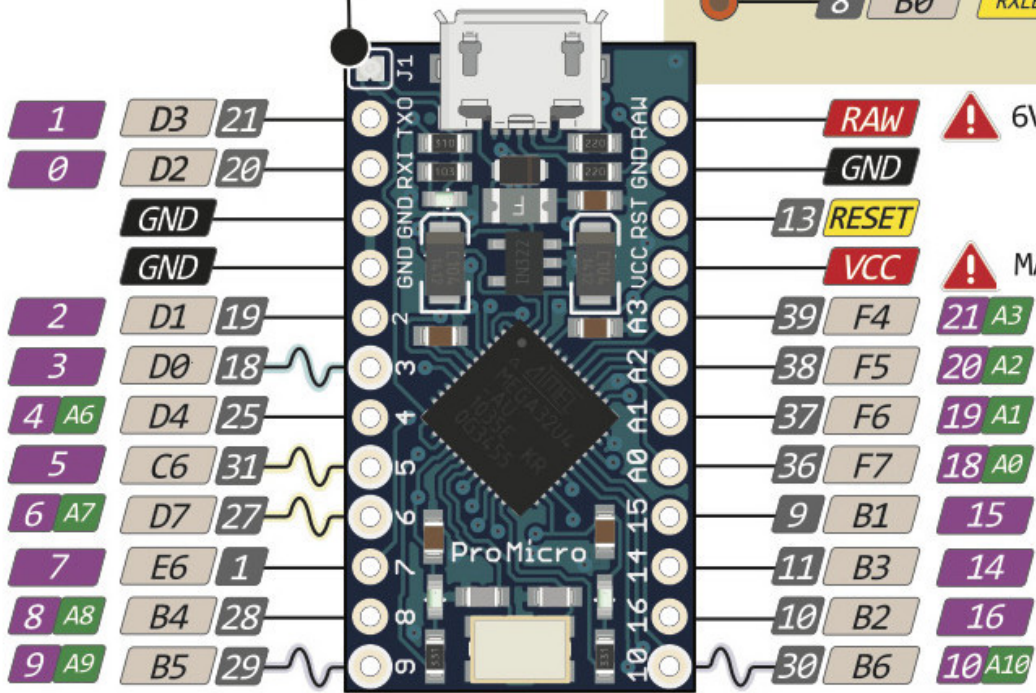

6V → 12V

MAX 500mA