

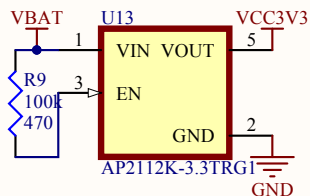



A

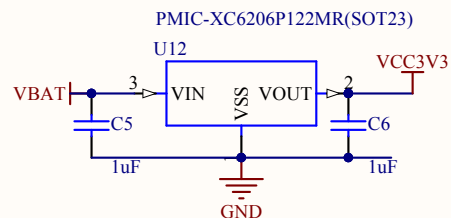

B

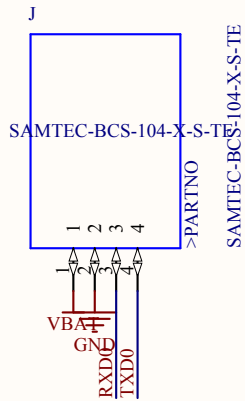

C

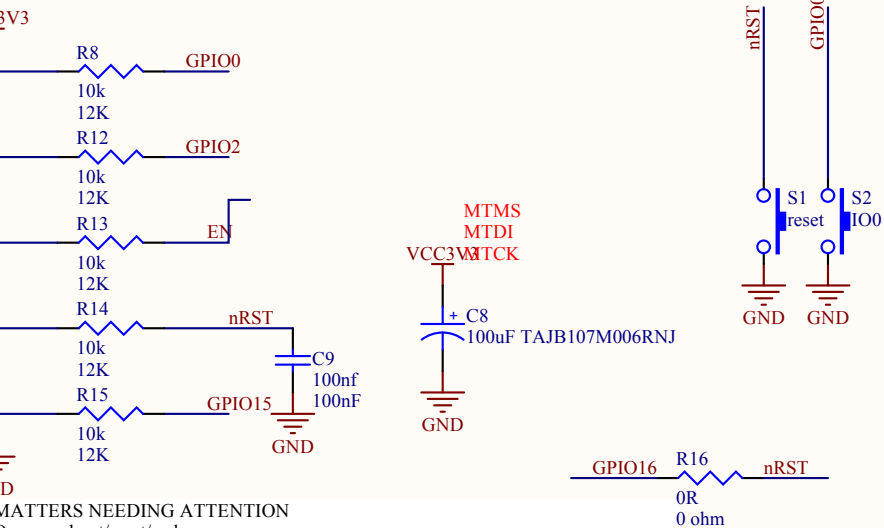

A

B


C

D

D


MATTERS NEEDING ATTENTION

On every boot/reset/wakeup,
GPIO15 MUST keep LOW, GPIO2 MUST keep HIGH.
GPIO0 HIGH -> RUN MODE, LOW -> FLASH MODE.
When you need to use the sleep mode, GPIO16 and RST should be connected,
and GPIO16 will output LOW to reset the system at the time of wakeup.

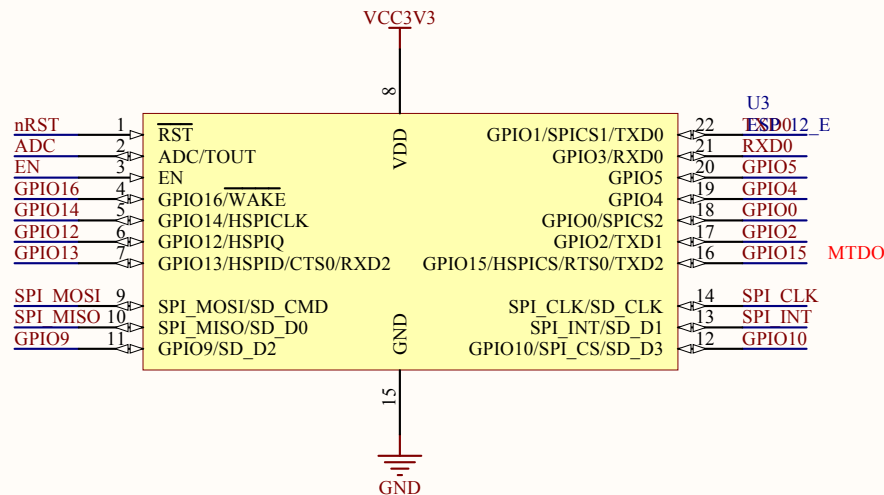


Title		
Size	Number	Revision
A		
Date:	6/26/2020	Sheet of
File:	C:\Users\...\Sheet1.SchDoc	Drawn By:

SENSOR_EN

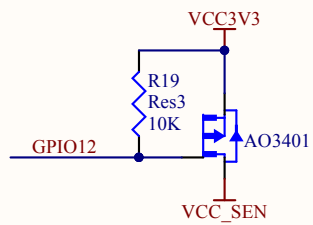

MOISTURE SENSOR

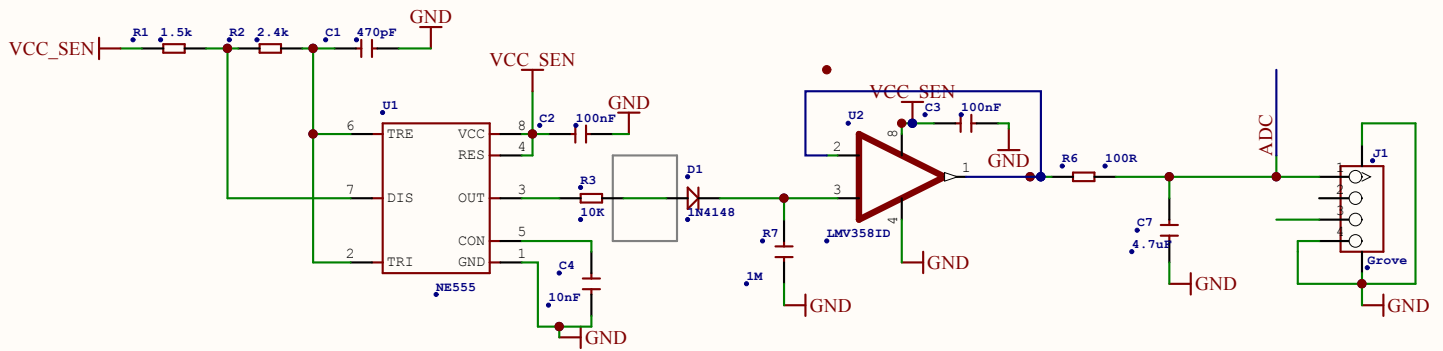

OSEW
LOGO

Title		
Size	Number	Revision
A		
Date:	6/26/2020	Sheet of
File:	C:\Users\...\Sheet2.SchDoc	Drawn By:

U?

ANTENNA AREA
CUTOUT POLYGON



R?



R?



R?




R?



R?



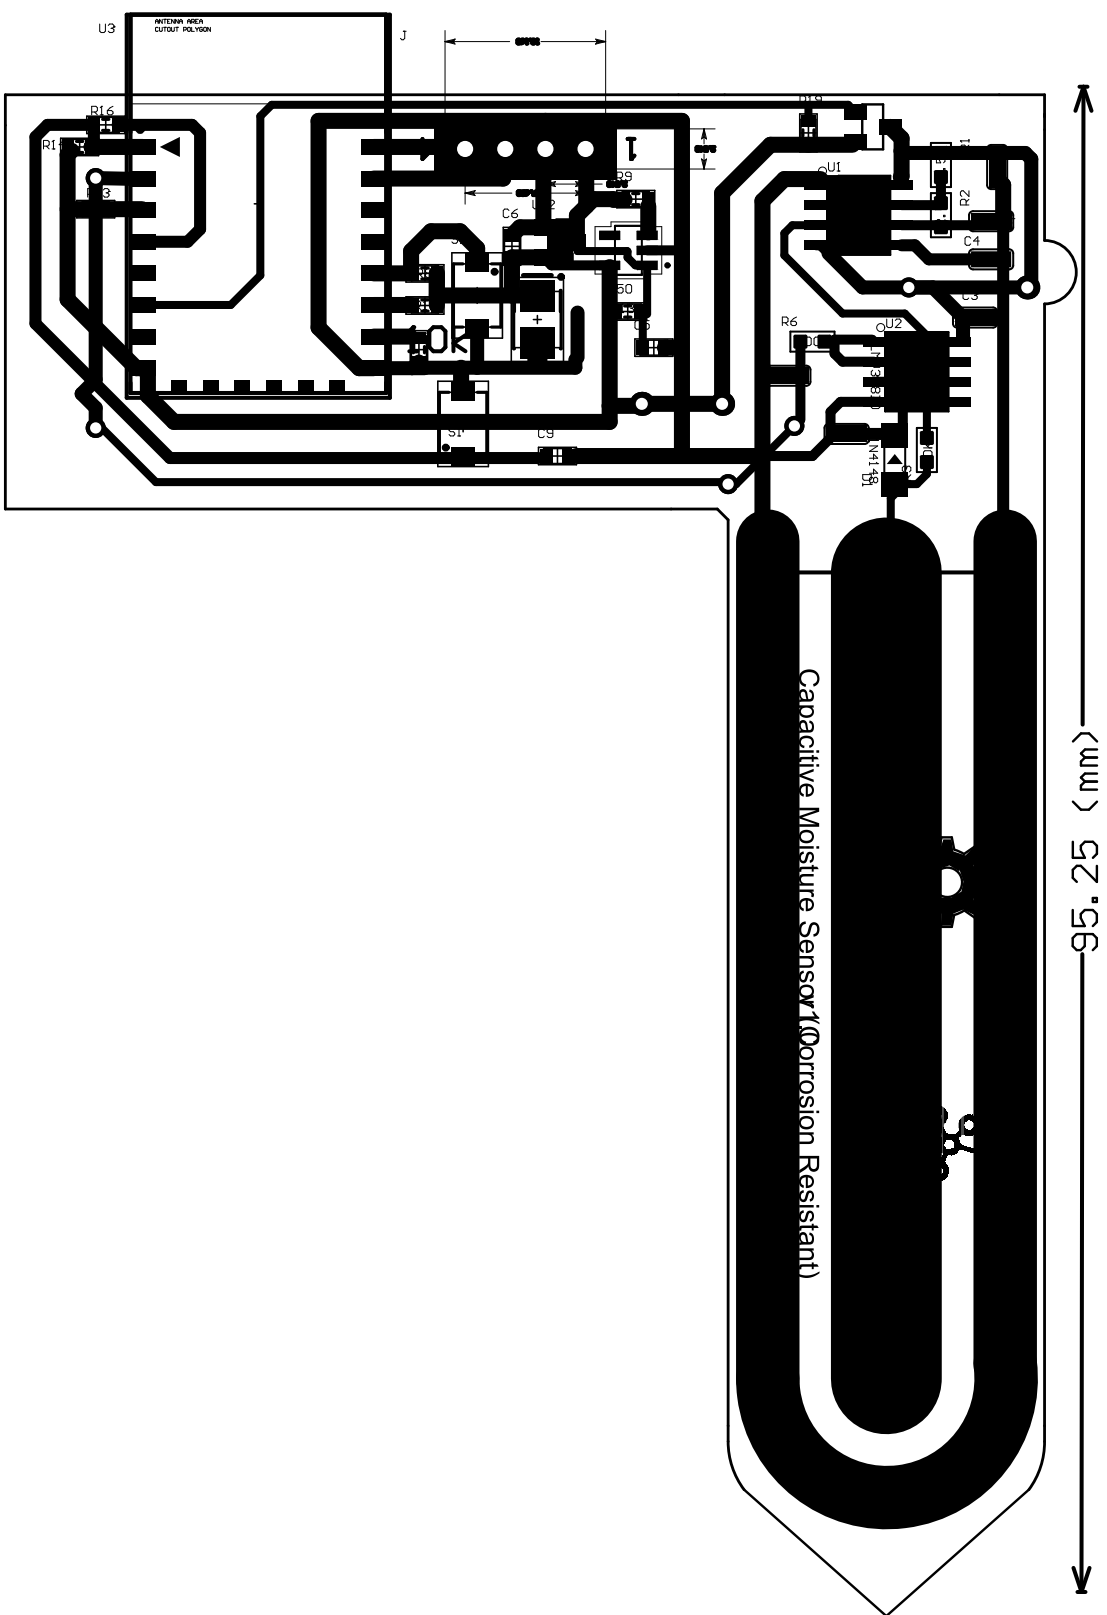

Boards