 


ZKUpdate Tool Operation Manual

1. Run 'ZMM100UPTOOL.exe' as administrator.



2. Enter the device IP and Click 'Connection' button. The current state should be **connected**.

ZKteco ZMM100Tool Ver1.0

Current State:Connected Login State:Disconnected

IP Address: 192.168.1.201 Comm Password: Connection

User Name: root Password: Login

Firmware Update

File Path Upgrade

Licensing Operations

Obtain License or Log

☐ Obtain License ☐ Obtain License Log Obtain

3. Click the 'folder' button to select the 'ZKPACK.ZK' or 'emfw.cfg' file.

ZKteco ZMM100Tool Ver1.0

Current State:Connected Login State:Disconnected

IP Address: 192.168.1.201 Comm Password: Connection

User Name: root Password: Login

Firmware Update


File Path Upgrade

Licensing Operations


Obtain License or Log

☐ Obtain License ☐ Obtain License Log Obtain


4. Select the 'ZKPACK.ZK' file or 'emfw.cfg' file and then click 'OK' button.
This tool can update '*.ZK' format file and 'emfw.cfg' file.

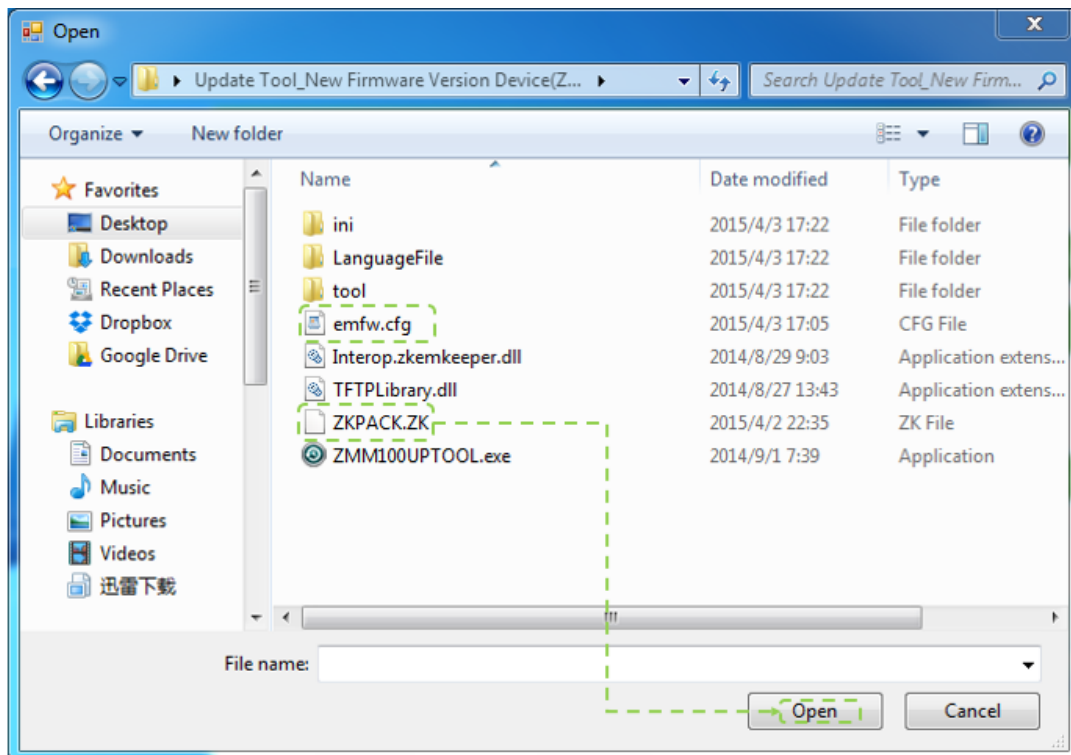

5. Click 'Upgrade' button.

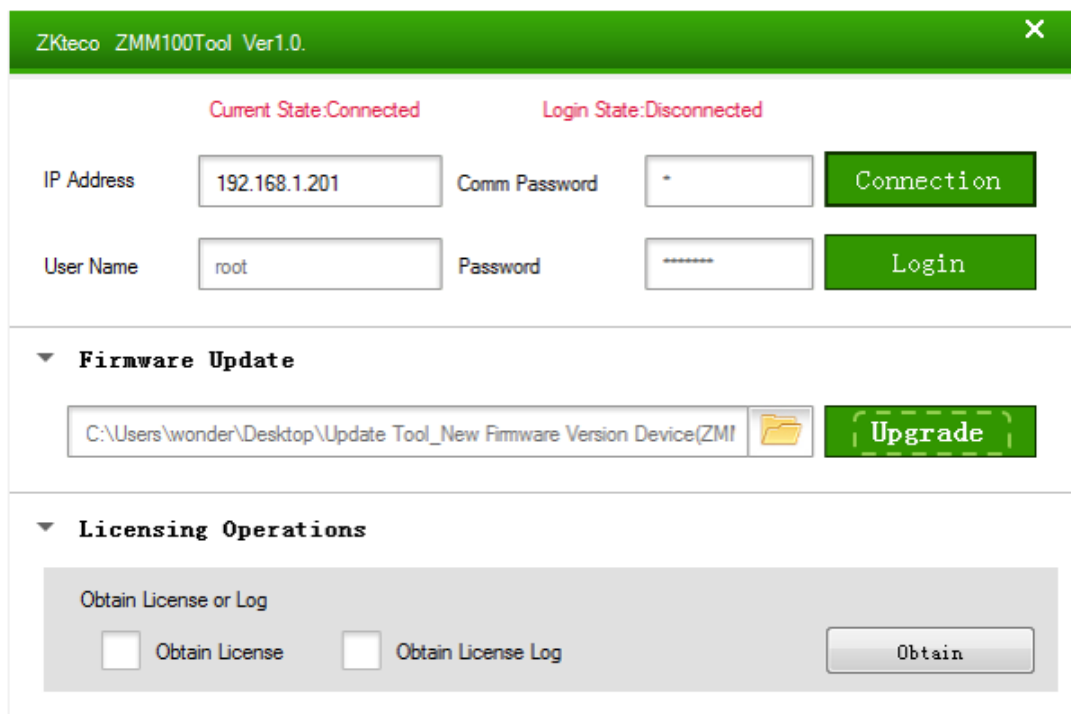

6. After few seconds, it will show 'Data Restore Success ... whether to reboot?'
Please wait for few minutes if the update file is big.

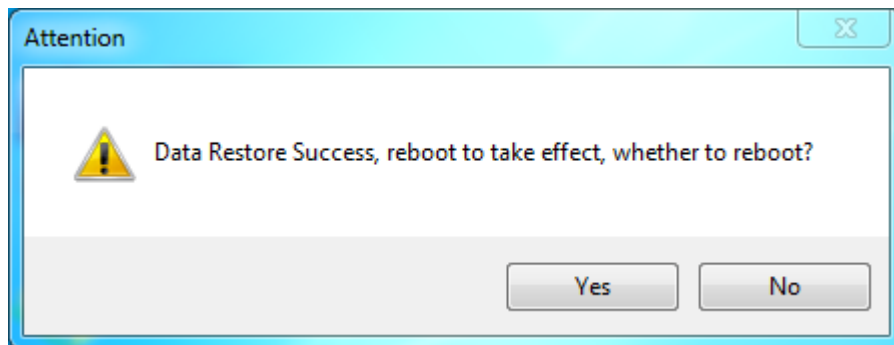

7. Click 'Yes' and then the device will restart automatically. The function will be updated after restarting.



Note: The device and your pc must be in LAN network environment with same segment.

Please record the error info and feedback to technical support if get error during updating.