

# Accumulator Indicator Light (ACCUM)

## Function:

ACCUM board monitors HV psot-AIR lines to alert those handling battery when high voltage is present at HV battery terminals

IowaFormula - proj.Mercury

TITLE: ACCUM

Document Number: 1 of 10


REV: A

Date: 11/30/18


Author: Michael Pass

Sheet: 1/1


### 1. HV Sense Wire / Voltage Divider

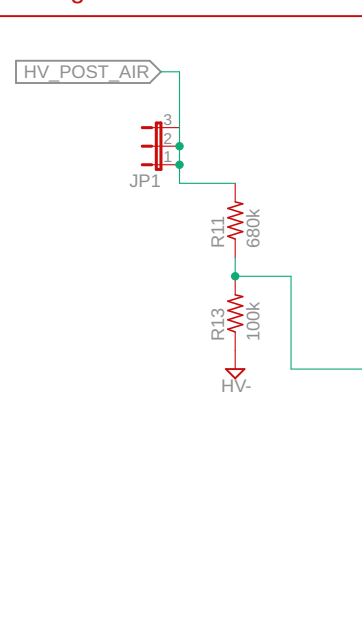

### 2. +60V HV Threshold Sensing

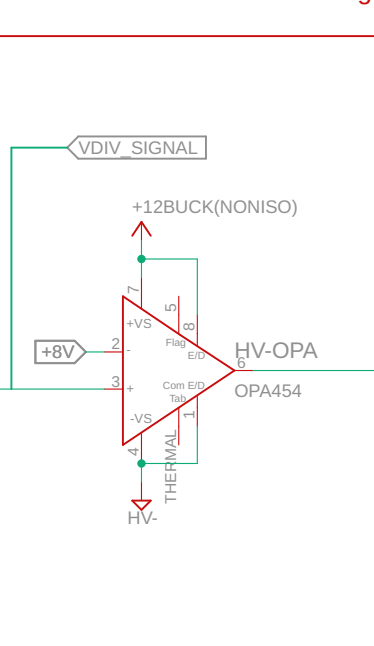

### 3. AIR HV Present Indicator Light

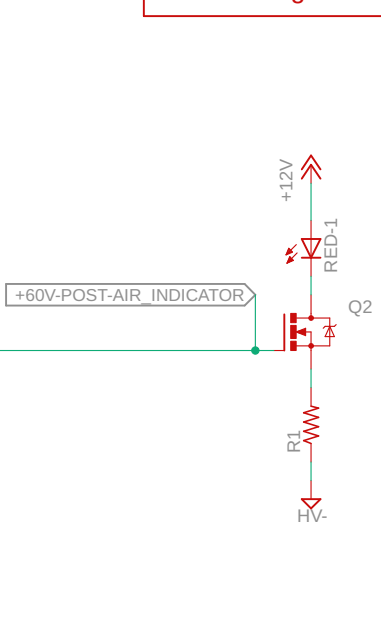

### HV Monitor Power Supply / Reference Source

