

MQTT broker configuration on Smappee Plus/Pro

When you open the expert portal of your Smappee Plus/Pro you will have an additional parameter "MQTT local broker" where you can specify the MQTT broker. By default the local MQTT broker running on the Smappee monitor is set.

Steps to open the expert portal:

- 1. Make sure that your smartphone is connected to the same network as the Smappee monitor you want to connect to
- 2. Logon to the Smappee app (Android or iOS)
- 3. Navigate to Settings
- 4. Navigate to: Smappee Plus (= configuration of your Smappee monitor, on top you will see your serial number: "2004xxxxxxx"
 - a. At the bottom of this screen you will have a link to the "Smappee Expert mode" use this url to open the expert portal.
- 5. Logon to the expert portal (By default the password = "admin")
- 6. Navigate to the "Advanced" tab

You should see this screen where you can specify the MQTT broker

🌻 smappee

Monitor configuration

logonilogon
configuration
channel configuration
system info
advanced
networking
data log
home control
waveform display
meterreader logger

Advanced config parameters	Setting	
Webportal password	admin	
Active power lower limit (color green->yellow)	0	W (0=off)
Active power upper limit (color yellow->orange)	0	W (0=off)
Meter reader logging	0	nr of 5 second entries (0=disabled) (1h/file
MQTT local broker (e.g. tcp://192.168.0.48:1883)	tcp://localhost:1883	
Advanced action Restart monitor Reset command control bind data cache		apply
Restart monitor		apply
Reset active nower neak values		apply
Enable/disable green breathing		apply
Enable/disable command control look ahead sched	2	
Enable/disable MAC address arp-scan		
Reset MAC address scanning cache		apply
Node red option		install
Advanced		