

## IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS

- Read all instructions carefully before use.
- Retain manuals for future reference.
- Use this product only in the manner described.
- Only use a water-dampened soft-cloth to clean the surface of this product.
- Use electronic devices in well ventilated areas & not exposed to excess vibration.
- The following will damage this product: any liquid such as water or moisture, extreme heat, cold, humidity, dusty or sandy environments.
- Disconnect this product from mains power and antenna during lightning storms.
- Only place this device on stable surfaces and ensure that any attached cables are secure and will not cause the device to fall.
- There are no user serviceable parts in this product.
- Un-authorized attempts to dismantle or repair this product will void product warranty and may result in dangerous electric shock.
- Remove any power or data cords by pulling them from the plug and not the cord.
- Using this device near other electronic devices may cause interference.
- When recording images or video using this product please be respectful or the
- Copyright requirements and restrictions as they apply to each program in your area.
- Images shown in this document are for references only and there may be differences between images and actual products.
- Do not mix old and new batteries in the remote.
- We reserve the right to change the products and/or documentation without notice.

 
## WHATS IN THE BOX

1 x STB-6000 HD Set Top Box  
1 x Remote control  
1 x AV Cable (Composite RCA)  
1 x User Manual (This Document)


## INSTALLING THE BATTERIES

1. Remove the battery compartment cover on the rear of the Remote control.
2. Insert the 2 X AAA batteries (supplied) in to the compartment being sure to match the polarities with the markings in the compartment.
3. Fit the cover back on the remote control and make sure that it locks in place.


1. Open the cover

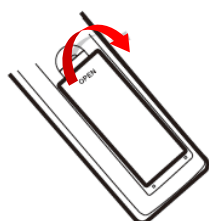

 2. Install batteries

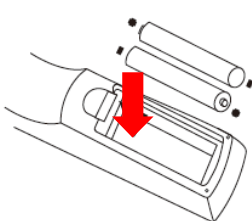

 3. Close the cover

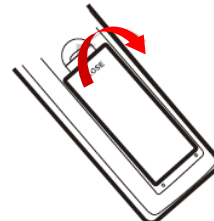


**Note: Please do not mix old and new batteries in this remote. Remove batteries if remote is not going to be used for long periods.**

## CONNECTING TO A TELEVISION

### Power

 1. Turn the TV off at the main power outlet.
2. Check the Main Power switch on the rear of the STB-6000 and the mains outlet that it is to be connected too is in the off position.
3. Connect the Antenna cable to the ANT In socket.
4. Choose the best connection method for your Equipment. There are 2 possible connection methods and the type that you choose may depend on the type of TV that you have.
5. You can also connect the digital 5.1 audio coaxial output to your Amplifier receiver if you have one.

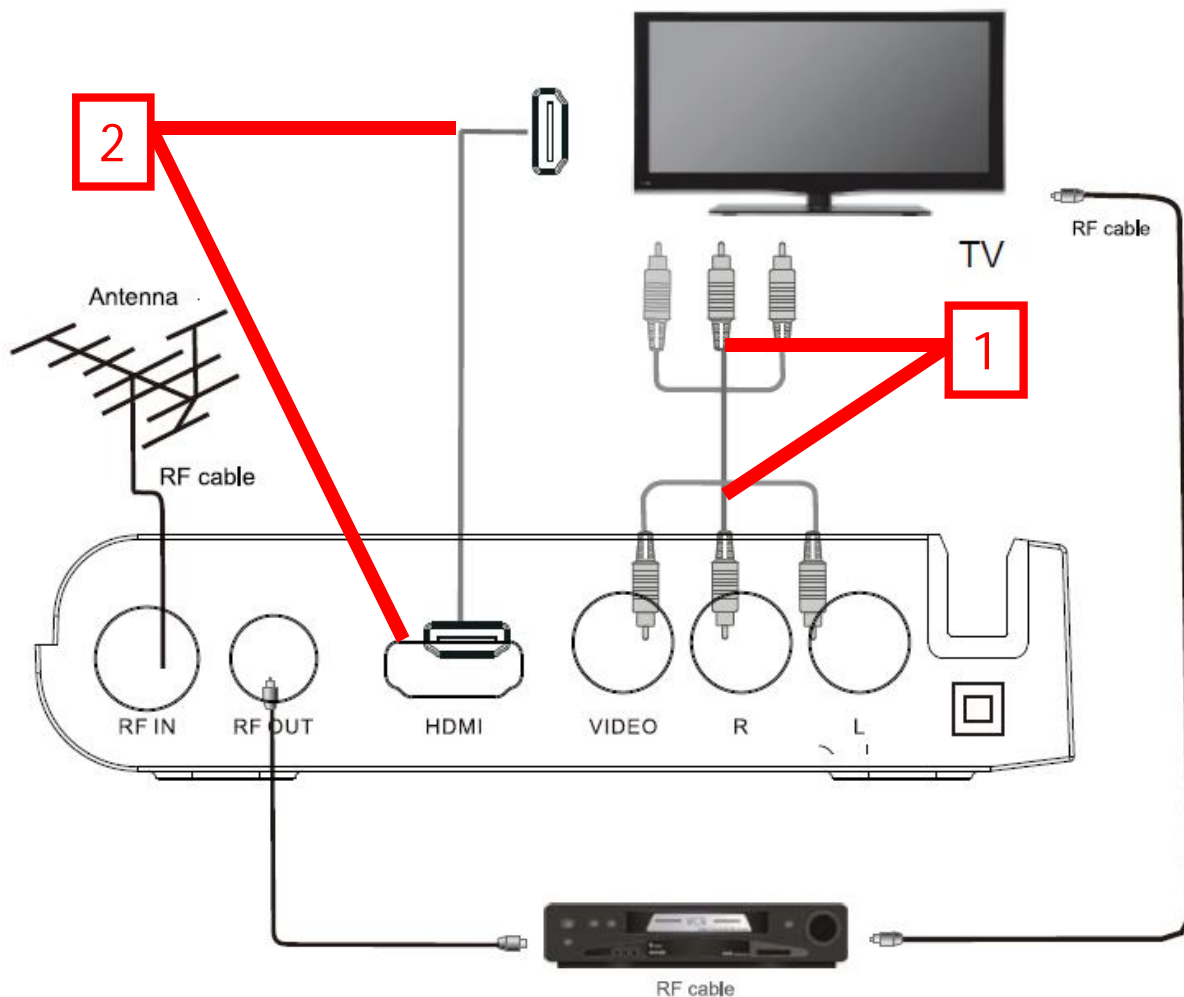

## Video and Audio Connection

### Connection Method 1: Composite

**Quality = Fair to Good**

The composite cable (supplied) comprises of 1 x Video Cable (yellow) , 1 x Left Channel Audio (White) cable and 1 x Right Channel Audio (Red) cable.

**Best Used for:** Older CRT Type televisions or other displays with only a standard AV input.

### Connection Method 2: HDMI

**Quality = Best**

HDMI (High-Definition Multimedia Interface) is the preferred connection method as the HDMI cable (not supplied) allows full HD Digital signal transmission to the TV.

**Best Used For:** Any TV that has an HDMI input.

## Audio Connection

Audio can be connected to an external amplifier / receiver.

1. Connect the Stereo Left and Right channels (White & Red) to the back of the Set Top Box and the corresponding inputs on the back the audio device.
2. Connect a SPDIF Coaxial Audio Cable (not supplied) to the rear of the Set Top Box and the corresponding inputs on the back the audio device for full surround sound.

## FIRST TIME INSTALLATION

Once the STB-6000 has been connected to the power and to the TV and after all audio connections have been made properly, switch on TV.

Press Power button to switch the Set Top Box (STB) unit on.

If you are using the unit for the first time or have restored the unit to Factory Default, the Installation Guide Menu will appear on your TV screen.



### OSD Language

To set the OSD (On Screen Display) Language press the LEFT/RIGHT buttons on the remote until the desired Language is displayed and then press the DOWN button.

## Country

To change the Country Settings press the LEFT/RIGHT buttons on the remote until the desired Country is displayed and then press the DOWN button.

## Channel Search

Press OK to start the Channel Auto Search.

The System will now scan for the available channel in your area.

Found DVB-T Channels are shown in the left window and radio stations are displayed in the right.

Total progress is displayed in the bar below.

Press the EXIT or Menu Button to stop the scan at any time.

Once the Scan is complete the first Station is shown.

## BASIC OPERATION

 
### Channel Selection

A. Use the UP or Down Buttons to go up or down through the channels individually or

B. Press the OK button to display the Channel list.

C. Press the LEFT/RIGHT button to Change to the radio channel List.

D. Press the EXIT button to close the channel list and return to TV viewing.

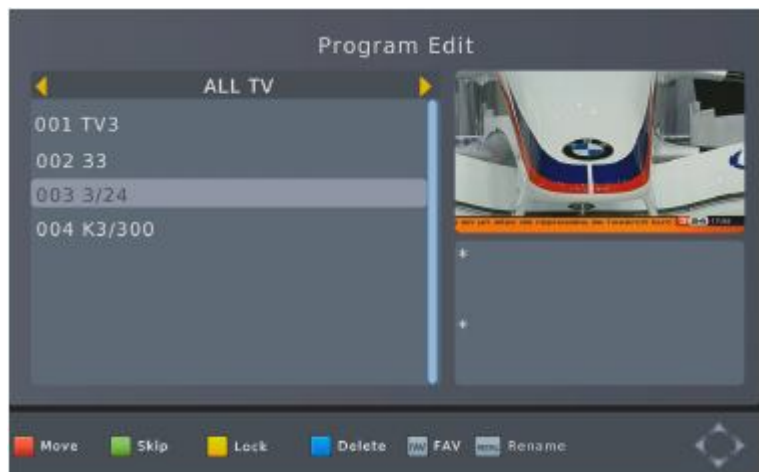

E. If you know the channel number it can be entered in directly using the Numeric Key Pad.

### Volume Control

Press the LEFT (VOL-) button to decrease the volume

Press the Right (VOL +) button to increase the volume

Press the MUTE button to mute the audio output. Press again to restore audio.

### Channel Information

Press the INFO button on the remote control to display the current channel and program information including:

- Current channel name, number and current time.
- Current and Next program name, start and finish time

Press the INFO Button again to see more detailed information about the channel and program as well as signal strength.

## Channel Search

This Menu provides options to adjust the Search Channel settings.

### Auto Search.

Use the RIGHT button or the OK button to start the full Auto search of all TV and Radio channels.

This option will delete all previously scanned channels. A full scan can take several minutes.

 


### Manual Search

This option allows you to scan for new channels without deleting previously saved channels and settings.

Use the LEFT or RIGHT button to select the frequency channel to scan and then press the OK button to start the search.

The quality status bar will indicate the quality of the signal.

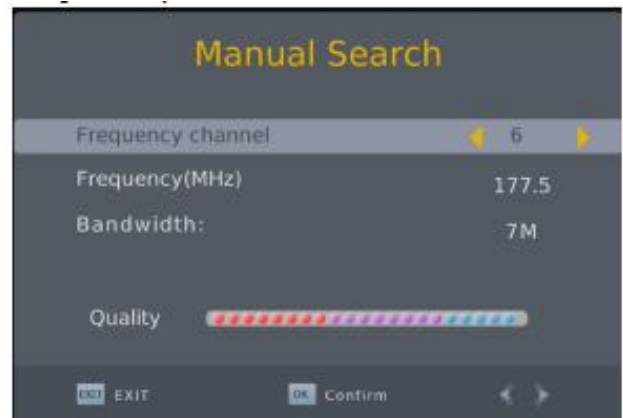

### Country

Select your country of residence.

### Antenna Power

Select ON only if an external active antenna is connected

## MAIN MENU

### Time

Set the times zone for you area of residences.

#### Time Offset

**AUTO** Sets GMT Offset based on Country Region

**MANUAL** Requires the GMT offset to be set manually and disables the Country Region option

#### Country Region

Use the LEFT and Right buttons to select the region of residence.

#### Time Zone

Set the GMT offset when Time Offset option is set to manual. Use the LEFT and Right buttons to select the Offset for your region.

### Sleep

The Sleep option allows you to set a time that the STB will automatically turn off from the last input from the remote control. Options are 1 to 12 hours set in 1 hour increments. OFF disables the Sleep feature.

## Option

#### OSD Language

Sets the language used by the display. Use the LEFT/RIGHT buttons on the remote, until the desired Language is displayed and then press the DOWN button.

#### Subtitle Language

Sets the language used by the subtitles. Use the LEFT/RIGHT buttons on the remote, until the desired Language is displayed and then press the DOWN button.

**Note: Only available if chosen subtitle language is being transmitted.**

#### Audio Language

Set the preferred audio language for watching TV channels. If the language is not available, the default program language will be used.

**Note: Only available if chosen Audio language is being transmitted.**

#### Digital Audio

Set the Digital audio output of the STB-6000.

Options are: PCM, RAW or OFF. Please refer to your Audio equipment documentation for the best setting for your equipment.

## System Setting

The menu provides options to adjust the system settings.

### Parental Guidance

Select the parental level you desire for disc with lock-out function or multiple rating levels. There are listed in AGE from the level 1 to the highest level 18.

**Note: This feature requires a password to access and allows viewing to be restricted via password for programs that are outside the restrictions.**

### Set Password

Set or change the password for locked programs.

**Input Old Password:** Use the Numeric keypad to enter the old password.

**Input New Password:** Use the Numeric keypad to enter the New password.

**Confirm Password:** Use the Numeric keypad to enter the New password to confirm.

**Note: The Default password is "000000"**

### Restore Factory Defaults

**\*WARNING\* Restoring Factory Defaults will remove all saved channel information and settings. All Scheduled recordings will be deleted. Please use with care.**

Press the OK button to begin and then enter the password.

Press the OK button to confirm or press the EXIT button to return to the previous screen without Restoring Defaults.

### Information

Displays the current information about Model, Hardware and Software reversion numbers.

## USB

The USB settings menu allows you to change the way the STB displays multimedia from USB devices as well as managing the device its self.

### Multimedia

When a USB device is attached you can select from the Music, Photo or Movie options in this menu using the RIGHT/LEFT keys and OK to select.

If a USB device is not connected, the warning message "Not Find Any USB Device" will appear.



## Format

The Format feature allows you to format the attached USB device.

Use the LEFT or RIGHT button to select the File System used to format the device.

FAT32

NTFS

With the selection made press the OK button to start and then again to confirm the format.

Time taken to complete this action will vary on size and type of attached device.

***Note: Great care should be used when formatting attached devices. Once the format process is started it cannot be stopped and all data on the device will be lost and cannot be recovered.***

## MULTIMEDIA PLAYBACK

To play back record programs or view media from USB drives MENU, go across to the USB MENU and select MEDIA PLAYER.

Use the LEFT or RIGHT button to select the type of media to access and then press the OK button to select.

## Music

In the MUSIC Menu use the LEFT and RIGHT buttons to navigate to the folder on the USB device that contains the music files to play. Select the file and press the OK button to begin playback. Track and playback information are displayed on the right hand window.

## Photo

In the Photo Menu use the LEFT and RIGHT buttons to navigate to the folder on the USB device that contains the picture files to view. Select the file and press the OK button to view an individual image or press the PLAY button to begin a Slide Show of all images in the current folder.

## MULTIMEDIA PLAYBACK

Press the MENU button to display the images in a grid. Use the LEFT and RIGHT buttons to scroll through and select the image to view and press the OK button.

## Movie

In the Movie Menu use the LEFT and RIGHT buttons to navigate to the folder on the USB device that contains the Video files to view. Select the file and press the OK button. Playback of the selected video file will start in the right hand window. Press the RED button to change the video to full screen.

## PVR

In the PVR Menu use the LEFT and RIGHT buttons to navigate to the folder on the USB device that contains the Recorded files to view. By default, the STB-6000 will create a folder called PVRRECORD on the USB device when the first recording starts. All subsequent recordings will be saved to this folder automatically.



## GENERAL INFORMATION

Recordings are automatically named as in the following example.  
Press the RED button to view the recorded program in full screen.  
Press the YELLOW Button to delete the file.  
Press the GREEN button to rename the file.

## GENERAL INFORMATION

### Simple Program Recording.

Press the REC Button on the remote control to record the current program. Recording will start from the moment the REC button pressed. Press the STOP button to end the recording. Recorded files can be viewed through the PVR menu.

**NOTE: this function requires a USB drive to be connected with enough room to record the program.**

### Time Shifting Live TV

While watch a TV broadcast it is possible to pause the vision and then start the playback a few minute later. Press the PLAY/PAUSE button to the remote to pause the vision. When you ready press the PLAY/PAUSE button again to resume viewing.

## GENERAL INFORMATION

The Status bar on the bottom of the screen will indicate how far behind you viewing time is in relation to the actual broadcast.

Up to 1 Hour can be reviewed in this feature.

Use the REV and FWD buttons to fast forward or Rewind the vision.

Press the YELLOW button to enter a specific time to jump to.

Press the STOP to end the time shifting and then press the OK button to confirm.

**NOTE: this function requires a USB drive to be connected with enough room to allow the Time Shift Function to work.**

### Connecting a USB Device

In most cases connecting a USB FLASH drive will be a matter of simply plugging it I to the USB port on the STB-6000.

Please remember that HD TV requires a large amount of space to record.

Please allow approximately 4GB per hour if recording HD programs. Less space will be required for lower resolution programs.

### Connecting a 2.5" (Notebook) Hard Drive

It is recommended that 2.5" drives are connected to the STB-6000 using a powered USB hub. Only single partition drive should be used.

## CONTACT INFORMATION

### Contact information

For more information on this product and technical support please visit

[HTTP://WWW.LASERCO.COM.AU](http://www.laserco.com.au)

#### Warranty Against Defects

Laser Corporation Pty Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Through a network of retailers and resellers, Laser will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage.

Please retain your receipt as proof of purchase

#### How to make a product warranty claim:

Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture, the condition of the Laser Product and the type of defect.

Step 2a): Contact your place of purchase. They will assess the nature of the fault and refund or replace the product as per their store refund or warranty policy.

Step 2b): If your place of purchase cannot be contacted, then you can contact Laser . Customer Service with details of your defective Laser Product: Phone: (02) 9870 3388; or Email: [support@laserco.com.au](mailto:support@laserco.com.au) or online

[www.laserco.net/support/warranty](http://www.laserco.net/support/warranty) (click on "Consumers (End Users)"). Our business address is at 1/6-8 Byfield Street, North Ryde, NSW 2113

Step 3: Laser . will issue you with a Return Authorisation (RA) number within 48 hours. When requested, send us the defective Product and a copy of your receipt. Laser will cover the cost of the return delivery.

Step 4: Wait for us to contact you. Once we have received your defective Laser Product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser Product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser Product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



NAVIG[8]R

**PRECISION**  
gaming accessories

**CONNECT**

**naum8**  
GPS ESSENTIALS

