

USER MANUAL

- VOICE COMMANTS

1. view priority
2. change priority
3. priority drip on
4. power off
5. power on
6. security off
7. full security off
8. security on
9. full security on
10. system temperature
11. system humidity
12. set fan time
13. set alarm limit
14. set gas sensitivity
15. set temperature limit