

|                                   |  |
|-----------------------------------|--|
| <b>Document Title</b>             | Specification of a Request Manager for SAE J1939 |
| <b>Document Owner</b>             | AUTOSAR  |
| <b>Document Responsibility</b>    | AUTOSAR  |
| <b>Document Identification No</b> | 611  |
| <b>Document Classification</b>    | Standard   |
| <b>Document Status</b>            | Final  |
| <b>Part of AUTOSAR Standard</b>   | Classic Platform                                 |
| <b>Part of Standard Release</b>   | 4.3.0  |

| <b>Document Change History</b> |                |                            |  |
|--------------------------------|----------------|----------------------------|--|
| <b>Date</b>                    | <b>Release</b> | <b>Changed by</b>          | <b>Change Description</b>  |
| 2016-11-30                     | 4.3.0          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Request2 support</li> <li>Improved handling of meta data</li> <li>Reliable TxConfirmation replaces timeout</li> <li>Separate configuration of different users</li> </ul>  |
| 2015-07-31                     | 4.2.2          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Fixed names and signatures of service ports</li> <li>Support for explicit broadcast of ACKM</li> <li>Introduction of further error classes</li> </ul>   |
| 2014-10-31                     | 4.2.1          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Improved interaction with COM</li> <li>Harmonized with SWS BSW General</li> </ul>   |
| 2014-03-31                     | 4.1.3          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Clarified availability of callbacks</li> <li>Standardized callback header names</li> <li>Fixed UserType Enum</li> </ul>   |
| 2013-10-31                     | 4.1.2          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Additional development error for function parameter checks</li> <li>Clarification of Request timeout and state handling</li> <li>Separate configuration of received and transmitted PGNs</li> <li>Removed change documentation</li> </ul> |
| 2013-03-15                     | 4.1.1          | AUTOSAR Administration     | <ul style="list-style-type: none"> <li>Initial Release</li> </ul>  |

## Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.

## Table of Contents

|       |   |    |
|-------|---|----|
| 1     | Introduction and functional overview .....      | 6  |
| 1.1   | Request Management according to SAE J1939 ..... | 6  |
| 1.2   | J1939 Request Manager BSW Module .....          | 6  |
| 1.3   | J1939 Terminology .....                         | 6  |
| 2     | Acronyms and abbreviations .....                | 8  |
| 3     | Related documentation.....                      | 9  |
| 3.1   | Input documents .....                           | 9  |
| 3.2   | Related standards and norms .....               | 10 |
| 3.3   | Related specification .....                     | 10 |
| 4     | Constraints and assumptions .....               | 11 |
| 4.1   | Limitations .....                               | 11 |
| 4.2   | Applicability to car domains .....              | 11 |
| 5     | Dependencies to other modules.....              | 12 |
| 5.1   | File structure.....                             | 12 |
| 5.1.1 | Code file structure.....                        | 12 |
| 5.1.2 | Header file structure.....                      | 12 |
| 6     | Requirements traceability .....                 | 14 |
| 7     | Functional specification .....                  | 15 |
| 7.1   | Overview .....                                  | 15 |
| 7.2   | Module Handling .....                           | 15 |
| 7.2.1 | Initialization .....                            | 15 |
| 7.2.2 | Timing Related Functionality.....               | 16 |
| 7.3   | Communication State Handling .....              | 16 |
| 7.4   | Reception of Requests .....                     | 16 |
| 7.4.1 | Request Forwarding.....                         | 17 |
| 7.4.2 | Request Handling via COM.....                   | 17 |
| 7.4.3 | Request of Unknown PGNs .....                   | 18 |
| 7.5   | Transmission of Acknowledgements .....          | 18 |
| 7.6   | Transmission of Requests .....                  | 19 |
| 7.7   | Reception of Acknowledgements .....             | 20 |
| 7.8   | Timeout Supervision.....                        | 21 |
| 7.9   | Error classification .....                      | 21 |
| 7.9.1 | Development Errors .....                        | 22 |
| 7.9.2 | Runtime Errors.....                             | 23 |
| 7.9.3 | Transient Faults .....                          | 23 |
| 7.9.4 | Production Errors .....                         | 23 |
| 7.9.5 | Extended Production Errors .....                | 23 |
| 7.10  | API Parameter Checking.....                     | 23 |
| 8     | API specification .....                         | 24 |
| 8.1   | Imported types.....                             | 24 |
| 8.2   | Type definitions .....                          | 24 |
| 8.2.1 | J1939Rm_ConfigType .....                        | 24 |
| 8.2.2 | J1939Rm_StateType .....                         | 24 |

|         |   |    |
|---------|---|----|
| 8.3     | Function definitions.....                     | 24 |
| 8.3.1   | J1939Rm_Init.....                             | 25 |
| 8.3.2   | J1939Rm_DelInit .....                         | 25 |
| 8.3.3   | J1939Rm_GetVersionInfo.....                   | 25 |
| 8.3.4   | J1939Rm_SetState.....                         | 26 |
| 8.3.5   | J1939Rm_SendRequest.....                      | 27 |
| 8.3.6   | J1939Rm_CancelRequestTimeout .....            | 28 |
| 8.3.7   | J1939Rm_SendAck .....                         | 29 |
| 8.4     | Call-back notifications.....                  | 30 |
| 8.4.1   | J1939Rm_RxIndication .....                    | 30 |
| 8.4.2   | J1939Rm_TxConfirmation .....                  | 30 |
| 8.4.3   | J1939Rm_ComRxIpduCallout.....                 | 31 |
| 8.5     | Scheduled functions .....                     | 32 |
| 8.5.1   | J1939Rm_MainFunction .....                    | 32 |
| 8.6     | Expected Interfaces.....                      | 32 |
| 8.6.1   | Mandatory Interfaces .....                    | 32 |
| 8.6.2   | Optional Interfaces.....                      | 32 |
| 8.6.3   | Configurable interfaces .....                 | 33 |
| 8.7     | Service Port Descriptions .....               | 35 |
| 8.7.1   | Provided Service Ports .....                  | 35 |
| 8.7.2   | Required Service Ports .....                  | 36 |
| 8.7.3   | Client-Server Interfaces .....                | 37 |
| 8.7.4   | Implementation Data Types .....               | 46 |
| 9       | Sequence diagrams .....                       | 48 |
| 9.1     | Reception of Request PG.....                  | 48 |
| 9.2     | Transmission of Acknowledgement PG.....       | 48 |
| 9.3     | Handling of Request for a COM Pdu .....       | 49 |
| 9.4     | Handling of Request for a Diagnostic Pdu..... | 50 |
| 9.5     | Transmission of Request PG.....               | 50 |
| 9.6     | Reception of Acknowledgement PG .....         | 51 |
| 9.7     | Monitoring of Request Timeout .....           | 52 |
| 10      | Configuration specification.....              | 53 |
| 10.1    | Containers and configuration parameters ..... | 53 |
| 10.1.1  | J1939Rm .....                                 | 59 |
| 10.1.2  | J1939RmGeneral .....                          | 59 |
| 10.1.3  | J1939RmConfigSet.....                         | 62 |
| 10.1.4  | J1939RmChannel .....                          | 62 |
| 10.1.5  | J1939RmAckmRxPdu.....                         | 64 |
| 10.1.6  | J1939RmAckmTxPdu .....                        | 65 |
| 10.1.7  | J1939RmRqstRxPdu .....                        | 65 |
| 10.1.8  | J1939RmRqstTxPdu.....                         | 66 |
| 10.1.9  | J1939RmRqst2RxPdu .....                       | 67 |
| 10.1.10 | J1939RmRqst2TxPdu.....                        | 67 |
| 10.1.11 | J1939RmNode.....                              | 68 |
| 10.1.12 | J1939RmUser.....                              | 69 |
| 10.1.13 | J1939RmNmUser .....                           | 69 |
| 10.1.14 | J1939RmDcmUser .....                          | 70 |
| 10.1.15 | J1939RmCddUser .....                          | 71 |
| 10.1.16 | J1939RmRteUser .....                          | 74 |

|         |                            |    |
|---------|----------------------------|----|
| 10.1.17 | J1939RmComUser .....       | 76 |
| 10.1.18 | J1939RmComIPdu .....       | 77 |
| 10.2    | Published Information..... | 78 |

## 1 Introduction and functional overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module J1939 Request Manager.

### 1.1 Request Management according to SAE J1939

J1939 defines a special parameter group (PG) called Request (RQST, PGN = 0x0EA00), which may be used to request transmission of any other parameter group. The Request parameter group just contains the PGN of the requested parameter group.

Depending on the destination address used by the Request PG, the response must be sent directly to the requesting ECU, or to all ECU. For short parameter groups with PDU1 format, the destination address is set accordingly<sup>1</sup>, for large parameter groups the suitable transport protocol mode (BAM or CMTD, see [9] and [18]) is used.

Depending on the requested parameter group and the destination address of the Request PG, ECUs answer either with the requested parameter group, with the special Acknowledgement parameter group (ACKM, PGN = 0x0E800), or not at all.

Finally, J1939 defines that the response to a Request will be expected within 1.25s after the Request was sent. The responding node is required to answer within 200ms.

Besides the Request PG, J1939 also defines a Request2 PG (RQST2, PGN=0xC900). The behavior of this PG is identical to that of the Request PG, with the following extensions:

- A transmission with the transfer function can be requested to provide the same PG from multiple ECUs.
- Extended identifier bytes can be specified to request a defined layout of a multiplexed message.

### 1.2 J1939 Request Manager BSW Module

The J1939 Request Manager (J1939Rm) handles received and transmitted Request, Request2, and Acknowledgement PGs. It natively supports handling of incoming requests for address claim and is configurable to support incoming requests for diagnostic and other J1939 PGNs. Unknown incoming requests are answered with a negative Acknowledgement PG if they address a specific destination address.

The J1939Rm also supports transmission of requests and timeout supervision for the resulting PG or acknowledgement.

### 1.3 J1939 Terminology

The terminology of J1939 differs noticeably from the usual AUTOSAR terminology. For consistency reasons, this introduction used the terms of the J1939 specification,

---

<sup>1</sup> Short parameter groups with PDU2 format have no destination address, they are broadcast PGs by nature.

while the remainder of this specification will use terms that are more common within AUTOSAR:

- 'I-PDU' replaces 'parameter group'

## 2 Acronyms and abbreviations

| <b>Abbreviation /<br/>Acronym:</b> | <b>Description:</b>  |
|------------------------------------|--|
| AC                                 | J1939 AddressClaimed PG (PGN = 0x0EE00)                                |
| ACK                                | J1939 Acknowledgement PG (ACKM) with control byte set to 0             |
| ACKM                               | J1939 Acknowledgement PG (PGN = 0x0E800)                               |
| BSW                                | Basic Software (module)  |
| CA                                 | Controller Application, role of an ECU tied to one address             |
| DET                                | Default Error Tracer, supports development and runtime error reporting |
| DP                                 | Data Page, the most significant bit (MSB) of the 18 bit PGN            |
| EDP                                | Extended Data Page, the second bit (after MSB) of the 18 bit PGN       |
| NACK                               | J1939 Acknowledgement PG (ACKM) with control byte set to 1             |
| PDUF                               | PDU Format, the middle byte of the 18 bit PGN                          |
| PDUS                               | PDU Specific, the lower byte of the 18 bit PGN                         |
| PG                                 | Parameter Group  |
| PGN                                | Parameter Group Number (18 bits, contains EDP, DP, PDUF, PDUS)         |
| RQST                               | J1939 Request PG (PGN = 0x0EA00)                                       |
| RQST2                              | J1939 Request2 PG (PGN = 0x0C900)                                      |
| RTE                                | AUTOSAR Runtime Environment  |
| SW-C                               | AUTOSAR Software Component (of the Application)                        |
| XFER                               | J1939 Transfer PG (PGN = 0x0CA00)                                      |



## 3 Related documentation

### 3.1 Input documents

[1] List of Basic Software Modules  
AUTOSAR\_TR\_BSWModuleList.pdf

[2] Layered Software Architecture  
AUTOSAR\_EXP\_LayeredSoftwareArchitecture.pdf

[3] General Requirements on Basic Software Modules  
AUTOSAR\_SRS\_BSWGeneral.pdf

[4] General Specification of Basic Software Modules  
AUTOSAR\_SWS\_BSWGeneral.pdf

[5] Requirements on BSW Modules for SAE J1939  
AUTOSAR\_SRS\_J1939.pdf

[6] Specification of Communication Stack Types  
AUTOSAR\_SWS\_CommunicationStackTypes.pdf

[7] System Template  
AUTOSAR\_TPS\_SystemTemplate.pdf

[8] Specification of CAN Interface  
AUTOSAR\_SWS\_CANInterface.pdf

[9] Specification of a Transport Layer for SAE J1939  
AUTOSAR\_SWS\_SAEJ1939TransportLayer.pdf

[10] Specification of PDU Router  
AUTOSAR\_SWS\_PDURouter.pdf

[11] Specification of Communication  
AUTOSAR\_SWS\_COM.pdf

[12] Specification of Network Management for SAE J1939  
AUTOSAR\_SWS\_SAEJ1939NetworkManagement.pdf

[13] Specification of a Diagnostic Communication Manager for SAE J1939  
AUTOSAR\_SWS\_SAEJ1939DiagnosticCommunicationManager.pdf

[14] Specification of Default Error Tracer  
AUTOSAR\_SWS\_DefaultErrorTracer.pdf

[15] Specification of BSW Scheduler  
AUTOSAR\_SWS\_BSWScheduler.pdf

[16] Specification of ECU Configuration  
AUTOSAR\_TPS\_ECUConfiguration.pdf

[17] Specification of Memory Mapping  
AUTOSAR\_SWS\_MemoryMapping.pdf

### **3.2 Related standards and norms**

[18] J1939-21 DEC2010, Data Link Layer

### **3.3 Related specification**

AUTOSAR provides a General Specification on Basic Software modules [4] (SWS BSW General), which is also valid for the SAE J1939 Request Manager.

Thus, the specification SWS BSW General shall be considered as additional and required specification for SAE J1939 Transport Layer.

## **4 Constraints and assumptions**

### **4.1 Limitations**

The J1939 Request Manager only implements Request, Request2, and Acknowledgement PGs. It does not provide support for the Transfer PG.

### **4.2 Applicability to car domains**

J1939 is developed by the SAE as a standard for heavy-duty on-highway, farming, and construction vehicles. It is not applicable to passenger cars or light trucks.

## 5 Dependencies to other modules

The J1939 Request Manager (J1939Rm) has interfaces towards COM, the PDU Router (PduR), the J1939 Network Management module (J1939Nm), the J1939 Diagnostic Communication Management module (J1939Dcm), the Default Error Tracer (DET), and application software components (SW-Cs) via the AUTOSAR Runtime Environment (RTE). It also supports Complex Drivers (CDD).

The J1939 Request Manager includes header files of COM, J1939Nm, J1939Dcm, PduR, DET, CDDs, and the RTE.

### 5.1 File structure

#### 5.1.1 Code file structure

For details, refer to the section 5.1.6 "Code file structure" of the SWS BSW General [4].

#### 5.1.2 Header file structure

Besides the files defined in section 5.1.7 "Header file structure" of the SWS BSW General [4], the J1939 Request Manager needs to include the files defined below.

[SWS\_J1939Rm\_00001] [The implementation and callback header files (J1939Rm.h and J1939Rm\_Cbk.h) shall include the file J1939Rm\_Types.h.] (SRS\_BSW\_00415)

[SWS\_J1939Rm\_00032] [The header file J1939Rm\_Types.h shall include the file ComStack\_Types.h.] (SRS\_BSW\_00415)

[SWS\_J1939Rm\_00114] [J1939Rm shall include the header file Com.h if at least one J1939RmComUser is configured. ] ()

[SWS\_J1939Rm\_00111] [J1939Rm shall include the header file J1939Nm\_Cbk.h if at least one J1939RmNmUser is configured.] ()


[SWS\_J1939Rm\_00112] [J1939Rm shall include the header file J1939Dcm\_Cbk.h if at least one J1939RmDcmUser is configured.] ()

[SWS\_J1939Rm\_00113] [J1939Rm shall include a header file named <apiServicePrefix>\_Cbk.h for every configured J1939RmCddUser.] ()

Please note: Complex driver (CDD) APIs use the module prefix configured by the apiServicePrefix of the CDD's module description file.

[SWS\_J1939Rm\_00110] [J1939Rm shall include the header file Rte\_J1939Rm.h.] ()

The following picture shows the include hierarchy of the J1939 Request Manager.

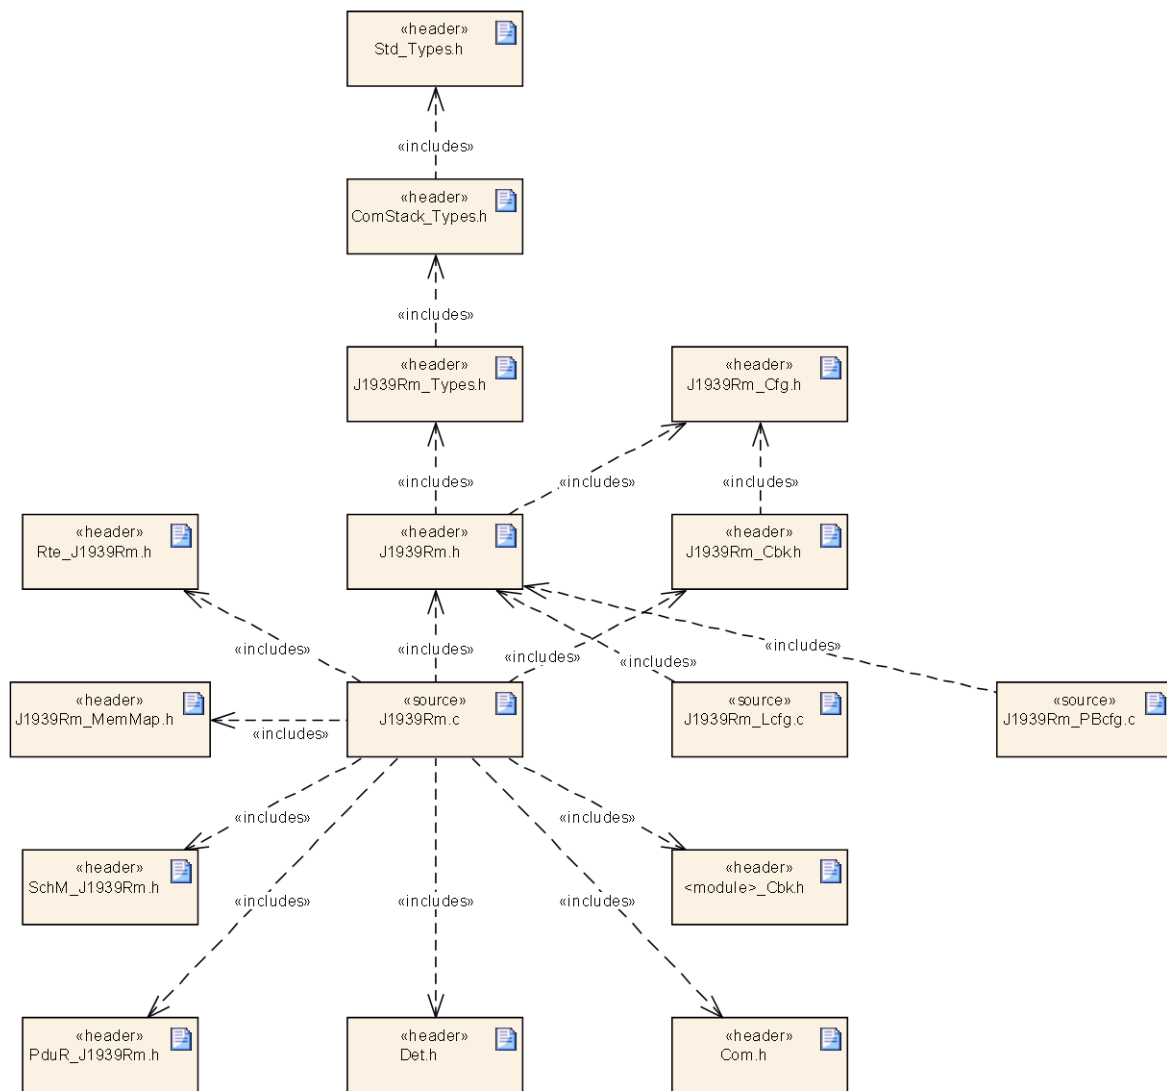

**Figure 1: Include hierarchy of J1939Rm**

## 6 Requirements traceability

| Requirement     | Description   | Satisfied by   |
|-----------------|---|--|
| SRS_BSW_00407   | Each BSW module shall provide a function to read out the version information of a dedicated module implementation | SWS_J1939Rm_00039  |
| SRS_BSW_00415   | Interfaces which are provided exclusively for one module shall be separated into a dedicated header file          | SWS_J1939Rm_00001, SWS_J1939Rm_00032   |
| SRS_J1939_00012 | The J1939 Request Manager shall provide an interface for module initialization                                    | SWS_J1939Rm_00012, SWS_J1939Rm_00037, SWS_J1939Rm_00073  |
| SRS_J1939_00013 | The J1939 Request Manager shall provide an interface for module shutdown  | SWS_J1939Rm_00013, SWS_J1939Rm_00038   |
| SRS_J1939_00014 | The J1939 Request Manager shall forward incoming requests to configured destinations                              | SWS_J1939Rm_00002, SWS_J1939Rm_00003, SWS_J1939Rm_00007, SWS_J1939Rm_00008, SWS_J1939Rm_00063, SWS_J1939Rm_00100, SWS_J1939Rm_00107, SWS_J1939Rm_00115, SWS_J1939Rm_00116                    |
| SRS_J1939_00015 | The J1939 Request Manager shall forward incoming acknowledgements to configured destinations                      | SWS_J1939Rm_00026, SWS_J1939Rm_00027, SWS_J1939Rm_00028, SWS_J1939Rm_00064, SWS_J1939Rm_00066, SWS_J1939Rm_00101, SWS_J1939Rm_00106  |
| SRS_J1939_00016 | The J1939 Request Manager shall provide an interface for transmission of request messages                         | SWS_J1939Rm_00016, SWS_J1939Rm_00021, SWS_J1939Rm_00022, SWS_J1939Rm_00023, SWS_J1939Rm_00025, SWS_J1939Rm_00054, SWS_J1939Rm_00097, SWS_J1939Rm_00104, SWS_J1939Rm_00118                    |
| SRS_J1939_00017 | The J1939 Request Manager shall provide an interface for transmission of acknowledgement messages                 | SWS_J1939Rm_00008, SWS_J1939Rm_00009, SWS_J1939Rm_00018, SWS_J1939Rm_00019, SWS_J1939Rm_00020, SWS_J1939Rm_00056, SWS_J1939Rm_00098, SWS_J1939Rm_00103                                       |
| SRS_J1939_00026 | The J1939 Request Manager shall support timeout supervision for outgoing requests                                 | SWS_J1939Rm_00017, SWS_J1939Rm_00024, SWS_J1939Rm_00029, SWS_J1939Rm_00030, SWS_J1939Rm_00055, SWS_J1939Rm_00065, SWS_J1939Rm_00099, SWS_J1939Rm_00102, SWS_J1939Rm_00105, SWS_J1939Rm_00108 |

## 7 Functional specification

This chapter defines the behavior of the J1939 Request Manager. The API of the module is defined in chapter 8, while the configuration is defined in chapter 10.

### 7.1 Overview

On one side, the J1939 Request Manager is responsible for routing incoming RQST and RQST2 PGs to the correct destination, and to provide an infrastructure for sending responding ACKM PGs.

On the other side, the J1939 Request Manager also provides an infrastructure to send RQST and RQST2 PGs, and to supervise timeout of the response(s), including but not limited to ACKM PGs.

The J1939 Request Manager uses meta data items of type CAN\_ID\_32 of the received and transmitted ACKM and RQST PGs to access the source address, the destination address, and the priority which are encoded in the CAN ID.

[SWS\_J1939Rm\_00119] [Meta data items of type CAN\_ID\_32 contain the source address in the fourth (least significant) byte.] ()

[SWS\_J1939Rm\_00120] [Meta data items of type CAN\_ID\_32 contain the destination address in the third byte.] ()

[SWS\_J1939Rm\_00121] [Meta data items of type CAN\_ID\_32 contain the priority in the bits 2-4 of the first (most significant) byte, where bit 0 is the least significant bit of a byte.] ()

### 7.2 Module Handling

This section contains description of auxiliary functionality of the J1939 Request Manager.

#### 7.2.1 Initialization

The J1939 Request Manager is initialized via J1939Rm\_Init, and de-initialized via J1939Rm\_Delnit. Except for J1939Rm\_GetVersionInfo and J1939Rm\_Init, the API functions of the J1939 Request Manager may only be called after the module has been properly initialized.

[SWS\_J1939Rm\_00012] [A call to J1939Rm\_Init initializes all internal variables and sets the J1939 Request Manager to the initialized state.] (SRS\_J1939\_00012)

[SWS\_J1939Rm\_00013] [A call to J1939Rm\_Delnit sets the J1939 Request Manager back to the uninitialized state.] (SRS\_J1939\_00013)

[SWS\_J1939Rm\_00010] [If DET reporting is enabled via J1939RmDevErrorDetect, the J1939 Request Manager shall call Det\_ReportError with the error code J1939RM\_E\_UNINIT when any API other than J1939Rm\_Init or J1939Rm\_GetVersionInfo is called in uninitialized state.] ()

[SWS\_J1939Rm\_00011] [When J1939Rm\_Init is called in initialized state, the J1939 Request Manager shall not re-initialize its internal variables. It shall instead call Det\_ReportError with the error code J1939RM\_E\_REINIT if DET reporting is enabled (see J1939RmDevErrorDetect).] ()

## 7.2.2 Timing Related Functionality

To be able to measure times, the J1939 Request Manager is triggered cyclically via the J1939Rm\_MainFunction.

[SWS\_J1939Rm\_00072] [The J1939 Request Manager shall use the J1939Rm\_MainFunction for timing related purposes.] ()

## 7.3 Communication State Handling

In general, request handling is only active when the ECU is online (see [12] for details). The exceptions to this rule are received and transmitted requests for the AddressClaimed PG, which must be possible in all cases. The J1939 Request Manager provides an API that is used by the BSW Mode Manager (BswM) to notify the J1939 communication state.

[SWS\_J1939Rm\_00073] [During initialization via J1939Rm\_Init, the J1939 Request Manager assumes the offline state for all nodes on all channels.] (SRS\_J1939\_00012)

[SWS\_J1939Rm\_00014] [A call to J1939Rm\_SetState sets the state of a node's channel to online or offline.] ()

[SWS\_J1939Rm\_00015] [In the offline state, the J1939 Request Manager only processes requests for the AddressClaimed PG, while timeout supervision and acknowledgement handling are completely disabled.] ()

## 7.4 Reception of Requests

The J1939 Request Manager receives request PGs (RQST and RQST2) via J1939Rm\_RxIndication from the CAN Interface. The J1939 Request Manager shall use the meta data item type CAN\_ID\_32 to be able to identify the sender, the destination address, and the priority of the request.

[SWS\_J1939Rm\_00122] [The J1939 Request Manager shall use a meta data item of type CAN\_ID\_32 to determine the source address, destination address, and priority of received Request PGs.] ()



[SWS\_J1939Rm\_00007] [The J1939 Request Manager shall only accept requests addressed to the whole network (global DA), or to one of the configured addresses of the ECU (see J1939RmNmNodeRef).] (SRS\_J1939\_00014)

Requests for the AddressClaimed PG (AC, PGN = 0x0EE00) always go to the J1939 Network Management module. Requests for the DMx PGs (DM01 to DM57) always go to the J1939 Diagnostic Communication Manager, the destination of these and other PGNs is configured via J1939RmUserRequestPGN.

Besides forwarding to the J1939 Network Management module, the J1939 Diagnostic Communication Manager, and CDDs, the J1939 Request Manager can also forward requests to SW-Cs, and trigger COM to send requested PGs.

#### 7.4.1 Request Forwarding

Forwarding to other BSW modules is done via the generic callout function <User>\_RequestIndication (see section 8.6.3.1). Forwarding to SW-C uses a dedicated service port function with the same signature as the <User>\_RequestIndication.

[SWS\_J1939Rm\_00002] [When J1939Rm\_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via J1939RmUserRequestPGN to trigger either the J1939 Diagnostic Communication Manager or a CDD, the J1939 Request Manager shall call the corresponding <User>\_RequestIndication.] (SRS\_J1939\_00014)

[SWS\_J1939Rm\_00116] [When J1939Rm\_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is AddressClaimed (AC, 0xEE00), the J1939 Request Manager shall call J1939Nm\_RequestIndication.] (SRS\_J1939\_00014)

[SWS\_J1939Rm\_00003] [When J1939Rm\_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via J1939RmUserRequestPGN to be forwarded to the RTE, the J1939 Request Manager shall call the corresponding service port function.] (SRS\_J1939\_00014)

#### 7.4.2 Request Handling via COM

If COM is configured as destination for the request of a certain PGN, the J1939 Request Manager will prepare the MetaData, and request COM to send the PDU with the MetaData provided via Com\_TriggerIPDUSendWithMetaData. This sequence is shown in Figure 4.

[SWS\_J1939Rm\_00115] [When J1939Rm\_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN is configured via J1939RmComIPduPGN to be handled via COM, and when the extended identifier bytes of an RQST2 match the multiplexor values of a multiplexed message, the J1939 Request Manager shall prepare the MetaData from the given information and provide it to COM via Com\_TriggerIPDUSendWithMetaData together with the PduId

of the transmitted COM I-PDU referenced by J1939RmComIPduRef.] (SRS\_J1939\_00014)

### 7.4.3 Request of Unknown PGNs

The J1939 Request Manager shall respond to requests for unknown PGNs with a NACK, but only when the request was sent to a specific destination address.

[SWS\_J1939Rm\_00008] [When J1939Rm\_RxIndication is called by the PDU Router to indicate reception of a request, and the requested PGN or the requested extended identifier bytes are not configured, and the destination address is not the broadcast address, the J1939 Request Manager shall call PduR\_J1939RmTransmit to send a negative acknowledgement (NACK).] (SRS\_J1939\_00014, SRS\_J1939\_00017)

## 7.5 Transmission of Acknowledgements

For unknown PGNs, the J1939 Request Manager transmits a negative acknowledgement by itself (see section 7.4.3 above). Modules that receive requests from the J1939 Request Manager may use the API J1939Rm\_SendAck to transmit the acknowledgement variants defined by the J1939 standard (see section 5.4.4 in [18] and description of the API J1939Rm\_SendAck in section 8.3.7).

The Acknowledgement PG is supposed to have a fixed destination address (FF<sub>16</sub>), configured via CanIfTxPduCanId in the CAN Interface. The J1939 Request Manager shall use the meta data item type CAN\_ID\_32 so that it can modify the priority and source address.

[SWS\_J1939Rm\_00009] [When a BSW module, a CDD, or an SW-C (via service port and RTE) calls J1939Rm\_SendAck, the J1939 Request Manager shall call PduR\_J1939RmTransmit to send the required acknowledgement.] (SRS\_J1939\_00017)

[SWS\_J1939Rm\_00123] [The J1939 Request Manager shall use a meta data item of type CAN\_ID\_32 to provide the source address and priority of transmitted Acknowledgement PGs.] ()

There is only one I-PDU available to send Acknowledgement PGs. Still, it must be ensured, that no Acknowledgement PG is lost, even when a new transmission is initiated while this I-PDU is already occupied by another transmission. To achieve this, the J1939 Request Manager needs to queue Acknowledgement PGs.

[SWS\_J1939Rm\_00018] [Transmission requests for the Acknowledgement PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by J1939RmAckQueueSize.] (SRS\_J1939\_00017)

[SWS\_J1939Rm\_00019] [The J1939 Request Manager shall use the J1939Rm\_TxConfirmation with result E\_OK of the associated I-PDU to trigger transmission of pending Acknowledgement PGs.] (SRS\_J1939\_00017)

[SWS\_J1939Rm\_00020] [If the J1939Rm\_TxConfirmation is called with result E\_NOT\_OK, the J1939 Request Manager shall flush the Acknowledgement PG queue.] (SRS\_J1939\_00017)

The acknowledgement type (Control byte), the extended identifier bytes, and the Address parameter of the Acknowledgement PG are set according to the arguments of the J1939Rm\_SendAck function, as described in section 8.3.7. The destination address is always the global address, as defined in [18].

## 7.6 Transmission of Requests

As stated in section 7.1, the J1939 Request Manager also supports transmission of requests, reception of responding acknowledgements, and timeout supervision for the responses.

To trigger the transmission of a request, the J1939 Request Manager provides the API J1939Rm\_SendRequest.

The J1939 Request Manager shall use the meta data item type CAN\_ID\_32 to be able to set the priority and the source and destination address freely. The CAN Interface must be configured such that the PDU and data page bits are fixed, while the remaining bits of the CAN ID are variable.

[SWS\_J1939Rm\_00016] [When a BSW module, a CDD, or an SW-C (via service port and RTE) calls J1939Rm\_SendRequest, the J1939 Request Manager shall call PduR\_J1939RmTransmit to send the request.] (SRS\_J1939\_00016)

[SWS\_J1939Rm\_00117] [When no extended identifier bytes are provided with J1939Rm\_SendRequest, J1939Rm shall send an RQST PG. When one or more extended identifier bytes are provided, an RQST2 PG shall be sent.] ()

[SWS\_J1939Rm\_00124] [The J1939 Request Manager shall use a meta data item of type CAN\_ID\_32 to provide the source address, destination address, and priority of transmitted Request PGs.] ()

There is only one I-PDU available to send Request PGs, and one for Request2 PGs. Still, it must be ensured that no request PG is lost, even when a new transmission is initiated while this I-PDU is already occupied by another transmission. To achieve this, the J1939 Request Manager needs to queue request PGs.

[SWS\_J1939Rm\_00021] [Transmission requests for the Request PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by J1939RmRequestQueueSize.] (SRS\_J1939\_00016)

[SWS\_J1939Rm\_00118] [Transmission requests for the Request2 PG shall be queued when a previous transmission of this PG is still pending. The size of this queue is determined by J1939RmRequest2QueueSize.] (SRS\_J1939\_00016)

[SWS\_J1939Rm\_00022] [The J1939 Request Manager shall use the J1939Rm\_TxConfirmation with result E\_OK of the associated I-PDU to trigger transmission of pending Request and Request2 PGs.] (SRS\_J1939\_00016)

[SWS\_J1939Rm\_00023] [If the J1939Rm\_TxConfirmation is called with result E\_NOT\_OK, the J1939 Request Manager shall flush the corresponding request PG queue.] (SRS\_J1939\_00016)

To be able to do timeout supervision, the J1939 Request Manager needs to remember the initiator, the destination address, extended identifier bytes, and the PGN of the request.

[SWS\_J1939Rm\_00024] [When J1939Rm\_SendRequest is called with the parameter checkTimeout set to TRUE and a destination address that is not the broadcast address (0xff), and timeout handling is enabled for the caller via J1939RmUserTimeoutSupervision: The J1939 Request Manager shall store (separately for each node) the calling module's user ID, the PGN, extended identifier bytes, the source address, and the destination address of the request.] (SRS\_J1939\_00026)

Finally, requests to the global address must also be handled internally as described in section 7.4.

[SWS\_J1939Rm\_00025] [When a request is sent with the global destination address, it shall also be handled internally as if it was received via J1939Rm\_RxIndication.] (SRS\_J1939\_00016)

## 7.7 Reception of Acknowledgements

The J1939 Request Manager receives Acknowledgement PGs (ACKM) via J1939Rm\_RxIndication from the CAN Interface. The J1939 Request Manager shall use the meta data item type CAN\_ID\_32 to be able to identify the priority and the sender of the acknowledgement.

[SWS\_J1939Rm\_00125] [The J1939 Request Manager shall use a meta data item of type CAN\_ID\_32 to determine the source address and priority of received Acknowledgement PGs.] ()

[SWS\_J1939Rm\_00026] [The J1939 Request Manager shall only accept acknowledgements where the AddressAcknowledged is set to one of the configured addresses of the ECU (see J1939RmNmNodeRef).] (SRS\_J1939\_00015)

The scheduling of received Acknowledgement PGs is configured similarly to the Request PG, see section 7.4.1, but the destinations are restricted to CDD and Application, because the J1939Nm and the J1939Dcm currently do not need to request any information from other ECUs.

[SWS\_J1939Rm\_00066] [When J1939Rm\_RxIndication is called by the PDU Router to indicate reception of an acknowledgement which matches a pending request

(acknowledged PGN, source address, acknowledged address), the J1939 Request Manager shall call the <User>\_AckIndication or the service port function corresponding to the stored user ID.] (SRS\_J1939\_00015)

[SWS\_J1939Rm\_00027] [When J1939Rm\_RxIndication is called by the PDU Router to indicate reception of an acknowledgement which does not match a pending request, and the acknowledged PGN is configured via J1939RmUserAckPGN to trigger a CDD, the J1939 Request Manager shall call the corresponding <User>\_AckIndication.] (SRS\_J1939\_00015)

[SWS\_J1939Rm\_00028] [When J1939Rm\_RxIndication is called by the PDU Router to indicate reception of an acknowledgement which does not match a pending request, and the acknowledged PGN is configured via J1939RmUserAckPGN to be forwarded to the RTE, the J1939 Request Manager shall call the corresponding service port function.] (SRS\_J1939\_00015)

## 7.8 Timeout Supervision

The SAE J1939 specification [18] defines a maximum delay of 200ms for the answer to a request. This delay is not supervised by the J1939 Request Manager. On the other hand, the timeout of 1.25s for the reception of the answer to a request will be supervised by the J1939 Request Manager, if configured accordingly via J1939RmUserTimeoutSupervision. In that case, when the request is transmitted, the timer is started and the request data is stored as described in [SWS\_J1939Rm\_00024].

[SWS\_J1939Rm\_00017] [If timeout supervision is enabled for the caller of J1939Rm\_SendRequest via J1939RmUserTimeoutSupervision, and the parameter checkTimeout is TRUE, and the destination address is not the broadcast address (0xff): The J1939 Request Manager shall start timeout supervision.] (SRS\_J1939\_00026)

[SWS\_J1939Rm\_00029] [When an acknowledgement matching the request is received, when a configured COM RxIPduCallout is triggered which matches the request, or when a CDD or an application SW-C calls J1939Rm\_CancelRequestTimeout, the timeout supervision of the request is stopped.] (SRS\_J1939\_00026)

[SWS\_J1939Rm\_00030] [If the timeout supervision for a request reaches 1.25s, the J1939 Request Manager shall call the <User>\_RequestTimeoutIndication corresponding to the userId parameter of the initial J1939Rm\_SendRequest.] (SRS\_J1939\_00026)

## 7.9 Error classification

The J1939 Request Manager supports reporting of development and runtime errors.



### 7.9.1 Development Errors

The supported development errors are defined in the following table.

[SWS\_J1939Rm\_00031] [

Table of development errors used by the J1939 Request Manager:

| <i>Type or error</i>  | <i>Relevance</i> | <i>Related error code</i>    | <i>Value [hex]</i> |
|---|------------------|------------------------------|--------------------|
| An API was called while the module was uninitialized          | Development      | J1939RM_E_UNINIT             | 0x01               |
| The Init API was called twice                                 | Development      | J1939RM_E_REINIT             | 0x02               |
| J1939Rm_Init was called with an invalid configuration pointer | Development      | J1939RM_E_INIT_FAILED        | 0x03               |
| An API service was called with a NULL pointer                 | Development      | J1939RM_E_PARAM_POINTER      | 0x10               |
| An API service was called with a wrong ID                     | Development      | J1939RM_E_INVALID_PDU_SDU_ID | 0x11               |
| An API service was called with wrong network handle           | Development      | J1939RM_E_INVALID_NETWORK_ID | 0x12               |
| The API J1939Rm_SetState was called with a wrong state        | Development      | J1939RM_E_INVALID_STATE      | 0x13               |
| An API was called with an illegal user ID                     | Development      | J1939RM_E_INVALID_USER       | 0x14               |
| An API was called with an unknown or illegal PGN              | Development      | J1939RM_E_INVALID_PGN        | 0x15               |
| An API was called with an illegal priority                    | Development      | J1939RM_E_INVALID_PRIO       | 0x16               |
| An API was called with an illegal node address                | Development      | J1939RM_E_INVALID_ADDRESS    | 0x17               |
| An API was called with an illegal Boolean option              | Development      | J1939RM_E_INVALID_OPTION     | 0x18               |
| An API was called with an illegal AckCode                     | Development      | J1939RM_E_INVALID_ACK_CODE   | 0x19               |
| An API was called with an illegal node ID                     | Development      | J1939RM_E_INVALID_NODE       | 0x1a               |
| An API was called with invalid extended identifier bytes      | Development      | J1939RM_E_INVALID_EXTID_INFO | 0x1b               |

Development error values are of type uint8.

] ()

### 7.9.2 Runtime Errors

Runtime errors have not yet been classified.

### 7.9.3 Transient Faults

There are no transient faults.

### 7.9.4 Production Errors

There are no production errors.

### 7.9.5 Extended Production Errors

There are no extended production errors.

## 7.10 API Parameter Checking

The J1939 Request Manager performs parameter checks for all called APIs. It reports the development error J1939NM\_E\_PARAM\_POINTER when a call provides a NULL pointer, J1939RM\_E\_INVALID\_PDU\_SDU\_ID when a check of a PDU/SDU ID fails, J1939RM\_E\_INVALID\_NETWORK\_ID when a check of a network handle fails, and J1939RM\_E\_INVALID\_NODE\_ID when a check of a node handle fails.

J1939RM\_E\_PARAM\_POINTER shall be reported as specified in [4] by SWS\_BSW\_00212.

[SWS\_J1939Rm\_00033] [If DET reporting is enabled via J1939RmDevErrorDetect, the J1939 Request Manager shall check PduIdType parameters (SDU/PDU IDs) of its API functions against the configured IDs, and shall report the development error J1939RM\_E\_INVALID\_PDU\_SDU\_ID when an unknown ID is provided by the call.] ()

[SWS\_J1939Rm\_00041] [If DET reporting is enabled via J1939RmDevErrorDetect, the J1939 Request Manager shall check NetworkHandleType parameters (network handles) of its API functions against the referenced network handles of ComM, and shall report the development error J1939RM\_E\_INVALID\_NETWORK\_ID when an unknown handle is provided by the call.] ()

[SWS\_J1939Rm\_00096] [If DET reporting is enabled via J1939RmDevErrorDetect, the J1939 Request Manager shall check node handle parameters of its API functions against the node handles of J1939Nm referenced via J1939RmNmNodeRef, and shall report the development error J1939RM\_E\_INVALID\_NODE\_ID when an unknown handle is provided by the call.] ()

## 8 API specification

### 8.1 Imported types

In this section, all types used by the J1939 Request Manager are listed together with the defining module:

[SWS\_J1939Rm\_00035] [

| Module         | Imported Type       |
|----------------|---------------------|
| ComStack_Types | NetworkHandleType   |
|                | PduldType           |
|                | PdulInfoType        |
| Std_Types      | Std_ReturnType      |
|                | Std_VersionInfoType |

] ()

### 8.2 Type definitions

#### 8.2.1 J1939Rm\_ConfigType

[SWS\_J1939Rm\_00036] [

|                     |  |
|---------------------|--|
| <b>Name:</b>        | J1939Rm_ConfigType   |
| <b>Type:</b>        | Structure  |
| <b>Range:</b>       | implementation specific--  |
| <b>Description:</b> | <p>This is the base type for the configuration of the J1939 Request Manager.</p> <p>A pointer to an instance of this structure will be used in the initialization of the J1939 Request Manager.</p> <p>The content of this structure is defined in chapter 10 Configuration specification.</p> |

] ()

#### 8.2.2 J1939Rm\_StateType

[SWS\_J1939Rm\_00049] [

|                     |  |      |                      |
|---------------------|--|------|----------------------|
| <b>Name:</b>        | J1939Rm_StateType  |      |                      |
| <b>Type:</b>        | Enumeration  |      |                      |
| <b>Range:</b>       | J1939RM_STATE_ONLINE   | 0x00 | Normal communication |
|                     | J1939RM_STATE_OFFLINE  | 0x01 | Only Request for AC  |
| <b>Description:</b> | This type represents the communication state of the J1939 Request Manager. |      |                      |

] ()

### 8.3 Function definitions

This is a list of functions provided for upper layer modules.



### 8.3.1 J1939Rm\_Init

#### [SWS\_J1939Rm\_00037] [

|                            |  |
|----------------------------|--|
| <b>Service name:</b>       | J1939Rm_Init   |
| <b>Syntax:</b>             | void J1939Rm_Init(<br>const J1939Rm_ConfigType* configPtr<br>) |
| <b>Service ID[hex]:</b>    | 0x01   |
| <b>Sync/Async:</b>         | Synchronous  |
| <b>Reentrancy:</b>         | Non Reentrant  |
| <b>Parameters (in):</b>    | configPtr    Pointer to selected configuration structure       |
| <b>Parameters (inout):</b> | None   |
| <b>Parameters (out):</b>   | None   |
| <b>Return value:</b>       | None   |
| <b>Description:</b>        | This function initializes the J1939 Request Manager.           |

] (SRS\_J1939\_00012)

See section 7.2.1 for details.

See section 7.10 for parameter checks.

J1939RM\_E\_INIT\_FAILED shall be reported as specified in [4] by SWS\_BSW\_00050.

### 8.3.2 J1939Rm\_DeInit

#### [SWS\_J1939Rm\_00038] [

|                            |  |
|----------------------------|--|
| <b>Service name:</b>       | J1939Rm_DeInit   |
| <b>Syntax:</b>             | void J1939Rm_DeInit(<br>void<br>)  |
| <b>Service ID[hex]:</b>    | 0x02   |
| <b>Sync/Async:</b>         | Synchronous  |
| <b>Reentrancy:</b>         | Non Reentrant  |
| <b>Parameters (in):</b>    | None   |
| <b>Parameters (inout):</b> | None   |
| <b>Parameters (out):</b>   | None   |
| <b>Return value:</b>       | None   |
| <b>Description:</b>        | This function resets the J1939 Request Manager to the uninitialized state. |

] (SRS\_J1939\_00013)

See section 7.2.1 for details.

### 8.3.3 J1939Rm\_GetVersionInfo

#### [SWS\_J1939Rm\_00039] [

|                      |  |
|----------------------|--|
| <b>Service name:</b> | J1939Rm_GetVersionInfo   |
| <b>Syntax:</b>       | void J1939Rm_GetVersionInfo(<br>Std_VersionInfoType* versionInfo |

|                            |   |
|----------------------------|---|
|                            | )   |
| <b>Service ID[hex]:</b>    | 0x03  |
| <b>Sync/Async:</b>         | Synchronous   |
| <b>Reentrancy:</b>         | Non Reentrant   |
| <b>Parameters (in):</b>    | None  |
| <b>Parameters (inout):</b> | None  |
| <b>Parameters (out):</b>   | versionInfo   Pointer to where to store the version information of this module. |
| <b>Return value:</b>       | None  |
| <b>Description:</b>        | Returns the version information of this module.                                 |

] (SRS\_BSW\_00407)

See section 8.3.4 “Get Version Information” of [4] for details.

See section 7.10 for parameter checks.

### 8.3.4 J1939Rm\_SetState

[SWS\_J1939Rm\_00048] [

|                            |   |
|----------------------------|---|
| <b>Service name:</b>       | J1939Rm_SetState  |
| <b>Syntax:</b>             | <pre>Std_ReturnType J1939Rm_SetState(     NetworkHandleType channel,     uint8 node,     J1939Rm_StateType newState )</pre>   |
| <b>Service ID[hex]:</b>    | 0x05  |
| <b>Sync/Async:</b>         | Synchronous   |
| <b>Reentrancy:</b>         | Reentrant   |
| <b>Parameters (in):</b>    | channel   Channel for which the state shall be changed.   |
|                            | node   Node for which the state shall be changed.   |
|                            | newState   New state the J1939Rm shall enter, see definition of J1939Rm_StateType for available states.   |
| <b>Parameters (inout):</b> | None  |
| <b>Parameters (out):</b>   | None  |
| <b>Return value:</b>       | Std_ReturnType   E_OK: New communication state was set<br>E_NOT_OK: Communication state was not changed due to wrong value in NewState or wrong initialization state of the module. |
| <b>Description:</b>        | Changes the communication state of J1939Rm to offline (only Request for AC supported) or online.  |

] ()

[SWS\_J1939Rm\_00040] [The J1939 Request Manager shall reject the state change by returning E\_NOT\_OK when the ‘newState’ is not in the valid range. If DET is enabled via J1939RmDevErrorDetect, the development error J1939RM\_E\_INVALID\_STATE (see section 7.9) shall be reported.] ()

See section 7.2.1 for error handling and section 7.10 for parameter checks.

### 8.3.5 J1939Rm\_SendRequest

#### [SWS\_J1939Rm\_00054] [

|                            |  |  |
|----------------------------|--|--|
| <b>Service name:</b>       | J1939Rm_SendRequest  |  |
| <b>Syntax:</b>             | <pre>Std_ReturnType J1939Rm_SendRequest(<br/>    uint8 userId,<br/>    NetworkHandleType channel,<br/>    uint32 requestedPgn,<br/>    const J1939Rm_ExtIdInfoType* extIdInfo,<br/>    uint8 destAddress,<br/>    uint8 priority,<br/>    boolean checkTimeout<br/>)</pre> |  |
| <b>Service ID[hex]:</b>    | 0x07   |  |
| <b>Sync/Async:</b>         | Synchronous  |  |
| <b>Reentrancy:</b>         | Reentrant  |  |
| <b>Parameters (in):</b>    | userId   | Identification of the calling module.  |
|                            | channel  | Channel on which the request shall be sent.  |
|                            | requestedPgn   | PGN of the requested PG.   |
|                            | extIdInfo  | Extended identifier bytes.   |
|                            | destAddress  | Address of the destination node or 0xFF for broadcast.                                       |
|                            | priority   | Priority of the Request PG.  |
|                            | checkTimeout   | TRUE: Timeout supervision will be performed<br>FALSE: No timeout supervision will be started |
| <b>Parameters (inout):</b> | None   |  |
| <b>Parameters (out):</b>   | None   |  |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: Transmission request is accepted<br>E_NOT_OK: Transmission request is not accepted     |
| <b>Description:</b>        | Requests transmission of a Request or Request2 PG.   |  |

] (SRS\_J1939\_00016)

[SWS\_J1939Rm\_00074] [The J1939Rm\_SendRequest API function shall only be available if J1939RmUserSendRequest is set for at least one user.] ()

See section 7.6 for details.

[SWS\_J1939Rm\_00067] [The J1939 Request Manager shall reject transmission of a request by returning E\_NOT\_OK when the 'requestedPGN', the 'extIdType' element within the 'extIdInfo', the 'destAddress', or the 'priority' are not in the valid range, or when the 'userId' is not one of the configured user IDs (see J1939RmUserId), or when 'checkTimeout' is true but timeout handling is disabled for the calling module (see J1939RmUserTimeoutSupervision). If DET is enabled via J1939RmDevErrorDetect, the corresponding development error (see section 7.9) shall be reported: J1939RM\_E\_INVALID\_USER for 'userId', J1939RM\_E\_INVALID\_EXTID\_INFO for 'extIdInfo', J1939RM\_E\_INVALID\_PGN for 'requestedPGN', J1939RM\_E\_INVALID\_PRIO for 'priority', J1939RM\_E\_INVALID\_ADDRESS for 'destAddress' or 'sourceAddress', and J1939RM\_E\_INVALID\_OPTION for 'checkTimeout'.] ()

[SWS\_J1939Rm\_00068] [The J1939 Request Manager shall reject transmission of a request by returning E\_NOT\_OK when another request is pending and the request queue is full.] ()

See section 7.2.1 for further error handling and section 7.10 for further parameter checks.

### 8.3.6 J1939Rm\_CancelRequestTimeout

#### [SWS\_J1939Rm\_00055] [

|                            |  |  |
|----------------------------|--|--|
| <b>Service name:</b>       | J1939Rm_CancelRequestTimeout   |  |
| <b>Syntax:</b>             | <pre>Std_ReturnType J1939Rm_CancelRequestTimeout (     uint8 userId,     NetworkHandleType channel,     uint32 requestedPgn,     const J1939Rm_ExtIdInfoType* extIdInfo,     uint8 destAddress )</pre> |  |
| <b>Service ID[hex]:</b>    | 0x08   |  |
| <b>Sync/Async:</b>         | Synchronous  |  |
| <b>Reentrancy:</b>         | Reentrant  |  |
| <b>Parameters (in):</b>    | userId   | Identification of the calling module.  |
|                            | channel  | Channel on which the request was sent.   |
|                            | requestedPgn   | PGN of the requested PG.   |
|                            | extIdInfo  | Extended identifier bytes.   |
|                            | destAddress  | Address of the destination node or 0xFF for broadcast.   |
| <b>Parameters (inout):</b> | None   |  |
| <b>Parameters (out):</b>   | None   |  |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: Cancellation of request timeout was successful<br>E_NOT_OK: Cancellation of request timeout was not successful |
| <b>Description:</b>        | Cancels timeout monitoring of a request. If the request is not active, or timeout monitoring was not requested, this call has no effect.   |  |

] (SRS\_J1939\_00026)

[SWS\_J1939Rm\_00075] [The J1939Rm\_CancelRequestTimeout API function shall only be available if J1939RmUserTimeoutSupervision is set for at least one user.] ()

See section 7.8 for details.

[SWS\_J1939Rm\_00069] [The J1939 Request Manager shall ignore the timeout cancellation request when the 'requestedPgn', the 'extIdType' element within the 'extIdInfo', or the 'destAddress' are not in the valid range, or when the 'userId' is not one of the configured user IDs (see J1939RmUserId), or if no suitable entry can be found in the list of pending requests. If DET is enabled via J1939RmDevErrorDetect, the corresponding development error (see section 7.9) shall be reported: J1939RM\_E\_INVALID\_USER for 'userId', J1939RM\_E\_INVALID\_PGN for 'requestedPgn', J1939RM\_E\_INVALID\_EXTID\_INFO for 'extIdInfo', and J1939RM\_E\_INVALID\_ADDRESS for 'destAddress' or 'sourceAddress'.] ()

See section 7.2.1 for further error handling and section 7.10 for further parameter checks.

### 8.3.7 J1939Rm\_SendAck

#### [SWS\_J1939Rm\_00056] [

|                            |   |  |
|----------------------------|---|--|
| <b>Service name:</b>       | J1939Rm_SendAck   |  |
| <b>Syntax:</b>             | <pre>Std_ReturnType J1939Rm_SendAck(<br/>    uint8 userId,<br/>    NetworkHandleType channel,<br/>    uint32 ackPgn,<br/>    const J1939Rm_ExtIdInfoType* extIdInfo,<br/>    J1939Rm_AckCode ackCode,<br/>    uint8 ackAddress,<br/>    uint8 priority,<br/>    boolean broadcast<br/>)</pre> |  |
| <b>Service ID[hex]:</b>    | 0x09  |  |
| <b>Sync/Async:</b>         | Synchronous   |  |
| <b>Reentrancy:</b>         | Reentrant   |  |
| <b>Parameters (in):</b>    | userId  | Identification of the calling module.  |
|                            | channel   | Channel on which the acknowledgement shall be sent.                                      |
|                            | ackPgn  | Acknowledged PGN.  |
|                            | extIdInfo   | Extended identifier bytes.   |
|                            | ackCode   | Type of acknowledgement, see definition of J1939Rm_AckCode for available codes.          |
|                            | ackAddress  | Address of the node that sent the request.   |
|                            | priority  | Priority of the Acknowledgement PG.  |
|                            | broadcast   | Indicates whether the ACKM is a response to a broadcast request.                         |
| <b>Parameters (inout):</b> | None  |  |
| <b>Parameters (out):</b>   | None  |  |
| <b>Return value:</b>       | Std_ReturnType  | E_OK: Transmission request is accepted<br>E_NOT_OK: Transmission request is not accepted |
| <b>Description:</b>        | Requests transmission of an Acknowledgement PG.   |  |

] (SRS\_J1939\_00017)

[SWS\_J1939Rm\_00076] [The J1939Rm\_SendAck API function shall only be available if J1939RmUserSendAck is set for at least one user.] ()

See section 7.5 for details.

[SWS\_J1939Rm\_00070] [The J1939 Request Manager shall reject transmission of an acknowledgement by returning E\_NOT\_OK when the 'ackPgn', the 'extIdType' element within the 'extIdInfo', the 'ackAddress', or the 'priority' are not in the valid range, or when the 'userId' is not one of the configured user IDs (see J1939RmUserId). If DET is enabled via J1939RmDevErrorDetect, the corresponding development error (see section 7.9) shall be reported: J1939RM\_E\_INVALID\_EXTID\_INFO for 'extIdInfo', J1939RM\_E\_INVALID\_PGN for 'ackPgn', J1939RM\_E\_INVALID\_ACK\_CODE for 'ackCode', J1939RM\_E\_INVALID\_ADDRESS for 'destAddress' or 'sourceAddress', and J1939RM\_E\_INVALID\_PRIO for 'priority'.] ()

[SWS\_J1939Rm\_00071] [The J1939 Request Manager shall reject transmission of an acknowledgement by returning E\_NOT\_OK when another acknowledgement is pending and the acknowledgement queue is full.] ()

See section 7.2.1 for further error handling and section 7.10 for further parameter checks.

## 8.4 Call-back notifications

This is a list of functions provided for other modules. The function prototypes of the callback functions shall be provided in the file J1939Rm\_Cbk.h

### 8.4.1 J1939Rm\_RxIndication

[SWS\_J1939Rm\_00058] [

|                            |  |   |
|----------------------------|--|---|
| <b>Service name:</b>       | J1939Rm_RxIndication   |   |
| <b>Syntax:</b>             | <pre>void J1939Rm_RxIndication(     PduIdType RxPduId,     const PduInfoType* PduInfoPtr )</pre> |   |
| <b>Service ID[hex]:</b>    | 0x42   |   |
| <b>Sync/Async:</b>         | Synchronous  |   |
| <b>Reentrancy:</b>         | Reentrant for different PduIds. Non reentrant for the same PduId.                                |   |
| <b>Parameters (in):</b>    | RxPduId  | ID of the received PDU.   |
|                            | PduInfoPtr   | Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU. |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | None   |   |
| <b>Return value:</b>       | None   |   |
| <b>Description:</b>        | Indication of a received PDU from a lower layer communication interface module.                  |   |

] ()

[SWS\_J1939Rm\_00080] [The J1939Rm\_RxIndication call back function shall only be available if J1939RmUserAckIndication or J1939RmUserRequestIndication is set for at least one user.] ()

See sections 7.4 and 7.7 for details.

See section 7.2.1 for error handling and section 7.10 for parameter checks.

### 8.4.2 J1939Rm\_TxConfirmation

[SWS\_J1939Rm\_00059] [

|                      |  |  |
|----------------------|--|--|
| <b>Service name:</b> | J1939Rm_TxConfirmation   |  |
| <b>Syntax:</b>       | <pre>void J1939Rm_TxConfirmation(     PduIdType TxPduId,     Std_ReturnType result )</pre> |  |

|                            |  |   |
|----------------------------|--|---|
| <b>Service ID[hex]:</b>    | 0x40   |   |
| <b>Sync/Async:</b>         | Synchronous  |   |
| <b>Reentrancy:</b>         | Reentrant for different PduIds. Non reentrant for the same PduId.  |   |
| <b>Parameters (in):</b>    | TxDpduId   | ID of the PDU that has been transmitted.                                    |
|                            | result   | E_OK: The PDU was transmitted.<br>E_NOT_OK: Transmission of the PDU failed. |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | None   |   |
| <b>Return value:</b>       | None   |   |
| <b>Description:</b>        | The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU. |   |

] ()

[SWS\_J1939Rm\_00081] [The J1939Rm\_TxConfirmation call back function shall only be available if J1939RmUserSendAck or J1939RmUserSendRequest is set for at least one user.] ()

See sections 7.5 and 7.6 for details.

See section 7.2.1 for error handling and section 7.10 for parameter checks.

### 8.4.3 J1939Rm\_ComRxIpduCallout

[SWS\_J1939Rm\_00062] [

|                            |  |  |
|----------------------------|--|--|
| <b>Service name:</b>       | J1939Rm_ComRxIpduCallout   |  |
| <b>Syntax:</b>             | <pre>boolean J1939Rm_ComRxIpduCallout (     PduIdType PduId,     const PduInfoType* PduInfoPtr )</pre>       |  |
| <b>Service ID[hex]:</b>    | 0x28   |  |
| <b>Sync/Async:</b>         | Synchronous  |  |
| <b>Reentrancy:</b>         | don't care   |  |
| <b>Parameters (in):</b>    | PduId  | ID of the received I-PDU.  |
|                            | PduInfoPtr   | Contains the length (SduLength) of the received I-PDU and a pointer to the data of the I-PDU (SduDataPtr). |
| <b>Parameters (inout):</b> | None   |  |
| <b>Parameters (out):</b>   | None   |  |
| <b>Return value:</b>       | boolean  | true: I-PDU will be processed normal<br>false: I-PDU will not be processed any further                     |
|                            |  |  |
| <b>Description:</b>        | The I-PDU callout on receiver side can be configured to implement user-defined receive filtering mechanisms. |  |

] ()

[SWS\_J1939Rm\_00079] [The J1939Rm\_ComRxIpduCallout call back function shall only be available if at least one J1939RmComUser is configured.] ()

See section 7.8 for details.

See section 7.2.1 for error handling and section 7.10 for parameter checks.



## 8.5 Scheduled functions

This function is directly called by Basic Software Scheduler (SchM).

### 8.5.1 J1939Rm\_MainFunction

[SWS\_J1939Rm\_00042] [

|                         |   |
|-------------------------|---|
| <b>Service name:</b>    | J1939Rm_MainFunction  |
| <b>Syntax:</b>          | void J1939Rm_MainFunction(<br>void<br>)   |
| <b>Service ID[hex]:</b> | 0x04  |
| <b>Description:</b>     | Main function of the J1939 Request Manager. Used for scheduling purposes and timeout supervision. |

] ()

[SWS\_J1939Rm\_00043] [The frequency of invocations of J1939Rm\_MainFunction is determined by the configuration parameter J1939RmMainFunctionPeriod.] ()

## 8.6 Expected Interfaces

In this section, all interfaces required from other modules are listed.

### 8.6.1 Mandatory Interfaces

This section defines all interfaces that are required to fulfill the core functionality of the module.

[SWS\_J1939Rm\_00044] [

| <b>API function</b>  | <b>Description</b>              |
|----------------------|---------------------------------|
| PduR_J1939RmTransmit | Requests transmission of a PDU. |

] ()

### 8.6.2 Optional Interfaces

This section defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS\_J1939Rm\_00045] [

| <b>API function</b>             | <b>Description</b>  |
|---------------------------------|---|
| Com_TriggerIPDUSendWithMetaData | By a call to Com_TriggerIPDUSendWithMetaData the AUTOSAR COM module updates its internal metadata for the I-PDU with the given ID by copying the metadata from the given position and with respect to length of the globally configured MetaDataType of this I-PDU. Then the I-PDU is triggered for transmission. |
| Det_ReportError                 | Service to report development errors.   |
| J1939Dcm_RequestIndication      | Indicates reception of a Request or Request2 PG.  |
| J1939Nm_RequestIndication       | Indicates reception of a Request or Request2 PG.  |



] ()

[SWS\_J1939Rm\_00082] [The Com\_TriggerIPDUSendWithMetaData function is only required if at least one J1939RmComUser is configured.] ()

[SWS\_J1939Rm\_00083] [The J1939Dcm\_RequestIndication function is only required if at least one J1939RmDcmUser is configured.] ()

[SWS\_J1939Rm\_00084] [The J1939Nm\_RequestIndication function is only required if at least one J1939RmNmUser is configured.] ()

### 8.6.3 Configurable interfaces

In this section, all interfaces are listed where the target function could be configured. The target function is usually a call-back function. The name of this kind of interfaces is not fixed because they are configurable.

#### 8.6.3.1 <User>\_RequestIndication

[SWS\_J1939Rm\_00063] [

|                            |  |   |
|----------------------------|--|---|
| <b>Service name:</b>       | < User >_RequestIndication   |   |
| <b>Syntax:</b>             | <pre>void &lt; User &gt;_RequestIndication(     uint8 node,     NetworkHandleType channel,     uint32 requestedPgn,     const J1939Rm_ExtIdInfoType* extIdInfo,     uint8 sourceAddress,     uint8 destAddress,     uint8 priority )</pre> |   |
| <b>Service ID[hex]:</b>    | 0x47   |   |
| <b>Sync/Async:</b>         | Synchronous  |   |
| <b>Reentrancy:</b>         | Reentrant  |   |
| <b>Parameters (in):</b>    | node   | Node by which the request was received.       |
|                            | channel  | Channel on which the request was received.    |
|                            | requestedPgn   | PGN of the requested PG.                      |
|                            | extIdInfo  | Extended identifier bytes.                    |
|                            | sourceAddress  | Address of the node that sent the Request PG. |
|                            | destAddress  | Address of this node or 0xFF for broadcast.   |
|                            | priority   | Priority of the Request PG.                   |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | None   |   |
| <b>Return value:</b>       | None   |   |
| <b>Description:</b>        | Indicates reception of a Request or Request2 PG.   |   |

] (SRS\_J1939\_00014)

[SWS\_J1939Rm\_00085] [The configured <User>\_RequestIndication function shall be available for each user that has J1939RmUserRequestIndication enabled.] ()

See section 7.4 for details.

### 8.6.3.2 <User>\_AckIndication

#### [SWS\_J1939Rm\_00064] [

|                            |  |   |
|----------------------------|--|---|
| <b>Service name:</b>       | < User >_AckIndication   |   |
| <b>Syntax:</b>             | <pre>void &lt; User &gt;_AckIndication(     uint8 node,     NetworkHandleType channel,     uint32 ackPgn,     const J1939Rm_ExtIdInfoType* extIdInfo,     J1939Rm_AckCode ackCode,     uint8 ackAddress,     uint8 sourceAddress,     uint8 priority )</pre> |   |
| <b>Service ID[hex]:</b>    | 0x4d   |   |
| <b>Sync/Async:</b>         | Synchronous  |   |
| <b>Reentrancy:</b>         | Reentrant  |   |
| <b>Parameters (in):</b>    | node   | Node by which the acknowledgement was received.                                 |
|                            | channel  | Channel on which the acknowledgement was received.                              |
|                            | ackPgn   | Acknowledged PGN.   |
|                            | extIdInfo  | Extended identifier bytes.  |
|                            | ackCode  | Type of acknowledgement, see definition of J1939Rm_AckCode for available codes. |
|                            | ackAddress   | Address of this node.   |
|                            | sourceAddress  | Address of the node that sent the Acknowledgement PG.                           |
|                            | priority   | Priority of the Acknowledgement PG.   |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | None   |   |
| <b>Return value:</b>       | None   |   |
| <b>Description:</b>        | Indicates reception of an Acknowledgement PG.  |   |

] (SRS\_J1939\_00015)

[SWS\_J1939Rm\_00086] [The configured <User>\_AckIndication function shall be available for each user that has J1939RmUserAckIndication enabled.] ()

See section 7.7 for details.

### 8.6.3.3 <User>\_RequestTimeoutIndication

#### [SWS\_J1939Rm\_00065] [

|                         |  |  |
|-------------------------|--|--|
| <b>Service name:</b>    | < User >_RequestTimeoutIndication  |  |
| <b>Syntax:</b>          | <pre>void &lt; User &gt;_RequestTimeoutIndication(     uint8 node,     NetworkHandleType channel,     uint32 requestedPgn,     const J1939Rm_ExtIdInfoType* extIdInfo,     uint8 destAddress )</pre> |  |
| <b>Service ID[hex]:</b> | 0x4e   |  |
| <b>Sync/Async:</b>      | Synchronous  |  |
| <b>Reentrancy:</b>      | Reentrant  |  |
| <b>Parameters (in):</b> | node   | Node by which the request was sent.    |
|                         | channel  | Channel on which the request was sent. |

|                            |  |  |
|----------------------------|--|--|
|                            | requestedPgn   | PGN of the requested PG.                               |
|                            | extIdInfo  | Extended identifier bytes.                             |
|                            | destAddress  | Address of the destination node or 0xFF for broadcast. |
| <b>Parameters (inout):</b> | None   |  |
| <b>Parameters (out):</b>   | None   |  |
| <b>Return value:</b>       | None   |  |
| <b>Description:</b>        | Indicates timeout of a request triggered with the same parameters. |  |

] (SRS\_J1939\_00026)

[SWS\_J1939Rm\_00087] [The configured <User>\_RequestTimeoutIndication function shall be available for each user that has J1939RmUserTimeoutSupervision enabled.] ()

See section 7.8 for details.

## 8.7 Service Port Descriptions

This section defines the client server interfaces and the derived service ports used by J1939Rm to communicate with application software components (SWCs).

### 8.7.1 Provided Service Ports

These service ports provide API functions of the J1939Rm to the application SWCs.

Please note: All three ports use a port defined argument value to provide the userId argument of the corresponding BSW interfaces.

#### 8.7.1.1 J1939Rm\_SendAck

[SWS\_J1939Rm\_00098] [

|                                |  |   |            |
|--------------------------------|--|---|------------|
| Name                           | J1939Rm_SendAck_{user}   |   |            |
| Kind                           | ProvidedPort   | Interface   | AppSendAck |
| Description                    | --   |   |            |
| Port Defined Argument Value(s) | Type   | uint8   |            |
|                                | Value  | {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)} |            |
| Variation                      | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckTransmission)} == true<br>user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} |   |            |

] (SRS\_J1939\_00017)

#### 8.7.1.2 J1939Rm\_SendRequest

**[SWS\_J1939Rm\_00097] [**

|                                |   |   |                |
|--------------------------------|---|---|----------------|
| Name                           | J1939Rm_SendRequest_{user}  |   |                |
| Kind                           | ProvidedPort  | Interface   | AppSendRequest |
| Description                    | --  |   |                |
| Port Defined Argument Value(s) | Type  | uint8   |                |
|                                | Value   | {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)} |                |
| Variation                      | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestTransmission)}<br>== true<br>user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} |   |                |

**]** (SRS\_J1939\_00016)

### 8.7.1.3 J1939Rm\_CancelRequestTimeout

**[SWS\_J1939Rm\_00099] [**

|                                |   |   |                         |
|--------------------------------|---|---|-------------------------|
| Name                           | J1939Rm_CancelRequestTimeout_{user}   |   |                         |
| Kind                           | ProvidedPort  | Interface   | AppCancelRequestTimeout |
| Description                    | --  |   |                         |
| Port Defined Argument Value(s) | Type  | uint8   |                         |
|                                | Value   | {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser/J1939RmRteUser/J1939RmUserId.value)} |                         |
| Variation                      | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true<br>user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} |   |                         |

**]** (SRS\_J1939\_00026)

## 8.7.2 Required Service Ports

These service ports provide call back functions of the J1939Rm to the application SWCs.

### 8.7.2.1 J1939Rm\_AckIndication

**[SWS\_J1939Rm\_00101] [**

|             |  |           |                  |
|-------------|--|-----------|------------------|
| Name        | J1939Rm_AckIndication_{user}                                       |           |                  |
| Kind        | RequiredPort   | Interface | AppAckIndication |
| Description | --   |           |                  |
| Variation   | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckIndication)} == true |           |                  |

|                   |  |
|-------------------|--|
|                   | user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} |
| ]                 |  |
| (SRS_J1939_00015) |  |

### 8.7.2.2 J1939Rm\_RequestIndication

#### [SWS\_J1939Rm\_00100] [

|             |  |           |                      |
|-------------|--|-----------|----------------------|
| Name        | J1939Rm_RequestIndication_{user}   |           |                      |
| Kind        | RequiredPort   | Interface | AppRequestIndication |
| Description | --   |           |                      |
| Variation   | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestIndication)} == true<br>user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} |           |                      |

(SRS\_J1939\_00014)

### 8.7.2.3 J1939Rm\_RequestTimeoutIndication

#### [SWS\_J1939Rm\_00102] [

|             |   |           |                             |
|-------------|---|-----------|-----------------------------|
| Name        | J1939Rm_RequestTimeoutIndication_{user}   |           |                             |
| Kind        | RequiredPort  | Interface | AppRequestTimeoutIndication |
| Description | --  |           |                             |
| Variation   | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true<br>user = {ecuc(J1939Rm/J1939RmConfigSet/J1939RmNode/J1939RmUser.SHORT-NAME)} |           |                             |

(SRS\_J1939\_00026)

## 8.7.3 Client-Server Interfaces

This section lists the client-server interfaces used by the ports provided and required by the J1939 Request Manager.

Please note: The availability of these interfaces depends on the configuration of the J1939 Request Manager. The relevant parameters of the J1939 Request Manager configuration are listed as “Variation” of the operations.

### 8.7.3.1 AppSendAck

#### [SWS\_J1939Rm\_00103] [

|         |            |
|---------|------------|
| Name    | AppSendAck |
| Comment | --         |

|                 |  |          |
|-----------------|--|----------|
| IsService       | true   |          |
| Variation       | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckTransmission)} == true |          |
| Possible Errors | 0  | E_OK     |
|                 | 1  | E_NOT_OK |

## Operations

| SendAck    |   |           |   |
|------------|---|-----------|---|
| Comments   | Requests transmission of an Acknowledgement PG. |           |   |
| Variation  | --  |           |   |
| Parameters | channel   | Comment   | Channel on which the acknowledgement shall be sent.                             |
|            |   | Type      | NetworkHandleType   |
|            |   | Variation | --  |
|            |   | Direction | IN  |
|            | ackPgn  | Comment   | Acknowledged PGN.   |
|            |   | Type      | uint32  |
|            |   | Variation | --  |
|            |   | Direction | IN  |
|            | extIdInfo                                       | Comment   | --  |
|            |   | Type      | J1939Rm_ExtIdInfoType   |
|            |   | Variation | --  |
|            |   | Direction | IN  |
|            | ackCode   | Comment   | Type of acknowledgement, see definition of J1939Rm_AckCode for available codes. |
|            |   | Type      | J1939Rm_AckCode   |
|            |   | Variation | --  |
|            |   | Direction | IN  |
|            | ackAddress                                      | Comment   | Address of the node that sent the request.                                      |
|            |   | Type      | uint8   |
|            |   | Variation | --  |
|            |   | Direction | IN  |
|            | priority  | Comment   | Priority of the Acknowledgement PG.   |
|            |   | Type      | uint8   |

|                 |           |                      |  |
|-----------------|-----------|----------------------|--|
|                 |           | Variation            | --   |
|                 |           | Direction            | IN   |
|                 | broadcast | Comment              | Indicates whether the ACKM is a response to a broadcast request. |
|                 |           | Type                 | boolean  |
|                 |           | Variation            | --   |
|                 |           | Direction            | IN   |
| Possible Errors | E_OK      | Operation successful |  |
|                 | E_NOT_OK  | --                   |  |

]

(SRS\_J1939\_00017)

### 8.7.3.2 AppSendRequest

[SWS\_J1939Rm\_00104] [

|                 |  |          |  |
|-----------------|--|----------|--|
| Name            | AppSendRequest   |          |  |
| Comment         | --   |          |  |
| IsService       | true   |          |  |
| Variation       | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestTransmission)} == true |          |  |
| Possible Errors | 0  | E_OK     |  |
|                 | 1  | E_NOT_OK |  |

### Operations

|             |  |           |   |
|-------------|--|-----------|---|
| SendRequest |  |           |   |
| Comments    | Requests transmission of a Request or Request2 PG. |           |   |
| Variation   | --   |           |   |
| Parameters  | channel  | Comment   | Channel on which the request shall be sent. |
|             |  | Type      | NetworkHandleType                           |
|             |  | Variation | --  |
|             |  | Direction | IN  |
|             | requestedPgn                                       | Comment   | PGN of the requested PG.                    |
|             |  | Type      | uint32                                      |
|             |  | Variation | --  |
|             |  | Direction | IN  |

|                 |              |                      |  |
|-----------------|--------------|----------------------|--|
|                 | extIdInfo    | Comment              | --   |
|                 |              | Type                 | J1939Rm_ExtIdInfoType  |
|                 |              | Variation            | --   |
|                 |              | Direction            | IN   |
|                 | destAddress  | Comment              | Address of the destination node or 0xFF for broadcast.                                       |
|                 |              | Type                 | uint8  |
|                 |              | Variation            | --   |
|                 |              | Direction            | IN   |
|                 | priority     | Comment              | Priority of the Request PG.  |
|                 |              | Type                 | uint8  |
|                 |              | Variation            | --   |
|                 |              | Direction            | IN   |
|                 | checkTimeout | Comment              | TRUE: Timeout supervision will be performed<br>FALSE: No timeout supervision will be started |
|                 |              | Type                 | boolean  |
|                 |              | Variation            | --   |
|                 |              | Direction            | IN   |
| Possible Errors | E_OK         | Operation successful |  |
|                 | E_NOT_OK     | --                   |  |

]

(SRS\_J1939\_00016)

### 8.7.3.3 AppCancelRequestTimeout

[SWS\_J1939Rm\_00105] [

|                 |   |          |
|-----------------|---|----------|
| Name            | AppCancelRequestTimeout   |          |
| Comment         | --  |          |
| IsService       | true  |          |
| Variation       | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true |          |
| Possible Errors | 0   | E_OK     |
|                 | 1   | E_NOT_OK |

#### Operations

|                      |
|----------------------|
| CancelRequestTimeout |
|----------------------|



|                 |  |                      |  |
|-----------------|--|----------------------|--|
| Comments        | Cancels timeout monitoring of a request. If the request is not active, or timeout monitoring was not requested, this call has no effect. |                      |  |
| Variation       | --   |                      |  |
| Parameters      | channel  | Comment              | Channel on which the request was sent.                 |
|                 |  | Type                 | NetworkHandleType                                      |
|                 |  | Variation            | --   |
|                 |  | Direction            | IN   |
|                 | requestedPgn   | Comment              | PGN of the requested PG.                               |
|                 |  | Type                 | uint32   |
|                 |  | Variation            | --   |
|                 |  | Direction            | IN   |
|                 | extIdInfo  | Comment              | --   |
|                 |  | Type                 | J1939Rm_ExtIdInfoType                                  |
|                 |  | Variation            | --   |
|                 |  | Direction            | IN   |
|                 | destAddress  | Comment              | Address of the destination node or 0xFF for broadcast. |
|                 |  | Type                 | uint8  |
|                 |  | Variation            | --   |
|                 |  | Direction            | IN   |
| Possible Errors | E_OK   | Operation successful |  |
|                 | E_NOT_OK   | --                   |  |

]

(SRS\_J1939\_00026)

### 8.7.3.4 AppAckIndication

[SWS\_J1939Rm\_00106] [

|                 |  |          |
|-----------------|--|----------|
| Name            | AppAckIndication   |          |
| Comment         | --   |          |
| IsService       | true   |          |
| Variation       | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportAckIndication)} == true |          |
| Possible Errors | 0  | E_OK     |
|                 | 1  | E_NOT_OK |

## Operations

| AckIndication |   |           |   |
|---------------|---|-----------|---|
| Comments      | Indicates reception of an Acknowledgement PG. |           |   |
| Variation     | --  |           |   |
| Parameters    | node  | Comment   | Node by which the acknowledgement was received.                                 |
|               |   | Type      | uint8   |
|               |   | Variation | --  |
|               |   | Direction | IN  |
|               | channel                                       | Comment   | Channel on which the acknowledgement was received.                              |
|               |   | Type      | NetworkHandleType   |
|               |   | Variation | --  |
|               |   | Direction | IN  |
|               | ackPgn  | Comment   | Acknowledged PGN.   |
|               |   | Type      | uint32  |
|               |   | Variation | --  |
|               |   | Direction | IN  |
|               | extIdInfo                                     | Comment   | Extended identifier bytes.  |
|               |   | Type      | J1939Rm_ExtIdInfoType   |
|               |   | Variation | --  |
|               |   | Direction | IN  |
|               | ackCode                                       | Comment   | Type of acknowledgement, see definition of J1939Rm_AckCode for available codes. |
|               |   | Type      | J1939Rm_AckCode   |
|               |   | Variation | --  |
|               |   | Direction | IN  |
|               | ackAddress                                    | Comment   | Address of this node.   |
|               |   | Type      | uint8   |
|               |   | Variation | --  |
|               |   | Direction | IN  |
|               | sourceAddress                                 | Comment   | Address of the node that sent the Acknowledgement PG.                           |
|               |   | Type      | uint8   |

|                 |          |                      |                                     |
|-----------------|----------|----------------------|-------------------------------------|
|                 |          | Variation            | --                                  |
|                 |          | Direction            | IN                                  |
|                 | priority | Comment              | Priority of the Acknowledgement PG. |
|                 |          | Type                 | uint8                               |
|                 |          | Variation            | --                                  |
|                 |          | Direction            | IN                                  |
| Possible Errors | E_OK     | Operation successful |                                     |
|                 | E_NOT_OK | --                   |                                     |

] (SRS\_J1939\_00015)

### 8.7.3.5 AppRequestIndication

[SWS\_J1939Rm\_00107] [

|                 |  |          |
|-----------------|--|----------|
| Name            | AppRequestIndication   |          |
| Comment         | --   |          |
| IsService       | true   |          |
| Variation       | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportRequestIndication)} == true |          |
| Possible Errors | 0  | E_OK     |
|                 | 1  | E_NOT_OK |

### Operations

|                   |  |           |  |
|-------------------|--|-----------|--|
| RequestIndication |  |           |  |
| Comments          | Indicates reception of a Request or Request2 PG. |           |  |
| Variation         | --   |           |  |
| Parameters        | node   | Comment   | Node by which the request was received.    |
|                   |  | Type      | uint8                                      |
|                   |  | Variation | --   |
|                   |  | Direction | IN   |
|                   | channel  | Comment   | Channel on which the request was received. |
|                   |  | Type      | NetworkHandleType                          |
|                   |  | Variation | --   |
|                   |  | Direction | IN   |

|                 |               |                      |   |
|-----------------|---------------|----------------------|---|
|                 | requestedPgn  | Comment              | PGN of the requested PG.                      |
|                 |               | Type                 | uint32  |
|                 |               | Variation            | --  |
|                 |               | Direction            | IN  |
|                 | extIdInfo     | Comment              | Extended identifier bytes.                    |
|                 |               | Type                 | J1939Rm_ExtIdInfoType                         |
|                 |               | Variation            | --  |
|                 |               | Direction            | IN  |
|                 | sourceAddress | Comment              | Address of the node that sent the Request PG. |
|                 |               | Type                 | uint8   |
|                 |               | Variation            | --  |
|                 |               | Direction            | IN  |
|                 | destAddress   | Comment              | Address of this node or 0xFF for broadcast.   |
|                 |               | Type                 | uint8   |
|                 |               | Variation            | --  |
|                 |               | Direction            | IN  |
|                 | priority      | Comment              | Priority of the Request PG.                   |
|                 |               | Type                 | uint8   |
|                 |               | Variation            | --  |
|                 |               | Direction            | IN  |
| Possible Errors | E_OK          | Operation successful |   |
|                 | E_NOT_OK      | --                   |   |

]

(SRS\_J1939\_00014)

### 8.7.3.6 AppRequestTimeoutIndication

[SWS\_J1939Rm\_00108] [

|                 |   |      |  |
|-----------------|---|------|--|
| Name            | AppRequestTimeoutIndication   |      |  |
| Comment         | --  |      |  |
| IsService       | true  |      |  |
| Variation       | {ecuc(J1939Rm/J1939RmGeneral.J1939RmSupportTimeoutSupervision)} == true |      |  |
| Possible Errors | 0   | E_OK |  |

|  |   |          |
|--|---|----------|
|  | 1 | E_NOT_OK |
|--|---|----------|

## Operations

| RequestTimeoutIndication |  |                      |  |
|--------------------------|--|----------------------|--|
| Comments                 | Indicates timeout of a request triggered with the same parameters. |                      |  |
| Variation                | --   |                      |  |
| Parameters               | node   | Comment              | Node by which the request was sent.                    |
|                          |  | Type                 | uint8  |
|                          |  | Variation            | --   |
|                          |  | Direction            | IN   |
|                          | channel  | Comment              | Channel on which the request was sent.                 |
|                          |  | Type                 | NetworkHandleType                                      |
|                          |  | Variation            | --   |
|                          |  | Direction            | IN   |
|                          | requestedPgn   | Comment              | PGN of the requested PG.                               |
|                          |  | Type                 | uint32   |
|                          |  | Variation            | --   |
|                          |  | Direction            | IN   |
|                          | extIdInfo  | Comment              | Extended identifier bytes.                             |
|                          |  | Type                 | J1939Rm_ExtIdInfoType                                  |
|                          |  | Variation            | --   |
|                          |  | Direction            | IN   |
|                          | destAddress  | Comment              | Address of the destination node or 0xFF for broadcast. |
|                          |  | Type                 | uint8  |
|                          |  | Variation            | --   |
|                          |  | Direction            | IN   |
| Possible Errors          | E_OK   | Operation successful |  |
|                          | E_NOT_OK   | --                   |  |

]

(SRS\_J1939\_00026)

## 8.7.4 Implementation Data Types

In this section, the implementation data types used by the client-server interfaces of the J1939 Request Manager are listed.

Please note: It is essential that the implementation of the J1939 Request Manager does not define these data types twice, by including them both from the RTE generated header and the own types header.

### 8.7.4.1 J1939Rm\_AckCode

#### [SWS\_J1939Rm\_00057] [

|             |   |      |                          |
|-------------|---|------|--------------------------|
| Name        | J1939Rm_AckCode   |      |                          |
| Kind        | Enumeration   |      |                          |
| Range       | J1939RM_ACK_POSITIVE  | 0x00 | Positive Acknowledgement |
|             | J1939RM_ACK_NEGATIVE  | 0x01 | Negative Acknowledgement |
|             | J1939RM_ACK_ACCESS_DENIED                                     | 0x02 | Access Denied            |
|             | J1939RM_ACK_CANNOT_RESPOND                                    | 0x03 | Cannot Respond           |
| Description | This type represents the available kinds of acknowledgements. |      |                          |
| Variation   | --  |      |                          |

]

()

#### [SWS\_J1939Rm\_91000] [

|             |  |      |   |
|-------------|--|------|---|
| Name        | J1939Rm_ExtIdType  |      |   |
| Kind        | Enumeration  |      |   |
| Range       | J1939RM_EXTID_NONE   | 0x00 | No extended identifier bytes (0)        |
|             | J1939RM_EXTID_ONE  | 0x01 | One extended identifier byte (1)        |
|             | J1939RM_EXTID_TWO  | 0x02 | Two extended identifier bytes (2)       |
|             | J1939RM_EXTID_THREE  | 0x03 | Three extended identifier bytes (3)     |
|             | J1939RM_EXTID_GF   | 0x04 | Group function value, only for ACKM (4) |
| Description | This type represents the available kinds of extended identifier usage. |      |   |
| Variation   | --   |      |   |

]

()

#### [SWS\_J1939Rm\_91001] [

|          |                       |                   |  |
|----------|-----------------------|-------------------|--|
| Name     | J1939Rm_ExtIdInfoType |                   |  |
| Kind     | Structure             |                   |  |
| Elements | extIdType             | J1939Rm_ExtIdType | Denotes the number of extended identifier bytes. |

|             |   |       |  |
|-------------|---|-------|--|
|             | extld1  | uint8 | First extended identifier byte or group function for ACKM. |
|             | extld2  | uint8 | Second extended identifier byte.                           |
|             | extld3  | uint8 | Third extended identifier byte.                            |
| Description | This type represents a set of extended identifiers. |       |  |
| Variation   | --  |       |  |

]

()



## 9 Sequence diagrams

The following sequence diagrams shall give an impression of the way the J1939 Request Manager shall behave and interoperate with other BSW modules. They are not complete and not binding for the implementation.

### 9.1 Reception of Request PG

The following diagram shows the interaction with PduR and a J1939Rm User when a Request PG is received.

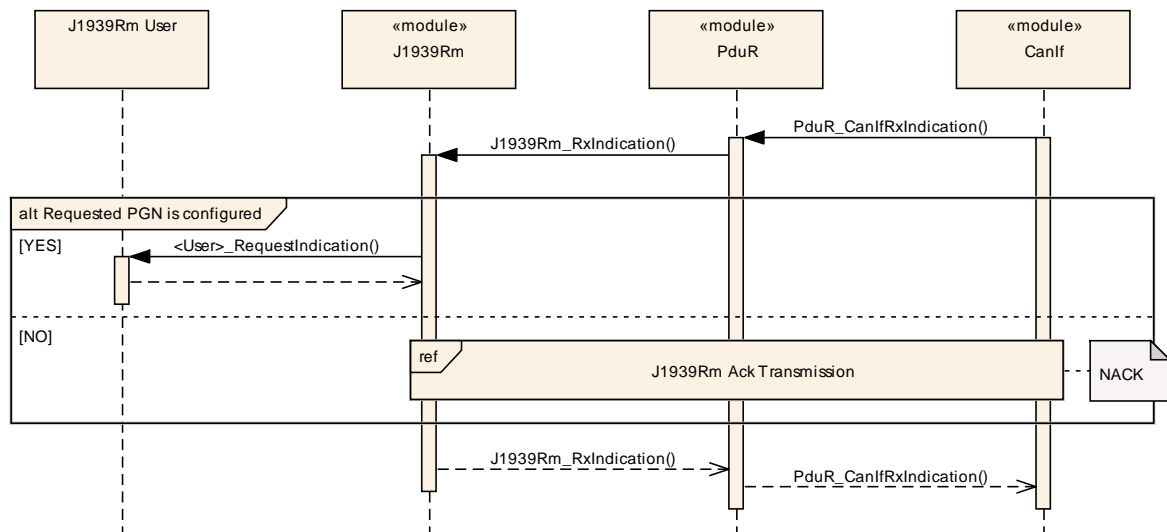


Figure 2: Reception of Request PG

### 9.2 Transmission of Acknowledgement PG

The following diagram shows the interaction with a J1939Rm User and PduR when an Acknowledgement PG is transmitted.

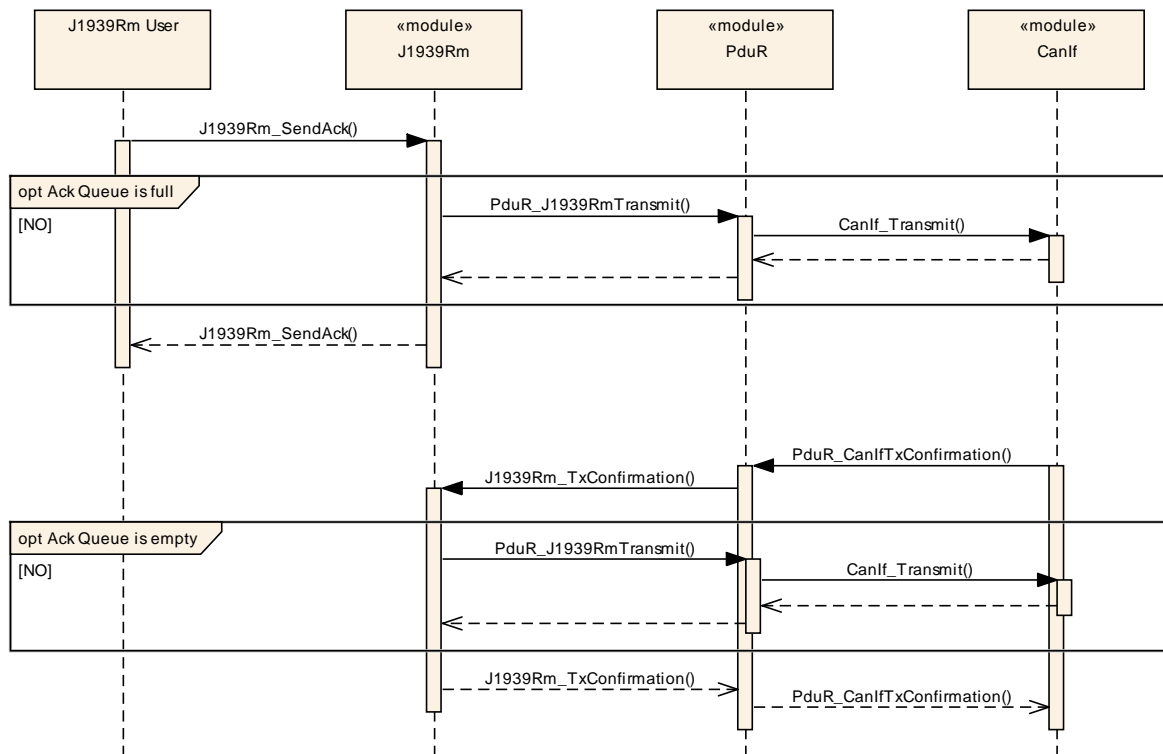


Figure 3: Transmission of Acknowledgement PG

### 9.3 Handling of Request for a COM Pdu

The following diagram shows the interaction with PduR and COM when the J1939 Request Manager receives a Request for a PG of PDU1 format that is transmitted as COM Pdu.

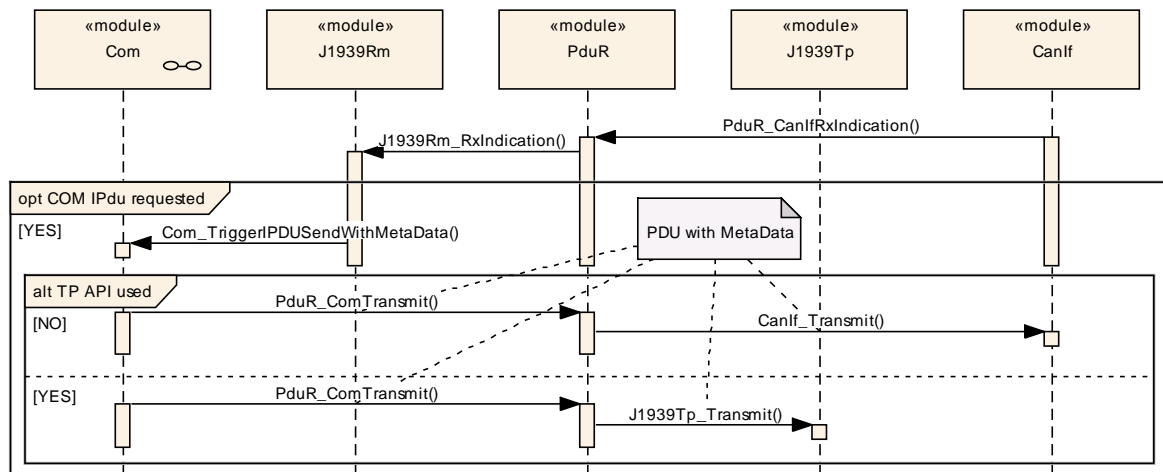


Figure 4: Handling of Request for a COM Pdu with PDU1 format

## 9.4 Handling of Request for a Diagnostic Pdu

The following diagram shows the interaction with PduR and J1939Dcm when a Request for a diagnostic PG is received.

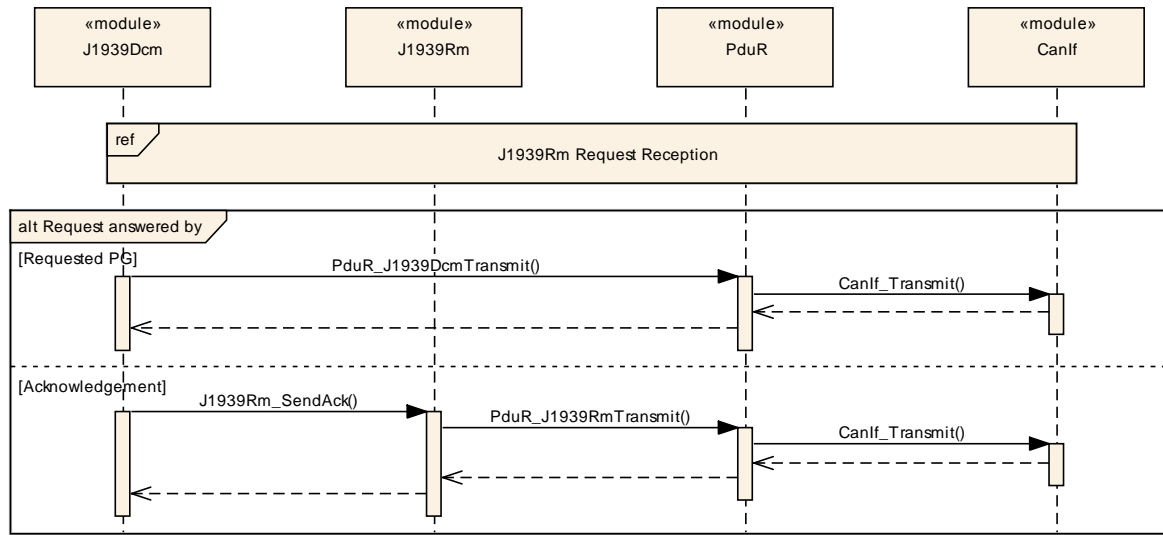


Figure 5: Handling of Request for a Diagnostic Pdu

## 9.5 Transmission of Request PG

The following diagram shows the interaction with a J1939Rm User and PduR when a Request PG is transmitted.

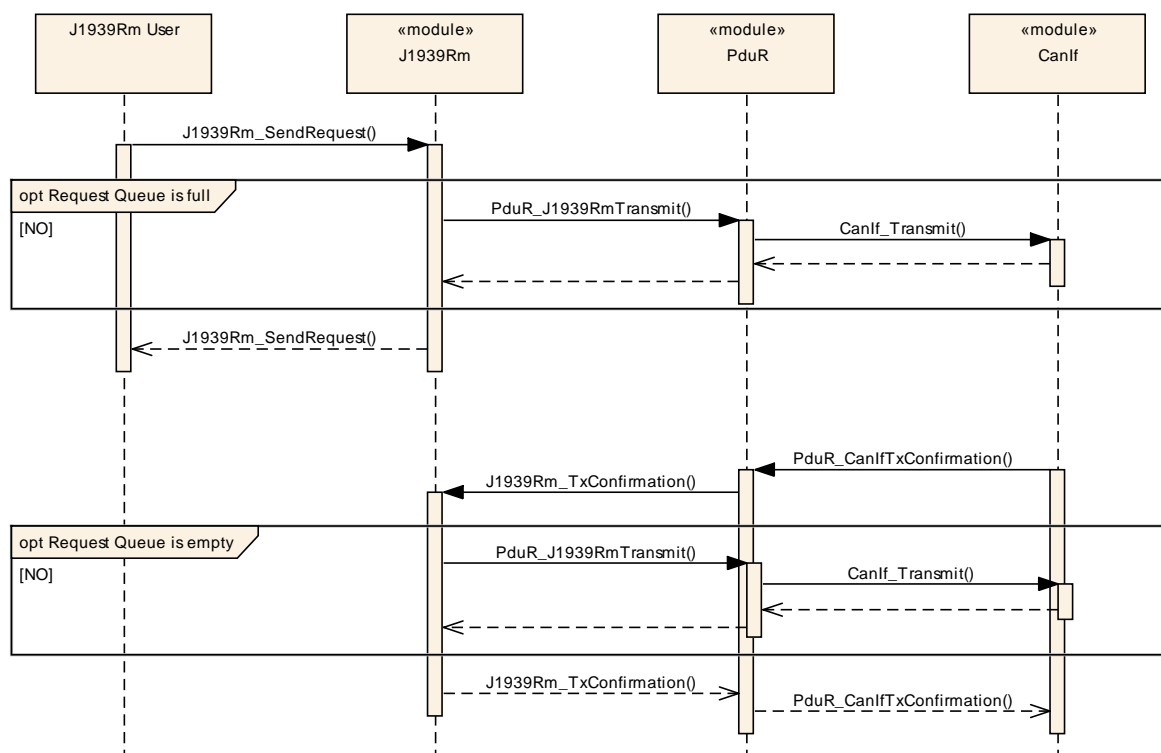


Figure 6: Transmission of Request PG

## 9.6 Reception of Acknowledgement PG

The following diagram shows the interaction with PduR and a J1939Rm User when an Acknowledgement PG is received.

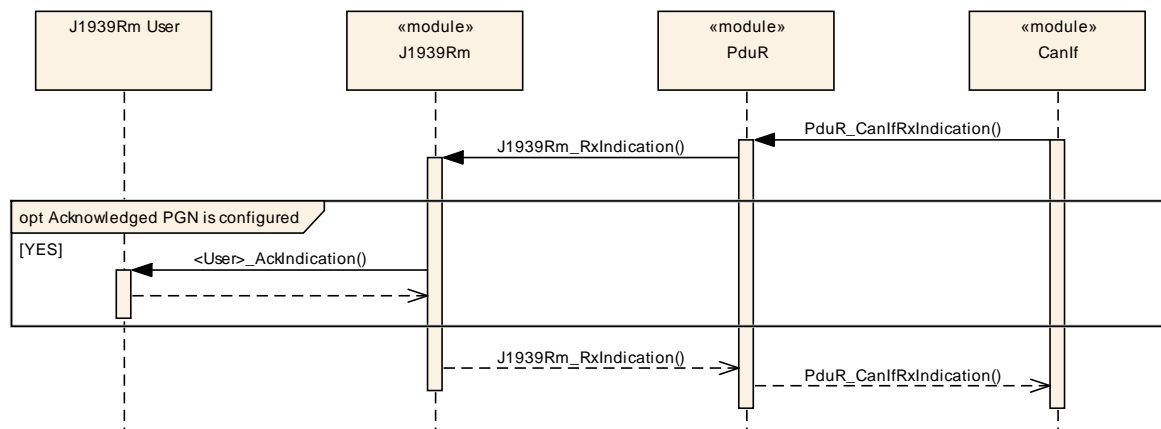


Figure 7: Reception of Acknowledgement PG

## 9.7 Monitoring of Request Timeout

The following diagram shows the interaction with a J1939Rm User and PduR when the J1939Rm monitors timeout of a transmitted Request PG.

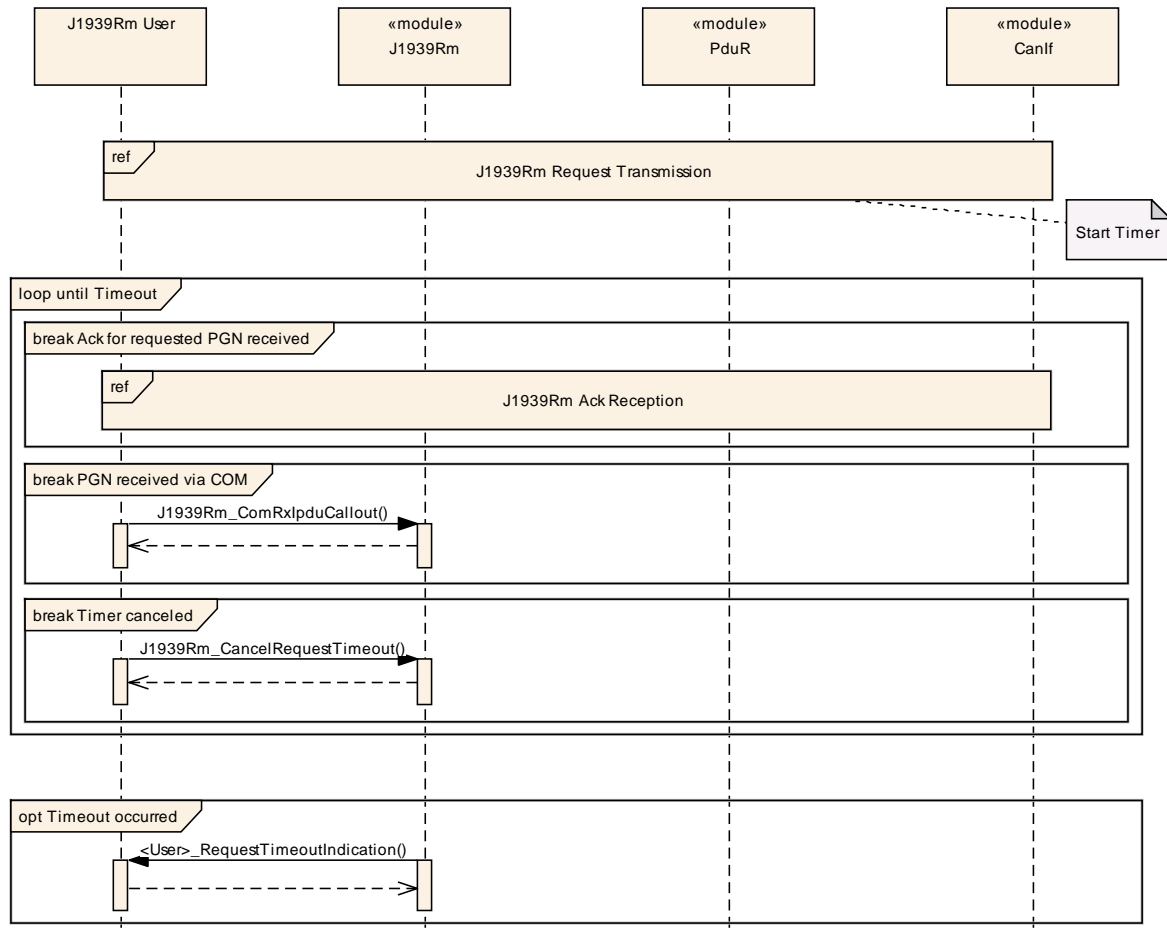


Figure 8: Monitoring of Request Timeout

## 10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. For general information about the definition of containers and parameters, refer to the chapter 10.1 “Introduction to configuration specification” in the SWS BSW General [4].

Section 10.1 specifies the structure (containers) and the parameters of the J1939 Request Manager.

Section 10.2 specifies published information of the J1939 Request Manager.

### 10.1 Containers and configuration parameters

The following sections summarize all configuration parameters of the J1939 Request Manager. The detailed meaning of the parameters is described in chapters 7 and 8.

The following pictures show an overview of the configuration parameters available for J1939Rm:

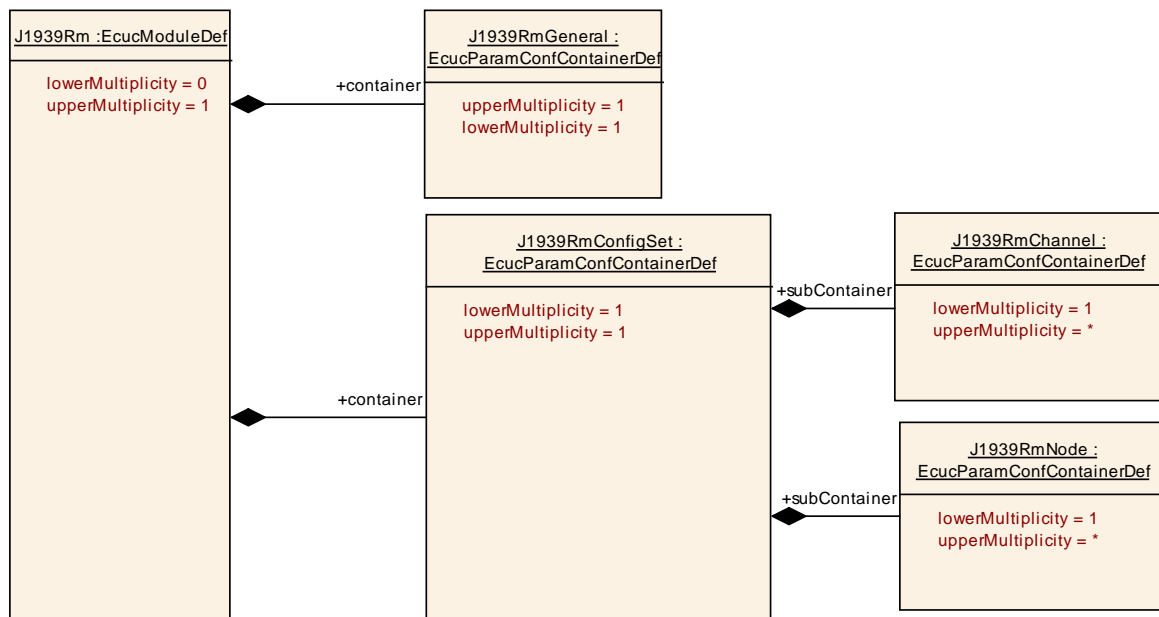


Figure 9: Configuration container J1939Rm with subcontainer J1939RmConfigSet

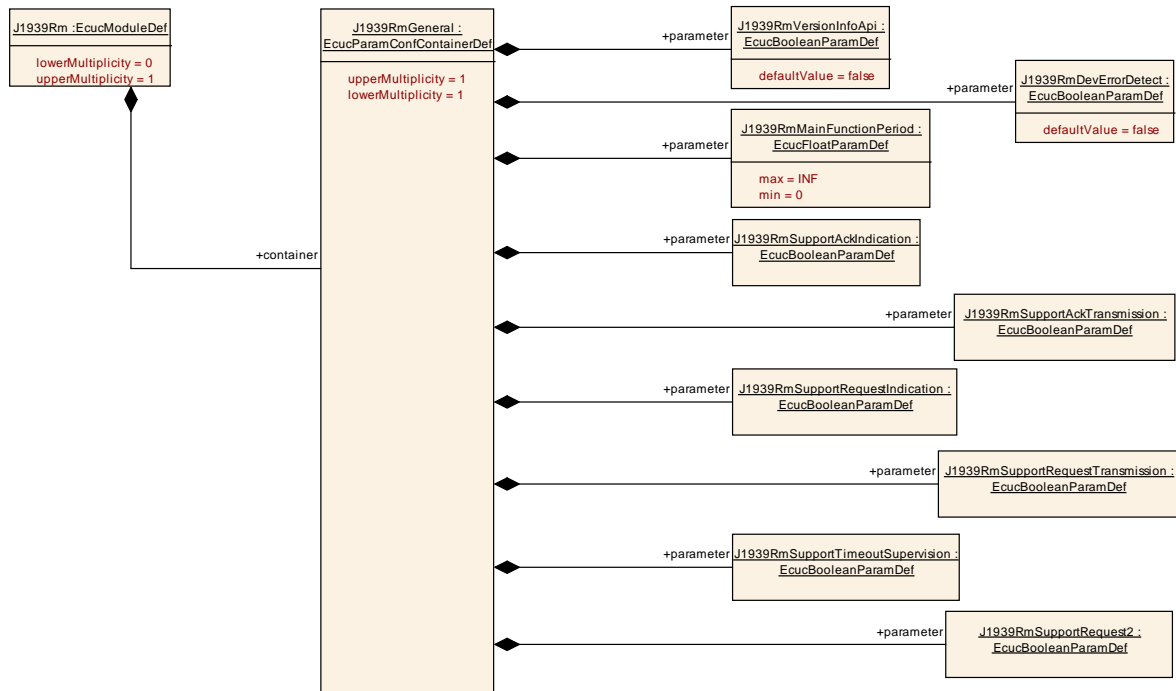


Figure 10: Configuration container J1939RmGeneral

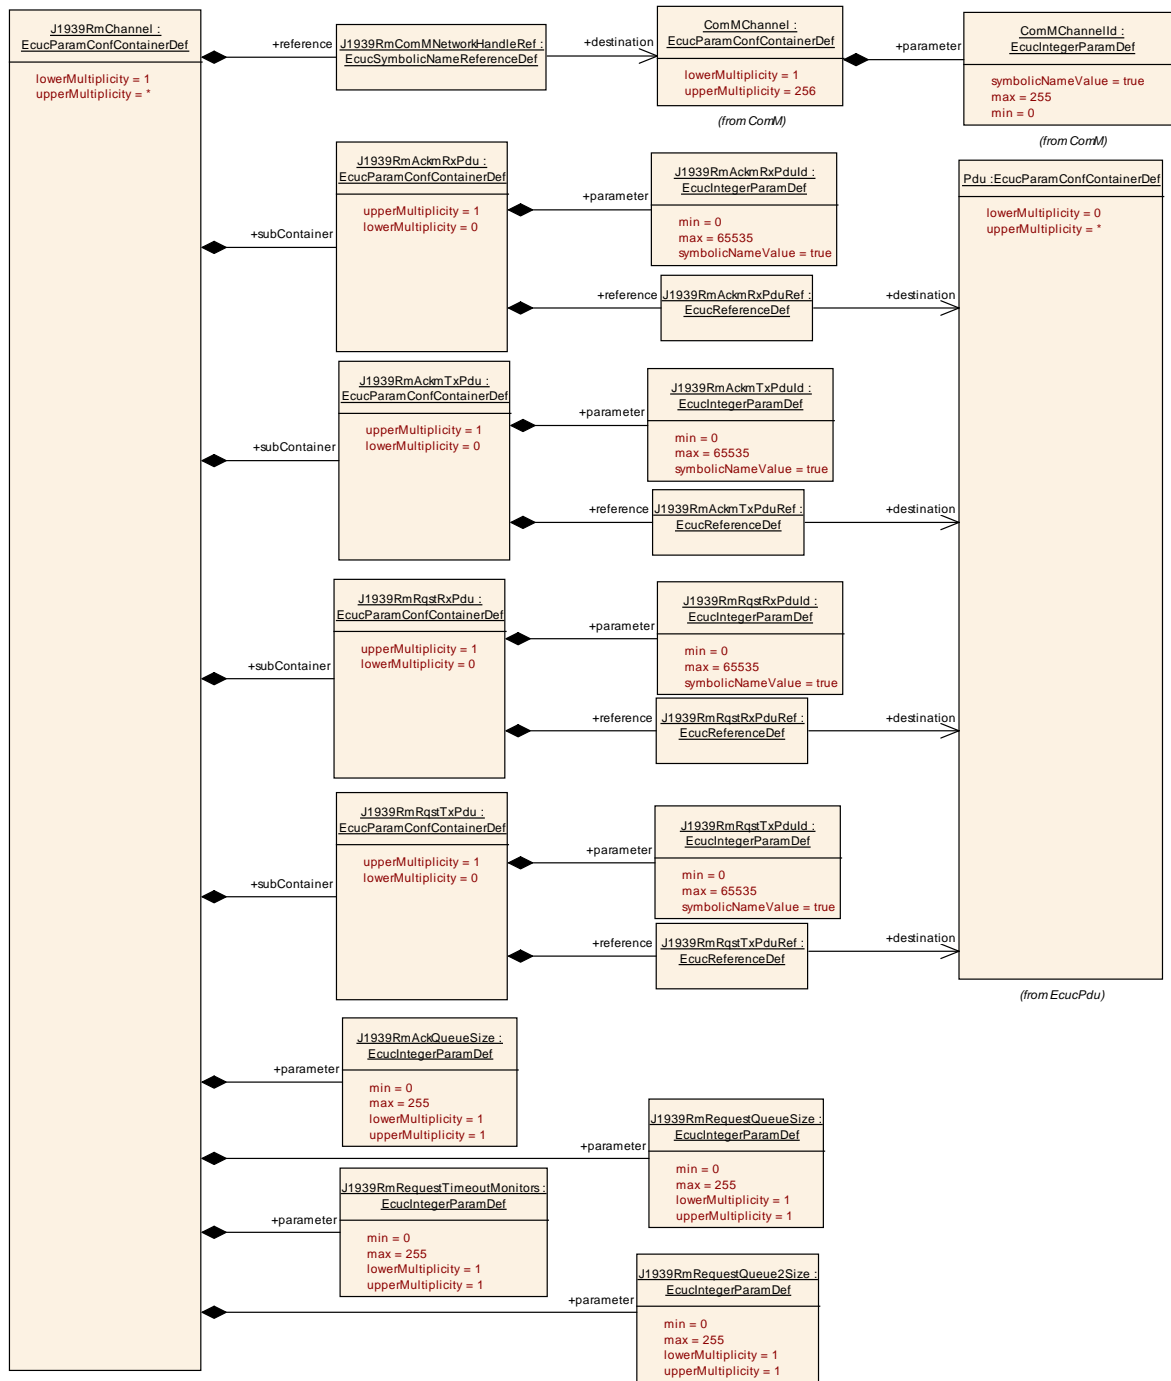


Figure 11: Configuration container J1939RmChannel



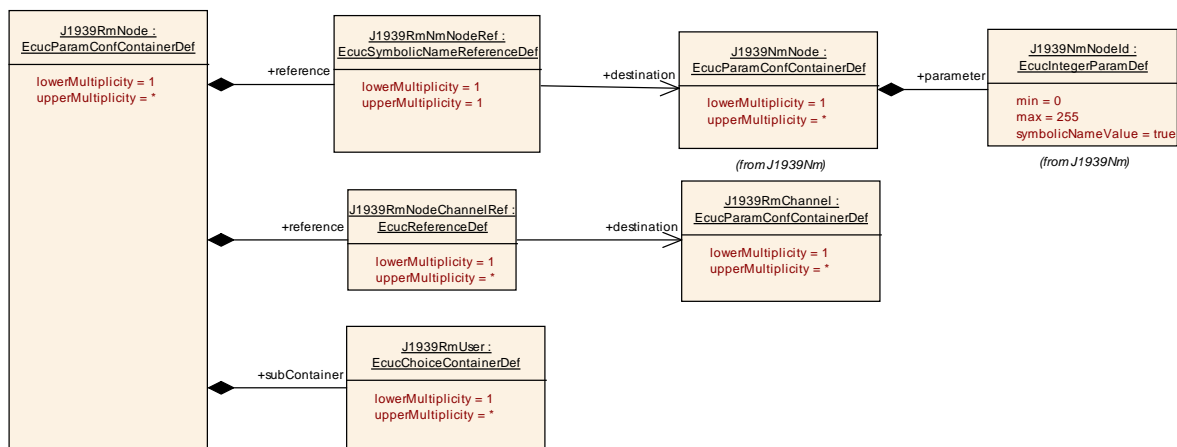


Figure 12: Configuration container J1939RmNode

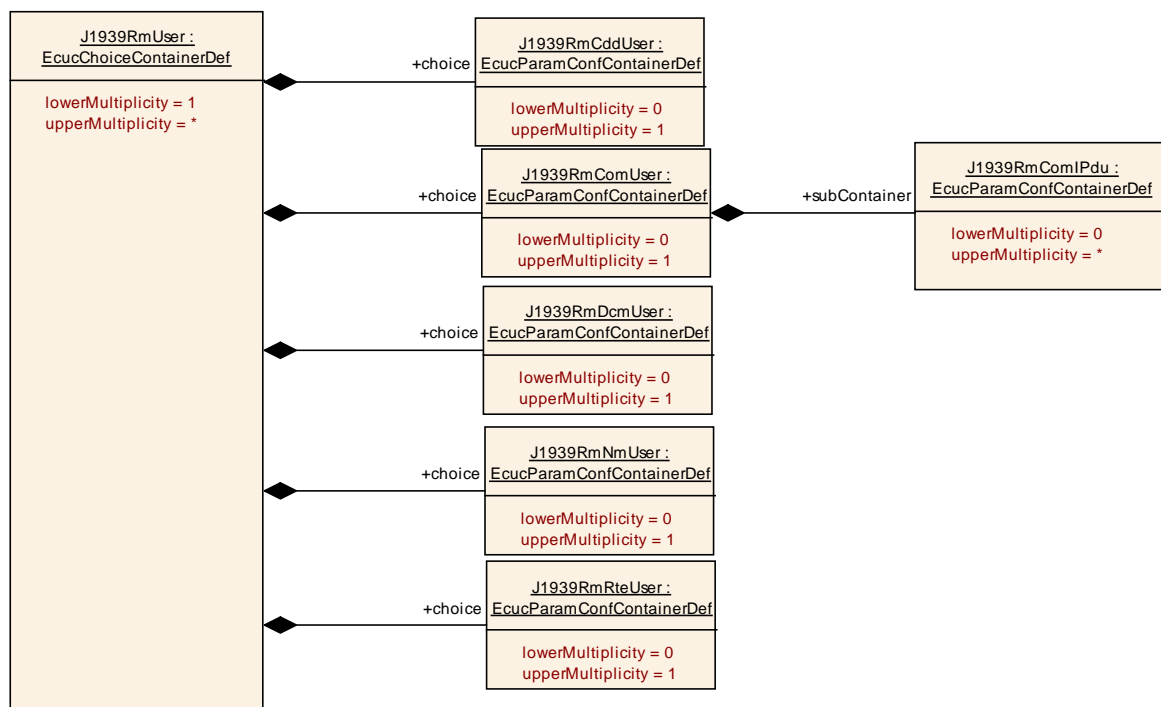


Figure 13: Configuration container J1939RmUser

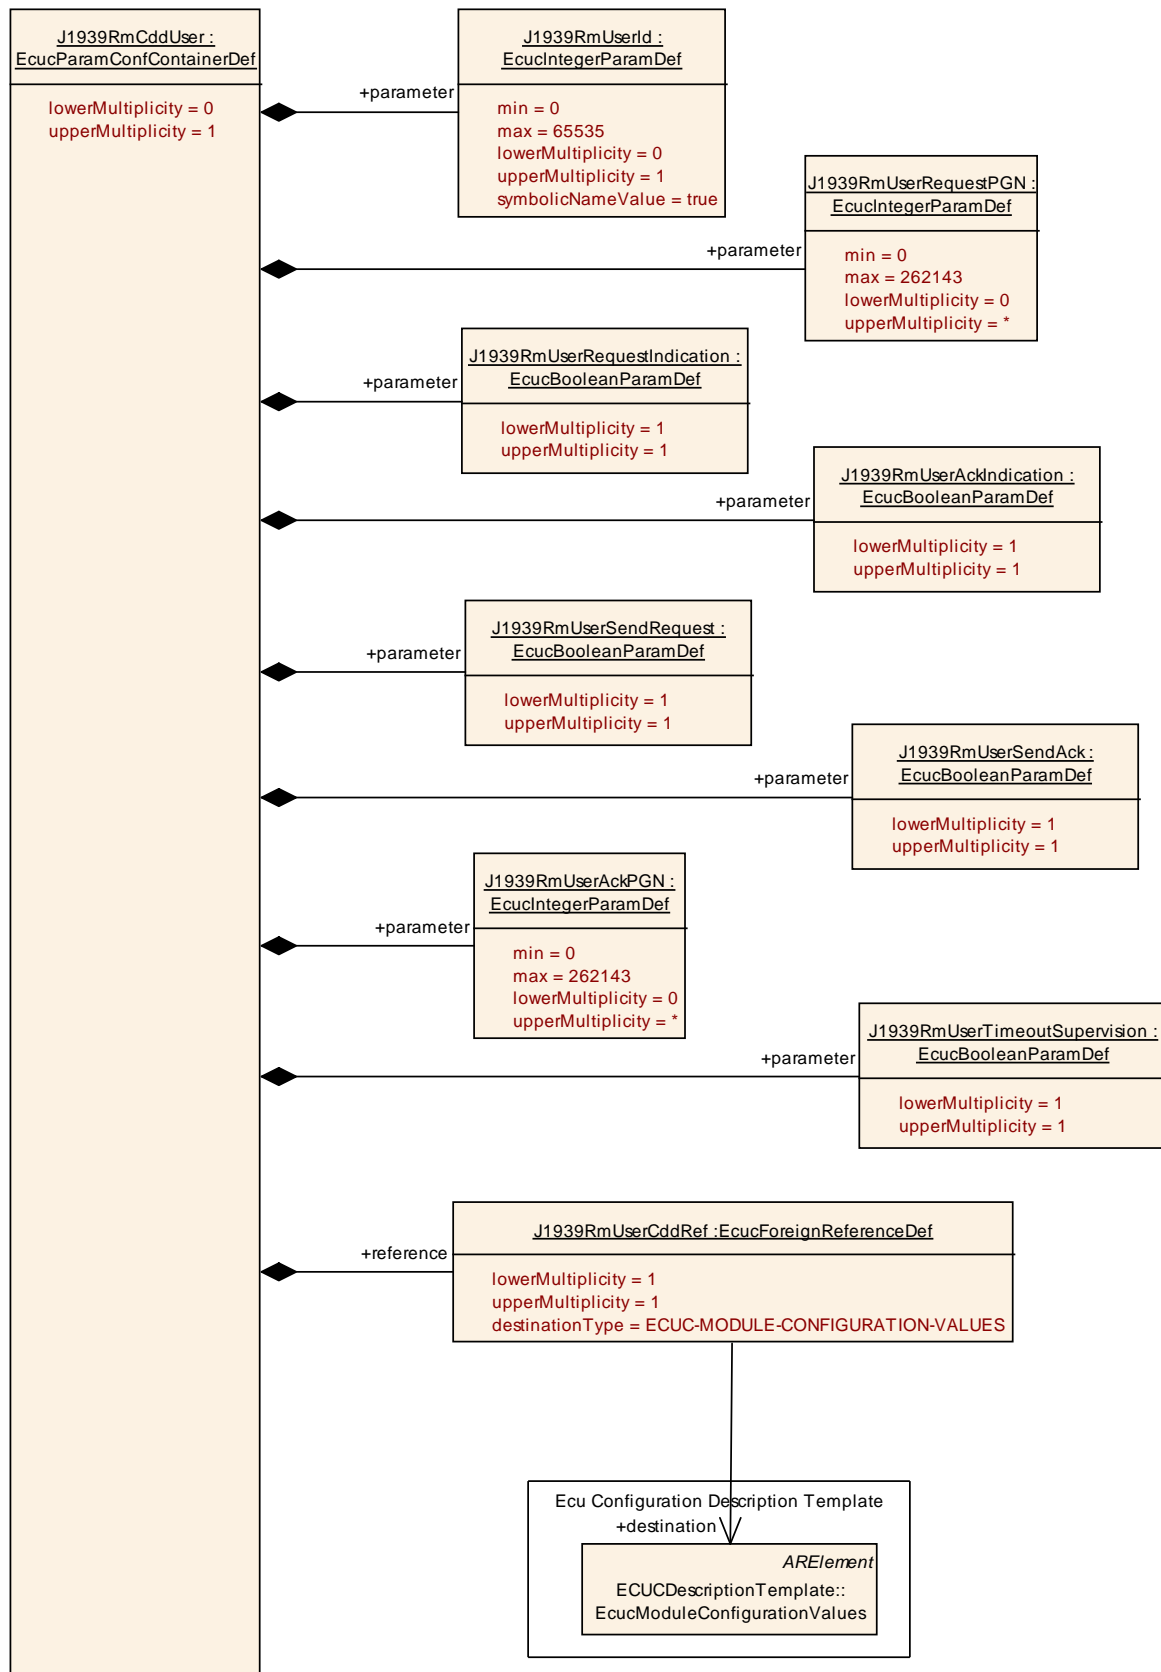


Figure 14: Configuration container J1939RmCddUser

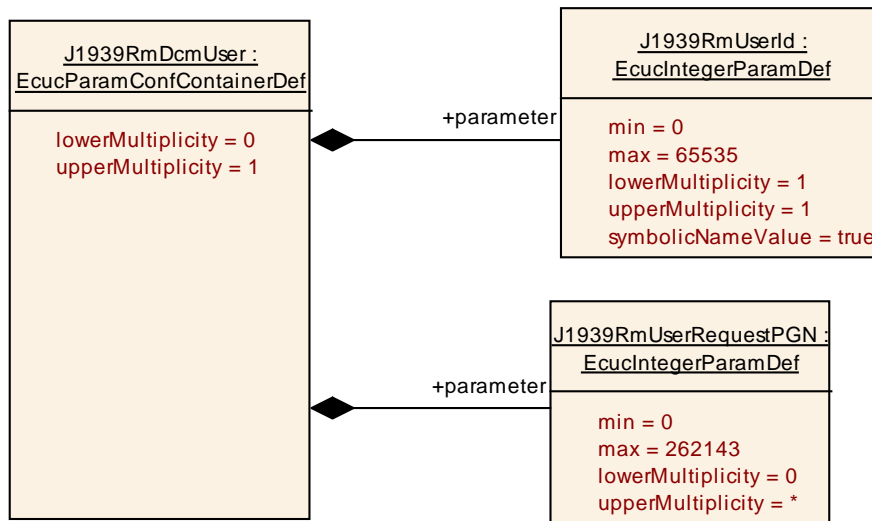


Figure 15: Configuration container J1939RmDcmUser

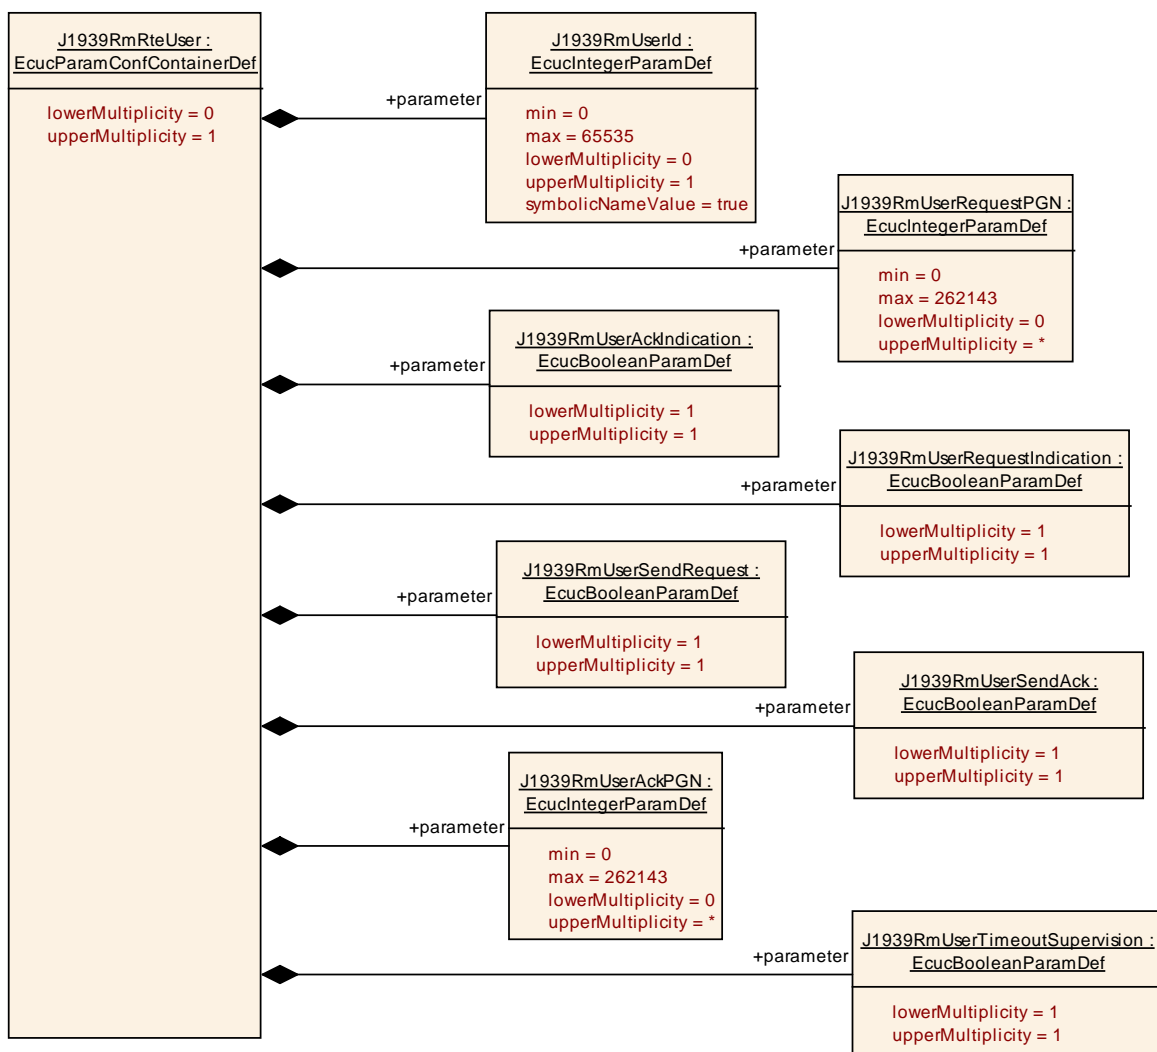


Figure 16: Configuration container J1939RmRteUser

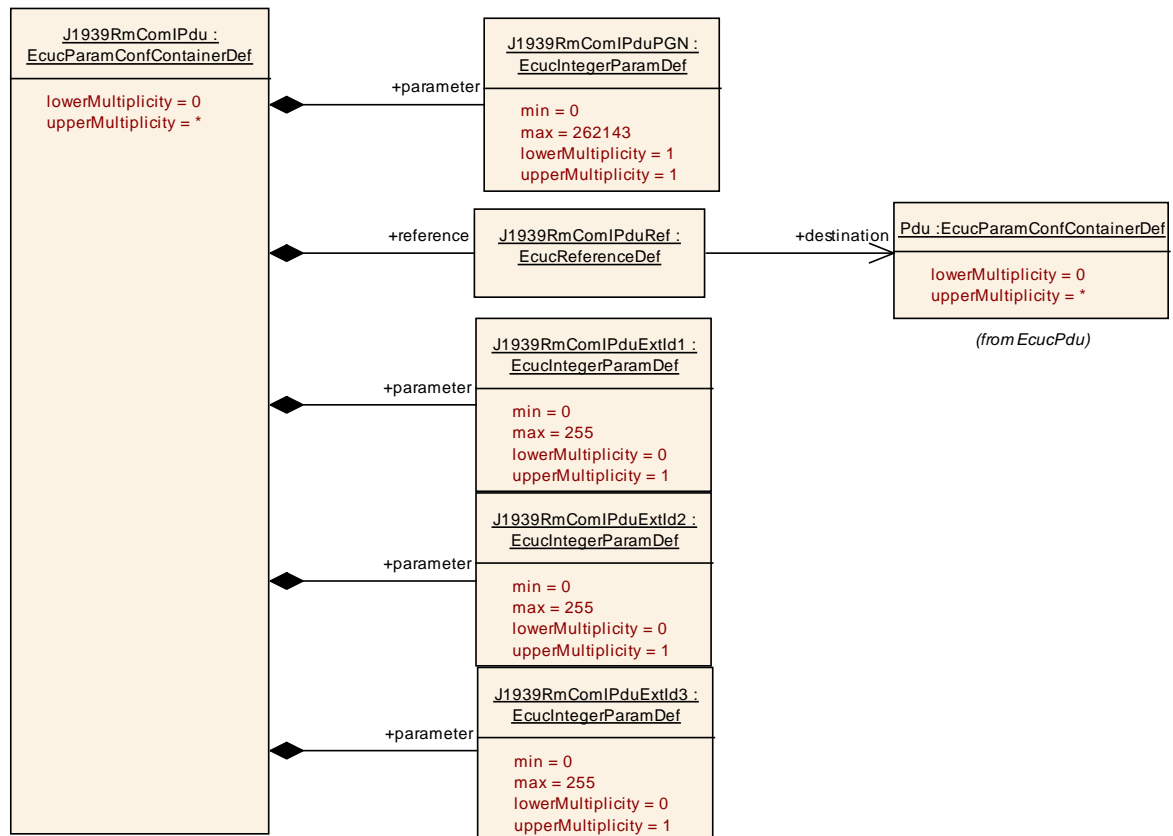


Figure 17: Configuration container J1939RmComIPdu

### 10.1.1 J1939Rm

|                                   |  |
|-----------------------------------|--|
| <b>SWS Item</b>                   | <b>ECUC_J1939Rm_00043 :</b>                                |
| <b>Module Name</b>                | J1939Rm  |
| <b>Module Description</b>         | Configuration of the J1939 Request Manager.                |
| <b>Post-Build Variant Support</b> | true   |
| <b>Supported Config Variants</b>  | VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE |

| <b>Included Containers</b> |                     |  |
|----------------------------|---------------------|--|
| <b>Container Name</b>      | <b>Multiplicity</b> | <b>Scope / Dependency</b>  |
| J1939RmConfigSet           | 1                   | This container contains the configuration parameters and sub containers of the AUTOSAR J1939Rm module. |
| J1939RmGeneral             | 1                   | Contains the general configuration parameters of the module.   |

### 10.1.2 J1939RmGeneral

|                                 |  |
|---------------------------------|--|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00001 :</b>                                  |
| <b>Container Name</b>           | J1939RmGeneral   |
| <b>Description</b>              | Contains the general configuration parameters of the module. |
| <b>Configuration Parameters</b> |  |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00003 :</b>   |    |              |
| <b>Name</b>                      | J1939RmDevErrorDetect   |    |              |
| <b>Description</b>               | Switches the development error detection and notification on or off. <ul style="list-style-type: none"> <li>true: detection and notification is enabled.</li> <li>false: detection and notification is disabled.</li> </ul> |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | false   |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00004 :</b>                         |    |                                       |
| <b>Name</b>                      | J1939RmMainFunctionPeriod                           |    |                                       |
| <b>Description</b>               | Execution cycle of J1939Rm_MainFunction in seconds. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | EcucFloatParamDef                                   |    |                                       |
| <b>Range</b>                     | ]0 .. INF[  |    |                                       |
| <b>Default value</b>             | --  |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                             | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>                                    | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                              | -- |                                       |
| <b>Scope / Dependency</b>        | scope: ECU  |    |                                       |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00054 :</b>   |    |              |
| <b>Name</b>                      | J1939RmSupportAckIndication   |    |              |
| <b>Description</b>               | Pre-processor switch for enabling support of acknowledgement indications. |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00055 :</b>  |    |              |
| <b>Name</b>                      | J1939RmSupportAckTransmission  |    |              |
| <b>Description</b>               | Pre-processor switch for enabling support of acknowledgement transmission. |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00073 :</b>  |    |              |
| <b>Name</b>                      | J1939RmSupportRequest2   |    |              |
| <b>Description</b>               | Pre-processor switch for enabling support of the Request2 PG.<br>Please note: Transfer is not supported. |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00056 :</b>                                       |    |              |
| <b>Name</b>                      | J1939RmSupportRequestIndication                                   |    |              |
| <b>Description</b>               | Pre-processor switch for enabling support of request indications. |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00057 :</b>  |    |              |
| <b>Name</b>                      | J1939RmSupportRequestTransmission                                  |    |              |
| <b>Description</b>               | Pre-processor switch for enabling support of request transmission. |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00058 :</b>   |    |              |
| <b>Name</b>                      | J1939RmSupportTimeoutSupervision  |    |              |
| <b>Description</b>               | Pre-processor switch for enabling support of request timeout supervision. |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|                      |   |  |  |
|----------------------|---|--|--|
| <b>SWS Item</b>      | <b>ECUC_J1939Rm_00002 :</b>                                 |  |  |
| <b>Name</b>          | J1939RmVersionInfoApi                                       |  |  |
| <b>Description</b>   | Pre-processor switch for enabling version info API support. |  |  |
| <b>Multiplicity</b>  | 1   |  |  |
| <b>Type</b>          | EcucBooleanParamDef   |  |  |
| <b>Default value</b> | false   |  |  |

|                                  |                         |    |              |
|----------------------------------|-------------------------|----|--------------|
| <b>Post-Build Variant Value</b>  | false                   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b> | X  | All Variants |
|                                  | <b>Link time</b>        | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local            |    |              |

#### No Included Containers

### 10.1.3 J1939RmConfigSet

|                                 |  |
|---------------------------------|--|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00017 :</b>  |
| <b>Container Name</b>           | J1939RmConfigSet   |
| <b>Description</b>              | This container contains the configuration parameters and sub containers of the AUTOSAR J1939Rm module. |
| <b>Configuration Parameters</b> |  |

| <b>Included Containers</b> |                     |   |  |
|----------------------------|---------------------|---|--|
| <b>Container Name</b>      | <b>Multiplicity</b> | <b>Scope / Dependency</b>   |  |
| J1939RmChannel             | 1..*                | Contains the parameters for a CAN channel supported by the J1939 Request Manager.               |  |
| J1939RmNode                | 1..*                | Contains the parameters for the support of a logical J1939 node (identified by an ECU address). |  |

### 10.1.4 J1939RmChannel

|   |   |   |                     |
|---|---|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00009 :</b>   |   |                     |
| <b>Container Name</b>                   | J1939RmChannel  |   |                     |
| <b>Description</b>                      | Contains the parameters for a CAN channel supported by the J1939 Request Manager. |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true  |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>   | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>  | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>  | X | VARIANT-POST-BUILD  |
| <b>Configuration Parameters</b>         |   |   |                     |

|                                  |  |    |                                       |
|----------------------------------|--|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00007 :</b>  |    |                                       |
| <b>Name</b>                      | J1939RmAckQueueSize  |    |                                       |
| <b>Description</b>               | Number of transmitted Acknowledgement messages that can be stored. |    |                                       |
| <b>Multiplicity</b>              | 1  |    |                                       |
| <b>Type</b>                      | EcucIntegerParamDef  |    |                                       |
| <b>Range</b>                     | 0 .. 255   |    |                                       |
| <b>Default value</b>             | --   |    |                                       |
| <b>Post-Build Variant Value</b>  | false  |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>   | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>   | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local   |    |                                       |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00074 :</b>                                 |    |                                       |
| <b>Name</b>                      | J1939RmRequestQueue2Size                                    |    |                                       |
| <b>Description</b>               | Number of transmitted Request2 messages that can be stored. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | EcucIntegerParamDef   |    |                                       |
| <b>Range</b>                     | 0 .. 255  |    |                                       |
| <b>Default value</b>             | --  |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                                     | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>  | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                                      | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local  |    |                                       |

|                                  |  |    |                                       |
|----------------------------------|--|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00006 :</b>                                |    |                                       |
| <b>Name</b>                      | J1939RmRequestQueueSize                                    |    |                                       |
| <b>Description</b>               | Number of transmitted Request messages that can be stored. |    |                                       |
| <b>Multiplicity</b>              | 1  |    |                                       |
| <b>Type</b>                      | EcucIntegerParamDef  |    |                                       |
| <b>Range</b>                     | 0 .. 255   |    |                                       |
| <b>Default value</b>             | --   |    |                                       |
| <b>Post-Build Variant Value</b>  | false  |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                                    | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>   | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                                     | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local   |    |                                       |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00008 :</b>                                       |    |                                       |
| <b>Name</b>                      | J1939RmRequestTimeoutMonitors                                     |    |                                       |
| <b>Description</b>               | Number of transmitted requests that can be monitored for timeout. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | EcucIntegerParamDef   |    |                                       |
| <b>Range</b>                     | 0 .. 255  |    |                                       |
| <b>Default value</b>             | --  |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>  | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>  | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local  |    |                                       |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00051 :</b>   |    |                                       |
| <b>Name</b>                      | J1939RmComMNetworkHandleRef   |    |                                       |
| <b>Description</b>               | Reference to the channel defined by the ComMChannel providing access to the unique channel index ComMChannelId. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | Symbolic name reference to [ ComMChannel ]  |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>  | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>  | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local  |    |                                       |

#### Included Containers



| Container Name    | Multiplicity | Scope / Dependency   |
|-------------------|--------------|--|
| J1939RmAckmRxPdu  | 0..1         | Contains the configuration of the I-PDU used to receive the Acknowledgement PG. This PDU consumes a meta data item of type CAN_ID_32.  |
| J1939RmAckmTxPdu  | 0..1         | Contains the configuration of the I-PDU used to transmit the Acknowledgement PG. This PDU produces a meta data item of type CAN_ID_32. |
| J1939RmRqst2RxPdu | 0..1         | Contains the configuration of the I-PDU used to receive the Request2 PG. This PDU consumes a meta data item of type CAN_ID_32.         |
| J1939RmRqst2TxPdu | 0..1         | Contains the configuration of the I-PDU used to transmit the Request2 PG. This PDU produces a meta data item of type CAN_ID_32.        |
| J1939RmRqstRxPdu  | 0..1         | Contains the configuration of the I-PDU used to receive the Request PG. This PDU consumes a meta data item of type CAN_ID_32.          |
| J1939RmRqstTxPdu  | 0..1         | Contains the configuration of the I-PDU used to transmit the Request PG. This PDU produces a meta data item of type CAN_ID_32.         |

### 10.1.5 J1939RmAckmRxPdu

|                                 |   |
|---------------------------------|---|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00011 :</b>   |
| <b>Container Name</b>           | J1939RmAckmRxPdu  |
| <b>Description</b>              | Contains the configuration of the I-PDU used to receive the Acknowledgement PG. This PDU consumes a meta data item of type CAN_ID_32. |
| <b>Configuration Parameters</b> |   |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00015 :</b>                                      |    |              |
| <b>Name</b>                      | J1939RmAckmRxPduld   |    |              |
| <b>Description</b>               | The I-PDU identifier used for RxIndication from PduR.            |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucIntegerParamDef (Symbolic Name generated for this parameter) |    |              |
| <b>Range</b>                     | 0 .. 65535   |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: ECU   |    |              |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00016 :</b>                         |    |                                       |
| <b>Name</b>                      | J1939RmAckmRxPduRef                                 |    |                                       |
| <b>Description</b>               | Reference to the Pdu object representing the I-PDU. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | Reference to [ Pdu ]                                |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                             | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>                                    | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                              | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local  |    |                                       |

No Included Containers

### 10.1.6 J1939RmAckmTxPdu

|                                 |  |
|---------------------------------|--|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00012 :</b>  |
| <b>Container Name</b>           | J1939RmAckmTxPdu   |
| <b>Description</b>              | Contains the configuration of the I-PDU used to transmit the Acknowledgement PG. This PDU produces a meta data item of type CAN_ID_32. |
| <b>Configuration Parameters</b> |  |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00018 :</b>                                      |    |              |
| <b>Name</b>                      | J1939RmAckmTxPduld   |    |              |
| <b>Description</b>               | The I-PDU identifier used for TxConfirmation from PduR.          |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucIntegerParamDef (Symbolic Name generated for this parameter) |    |              |
| <b>Range</b>                     | 0 .. 65535   |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: ECU   |    |              |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00019 :</b>                         |    |                                       |
| <b>Name</b>                      | J1939RmAckmTxPduRef                                 |    |                                       |
| <b>Description</b>               | Reference to the Pdu object representing the I-PDU. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | Reference to [ Pdu ]                                |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                             | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>                                    | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                              | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local  |    |                                       |

No Included Containers

### 10.1.7 J1939RmRqstRxPdu

|                                 |   |
|---------------------------------|---|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00013 :</b>   |
| <b>Container Name</b>           | J1939RmRqstRxPdu  |
| <b>Description</b>              | Contains the configuration of the I-PDU used to receive the Request PG. This PDU consumes a meta data item of type CAN_ID_32. |
| <b>Configuration Parameters</b> |   |

|                     |   |
|---------------------|---|
| <b>SWS Item</b>     | <b>ECUC_J1939Rm_00020 :</b>                           |
| <b>Name</b>         | J1939RmRqstRxPduld                                    |
| <b>Description</b>  | The I-PDU identifier used for RxIndication from PduR. |
| <b>Multiplicity</b> | 1   |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>Type</b>                      | EcucIntegerParamDef (Symbolic Name generated for this parameter) |    |              |
| <b>Range</b>                     | 0 .. 65535   |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: ECU   |    |              |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00021 :</b>                         |    |                                       |
| <b>Name</b>                      | J1939RmRqstRxPduRef                                 |    |                                       |
| <b>Description</b>               | Reference to the Pdu object representing the I-PDU. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | Reference to [ Pdu ]                                |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                             | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>                                    | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                              | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local  |    |                                       |

No Included Containers

### 10.1.8 J1939RmRqstTxPdu

|                                 |  |  |  |
|---------------------------------|--|--|--|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00014 :</b>  |  |  |
| <b>Container Name</b>           | J1939RmRqstTxPdu   |  |  |
| <b>Description</b>              | Contains the configuration of the I-PDU used to transmit the Request PG. This PDU produces a meta data item of type CAN_ID_32. |  |  |
| <b>Configuration Parameters</b> |  |  |  |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00022 :</b>                                      |    |              |
| <b>Name</b>                      | J1939RmRqstTxPduld   |    |              |
| <b>Description</b>               | The I-PDU identifier used for TxConfirmation from PduR.          |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucIntegerParamDef (Symbolic Name generated for this parameter) |    |              |
| <b>Range</b>                     | 0 .. 65535   |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: ECU   |    |              |

|                                  |   |   |                                       |
|----------------------------------|---|---|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00023 :</b>                         |   |                                       |
| <b>Name</b>                      | J1939RmRqstTxPduRef                                 |   |                                       |
| <b>Description</b>               | Reference to the Pdu object representing the I-PDU. |   |                                       |
| <b>Multiplicity</b>              | 1   |   |                                       |
| <b>Type</b>                      | Reference to [ Pdu ]                                |   |                                       |
| <b>Post-Build Variant Value</b>  | false   |   |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                             | X | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>                                    | X | VARIANT-LINK-TIME, VARIANT-POST-BUILD |

|                           |                        |    |  |
|---------------------------|------------------------|----|--|
|                           | <b>Post-build time</b> | -- |  |
| <b>Scope / Dependency</b> | scope: local           |    |  |

**No Included Containers**

### 10.1.9 J1939RmRqst2RxPdu

|                                 |  |  |  |
|---------------------------------|--|--|--|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00075 :</b>  |  |  |
| <b>Container Name</b>           | J1939RmRqst2RxPdu  |  |  |
| <b>Description</b>              | Contains the configuration of the I-PDU used to receive the Request2 PG. This PDU consumes a meta data item of type CAN_ID_32. |  |  |
| <b>Configuration Parameters</b> |  |  |  |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00078 :</b>                                      |    |              |
| <b>Name</b>                      | J1939RmRqst2RxPduld  |    |              |
| <b>Description</b>               | The I-PDU identifier used for RxIndication from PduR.            |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucIntegerParamDef (Symbolic Name generated for this parameter) |    |              |
| <b>Range</b>                     | 0 .. 65535   |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: ECU   |    |              |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00077 :</b>                         |    |                                       |
| <b>Name</b>                      | J1939RmRqst2RxPduRef                                |    |                                       |
| <b>Description</b>               | Reference to the Pdu object representing the I-PDU. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | Reference to [ Pdu ]                                |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                             | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>                                    | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                              | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local  |    |                                       |

**No Included Containers**

### 10.1.10 J1939RmRqst2TxPdu

|                                 |   |  |  |
|---------------------------------|---|--|--|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00076 :</b>   |  |  |
| <b>Container Name</b>           | J1939RmRqst2TxPdu   |  |  |
| <b>Description</b>              | Contains the configuration of the I-PDU used to transmit the Request2 PG. This PDU produces a meta data item of type CAN_ID_32. |  |  |
| <b>Configuration Parameters</b> |   |  |  |

|                 |                             |  |  |
|-----------------|-----------------------------|--|--|
| <b>SWS Item</b> | <b>ECUC_J1939Rm_00080 :</b> |  |  |
| <b>Name</b>     | J1939RmRqst2TxPduld         |  |  |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>Description</b>               | The I-PDU identifier used for TxConfirmation from PduR.          |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucIntegerParamDef (Symbolic Name generated for this parameter) |    |              |
| <b>Range</b>                     | 0 .. 65535   |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: ECU   |    |              |

|                                  |   |    |                                       |
|----------------------------------|---|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00079 :</b>                         |    |                                       |
| <b>Name</b>                      | J1939RmRqst2TxPduRef                                |    |                                       |
| <b>Description</b>               | Reference to the Pdu object representing the I-PDU. |    |                                       |
| <b>Multiplicity</b>              | 1   |    |                                       |
| <b>Type</b>                      | Reference to [ Pdu ]                                |    |                                       |
| <b>Post-Build Variant Value</b>  | false   |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                             | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>                                    | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                              | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local  |    |                                       |

**No Included Containers**

### 10.1.11 J1939RmNode

|   |   |   |                     |
|---|---|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00049 :</b>   |   |                     |
| <b>Container Name</b>                   | J1939RmNode   |   |                     |
| <b>Description</b>                      | Contains the parameters for the support of a logical J1939 node (identified by an ECU address). |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true  |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>   | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>  | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>  | X | VARIANT-POST-BUILD  |
| <b>Configuration Parameters</b>         |   |   |                     |

|                                  |  |    |                                       |
|----------------------------------|--|----|---------------------------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00005 :</b>                  |    |                                       |
| <b>Name</b>                      | J1939RmNmNodeRef                             |    |                                       |
| <b>Description</b>               | Reference to the corresponding J1939Nm node. |    |                                       |
| <b>Multiplicity</b>              | 1  |    |                                       |
| <b>Type</b>                      | Symbolic name reference to [ J1939NmNode ]   |    |                                       |
| <b>Post-Build Variant Value</b>  | false  |    |                                       |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                      | X  | VARIANT-PRE-COMPILE                   |
|                                  | <b>Link time</b>                             | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|                                  | <b>Post-build time</b>                       | -- |                                       |
| <b>Scope / Dependency</b>        | scope: local                                 |    |                                       |

|                    |  |  |  |
|--------------------|--|--|--|
| <b>SWS Item</b>    | <b>ECUC_J1939Rm_00052 :</b>                        |  |  |
| <b>Name</b>        | J1939RmNodeChannelRef                              |  |  |
| <b>Description</b> | Reference to the channels this node has access to. |  |  |

|   |                                 |    |                                       |
|---|---------------------------------|----|---------------------------------------|
| <b>Multiplicity</b>                     | 1..*                            |    |                                       |
| <b>Type</b>                             | Reference to [ J1939RmChannel ] |    |                                       |
| <b>Post-Build Variant Multiplicity</b>  | false                           |    |                                       |
| <b>Post-Build Variant Value</b>         | false                           |    |                                       |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>         | X  | VARIANT-PRE-COMPILE                   |
|   | <b>Link time</b>                | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|   | <b>Post-build time</b>          | -- |                                       |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>         | X  | VARIANT-PRE-COMPILE                   |
|   | <b>Link time</b>                | X  | VARIANT-LINK-TIME, VARIANT-POST-BUILD |
|   | <b>Post-build time</b>          | -- |                                       |
| <b>Scope / Dependency</b>               | scope: local                    |    |                                       |

| <b>Included Containers</b> |                     |   |
|----------------------------|---------------------|---|
| <b>Container Name</b>      | <b>Multiplicity</b> | <b>Scope / Dependency</b>   |
| J1939RmUser                | 1..*                | Contains the configuration of a module that uses the request and acknowledgement interfaces of J1939Rm. |

### 10.1.12 J1939RmUser

|   |   |   |                     |
|---|---|---|---------------------|
| <b>SWS Item</b>                         | ECUC_J1939Rm_00010 :  |   |                     |
| <b>Choice container Name</b>            | J1939RmUser   |   |                     |
| <b>Description</b>                      | Contains the configuration of a module that uses the request and acknowledgement interfaces of J1939Rm. |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true  |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>   | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>  | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>  | X | VARIANT-POST-BUILD  |

| <b>Container Choices</b> |                     |   |
|--------------------------|---------------------|---|
| <b>Container Name</b>    | <b>Multiplicity</b> | <b>Scope / Dependency</b>   |
| J1939RmCddUser           | 0..1                | J1939Rm User representing a complex driver (CDD). CDDs may use all services provided by J1939Rm.  |
| J1939RmComUser           | 0..1                | J1939Rm User representing AUTOSAR COM. Supports requests for COM I-PDUs.  |
| J1939RmDcmUser           | 0..1                | J1939Rm User representing the J1939Dcm. Requires request indication and transmission of acknowledgement.                                  |
| J1939RmNmUser            | 0..1                | J1939Rm User representing the J1939Nm. Requires request indication.   |
| J1939RmRteUser           | 0..1                | J1939Rm User representing an application software component (SW-C). SW-Cs may use all services provided by the J1939Rm via service ports. |

### 10.1.13 J1939RmNmUser

|                       |                      |  |  |
|-----------------------|----------------------|--|--|
| <b>SWS Item</b>       | ECUC_J1939Rm_00071 : |  |  |
| <b>Container Name</b> | J1939RmNmUser        |  |  |

|   |   |   |                     |
|---|---|---|---------------------|
| <b>Description</b>                      | J1939Rm User representing the J1939Nm. Requires request indication. |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true  |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>   | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>  | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>  | X | VARIANT-POST-BUILD  |
| <b>Configuration Parameters</b>         |   |   |                     |
| <b>No Included Containers</b>           |   |   |                     |

#### 10.1.14 J1939RmDcmUser

|   |  |   |                     |
|---|--|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00068 :</b>  |   |                     |
| <b>Container Name</b>                   | J1939RmDcmUser   |   |                     |
| <b>Description</b>                      | J1939Rm User representing the J1939Dcm. Requires request indication and transmission of acknowledgement. |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true   |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>  | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>   | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>   | X | VARIANT-POST-BUILD  |
| <b>Configuration Parameters</b>         |  |   |                     |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00072 :</b>                                      |    |              |
| <b>Name</b>                      | J1939RmUserId  |    |              |
| <b>Description</b>               | Identifier used by J1939Dcm when calling J1939Rm_SendAck.        |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucIntegerParamDef (Symbolic Name generated for this parameter) |    |              |
| <b>Range</b>                     | 0 .. 65535   |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: ECU   |    |              |

|   |                                      |   |                     |
|---|--------------------------------------|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00070 :</b>          |   |                     |
| <b>Name</b>                             | J1939RmUserRequestPGN                |   |                     |
| <b>Description</b>                      | PGN of DMx PG supported by J1939Dcm. |   |                     |
| <b>Multiplicity</b>                     | 0..*                                 |   |                     |
| <b>Type</b>                             | EcucIntegerParamDef                  |   |                     |
| <b>Range</b>                            | 0 .. 262143                          |   |                     |
| <b>Default value</b>                    | --                                   |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true                                 |   |                     |
| <b>Post-Build Variant Value</b>         | true                                 |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>              | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>                     | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>               | X | VARIANT-POST-BUILD  |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>              | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>                     | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>               | X | VARIANT-POST-BUILD  |
| <b>Scope / Dependency</b>               | scope: local                         |   |                     |



**No Included Containers**

### 10.1.15 J1939RmCddUser

|   |  |    |              |
|---|--|----|--------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00066 :</b>  |    |              |
| <b>Container Name</b>                   | J1939RmCddUser   |    |              |
| <b>Description</b>                      | J1939Rm User representing a complex driver (CDD). CDDs may use all services provided by J1939Rm. |    |              |
| <b>Post-Build Variant Multiplicity</b>  | false  |    |              |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|   | <b>Link time</b>   | -- |              |
|   | <b>Post-build time</b>   | -- |              |
| <b>Configuration Parameters</b>         |  |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00028 :</b>  |    |              |
| <b>Name</b>                      | J1939RmUserAckIndication   |    |              |
| <b>Description</b>               | Enable AckIndication for this module. In case of CDD, the name is <apiServicePrefix>_AckIndication. In case of RTE, the operation AckIndication of the required port J1939Rm_AckIndication_{user} is called. |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|   |   |    |              |
|---|---|----|--------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00061 :</b>   |    |              |
| <b>Name</b>                             | J1939RmUserAckPGN   |    |              |
| <b>Description</b>                      | PGN supported to be acknowledged to this module. The PGNs supported by different modules should usually be disjunctive. |    |              |
| <b>Multiplicity</b>                     | 0..*  |    |              |
| <b>Type</b>                             | EcucIntegerParamDef   |    |              |
| <b>Range</b>                            | 0 .. 262143   |    |              |
| <b>Default value</b>                    | --  |    |              |
| <b>Post-Build Variant Multiplicity</b>  | false   |    |              |
| <b>Post-Build Variant Value</b>         | false   |    |              |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|   | <b>Link time</b>  | -- |              |
|   | <b>Post-build time</b>  | -- |              |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>   | X  | All Variants |
|   | <b>Link time</b>  | -- |              |
|   | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>               | scope: local  |    |              |

|                    |   |  |  |
|--------------------|---|--|--|
| <b>SWS Item</b>    | <b>ECUC_J1939Rm_00025 :</b>   |  |  |
| <b>Name</b>        | J1939RmUserId   |  |  |
| <b>Description</b> | Identifier used by a module using J1939Rm. This parameter is only required when the module uses transmission of requests or |  |  |



|   |  |    |              |
|---|--|----|--------------|
|   | acknowledgements.  |    |              |
| <b>Multiplicity</b>                     | 0..1   |    |              |
| <b>Type</b>                             | EcucIntegerParamDef (Symbolic Name generated for this parameter) |    |              |
| <b>Range</b>                            | 0 .. 65535   |    |              |
| <b>Default value</b>                    | --   |    |              |
| <b>Post-Build Variant Multiplicity</b>  | false  |    |              |
| <b>Post-Build Variant Value</b>         | false  |    |              |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|   | <b>Link time</b>   | -- |              |
|   | <b>Post-build time</b>   | -- |              |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>  | X  | All Variants |
|   | <b>Link time</b>   | -- |              |
|   | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>               | scope: ECU   |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00027 :</b>   |    |              |
| <b>Name</b>                      | J1939RmUserRequestIndication  |    |              |
| <b>Description</b>               | Enable RequestIndication for this module. In case of J1939Nm or J1939Dcm, the name is fixed. In case of CDD, the name is <apiServicePrefix>_RequestIndication. In case of RTE, J1939Rm will call the operation RequestIndication of the required port J1939Rm_RequestIndication_{user}. |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|   |  |    |              |
|---|--|----|--------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00026 :</b>  |    |              |
| <b>Name</b>                             | J1939RmUserRequestPGN  |    |              |
| <b>Description</b>                      | PGN supported to be requested from this module. The PGNs supported by different modules should usually be disjunctive. |    |              |
| <b>Multiplicity</b>                     | 0..*   |    |              |
| <b>Type</b>                             | EcucIntegerParamDef  |    |              |
| <b>Range</b>                            | 0 .. 262143  |    |              |
| <b>Default value</b>                    | --   |    |              |
| <b>Post-Build Variant Multiplicity</b>  | false  |    |              |
| <b>Post-Build Variant Value</b>         | false  |    |              |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|   | <b>Link time</b>   | -- |              |
|   | <b>Post-build time</b>   | -- |              |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>  | X  | All Variants |
|   | <b>Link time</b>   | -- |              |
|   | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>               | scope: local   |    |              |

|                     |  |  |  |
|---------------------|--|--|--|
| <b>SWS Item</b>     | <b>ECUC_J1939Rm_00030 :</b>  |  |  |
| <b>Name</b>         | J1939RmUserSendAck   |  |  |
| <b>Description</b>  | Enable the SendAck API for this module. In case of RTE, the operation SendAck of the provided port J1939Rm_SendAck_{user} is called. |  |  |
| <b>Multiplicity</b> | 1  |  |  |

|                                  |                         |    |              |
|----------------------------------|-------------------------|----|--------------|
| <b>Type</b>                      | EcucBooleanParamDef     |    |              |
| <b>Default value</b>             | --                      |    |              |
| <b>Post-Build Variant Value</b>  | false                   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b> | X  | All Variants |
|                                  | <b>Link time</b>        | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local            |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00029 :</b>  |    |              |
| <b>Name</b>                      | J1939RmUserSendRequest   |    |              |
| <b>Description</b>               | Enable the SendRequest API for this module. In case of RTE, the operation SendRequest of the provided port J1939Rm_SendRequest_{user} is called. |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00031 :</b>   |    |              |
| <b>Name</b>                      | J1939RmUserTimeoutSupervision   |    |              |
| <b>Description</b>               | <p>Enable RequestTimeoutIndication and CancelRequestTimeout for this module.</p> <p>RequestTimeoutIndication: In case of CDD, the name is &lt;apiServicePrefix&gt;_RequestTimeoutIndication. In case of RTE, the operation RequestTimeoutIndication of the required port J1939Rm_RequestTimeoutIndication_{user} is called.</p> <p>CancelRequestTimeout: In case of RTE, the operation CancelRequestTimeout of the provided port J1939Rm_CancelRequestTimeout_{user} is called.</p> |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00042 :</b>                               |    |              |
| <b>Name</b>                      | J1939RmUserCddRef   |    |              |
| <b>Description</b>               | Reference to the CDD module description.                  |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | Foreign reference to [ ECUC-MODULE-CONFIGURATION-VALUES ] |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                                   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>                                    | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|                               |
|-------------------------------|
| <b>No Included Containers</b> |
|-------------------------------|

### 10.1.16 J1939RmRteUser

|   |   |    |              |
|---|---|----|--------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00069 :</b>   |    |              |
| <b>Container Name</b>                   | J1939RmRteUser  |    |              |
| <b>Description</b>                      | J1939Rm User representing an application software component (SW-C). SW-Cs may use all services provided by the J1939Rm via service ports. |    |              |
| <b>Post-Build Variant Multiplicity</b>  | false   |    |              |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|   | <b>Link time</b>  | -- |              |
|   | <b>Post-build time</b>  | -- |              |
| <b>Configuration Parameters</b>         |   |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00028 :</b>  |    |              |
| <b>Name</b>                      | J1939RmUserAckIndication   |    |              |
| <b>Description</b>               | Enable AckIndication for this module. In case of CDD, the name is <apiServicePrefix>_AckIndication. In case of RTE, the operation AckIndication of the required port J1939Rm_AckIndication_{user} is called. |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|   |   |    |              |
|---|---|----|--------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00061 :</b>   |    |              |
| <b>Name</b>                             | J1939RmUserAckPGN   |    |              |
| <b>Description</b>                      | PGN supported to be acknowledged to this module. The PGNs supported by different modules should usually be disjunctive. |    |              |
| <b>Multiplicity</b>                     | 0..*  |    |              |
| <b>Type</b>                             | EcucIntegerParamDef   |    |              |
| <b>Range</b>                            | 0 .. 262143   |    |              |
| <b>Default value</b>                    | --  |    |              |
| <b>Post-Build Variant Multiplicity</b>  | false   |    |              |
| <b>Post-Build Variant Value</b>         | false   |    |              |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|   | <b>Link time</b>  | -- |              |
|   | <b>Post-build time</b>  | -- |              |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>   | X  | All Variants |
|   | <b>Link time</b>  | -- |              |
|   | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>               | scope: local  |    |              |

|                     |   |  |  |
|---------------------|---|--|--|
| <b>SWS Item</b>     | <b>ECUC_J1939Rm_00025 :</b>   |  |  |
| <b>Name</b>         | J1939RmUserId   |  |  |
| <b>Description</b>  | Identifier used by a module using J1939Rm. This parameter is only required when the module uses transmission of requests or acknowledgements. |  |  |
| <b>Multiplicity</b> | 0..1  |  |  |
| <b>Type</b>         | EcucIntegerParamDef (Symbolic Name generated for this parameter)  |  |  |

|   |                         |    |              |
|---|-------------------------|----|--------------|
| <b>Range</b>                            | 0 .. 65535              |    |              |
| <b>Default value</b>                    | --                      |    |              |
| <b>Post-Build Variant Multiplicity</b>  | false                   |    |              |
| <b>Post-Build Variant Value</b>         | false                   |    |              |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b> | X  | All Variants |
|   | <b>Link time</b>        | -- |              |
|   | <b>Post-build time</b>  | -- |              |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b> | X  | All Variants |
|   | <b>Link time</b>        | -- |              |
|   | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>               | scope: ECU              |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00027 :</b>   |    |              |
| <b>Name</b>                      | J1939RmUserRequestIndication  |    |              |
| <b>Description</b>               | Enable RequestIndication for this module. In case of J1939Nm or J1939Dcm, the name is fixed. In case of CDD, the name is <apiServicePrefix>_RequestIndication. In case of RTE, J1939Rm will call the operation RequestIndication of the required port J1939Rm_RequestIndication_{user}. |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|   |  |    |              |
|---|--|----|--------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00026 :</b>  |    |              |
| <b>Name</b>                             | J1939RmUserRequestPGN  |    |              |
| <b>Description</b>                      | PGN supported to be requested from this module. The PGNs supported by different modules should usually be disjunctive. |    |              |
| <b>Multiplicity</b>                     | 0..*   |    |              |
| <b>Type</b>                             | EcucIntegerParamDef  |    |              |
| <b>Range</b>                            | 0 .. 262143  |    |              |
| <b>Default value</b>                    | --   |    |              |
| <b>Post-Build Variant Multiplicity</b>  | false  |    |              |
| <b>Post-Build Variant Value</b>         | false  |    |              |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|   | <b>Link time</b>   | -- |              |
|   | <b>Post-build time</b>   | -- |              |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>  | X  | All Variants |
|   | <b>Link time</b>   | -- |              |
|   | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>               | scope: local   |    |              |

|                                 |  |  |  |
|---------------------------------|--|--|--|
| <b>SWS Item</b>                 | <b>ECUC_J1939Rm_00030 :</b>  |  |  |
| <b>Name</b>                     | J1939RmUserSendAck   |  |  |
| <b>Description</b>              | Enable the SendAck API for this module. In case of RTE, the operation SendAck of the provided port J1939Rm_SendAck_{user} is called. |  |  |
| <b>Multiplicity</b>             | 1  |  |  |
| <b>Type</b>                     | EcucBooleanParamDef  |  |  |
| <b>Default value</b>            | --   |  |  |
| <b>Post-Build Variant Value</b> | false  |  |  |

|                                  |                         |    |              |
|----------------------------------|-------------------------|----|--------------|
| <b>Value Configuration Class</b> | <b>Pre-compile time</b> | X  | All Variants |
|                                  | <b>Link time</b>        | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local            |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00029 :</b>  |    |              |
| <b>Name</b>                      | J1939RmUserSendRequest   |    |              |
| <b>Description</b>               | Enable the SendRequest API for this module. In case of RTE, the operation SendRequest of the provided port J1939Rm_SendRequest_{user} is called. |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | All Variants |
|                                  | <b>Link time</b>   | -- |              |
|                                  | <b>Post-build time</b>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00031 :</b>   |    |              |
| <b>Name</b>                      | J1939RmUserTimeoutSupervision   |    |              |
| <b>Description</b>               | <p>Enable RequestTimeoutIndication and CancelRequestTimeout for this module.</p> <p>RequestTimeoutIndication: In case of CDD, the name is &lt;apiServicePrefix&gt;_RequestTimeoutIndication. In case of RTE, the operation RequestTimeoutIndication of the required port J1939Rm_RequestTimeoutIndication_{user} is called.</p> <p>CancelRequestTimeout: In case of RTE, the operation CancelRequestTimeout of the provided port J1939Rm_CancelRequestTimeout_{user} is called.</p> |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | All Variants |
|                                  | <b>Link time</b>  | -- |              |
|                                  | <b>Post-build time</b>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

**No Included Containers**

### 10.1.17 J1939RmComUser

|   |  |   |                     |
|---|--|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00067 :</b>  |   |                     |
| <b>Container Name</b>                   | J1939RmComUser   |   |                     |
| <b>Description</b>                      | J1939Rm User representing AUTOSAR COM. Supports requests for COM I-PDUs. |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true   |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>  | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>   | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>   | X | VARIANT-POST-BUILD  |
| <b>Configuration Parameters</b>         |  |   |                     |

| Included Containers |              |   |
|---------------------|--------------|---|
| Container Name      | Multiplicity | Scope / Dependency  |
| J1939RmComIPdu      | 0..*         | Contains the configuration of an I-PDU that is to be transmitted on request by COM. |

### 10.1.18 J1939RmComIPdu

|   |   |   |                     |
|---|---|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00032 :</b>   |   |                     |
| <b>Container Name</b>                   | J1939RmComIPdu  |   |                     |
| <b>Description</b>                      | Contains the configuration of an I-PDU that is to be transmitted on request by COM. |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true  |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>   | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>  | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>  | X | VARIANT-POST-BUILD  |
| <b>Configuration Parameters</b>         |   |   |                     |

|   |  |   |                     |
|---|--|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00081 :</b>                      |   |                     |
| <b>Name</b>                             | J1939RmComIPduExtId1                             |   |                     |
| <b>Description</b>                      | First extended identifier byte of the COM I-PDU. |   |                     |
| <b>Multiplicity</b>                     | 0..1   |   |                     |
| <b>Type</b>                             | EcucIntegerParamDef                              |   |                     |
| <b>Range</b>                            | 0 .. 255   |   |                     |
| <b>Default value</b>                    | --   |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true   |   |                     |
| <b>Post-Build Variant Value</b>         | true   |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>                          | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>                                 | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>                           | X | VARIANT-POST-BUILD  |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>                          | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>                                 | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>                           | X | VARIANT-POST-BUILD  |
| <b>Scope / Dependency</b>               | scope: local                                     |   |                     |

|   |   |   |                     |
|---|---|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00082 :</b>                       |   |                     |
| <b>Name</b>                             | J1939RmComIPduExtId2                              |   |                     |
| <b>Description</b>                      | Second extended identifier byte of the COM I-PDU. |   |                     |
| <b>Multiplicity</b>                     | 0..1  |   |                     |
| <b>Type</b>                             | EcucIntegerParamDef                               |   |                     |
| <b>Range</b>                            | 0 .. 255  |   |                     |
| <b>Default value</b>                    | --  |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true  |   |                     |
| <b>Post-Build Variant Value</b>         | true  |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>                           | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>                                  | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>                            | X | VARIANT-POST-BUILD  |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>                           | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>                                  | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>                            | X | VARIANT-POST-BUILD  |

|                           |              |
|---------------------------|--------------|
| <b>Scope / Dependency</b> | scope: local |
|---------------------------|--------------|

|   |  |   |                     |
|---|--|---|---------------------|
| <b>SWS Item</b>                         | <b>ECUC_J1939Rm_00083 :</b>                      |   |                     |
| <b>Name</b>                             | J1939RmComIPduExtId3                             |   |                     |
| <b>Description</b>                      | Third extended identifier byte of the COM I-PDU. |   |                     |
| <b>Multiplicity</b>                     | 0..1   |   |                     |
| <b>Type</b>                             | EcucIntegerParamDef                              |   |                     |
| <b>Range</b>                            | 0 .. 255   |   |                     |
| <b>Default value</b>                    | --   |   |                     |
| <b>Post-Build Variant Multiplicity</b>  | true   |   |                     |
| <b>Post-Build Variant Value</b>         | true   |   |                     |
| <b>Multiplicity Configuration Class</b> | <b>Pre-compile time</b>                          | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>                                 | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>                           | X | VARIANT-POST-BUILD  |
| <b>Value Configuration Class</b>        | <b>Pre-compile time</b>                          | X | VARIANT-PRE-COMPILE |
|   | <b>Link time</b>                                 | X | VARIANT-LINK-TIME   |
|   | <b>Post-build time</b>                           | X | VARIANT-POST-BUILD  |
| <b>Scope / Dependency</b>               | scope: local                                     |   |                     |

|                                  |                             |   |                     |
|----------------------------------|-----------------------------|---|---------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00033 :</b> |   |                     |
| <b>Name</b>                      | J1939RmComIPduPGN           |   |                     |
| <b>Description</b>               | PGN of the COM I-PDU.       |   |                     |
| <b>Multiplicity</b>              | 1                           |   |                     |
| <b>Type</b>                      | EcucIntegerParamDef         |   |                     |
| <b>Range</b>                     | 0 .. 262143                 |   |                     |
| <b>Default value</b>             | --                          |   |                     |
| <b>Post-Build Variant Value</b>  | true                        |   |                     |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>     | X | VARIANT-PRE-COMPILE |
|                                  | <b>Link time</b>            | X | VARIANT-LINK-TIME   |
|                                  | <b>Post-build time</b>      | X | VARIANT-POST-BUILD  |
| <b>Scope / Dependency</b>        | scope: local                |   |                     |

|                                  |   |   |                     |
|----------------------------------|---|---|---------------------|
| <b>SWS Item</b>                  | <b>ECUC_J1939Rm_00065 :</b>                         |   |                     |
| <b>Name</b>                      | J1939RmComIPduRef                                   |   |                     |
| <b>Description</b>               | Reference to the Pdu object representing the I-PDU. |   |                     |
| <b>Multiplicity</b>              | 1   |   |                     |
| <b>Type</b>                      | Reference to [ Pdu ]                                |   |                     |
| <b>Post-Build Variant Value</b>  | false   |   |                     |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>                             | X | VARIANT-PRE-COMPILE |
|                                  | <b>Link time</b>                                    | X | VARIANT-LINK-TIME   |
|                                  | <b>Post-build time</b>                              | X | VARIANT-POST-BUILD  |
| <b>Scope / Dependency</b>        | scope: local  |   |                     |

|                               |
|-------------------------------|
| <b>No Included Containers</b> |
|-------------------------------|

## 10.2 Published Information

For details, refer to the chapter 10.3 “Published Information” in the SWS BSW General [4].