

Diagram illustrating the location of the Engine Fuel Flow Left and Engine Fuel Flow Right sensors. The diagram shows the engine compartment with the following components labeled:

- Engine Emerg. Air Start** (16)
- Emergency Afterburner** (17)
- Engine Fuel Flow Left**
- Engine Fuel Flow Right**

