

DWM-156

3.75G HSUPA USB Adapter

User Manual



Index

3.75G HSUPA USB Adapter Introduction	2
Internet service	6
SMS service	9
Contacts	13
USSD	15
Settings	17
Statistics	20
About & Help	21
FAQs	22

1. To launch the Network Connect, double-click the



application on the /applications folder. It

should be noted that:

- If the PIN code enabled, enter the correct one, then click **<OK>**. The (U)SIM will be locked after three retries of incorrect PIN code inputting;
- Enter the correct PUK to retrieve the default PIN code. After ten retries of incorrect PUK code inputting, please contact with your service provider;
- With the wrong PIN and PUK, all the network services are unavailable.

2. Main interface introduction



: Connection



: Access to Text Message



: Access to Contacts/Phonebook interface



: Access to USSD



: Set parameters



: Access to check usage Statistics



: Help (User Manual)

3. Status information

Status	Description
New message	Message popup window shown when new message arrived
Message full	Message alert will be displayed when message full
Initializing	Indicates that the device is in the process of initializing.
Searching	The device is searching for the network.

No service

No suitable network.

Network signal



Indicate the signal strength of the network.

Network type




GSM/GPRS,




UMTS.

INTERNET SERVICE

1. Connecting with the default connection profile

- Click  to set up the connection;
- Once the connection established, and the connection status icon will be changed to “Disconnect”.

2. Connect to the internet with the user-defined profile


- Click , select **Dialup**;
- Click **New**, select **New APN** or **Predefined APN list**;
 - ✧ Select **New APN**, click **<Save>**;

- ✧ Fill in all the parameters, then click **<OK>** to add the new one to the available profile list.

- Select one item from the predefined profile list;

Note: Contact with your service provider to get the correct parameters.


3. Make your profile as default one

- Click , select **Dialup**;
- Choose one item from the available connection profiles list;
- Click **<OK>**.

4. Disconnect from the internet

Click “Disconenct” button to disconnect the internet connection.

SMS SERVICE

Click  to enter SMS (Short Message Service) service interface.

1. Creating and sending a message.

Click **New**:

- Input the recipient number by one of the following options:
 - ✧ Enter the number directly;
 - ✧ Click **To**, choose the recipient number from the phonebook and click **<OK>**.
- Enter the message content;

- Click **Send** or **Save**. The message will be saved in the **Outbox** when failed to send.

Note:

- You can group send a message at most 50 recipients;
- Each number should be separated by “,”;
- The message cannot expand 1,530 characters at most.

2. Inbox

- The following prompt box will be displayed when received a new message;
- Reply: Access the edit interface, write the content, click **Send** or **Save**;


- Forward: Forward the selected message;
- Delete: Delete the selected message.
- Sync: Messages synchronization

Note:

- The new message will be saved in PC when 3.75G Connect running only, else in (U)SIM instead;
- You can use “Shift” or “Ctrl” to selected several messages;
- The deleted message cannot be retrieved.


3. Draft

- Double-click the selected message;
- Confirm the recipient and the content, and click ***Send*** or ***Save***.

➤ Press  to synchronize messages

4. Outbox

Select the message, and click **Send**. The message will be sent


again. Press  to synchronize messages.

5. Sent Box

The message in the Sent Box can be deleted or


forwarded. Press  to synchronize messages.

CONTACTS

Click  to access the contacts interface.

The contacts list column contains: (U) SIM /Computer. You can use contacts stored either on the (U) SIM, or on Computer in the corresponding window.

1. New




- Click  from the tool bar to access the contacts editor;
- Enter the relevant information, and press **<OK>**; the new contact will appear in the current contact list.


2. Edit

- Select a contact record you want to edit;
- Modify the relevant contact information, and select **<OK>** to save the changes.

3. Delete

- Select one contact, or more (using the command/shift key);

- Click  from the tool bar. A dialog box will ask “Do you want to delete the contact(s)?”
- Click **<OK>** and the contact(s) will be deleted; deleted contacts will not be restored.
- 4. Copy to (U) SIM card /Computer
Select one contact, or more (using command/shift key)
stored in the same memory; press  to copy
current records; press  to paste records and
Contact(s) will be copied to the target memory.
- 5. Synchronization

Press  to synchronize contacts.

USSD



Click  to access the USSD interface.

1. New

- Click **<New>** button to access the USSD Command editor;
- Enter the relevant information, and press **<OK>**; the new USSD Command will appear in the current command list.

2. Edit

- Select a command which can be modified and access the command editor by clicking **<Edit>** button;
- Modify the relevant command information, and select **<OK>** to save the changes.

3. Delete

- Select a command which can be modified by clicking **<delete>** button;

4. Send

- Input the USSD command and click **<send>** button to send USSD command.

SETTINGS

Click  to list the functions.

1. General

➤ Enable/Disable PIN

- You can **Enable /Disable** the PIN verification before dialing;
- Click **Enable**, enter the correct PIN code and click **OK**;
- The PIN code should be a numeric string of 4—8 digits.

➤ Modify PIN

- Click **Change PIN**, enter the old PIN code;

- Enter the new PIN code, confirm the new PIN code, and click **OK**.

2. Dialup

You can set or modify the config to connect network

3. Network Mode

- The default mode is **Auto**;
- You can choose **Only UMTS/HSPA** or **Only GPRS/EDGE**. The device will register network according to the selected mode.

Network Selection

- Automatically is set as default value;

- Select ***Manually*** before dialing, available networks will be listed when finished;
- Select an available network and click ***Select***, and then the device will try to register.

4. SMS Settings

This menu is used to enable or disable message sound or notification when a message arrives

STATISTICS

You can get the statistics of daily/weekly/yearly report on downloading/uploading/connection time.

ABOUT & HELP

- About: To get the PC Suite software information;
- Help: To open the User Manual.

FAQS

1. Q: What shall I do if I cannot connect to the internet?

A: Open Settings->Dialup, confirm the APN information right or not. For more details, contact with your service provider.

2. Q: Why takes so long for installation?

A: According to the different hardware and software environment, it would take a few minutes for installation.

3. Q: Why can't I receive the message?

A: Please confirm whether the (U) SIM's SMS memory is full or not.

4. Q: Why can't I register to the internet?

A: Open Settings->Network Selection, check the network setting.