

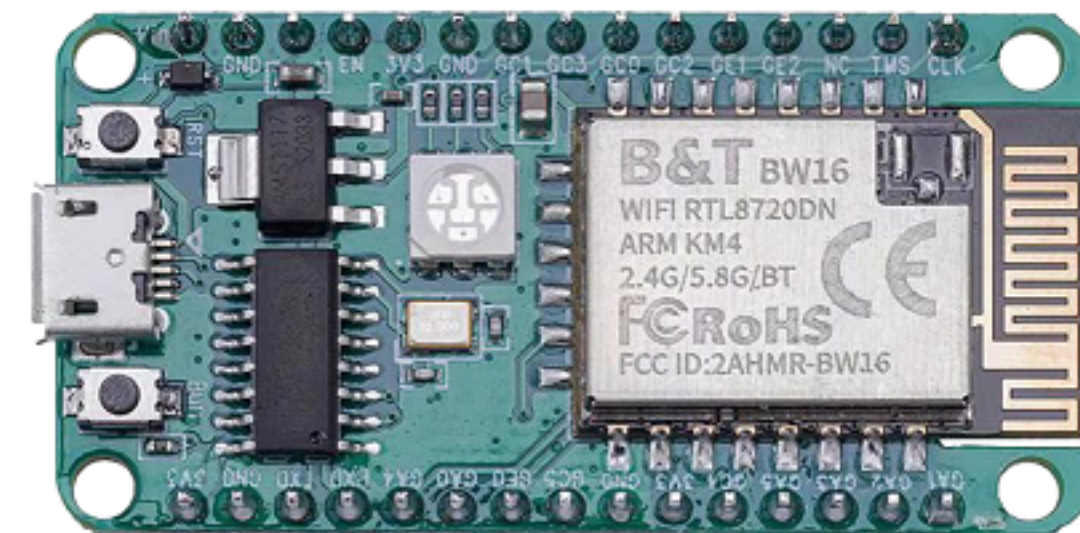


- 1.Refer to Hardware Setup section in README.md for wiring guidelines, power precautions, and layout tips.
2. BW16 pinouts vary by vendor — confirm SPI pins before wiring.
3. In case SPI malfunction is suspected, see README.md Firmware Variants section for details on BW16 versions

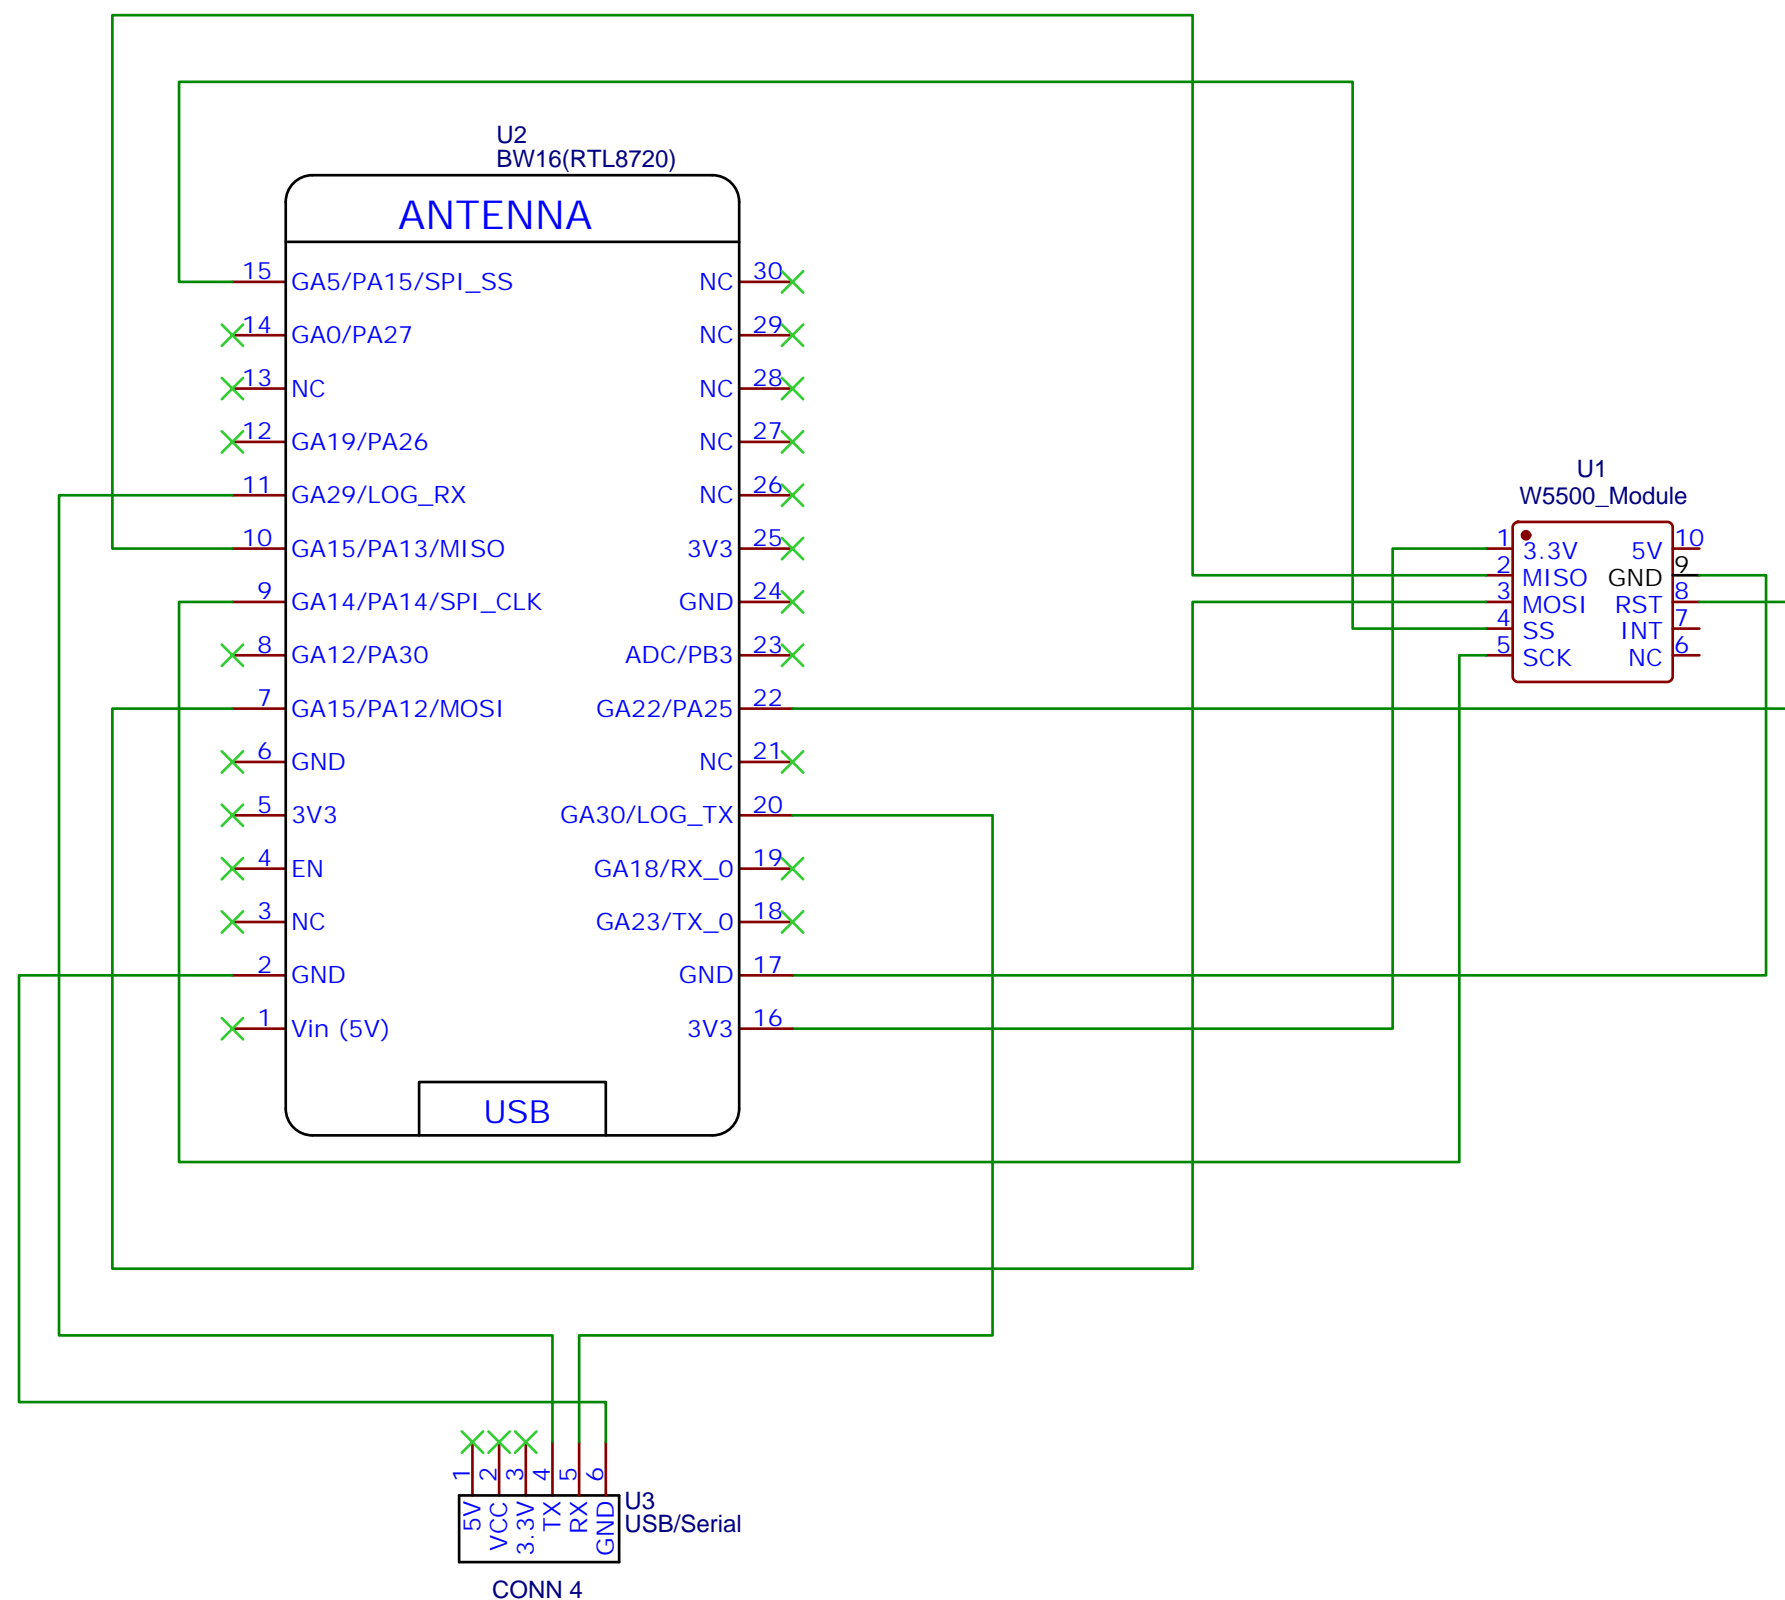

W5500 Header

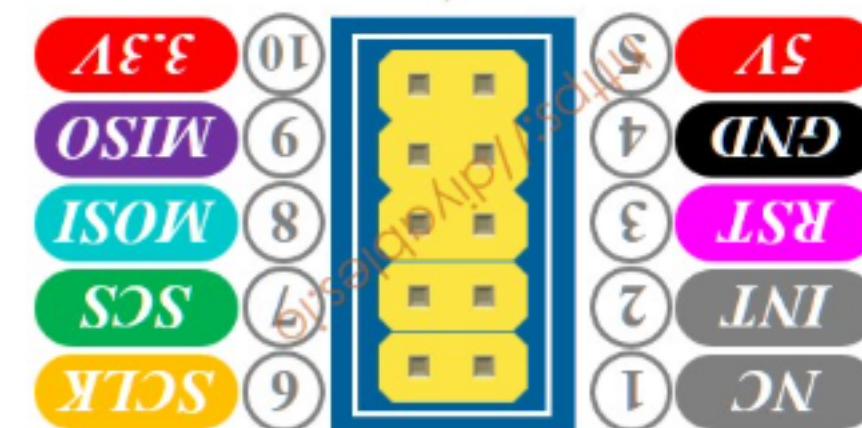

TITLE: Sheet_1		REV: 1.0
EasyEDA	Company: Aurangzeb Haque	Sheet: 1/1
	Date: 2025-10-31	Drawn By: azhaque