


Audi Coupé (2.3 litre fuel injection engine, 98 kW, KE-III Jetronic, 5-cylinder) Engine code letters NG


from July 1992

Position of relays,
also see "Fitting Locations"

Relay plate with fuse holder:

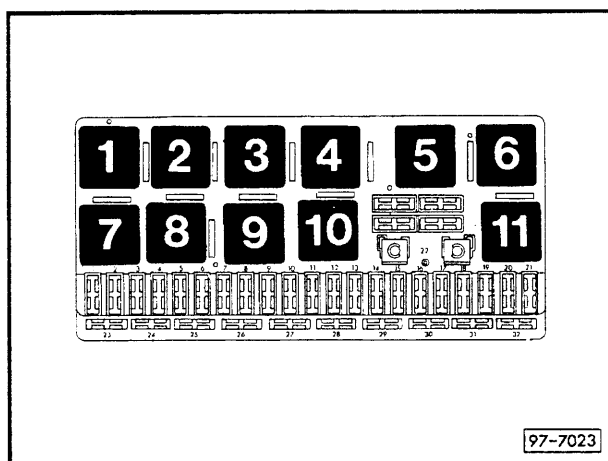

Auxiliary relay carrier,
front (under left dash panel)

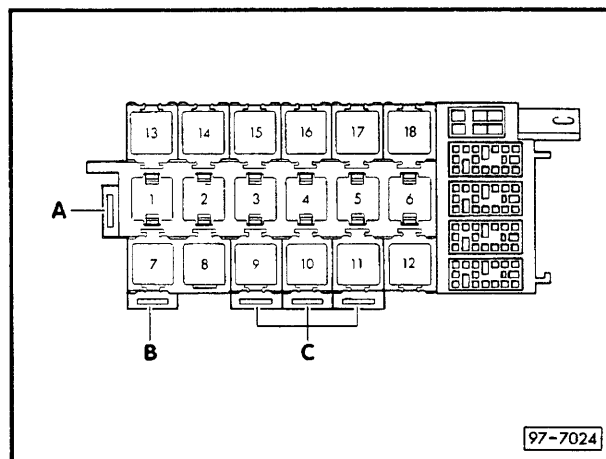

Position of relays:


- 1** – Relay for fog lights
– Bridge connection with rear fog lights
- 2** – Radiator fan relay, 2nd stage
- 3** – Control unit for radiator fan run-on
- 4** – Relay for headlight washer system
- 5** – Relief relay for X-contact
- 7** – Relay for horn
- 8** – Bridge connection with manual gearbox
– Relay with anti-theft alarm (starter inhibitor)
- 9** – Relay for intermittent windscreen wash/wipe system
- 10** – Fuel pump relay
- 11** – Radiator fan relay, 1st stage

Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige


Position of relays:

Auxiliary relay carrier, rear
(under left seat bench)

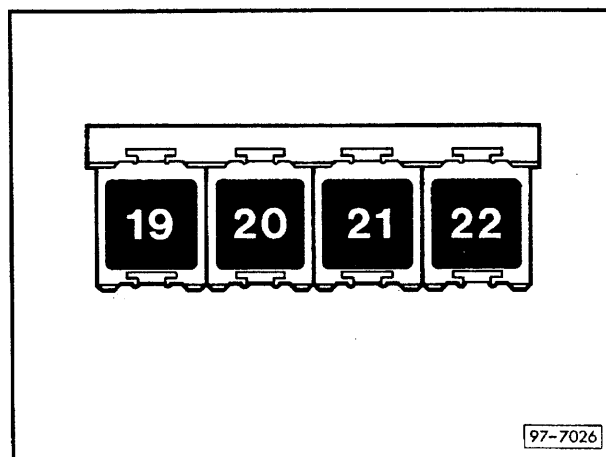


Position of relays:

Earth connections

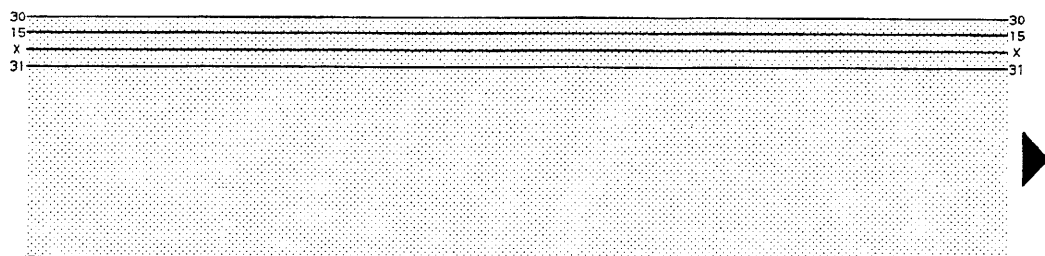


Wiring colours:

bl = blue
 br = brown
 ge = yellow
 gn = green
 gr = grey
 li = purple
 ro = red
 sw = black
 ws = white

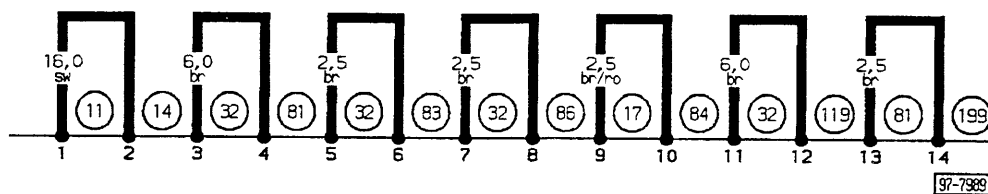


- ⑪ – Earth point, in battery box
- ⑭ – Earth point, on gearbox
- ⑰ – Earth point, on intake manifold
- ③② – Earth point, behind dash panel, left
- ⑧① – Earth connection – 1 –, in dash panel wiring loom
- ⑧③ – Earth connection – 1 –, in front right wiring loom
- ⑧④ – Earth connection, engine block, in front right wiring loom
- ⑧⑥ – Earth connection – 1 –, in rear wiring loom
- ①①⑨ – Earth connection – 1 –, in headlight wiring loom
- ①⑨⑨ – Earth connection – 3 –, in dash panel wiring loom

Battery, Starter, Alternator

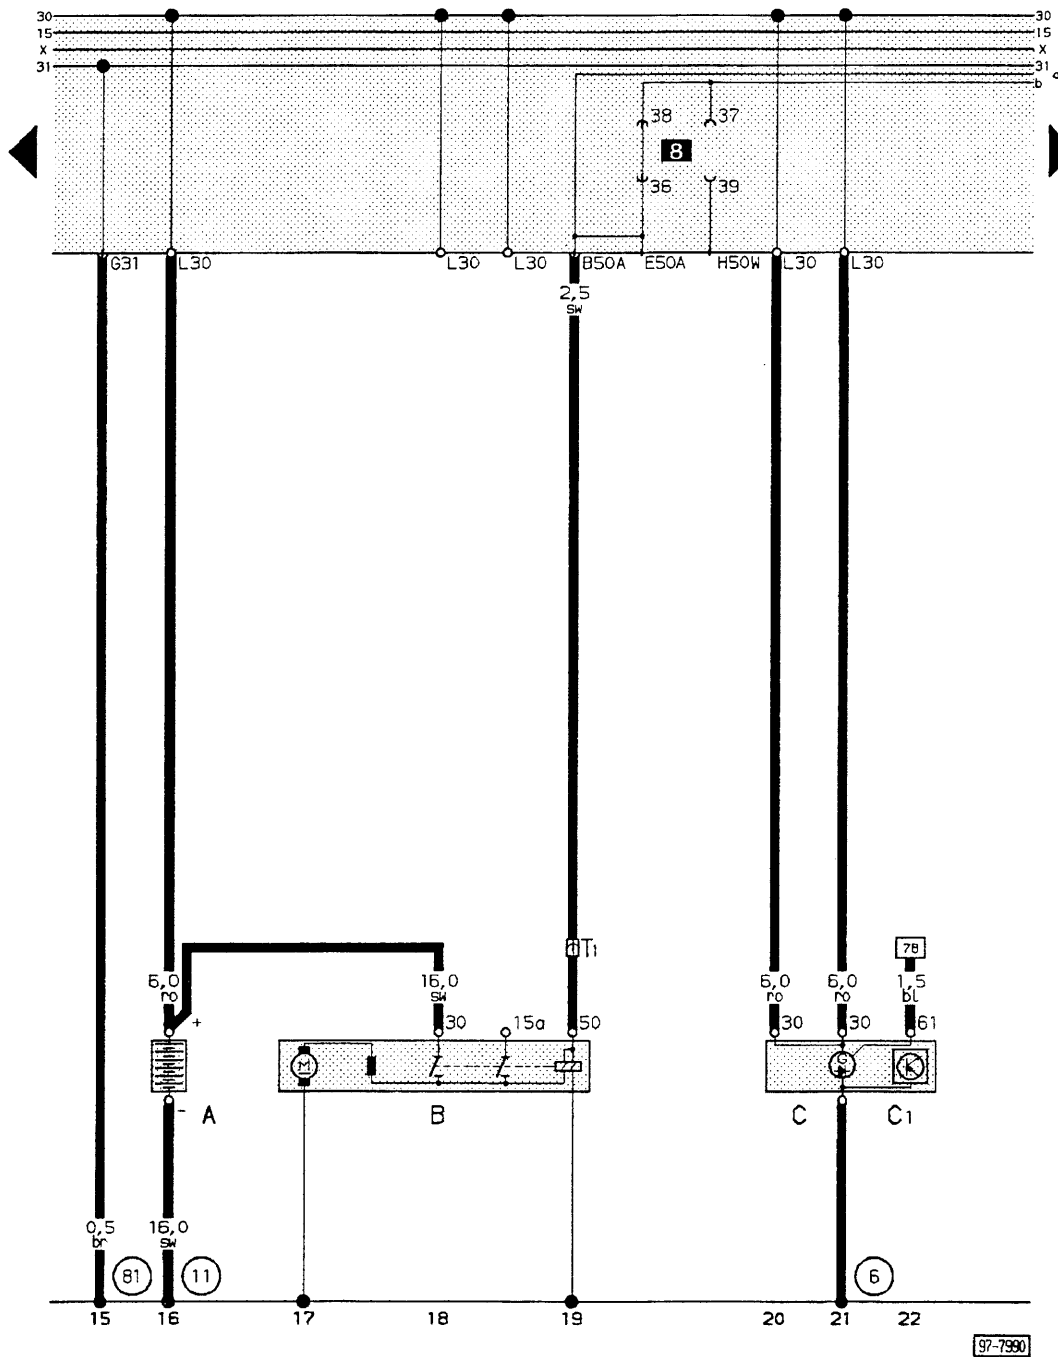

- A – Battery
- B – Starter
- C – Alternator
- C 1 – Voltage regulator
- T 1 – Connector single, on bulkhead, right
- ⑥ – Earthing strap, engine – alternator
- ⑪ – Earth point, in battery box
- ⑧① – Earth connection – 1 –, in dash panel wiring loom

Electronic fuel injection, Lambda probe

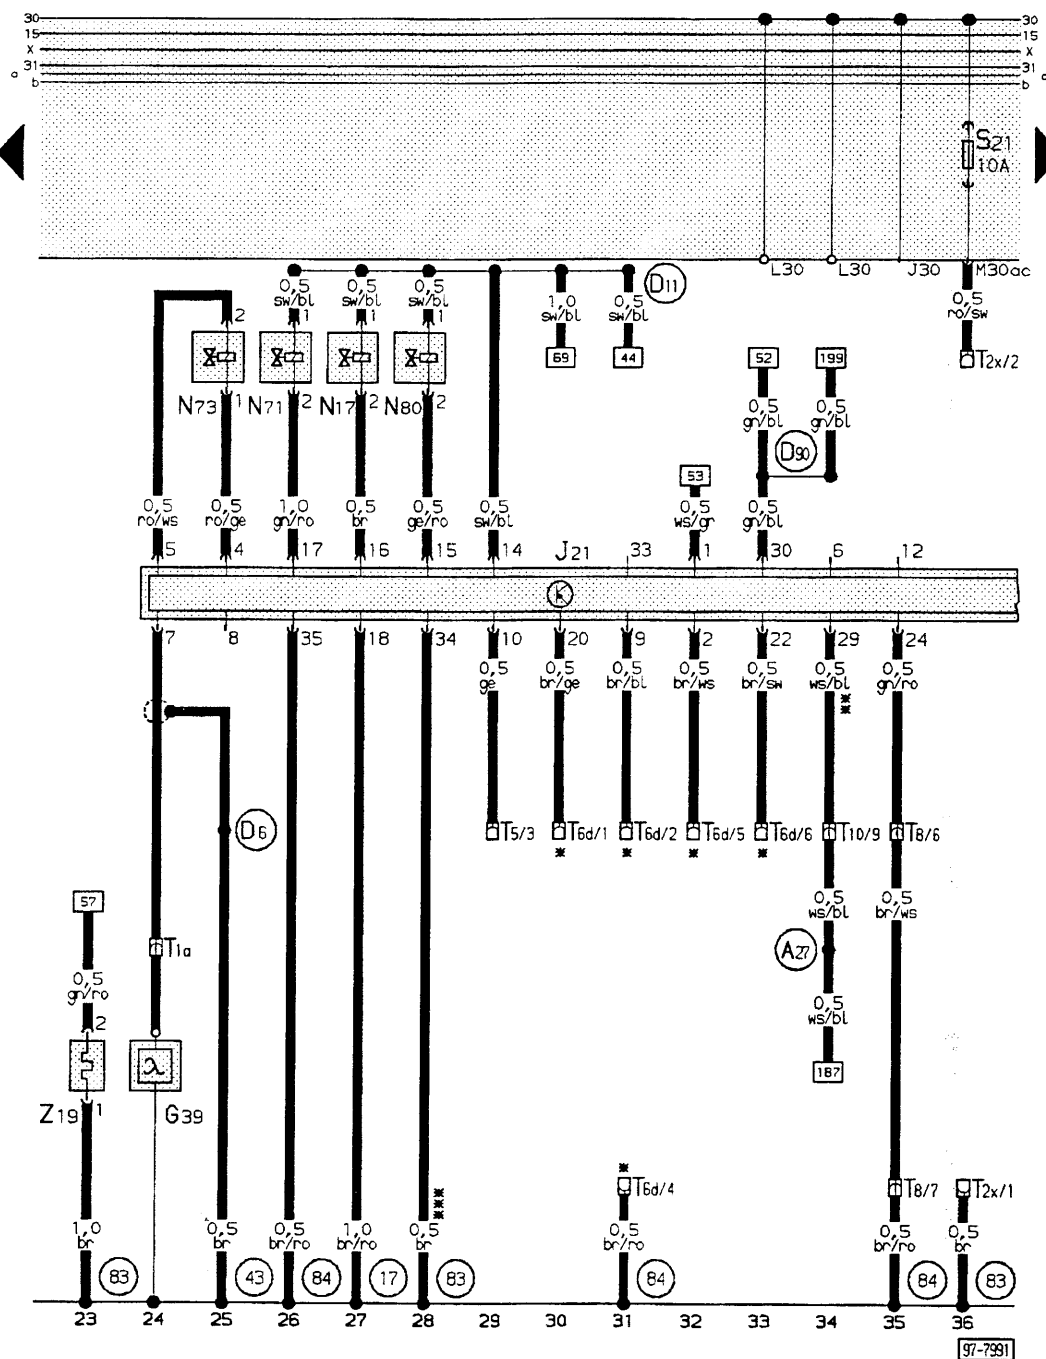


Wiring colours:

bl = blue
br = brown
ge = yellow
gn = green
gr = grey
li = purple
ro = red
sw = black
ws = white


- G 39 – Lambda probe
J 21 – KE Jetronic control unit
N 17 – Cold start valve
N 71 – Idling speed stabilization valve
N 73 – Differential pressure regulator
N 80 – Activated charcoal filter system solenoid valve I (pulsed)
T 1a – Connector single, in engine compartment, right
T 2x – Connector 2 pin, white, in plenum chamber near relay plate (Diagnosis plug)
T 5 – Connector 5 pin, black, behind dash panel
T 6d – Connector 6 pin, black, (coding plug) behind dash panel
T 8 – Connector 8 pin, behind dash panel (coding plug)
T 10 – Connector 10 pin, black, connector point on aux. relay carrier
Z 19 – Heating for Lambda probe

- (17) – Earth point, on intake manifold
(43) – Earth point, A pillar, right lower
(83) – Earth connection – 1 –, in front right wiring loom
(84) – Earth connection, engine block, in front right wiring loom
(A27) – Connection (speed signal), in dash panel wiring loom
(D6) – Connection (Lambda), in front right wiring loom
(D11) – Positive (+) connection (15) via fuse 28 in front right wiring loom
(D90) – Connection (RPM signal), in engine compartment wiring loom
* – Coding plug is not used
** – Only available on Swedish version
*** – Only available on vehicles with manual gearbox

Electronic fuel injection

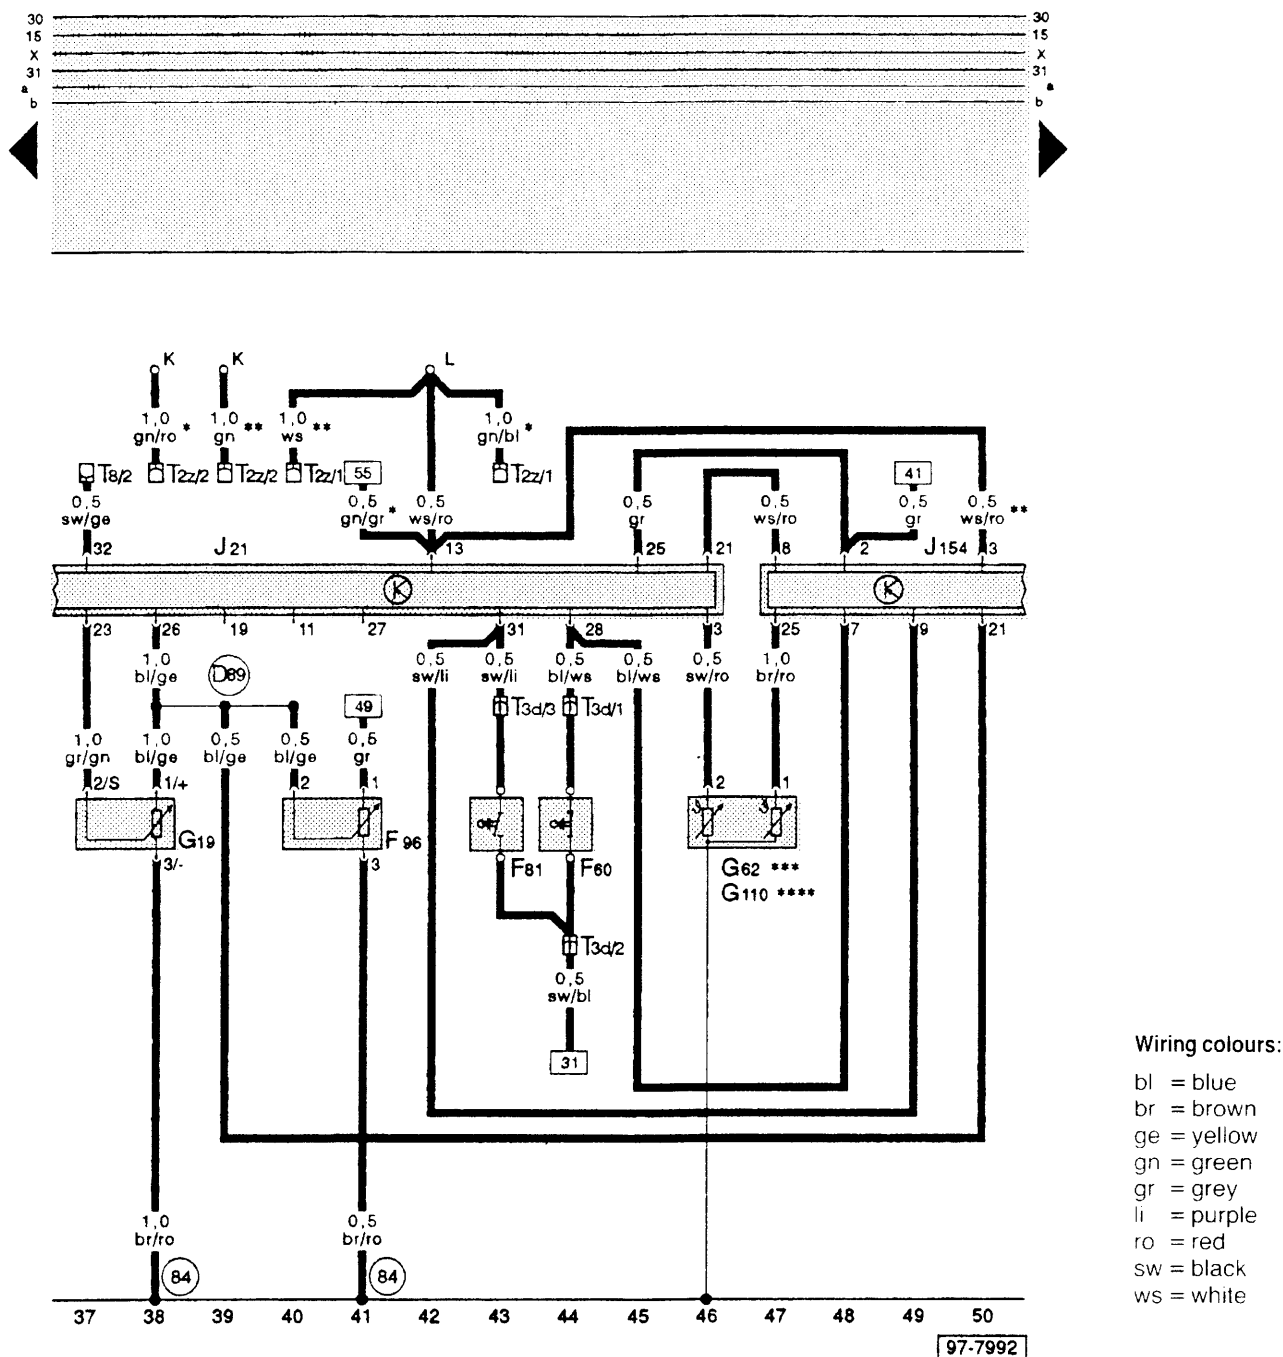


Electronic fuel injection, fuel pump relay, fuel pump, knock control

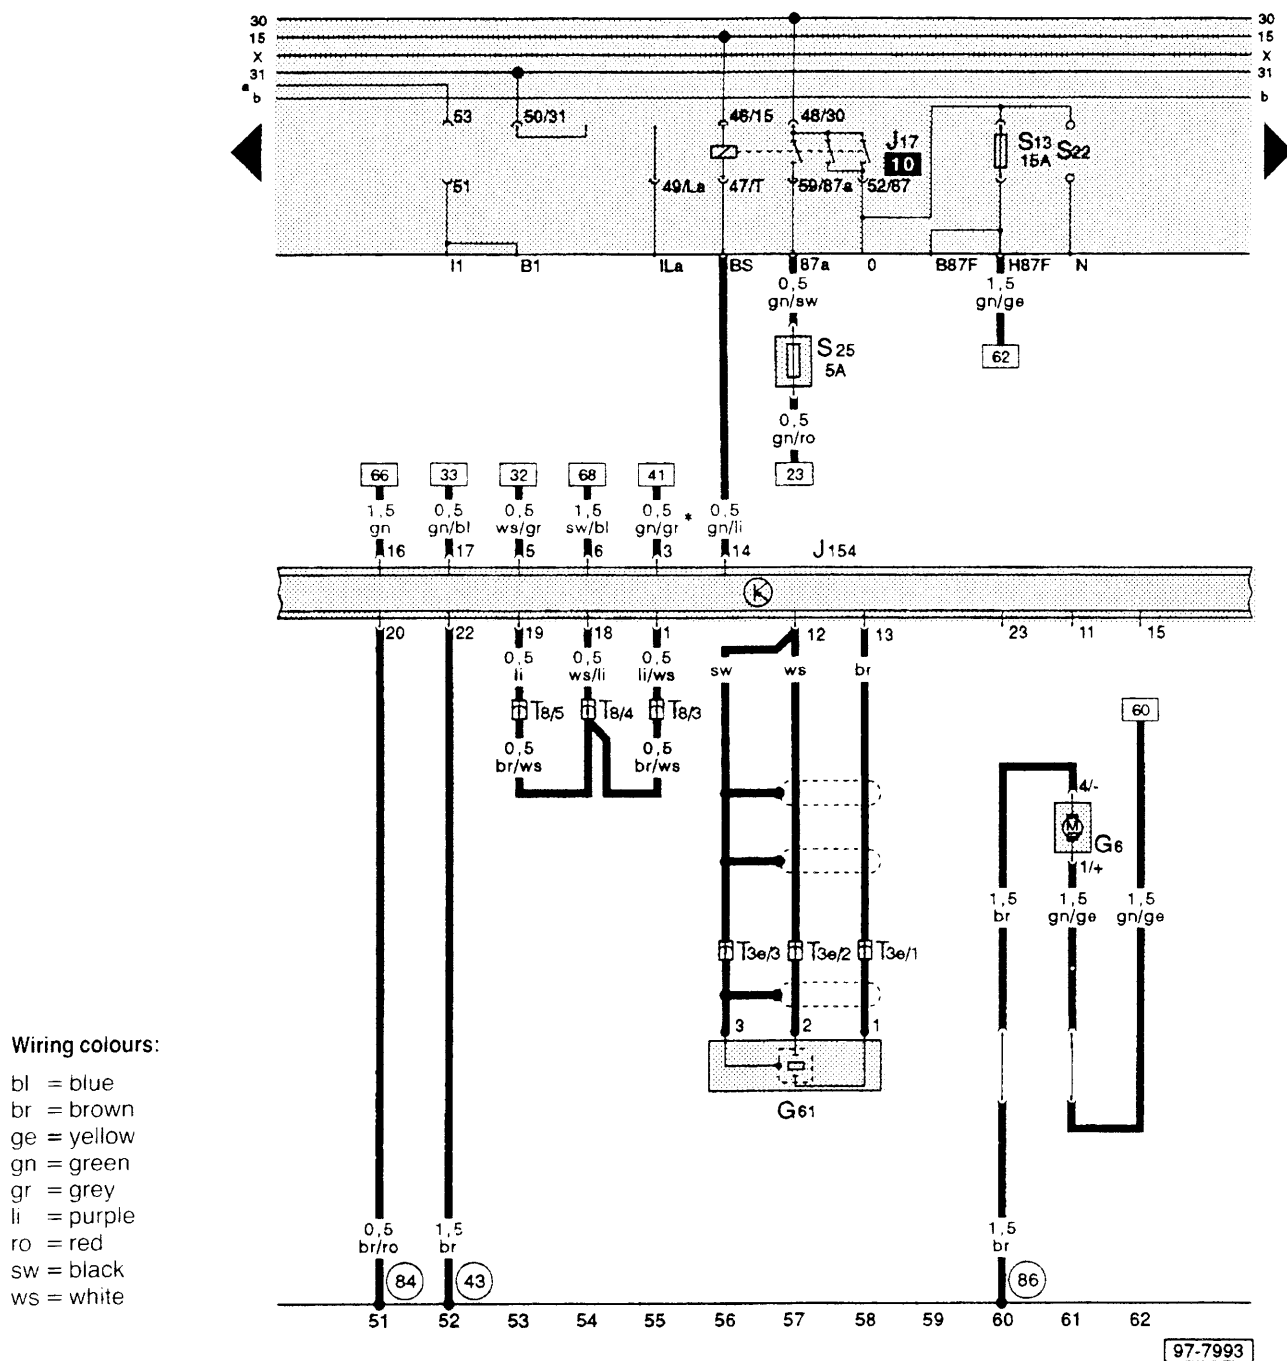


- G 6 – Fuel pump
- G 61 – Knock sensor I
- J 17 – Fuel pump relay
- J 154 – Control unit for electronic ignition with knock control
- S 25 – Separate fuse for Lambda probe heater (in auxiliary relay carrier)
- T 3e – Connector 3 pin, blue, in engine compartment, right
- T 8 – Connector 8 pin, behind dash panel (coding plug)
- (43) – Earth point, A pillar, right lower
- (84) – Earth connection, engine block, in front right wiring loom
- (86) – Earth connection – 1 –, in rear wiring loom
- * – Up until 7/93

Electronic fuel injection, ignition

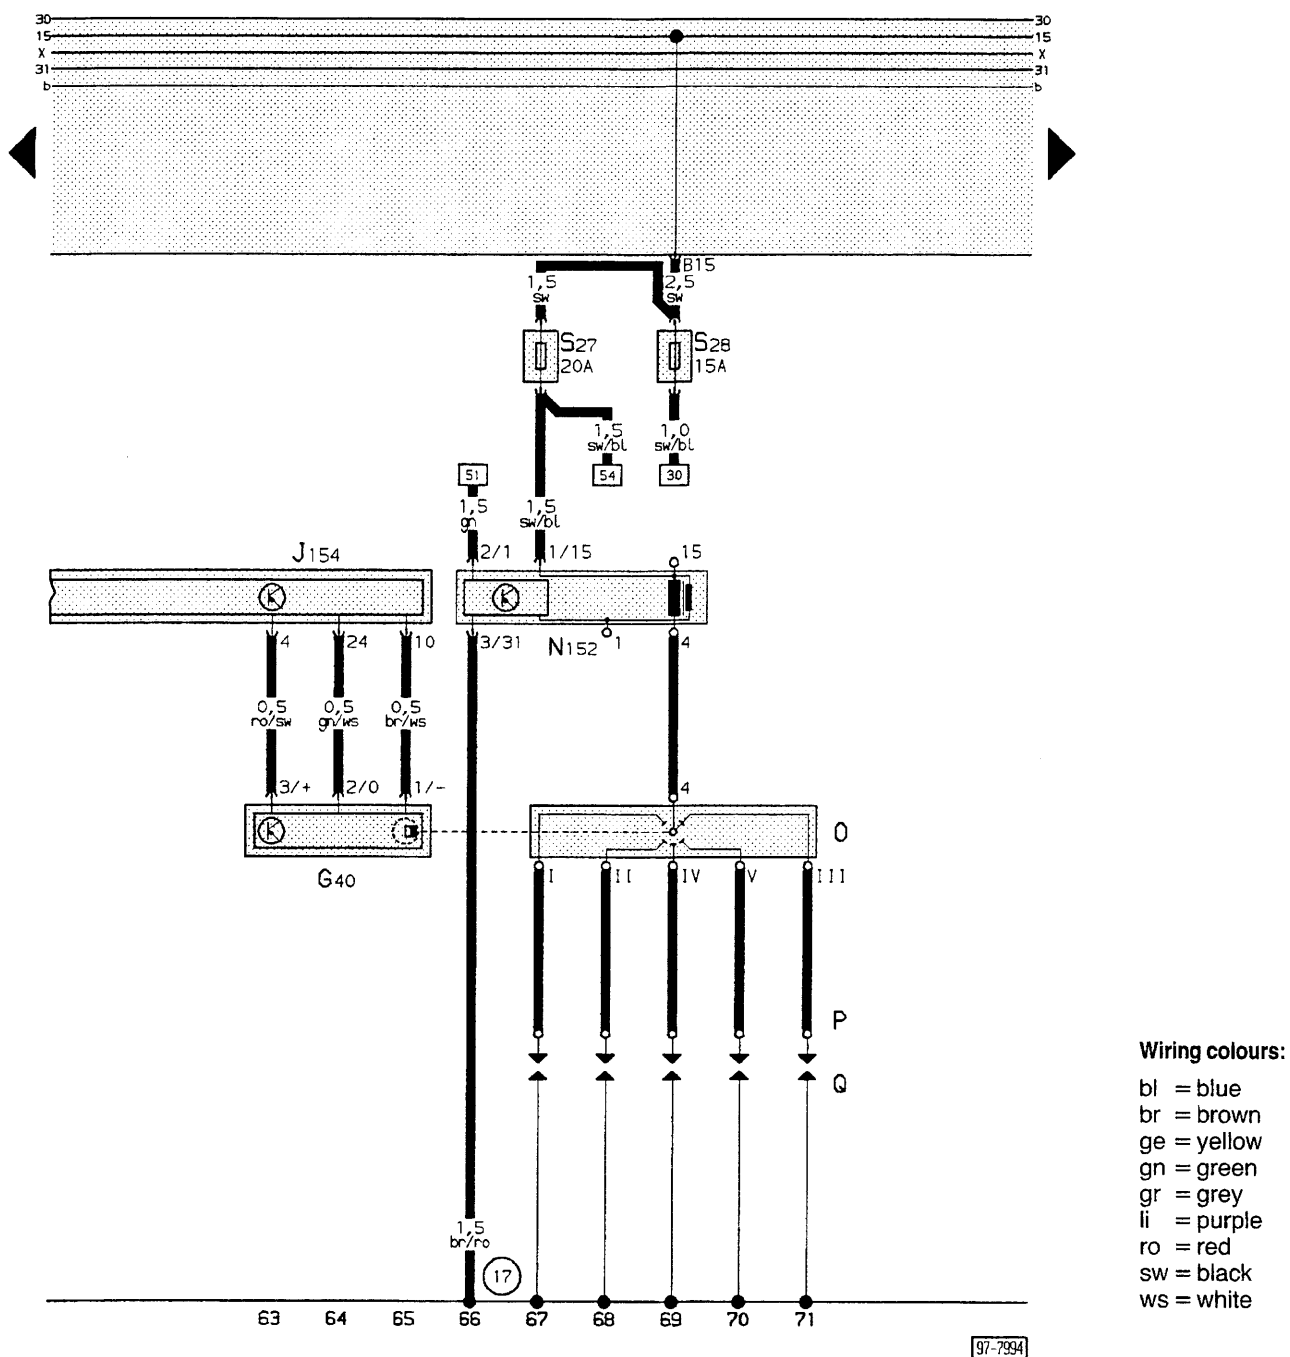


- G 40 – Hall sender
- J 154 – Control unit for electronic ignition with knock control
- N 152 – Ignition transformer
- O – Ignition distributor
- P – Spark plug connector
- Q – Spark plugs
- S 27 – Fuse in additional fuse holder (Engine system I – for electronic ignition)
- S 28 – Fuse in additional fuse holder (Engine system II – for lambda probe)
- ⑰ – Earth point, on intake manifold

Ignition/starter switch, relief relay for x-contact

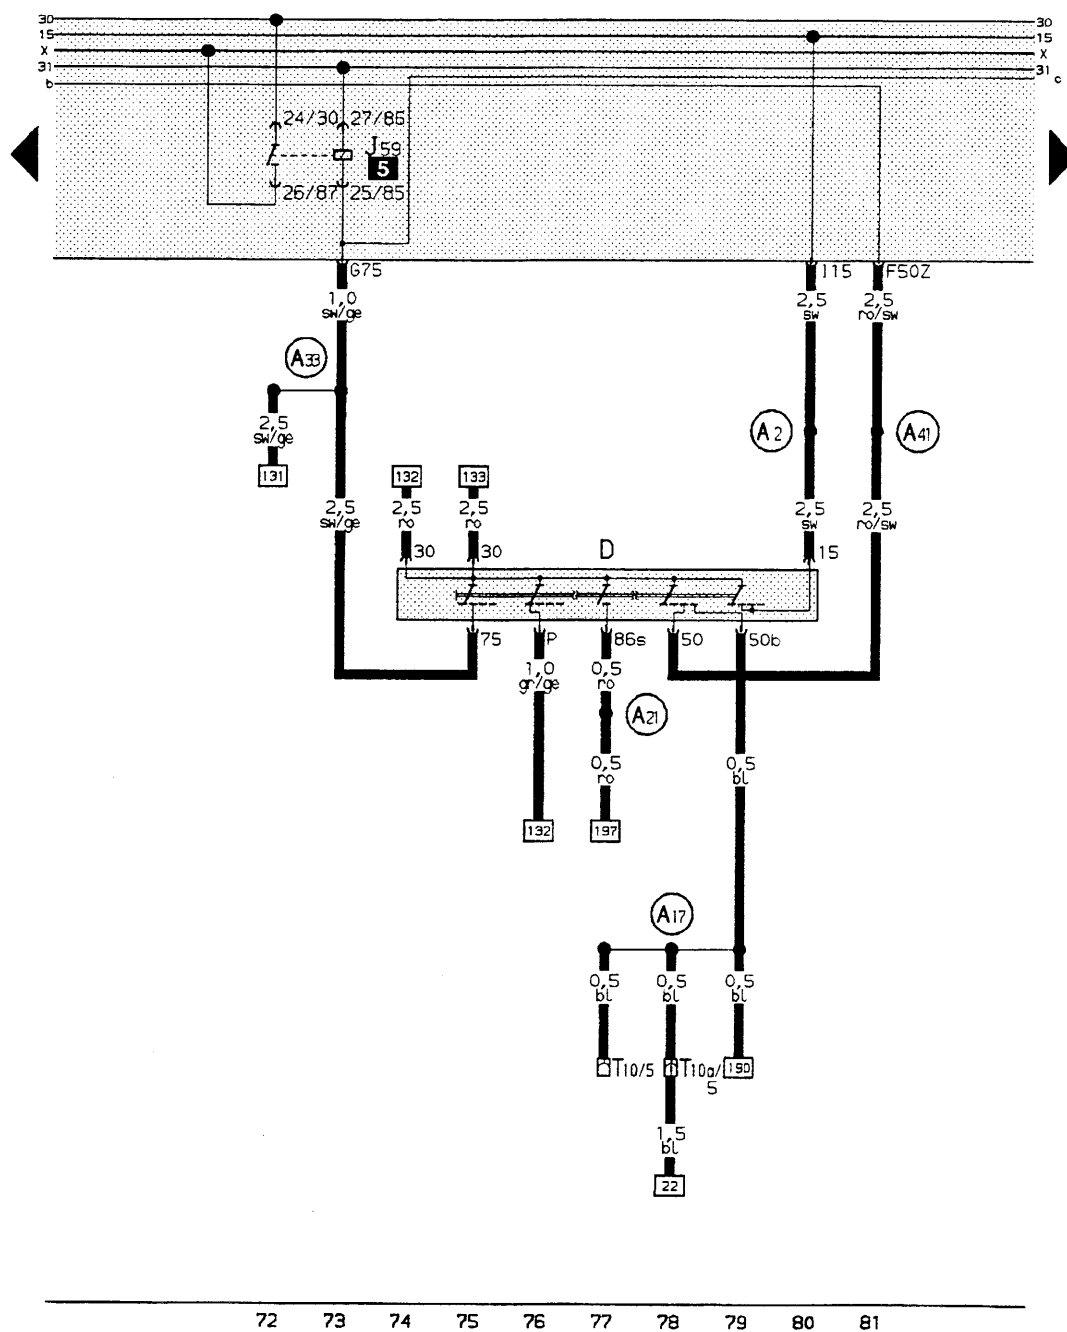


- D – Ignition/starter switch
- J 59 – Relief relay for x contact
- T 10 – Connector 10 pin, black, connection point on aux. relay carrier
- T 10a – Connector 10 pin, yellow, connection point on aux. relay carrier
- (A2) – Positive (+) connection (15), in dash panel wiring loom
- (A17) – Connection (61), in dash panel wiring loom
- (A21) – Connection (86s), in dash panel wiring loom
- (A33) – Connection (75), in dash panel wiring loom
- (A41) – Positive (+) connection (50), in dash panel wiring loom

Fan run-on, radiator fan

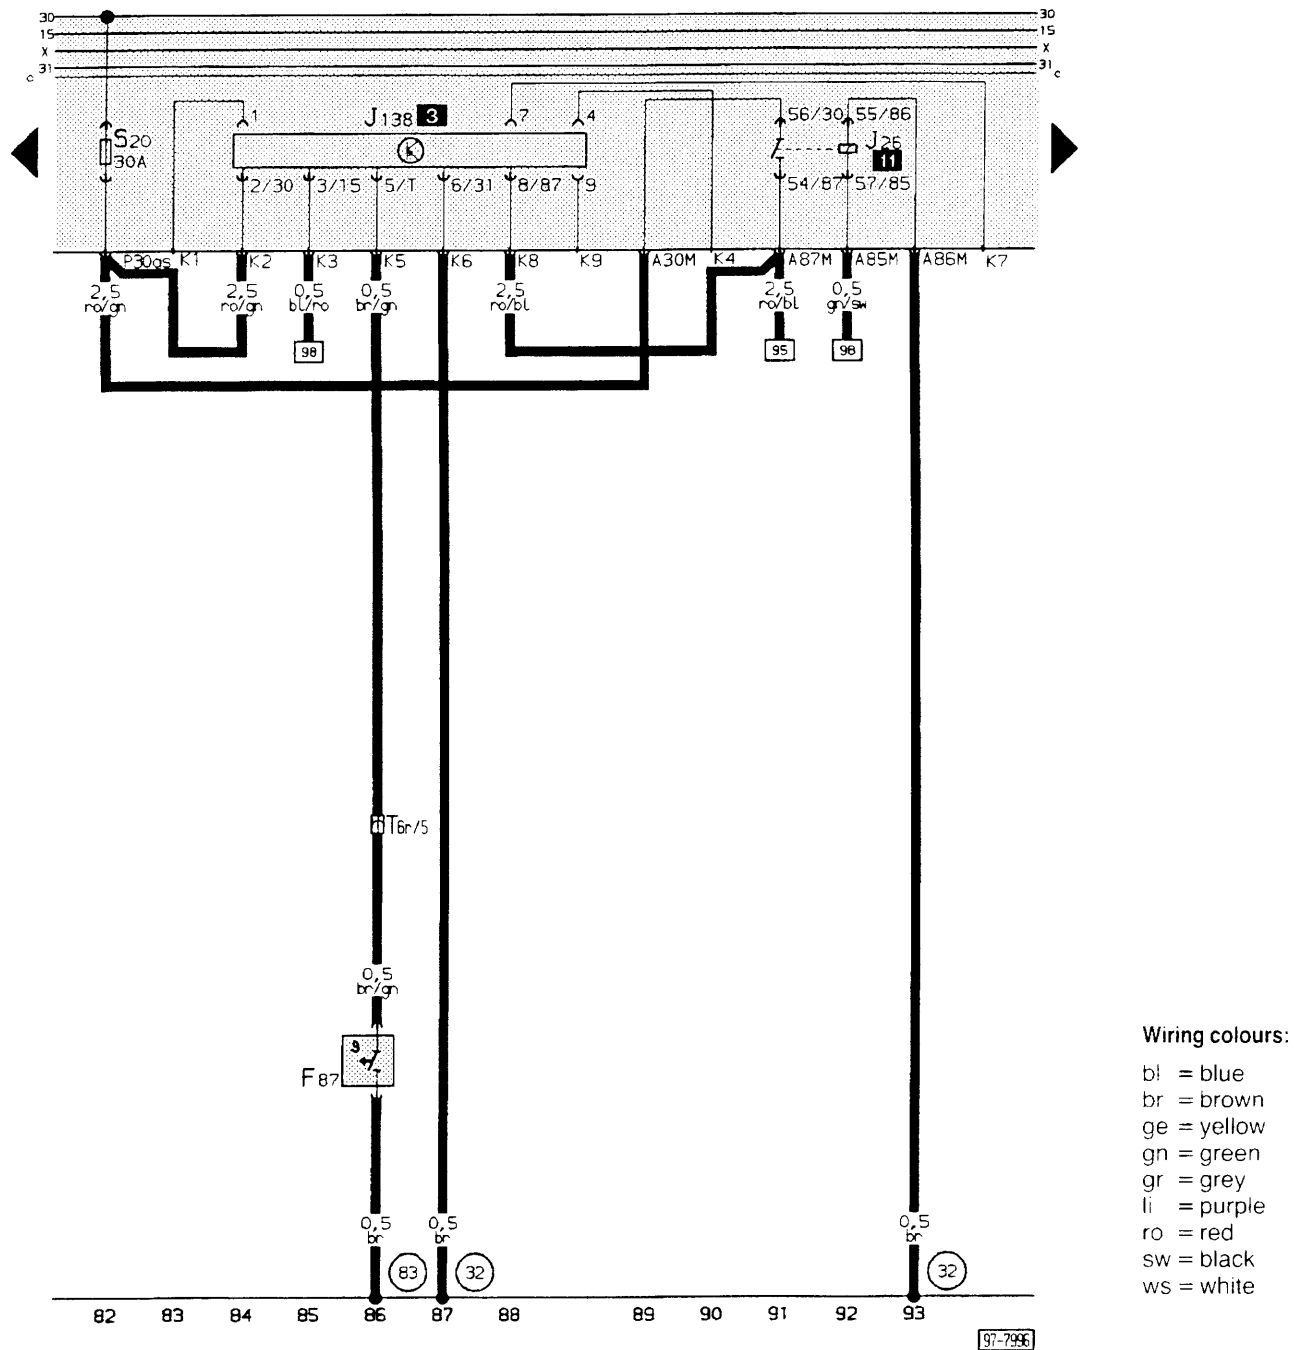

- F 87 – Thermo switch for fan run-on
- J 26 – Radiator fan relay
- J 138 – Control unit for radiator fan run-on
- T 6r – Connector 6 pin, black, behind dash panel, left
- ③② – Earth point, behind dash panel, left
- ③③ – Earth connection – 1 –, in front right wiring loom

Radiator fan

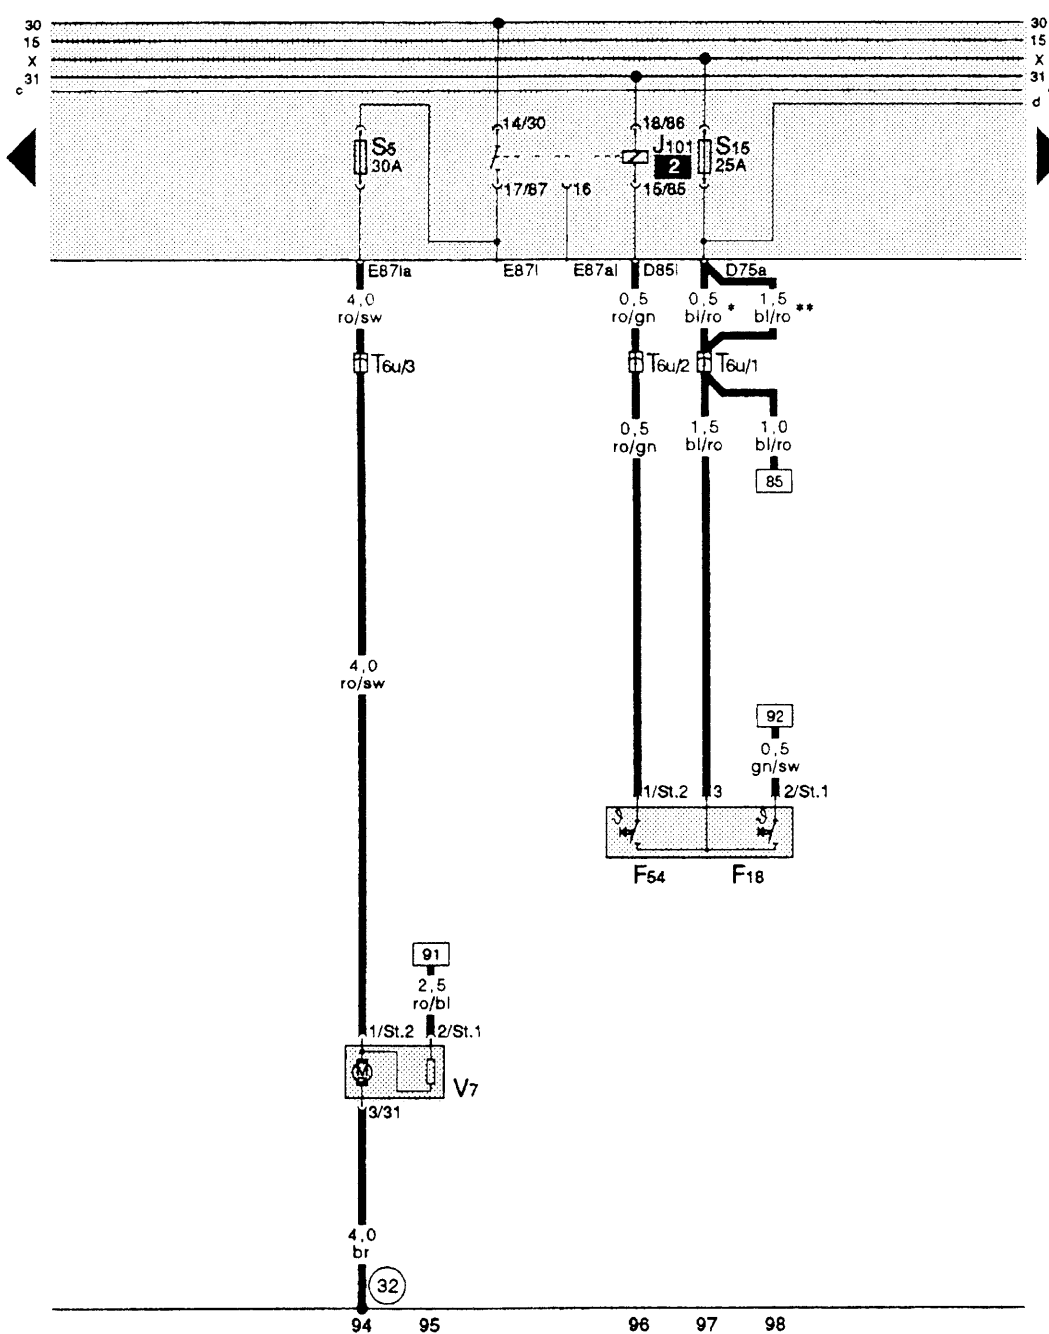


Wiring colours:

bl = blue
 br = brown
 ge = yellow
 gn = green
 gr = grey
 li = purple
 ro = red
 sw = black
 ws = white

- F 18 – Radiator fan thermo switch
 F 54 – Radiator fan thermo switch
 J 101 – Radiator fan 2nd stage relay
 T 6u – Connector 6 pin, green, behind dash panel, left
 V 7 – Radiator fan
 (32) – Earth point, behind dash panel, left
 * – Up until 7/93
 ** – As from 7/93


97-7997

Tail lights, brake lights, reversing lights, turn signals, rear fog lights

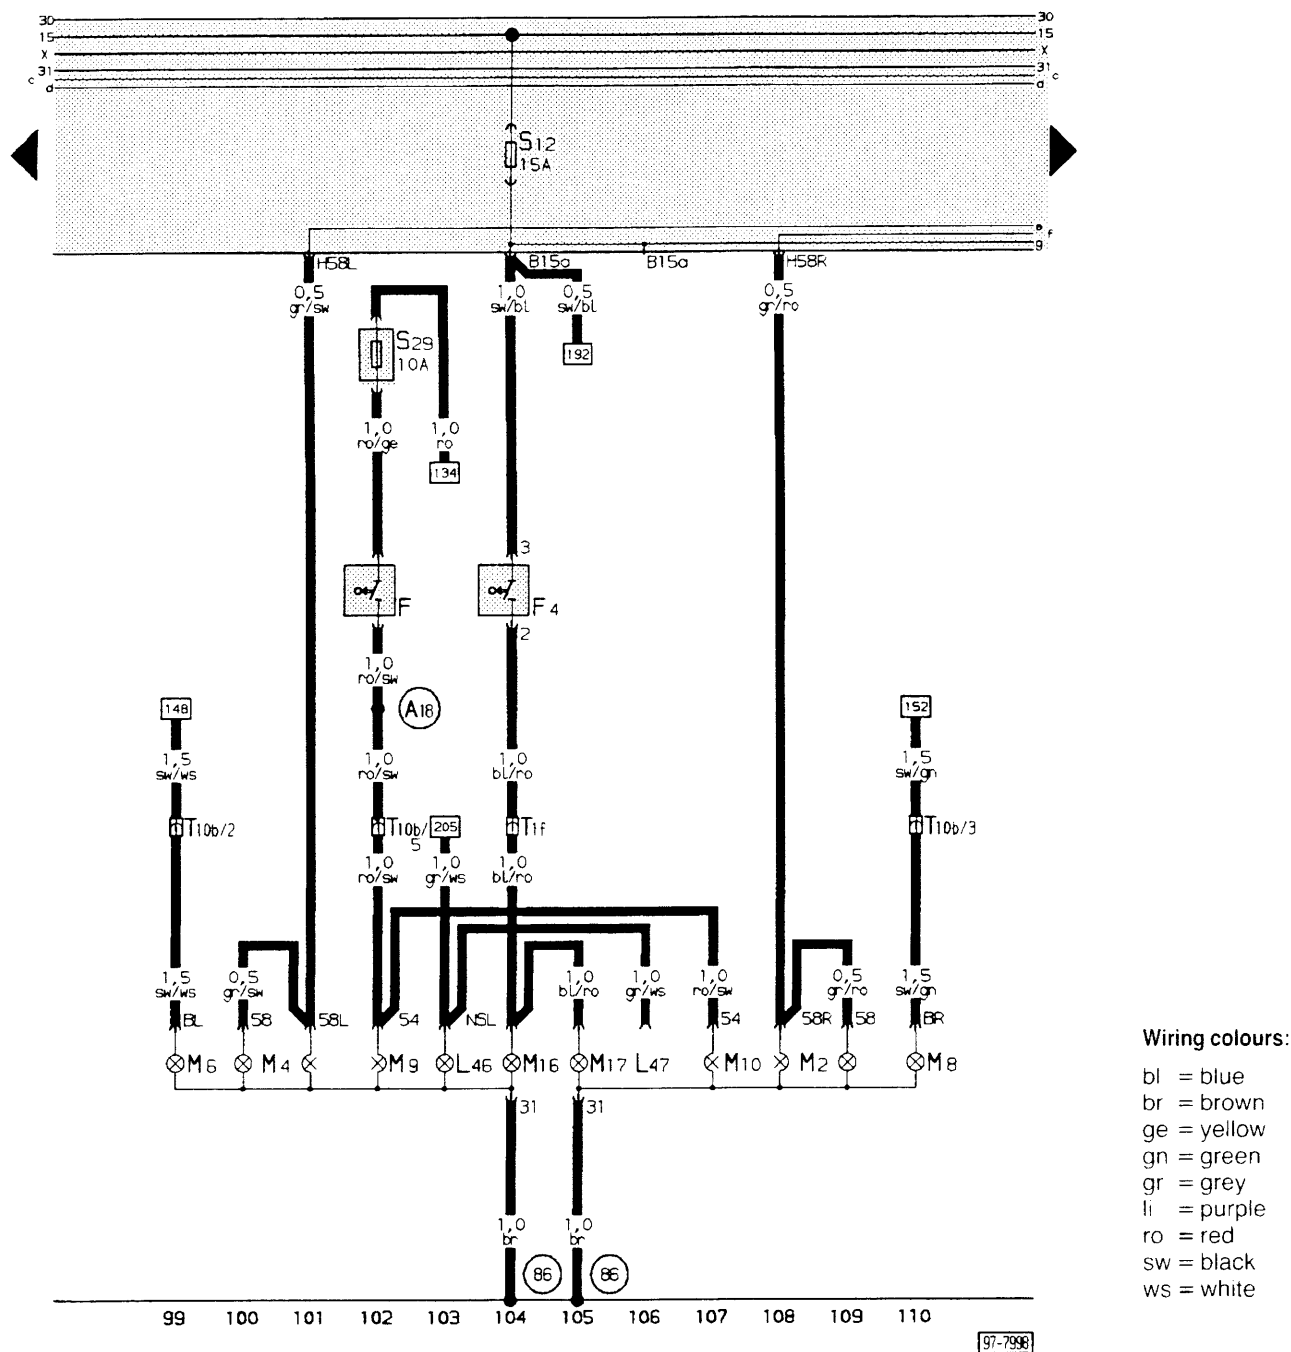

- F – Brake light switch
- F 4 – Reversing light switch
- L 46 – Rear fog light bulb left
- L 47 – Rear fog light bulb right
- M 2 – Tail light bulb, right
- M 4 – Tail light bulb, left
- M 6 – Rear left turn signal bulb
- M 8 – Rear right turn signal bulb
- M 9 – Brake light bulb, left
- M 10 – Brake light bulb, right
- M 16 – Reversing light bulb left
- M 17 – Reversing light bulb right
- S 29 – Separate fuse for brake lights (in additional fuse holder)
- T 1f – Connector single, black, behind dash panel, left
- T 10b – Connector 10 pin, brown, connection point in aux. relay carrier
- (86) – Earth connection – 1 –, in rear wiring loom
- (A18) – Connection (54), in dash panel wiring loom


Headlights, side lights, engine compartment light, luggage boot light, number plate light, glove box light

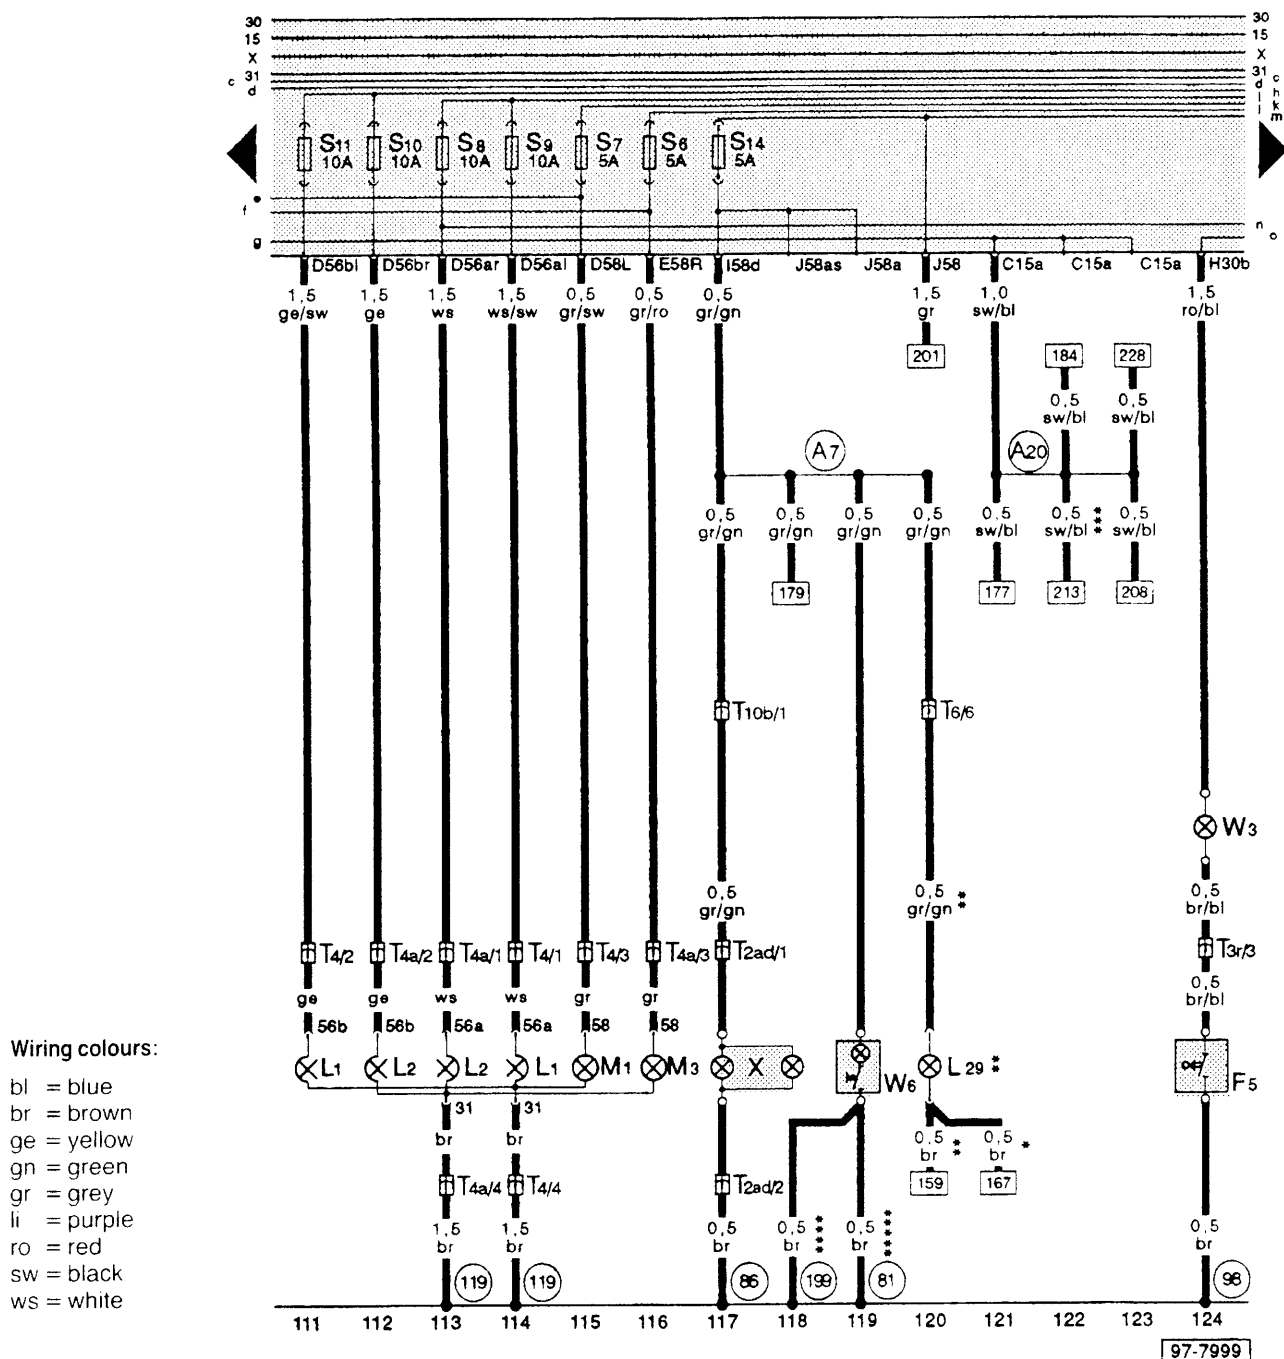

- F 5 – Luggage boot light switch
- L 1 – Twin filament bulb, left headlight
- L 2 – Twin filament bulb, right headlight
- L 29 – Engine compartment light bulb
- M 1 – Side light bulb, left
- M 3 – Side light bulb, right
- T 2ad – Connector 2 pin, on rear cross panel
- T 3r – Connector 3 pin, white, in luggage boot, left
- T 4 – Connector 4 pin, near headlight, left
- T 4a – Connector 4 pin, near headlight, right
- T 6 – Connector 6 pin, black, connector point in aux. relay carrier
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- W 3 – Luggage boot light
- W 6 – Glove box light
- X – Number plate light

- (81) – Earth connection – 1 –, in dash panel wiring loom
- (86) – Earth connection – 1 –, in rear wiring loom
- (98) – Earth connection, in tailgate wiring loom
- (119) – Earth connection – 1 –, in headlight wiring loom
- (19*) – Earth connection – 3 –, in dash panel wiring loom
- (A7) – Positive (+) connection (58 D1), in dash panel wiring loom
- (A20) – Connection (15a), in dash panel wiring loom
- * – Only with heated washer jets/headlight washer system, up until 7/93
- ** – Only with engine compartment light, up until 7/93
- *** – With front fog lights
- **** – As from 7/93
- ***** – Up until 7/93


Lighting switch, headlight dipper/flasher switch, parking light switch

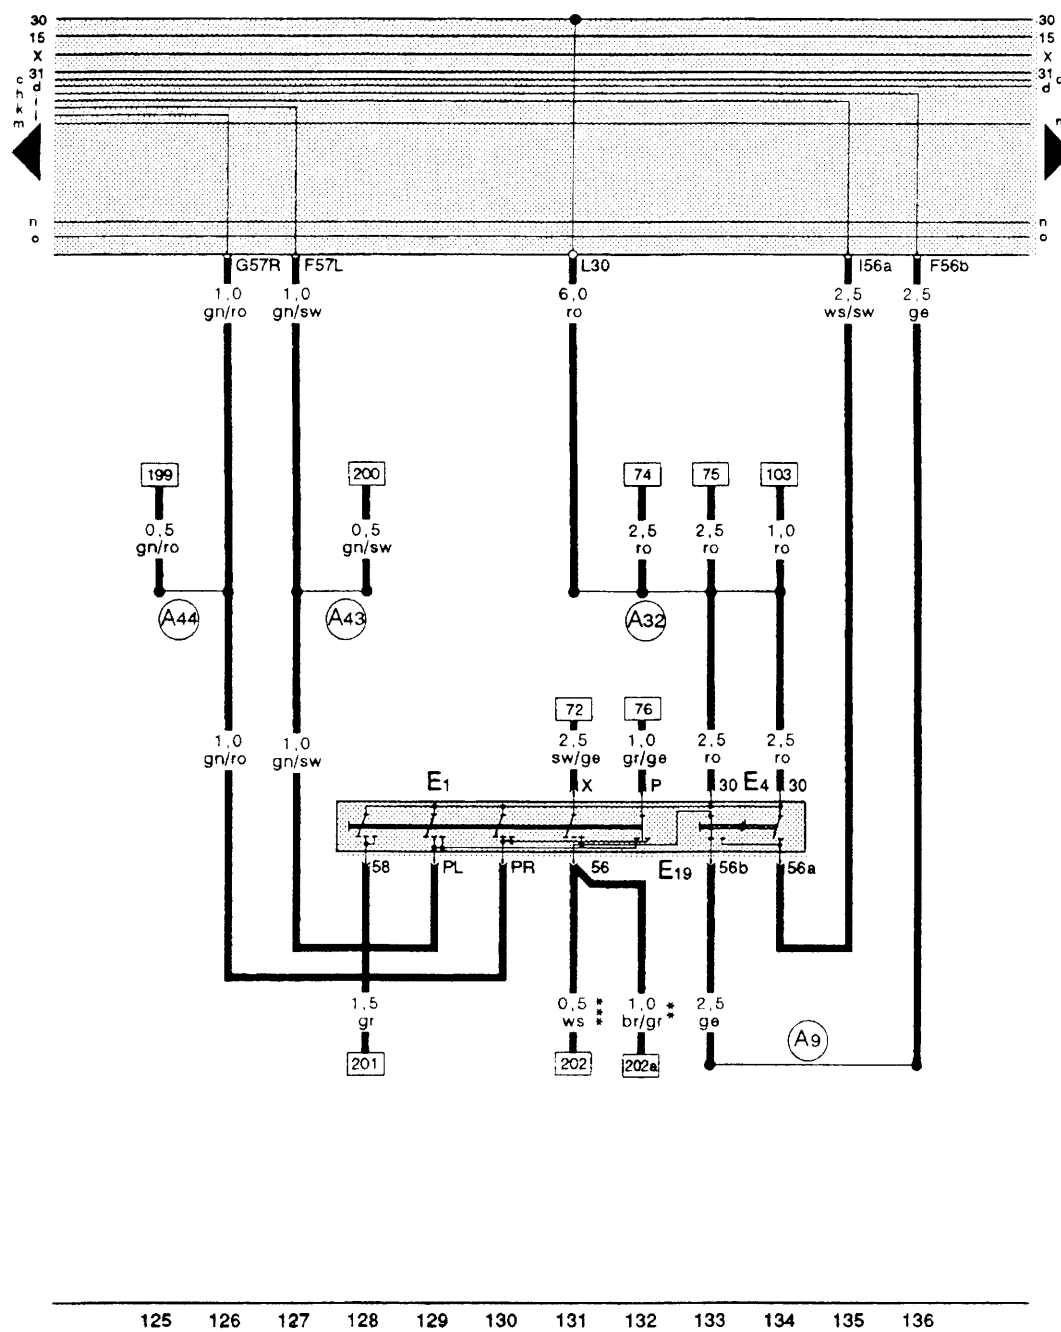

97-8000


- E 1 – Lighting switch
- E 4 – Headlight dipper/flasher switch
- E 19 – Parking light switch
- (A9) – Positive (+) connection (56 b). in dash panel wiring loom
- (A32) – Positive connection (30), in dash panel wiring loom
- (A43) – Connection (57L), in dash panel wiring loom
- (A44) – Connection (57r), in dash panel wiring loom
- ** – With no front fog lights
- *** – Only on versions for Italy

Interior light, door contact switch, illuminated vanity mirrors

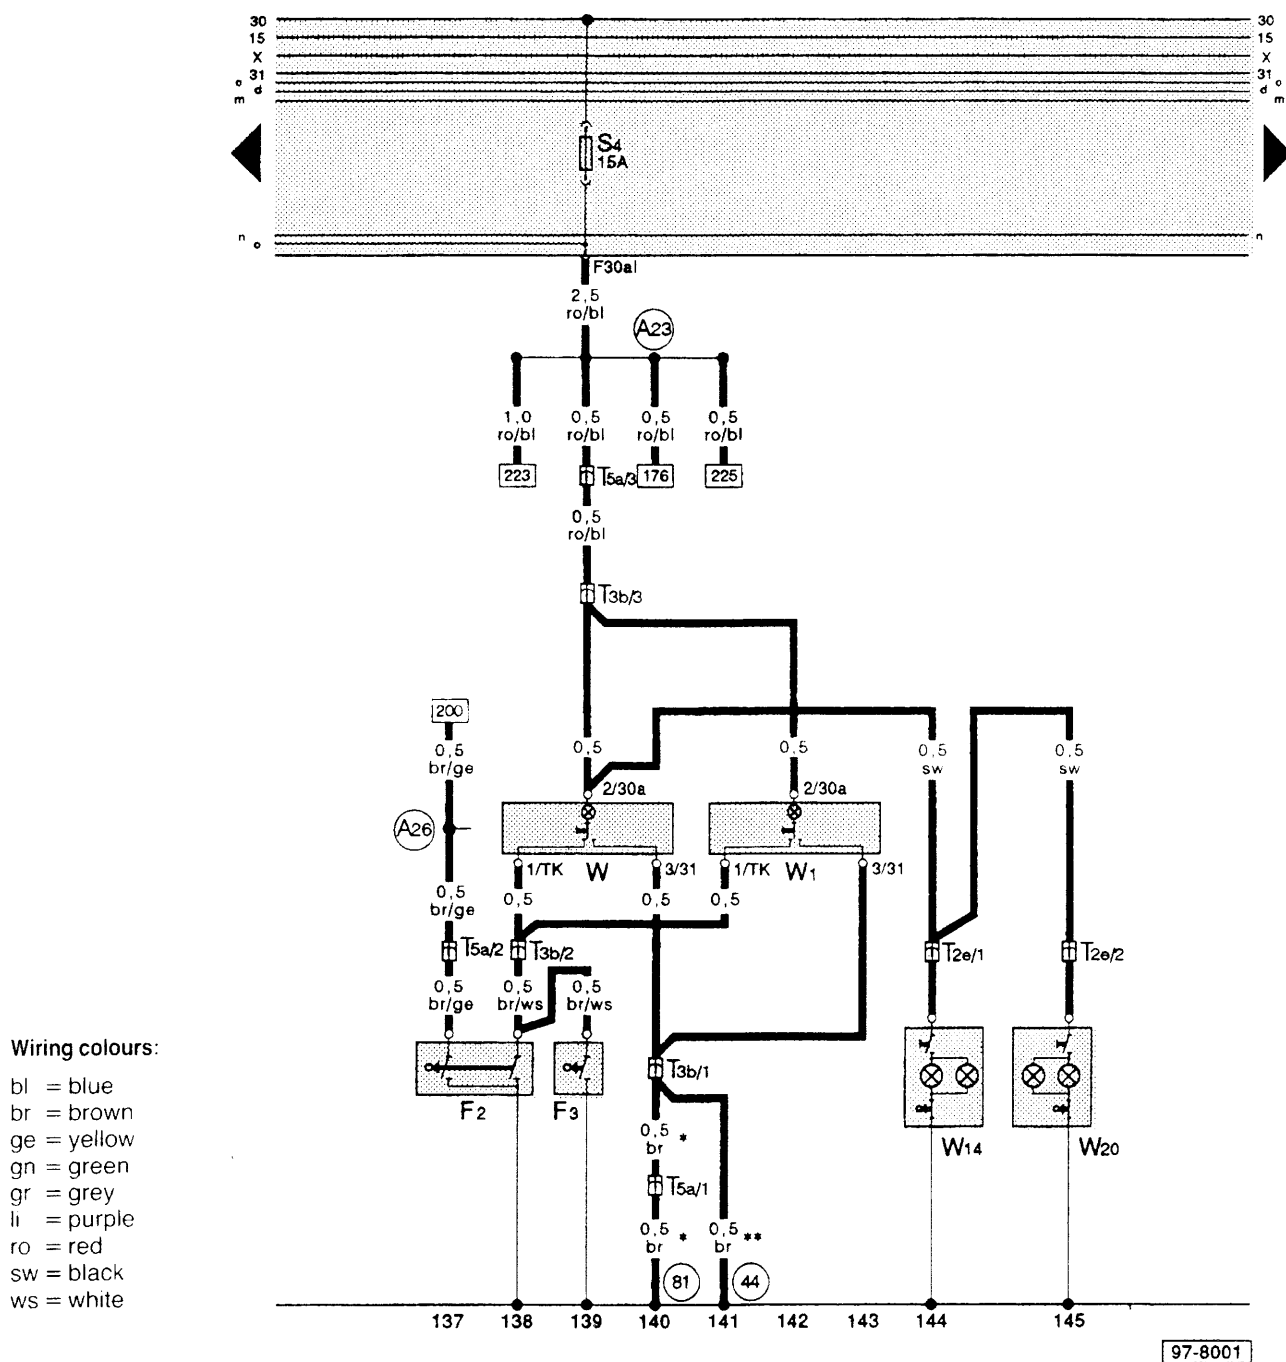


- F 2 – Front left door contact switch
- F 3 – Front right door contact switch
- T 2e – Connector 2 pin, near interior light
- T 3b – Connector 3 pin, green, behind dash panel, left
- T 5a – Connector 5 pin, brown, connection point in aux. relay carrier
- W – Interior light, front
- W 1 – Interior light, rear
- W 14 – Illuminated make-up mirror (passenger's side)
- W 20 – Illuminated make-up mirror (driver's side)
- (44) – Earth point, A pillar left, bottom
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (A23) – Connection (30 al), in dash panel wiring loom
- (A26) – Connection (door contact switch/driver's side), in dash panel wiring loom
- * – Up until 7/93
- ** – As from 7/93

Turn signals, emergency lights

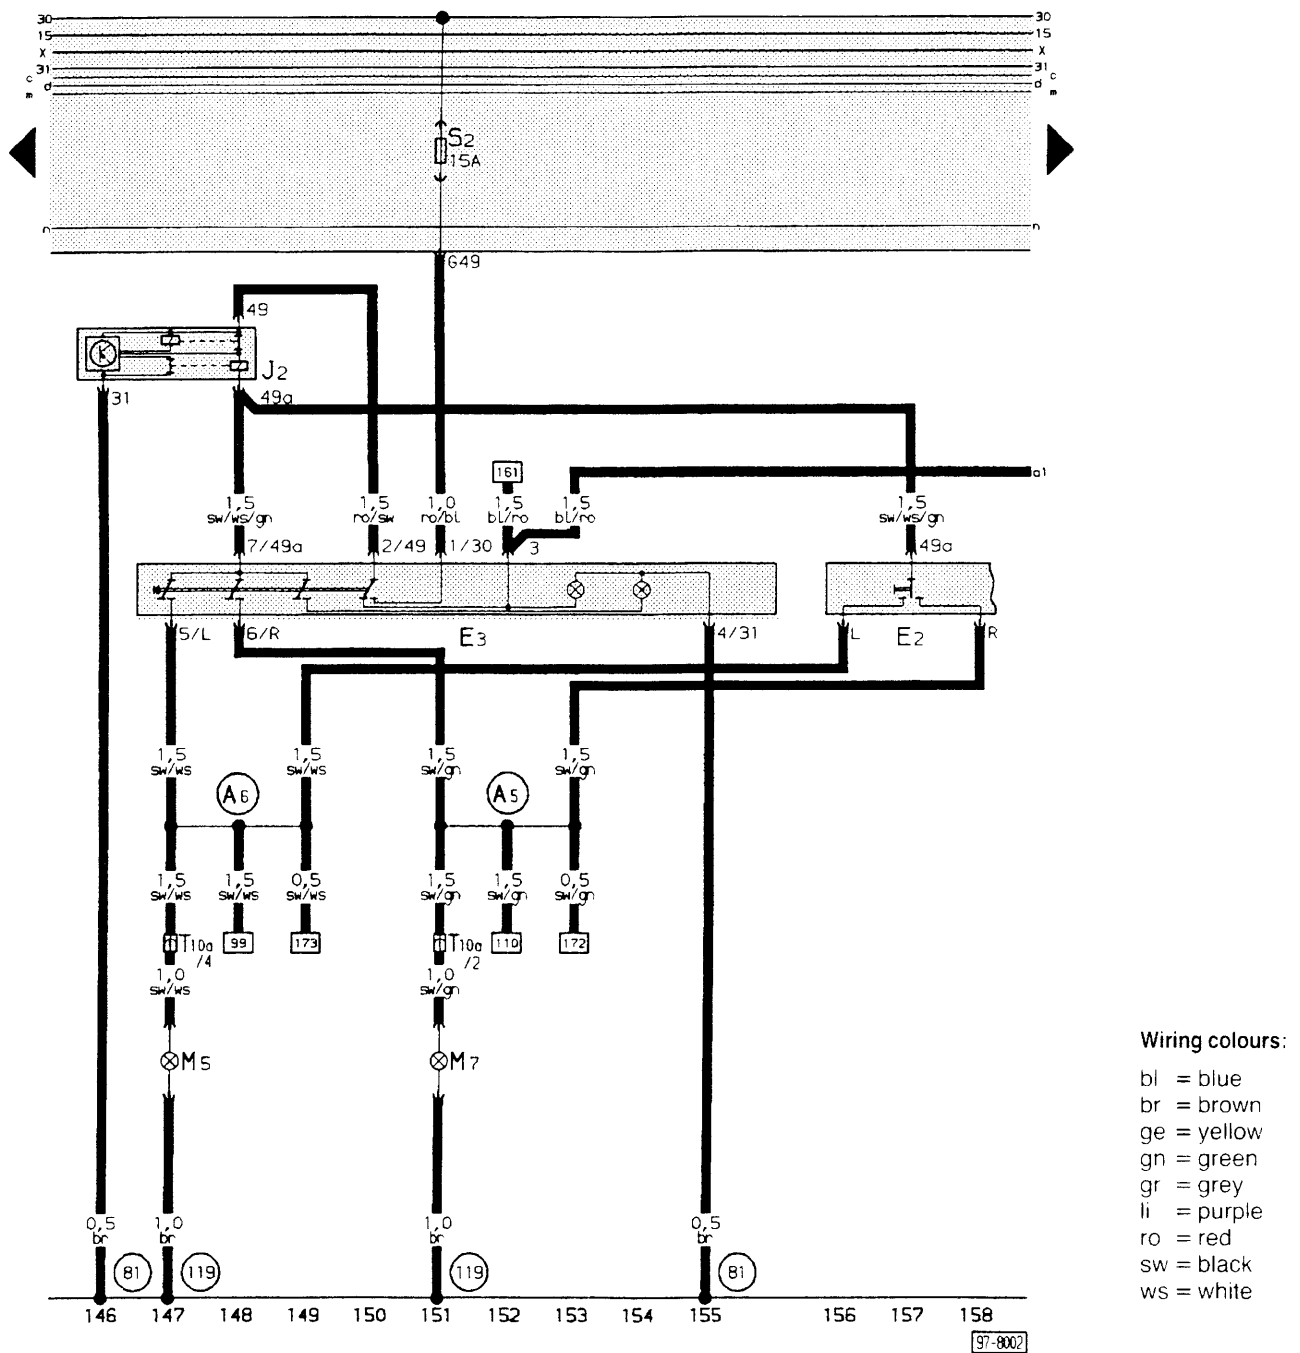


Windscreen wash/wipe system, headlight washer system, heated washer jets, horn

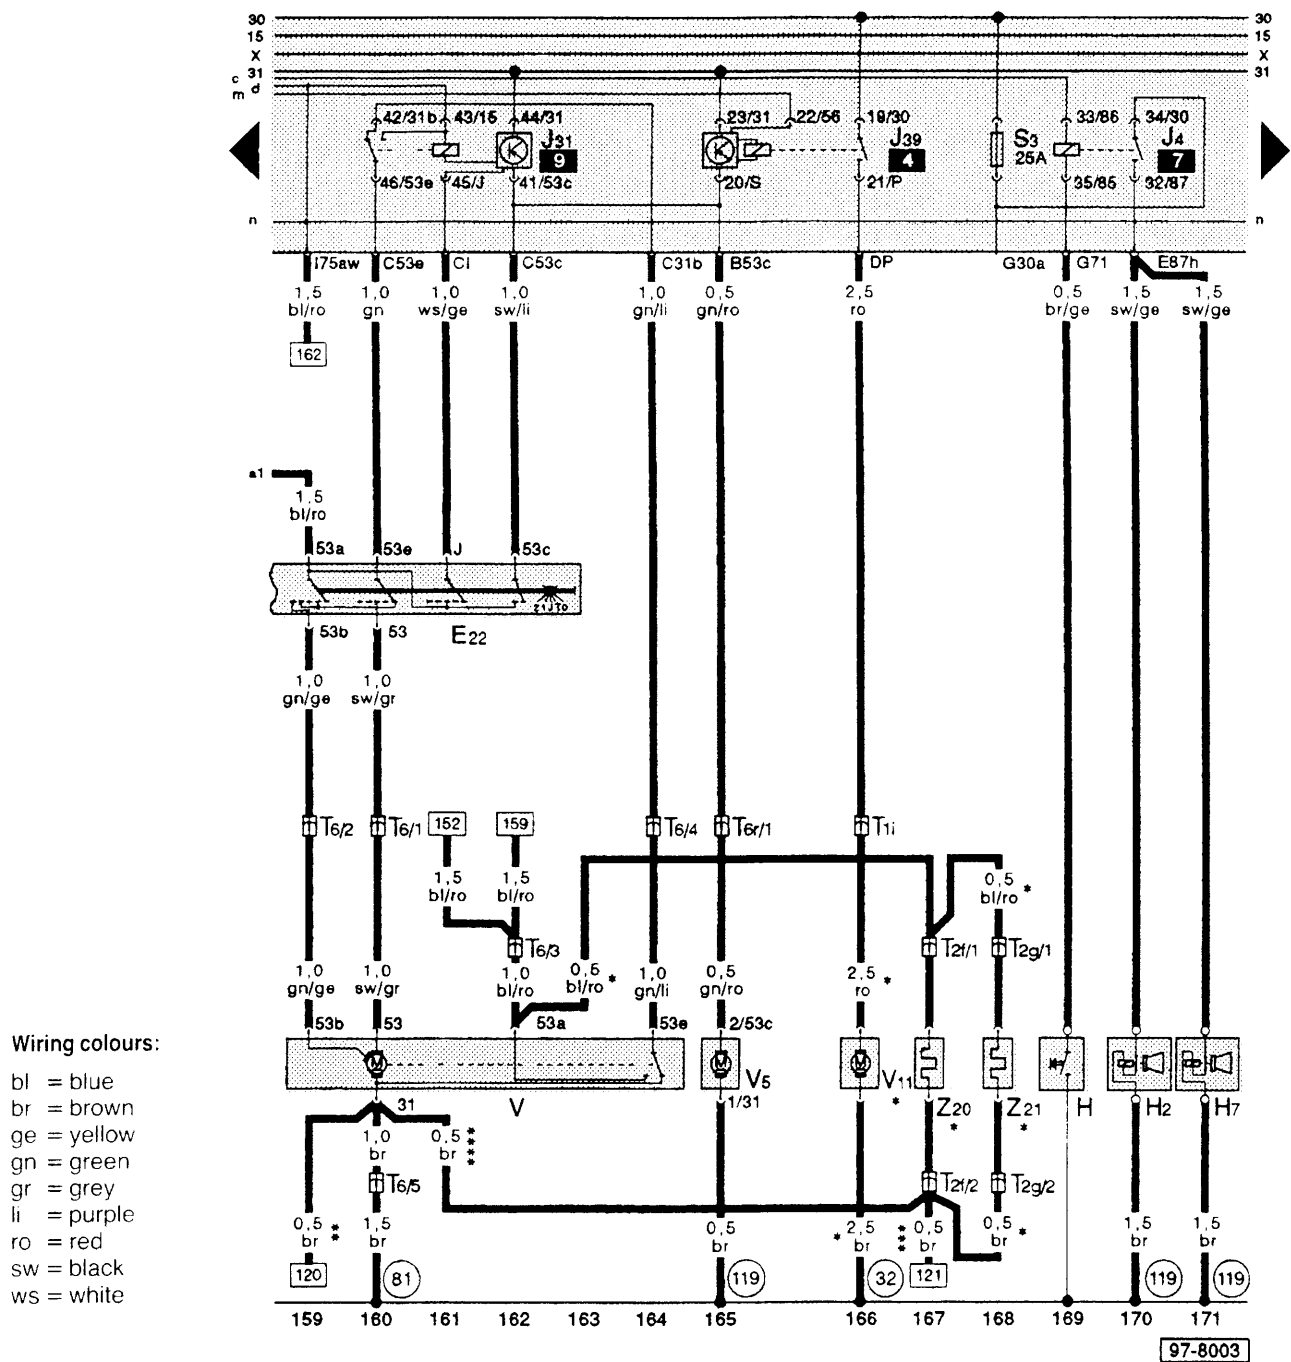

- E 22 – Intermittent wiper switch
- H – Horn plate
- H 2 – High tone horn
- H 7 – Low tone horn
- J 4 – Dual tone horn relay
- J 31 – Intermittent wash/wipe relay
- J 39 – Headlight washer system relay
- T 1i – Connector single, white, behind dash panel, left
- T 2f – Connector 2 pin, near washer jet
- T 2g – Connector 2 pin, near washer jet
- T 6 – Connector 6 pin, black, connection point in aux. relay carrier
- T 6r – Connector 6 pin, black, behind dash panel, left
- V – Windscreen wiper motor
- V 5 – Windscreen washer pump
- V 11 – Headlight washer pump


- Z 20 – Heater resistance left washer jet
- Z 21 – Heater resistance right washer jet
- ③② – Earth point, behind dash panel, left
- ⑧① – Earth connection – 1 – in dash panel wiring loom
- ①⑨ – Earth connection – 1 – in headlight wiring loom
- * – Only on versions with heated washer jets/headlight washer system
- ** – Only on versions with engine compartment light, up until 7/93
- *** – Only on versions with heated washer jets/headlight washer system, up until 7/93
- **** – Only on versions with heated washer jets/headlight washer system, as from 7/93

Dash panel insert, rev. counter, digital clock, lighting control

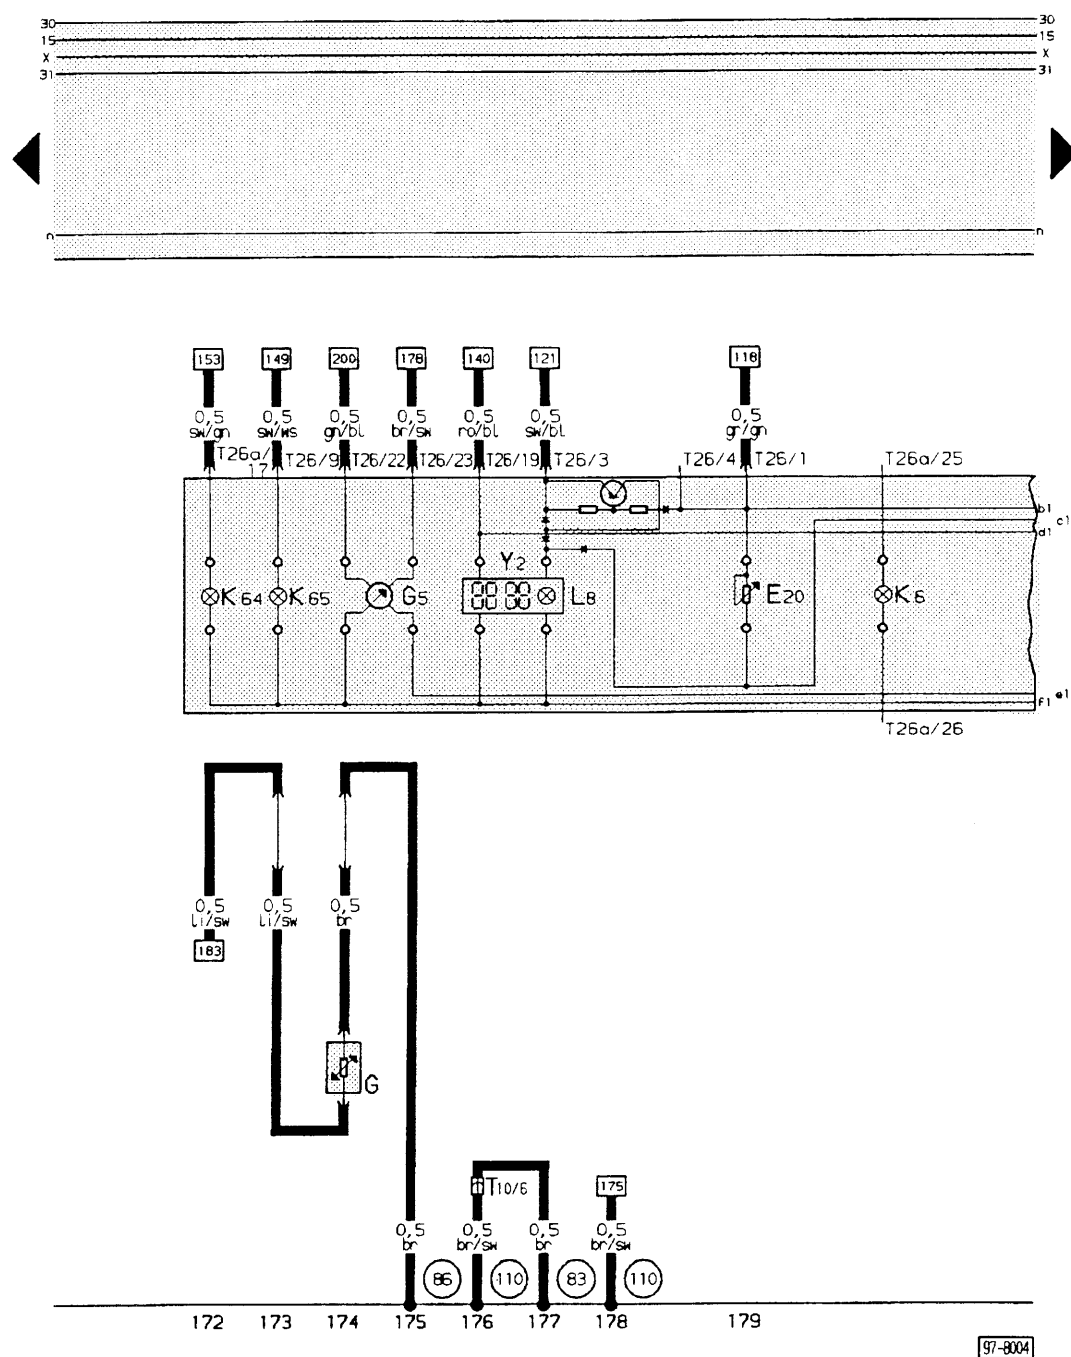


- E 20 – Switches and instruments – lighting control
- G – Fuel gauge sender
- G 5 – Rev. counter
- K 6 – Emergency light system warning lamp (not installed)
- K 64 – Emergency light and turn signal, right, warning lamp
- K 65 – Left turn signal warning lamp
- L 8 – Clock light bulb
- T 10 – Connector 10 pin, black, connection point in aux. relay carrier
- T 26 – Connector 26 pin, yellow, on dash panel insert
- T 26a – Connector 26 pin, blue, on dash panel insert
- Y 2 – Digital clock
- ⑧③ – Earth connection – 1 –, in front right wiring loom
- ⑧⑥ – Earth connection – 1 –, in rear wiring loom
- ⑪⑩ – Earth connection – 2 –, in dash panel wiring loom

Dash panel insert, speedometer, coolant monitor, voltage stabilizer

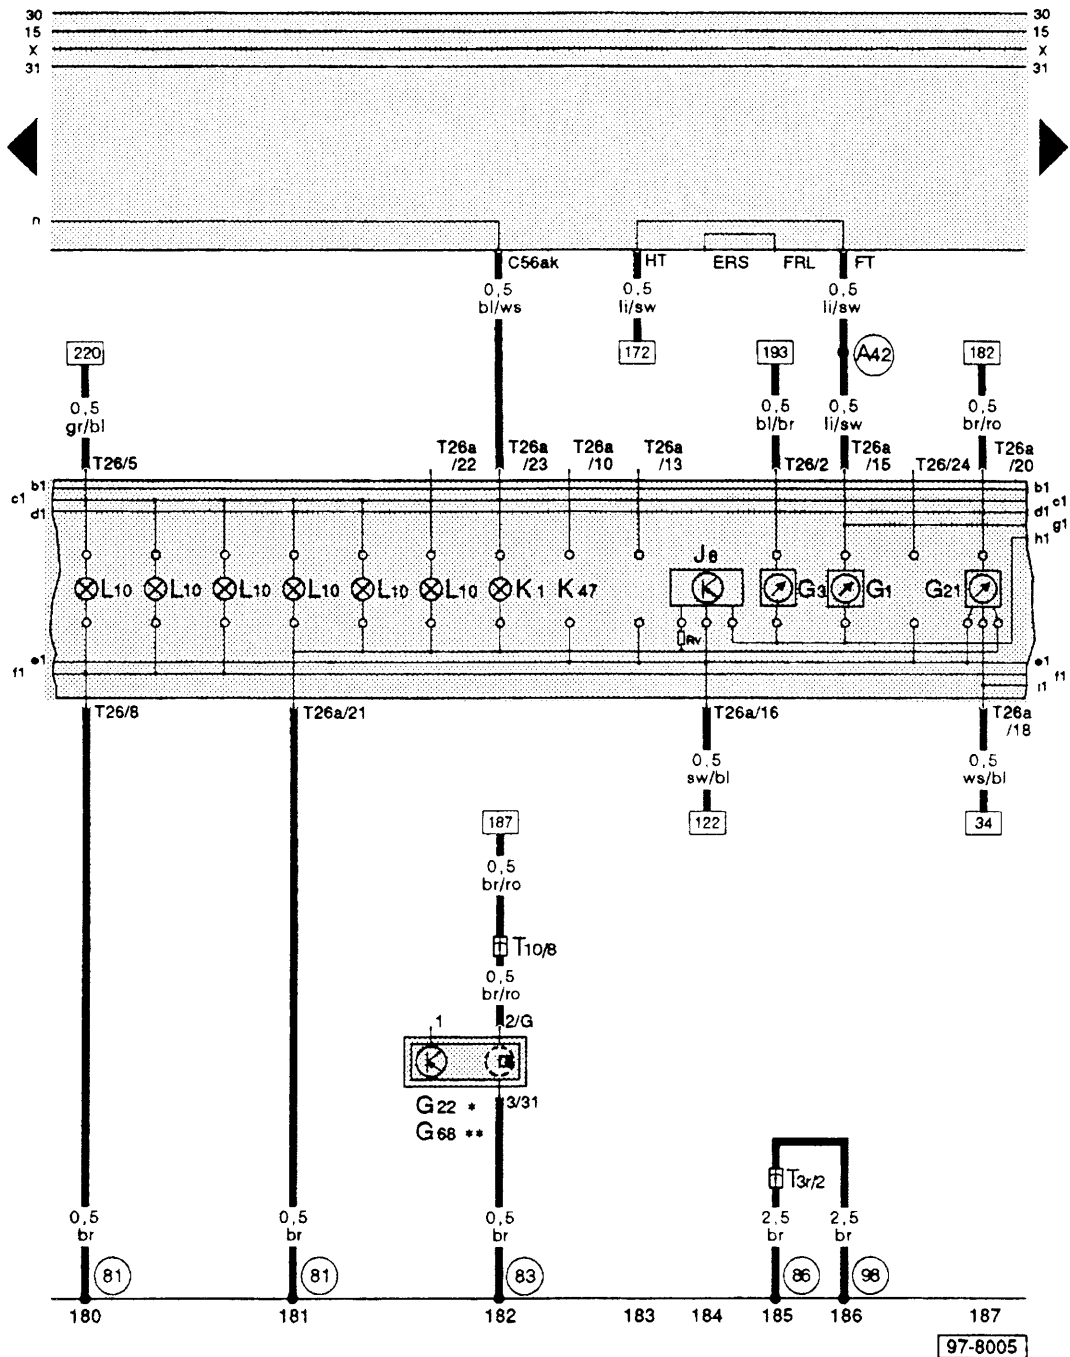

- | | | | |
|-------|---|-------|--|
| G 1 | – Fuel gauge | (86) | – Earth connection – 1 –, in rear wiring loom |
| G 3 | – Coolant temperature gauge | (98) | – Earth connection, in tailgate wiring loom |
| G 21 | – Speedometer | (A47) | – Connection (fuel gauge), in dash panel wiring loom |
| G 22 | – Speedometer sender (Hall sender, on gearbox) | | |
| G 68 | – Road speed sender (inductive sender, 2 connections) | * | – Up until 7/93 |
| J 6 | – Voltage stabilizer | ** | – As from 7/93 |
| K 1 | – Main beam warning lamp | | |
| K 47 | – ABS warning lamp | | |
| L 10 | – Dash panel insert light bulb | | |
| T 3r | – Connector 3 pin, white, in luggage boot, left | | |
| T 10 | – Connector 10 pin, black, connection point in aux. relay carrier | | |
| T 26 | – Connector 26 pin, yellow, on dash panel insert | | |
| T 26a | – Connector 26 pin, blue, on dash panel insert | | |
| (81) | – Earth connection – 1 –, in dash panel wiring loom | | |
| (83) | – Earth connection – 1 –, in front right wiring loom | | |


Dash panel insert, mini-check system, oil pressure warning lamp, coolant monitor, handbrake warning system

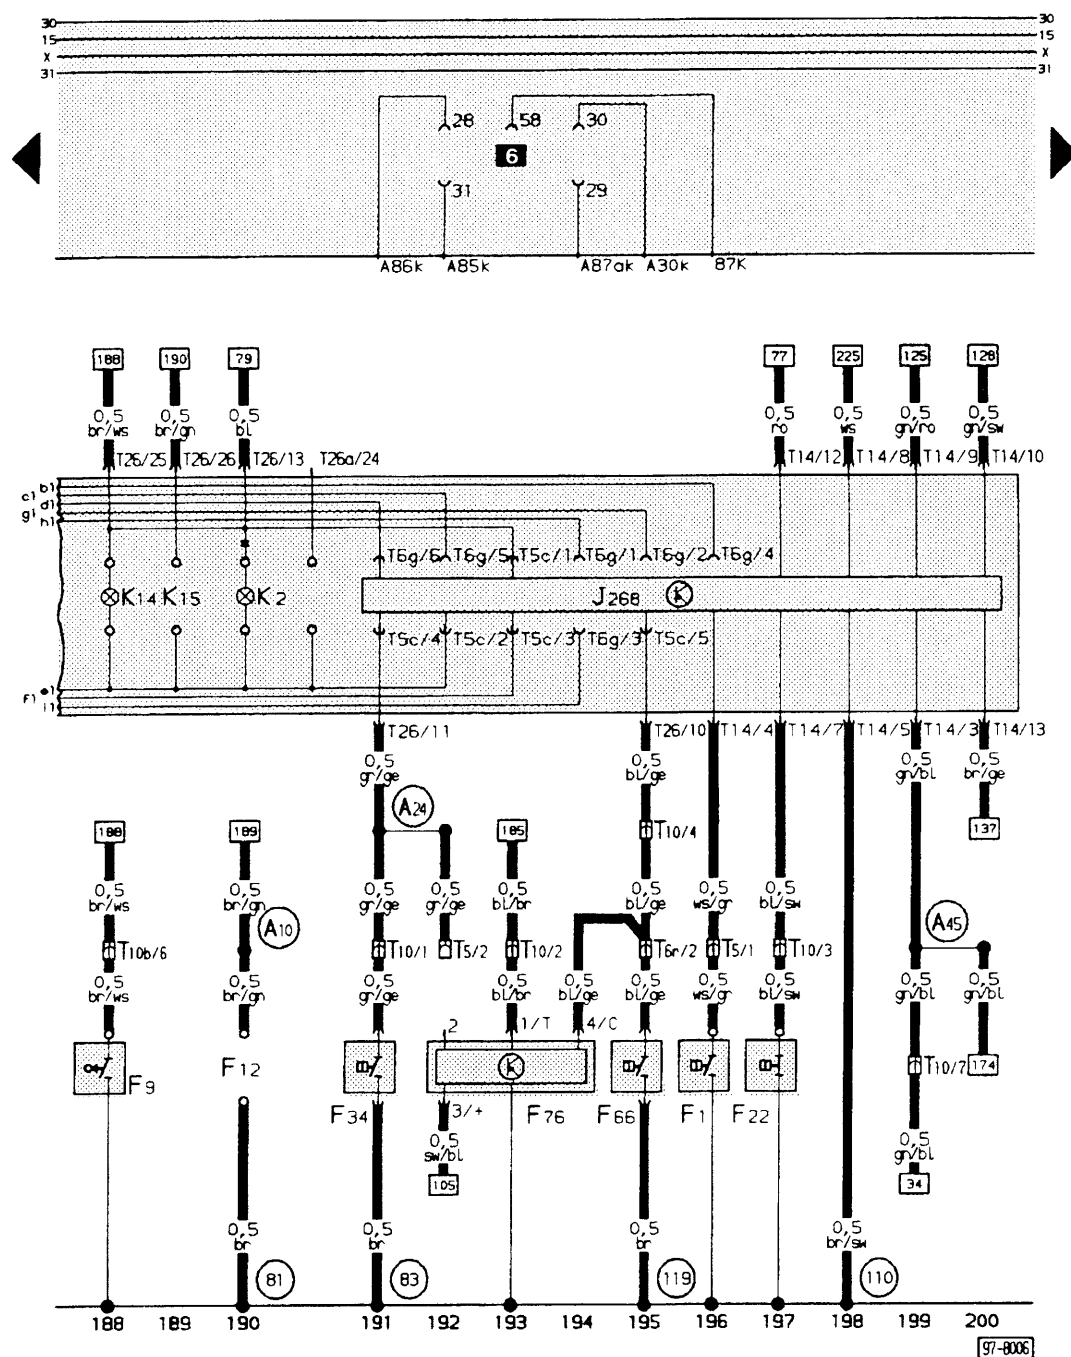

- F 1 – Oil pressure switch (1.8 bar)
- F 9 – Handbrake warning system switch
- F 12 – Cold start warning system contact
- F 22 – Oil pressure switch (0.3 bar)
- F 34 – Brake fluid level warning contact
- F 66 – Coolant shortage indicator switch
- F 76 – Electronic thermoswitch
- J 268 – Control unit for mini-check system
- K 2 – Alternator warning lamp
- K 14 – Handbrake warning lamp
- K 15 – Starting device warning lamp
- T 5 – Connector 5 pin, black, connection point in aux. relay carrier
- T 5c – Connector 5 pin, on dash panel insert
- T 6g – Connector 6 pin, on dash panel insert
- T 6r – Connector 6 pin, black, behind dash panel, left
- T 10 – Connector 10 pin, black, connector point in aux. relay carrier
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- T 14 – Connector 14 pin, white, on dash panel insert (mini-check system)

- T 26 – Connector 26 pin, yellow, on dash panel insert
- T 26a – Connector 26 pin, blue, on dash panel insert
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (83) – Earth connection – 1 –, in front right wiring loom
- (110) – Earth connection – 2 –, in dash panel wiring loom
- (119) – Earth connection – 1 –, in headlight wiring loom
- (AK) – Connection (glow plug control) in dash panel wiring loom
- (LM) – Connection (brake system monitoring), in dash panel wiring loom
- (AT) – Connection (engine speed signal), in dash panel wiring loom


Fog light switch, rear fog light switch, side light warning lamp

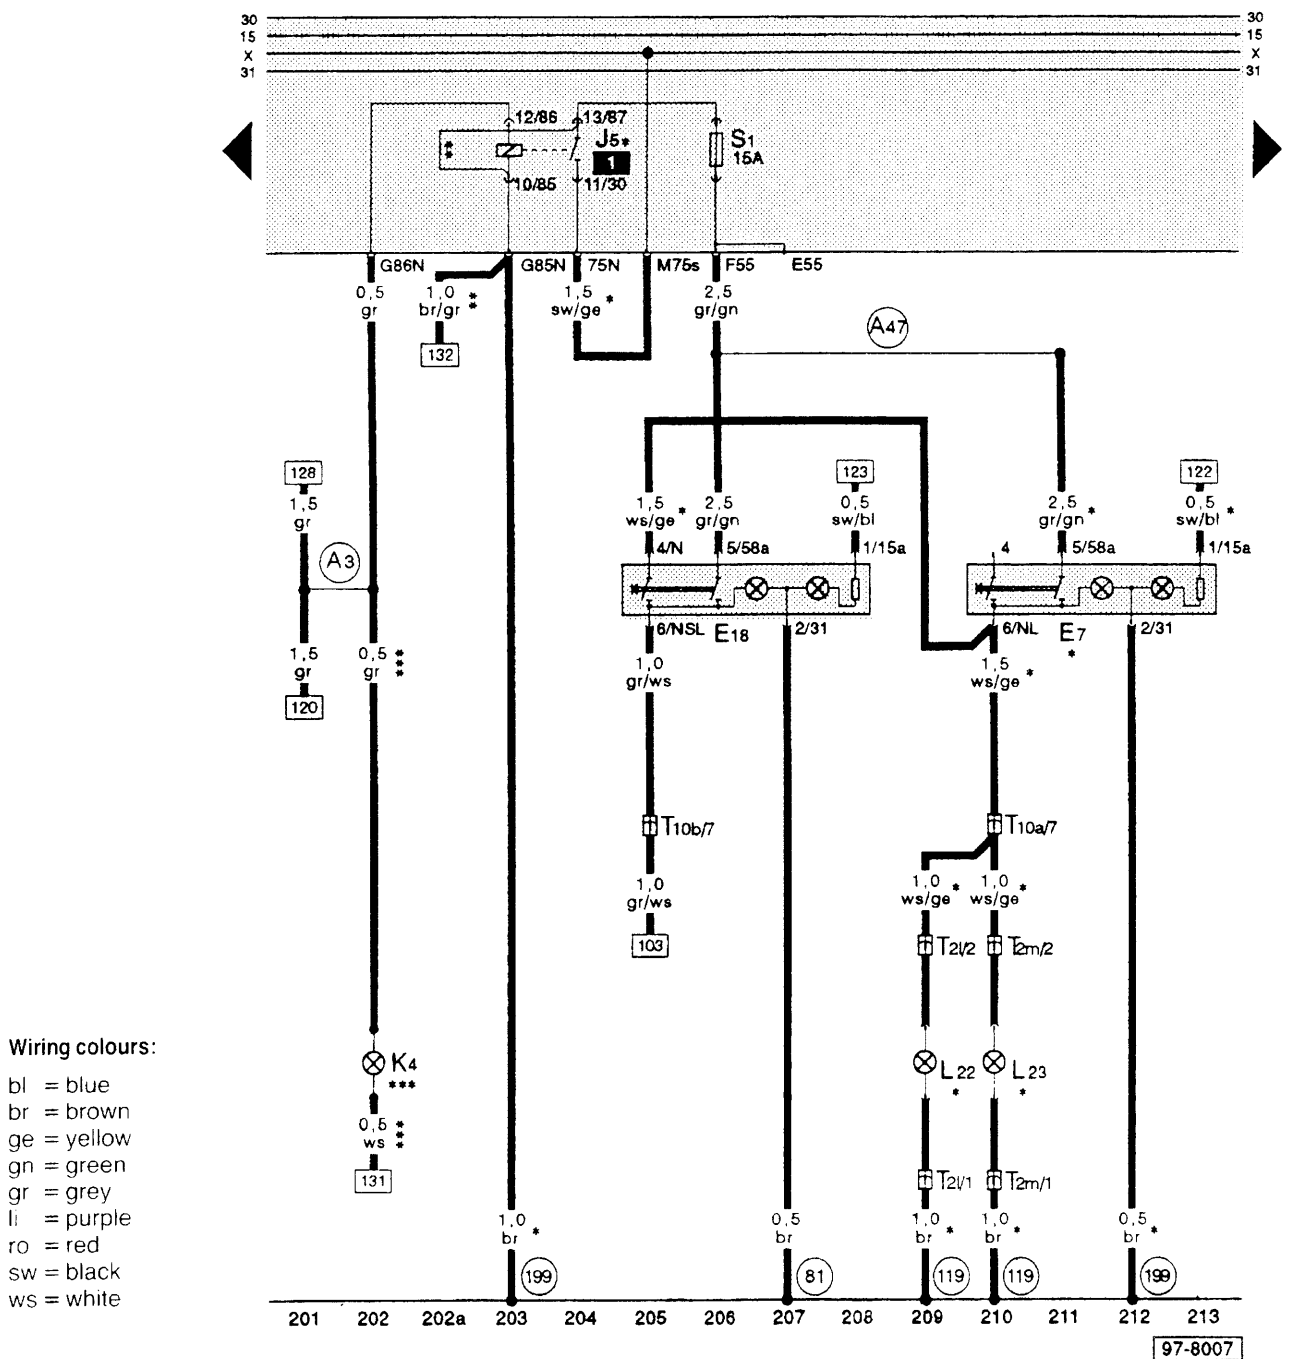

- E 7 – Fog light switch
- E 18 – Rear fog light switch
- J 5 – Fog light relay
- K 4 – Side light warning lamp
- L 22 – Front left fog light bulb
- L 23 – Fog light bulb, right
- T 2l – Connector 2 pin, black, in engine compartment, left
- T 2m – Connector 2 pin, black, in engine compartment, right
- T 10a – Connector 10 pin, yellow, connector point in aux. relay carrier
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier

- (81) – Earth connection – 1 –, in dash panel wiring loom
- (119) – Earth connection – 1 –, in headlight wiring loom
- (199) – Earth connection – 3 –, in dash panel wiring loom

Fresh air blower, cigarette lighter

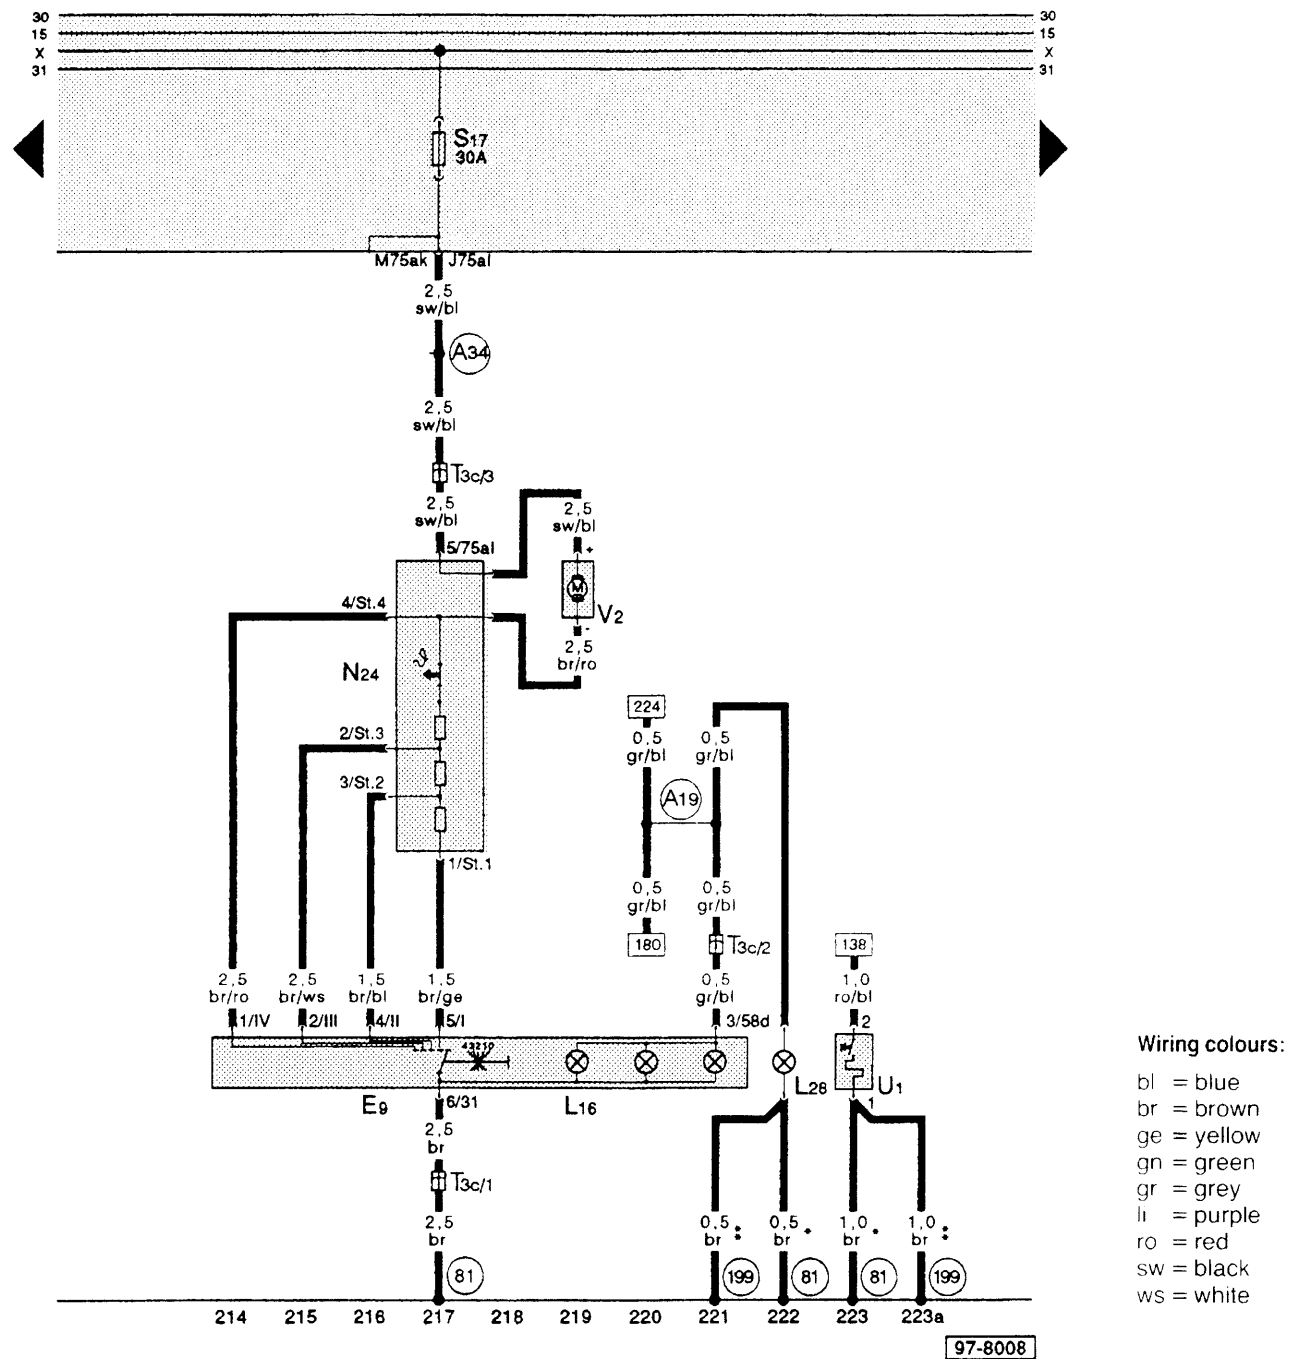

- E 9 – Fresh air blower switch
- L 16 – Fresh air controls light bulb
- L 28 – Cigarette lighter light bulb
- N 24 – Series resistance for fresh air blower with overheating fuse
- T 3c – Connector 3 pin, brown, behind dash panel, centre
- U 1 – Cigarette lighter
- V 2 – Fresh air blower
- (81) – Earth connection – 1 – in dash panel wiring loom
- (199) – Earth connection – 3 – in dash panel wiring loom
- (A19) – Connection (58d), in dash panel wiring loom
- (A34) – Connection (75 x), in dash panel wiring loom
- * – Up until 7/93
- ** – As from 7/93

Switch for heated rear window, preparation for radio

