


P722 Firmware Installation Instruction

Notice:


During the installation process, make sure you have the P722 device connected to a power outlet. If not, your player will not be able to work properly after the firmware setup. The screen will show:




Step 1: Double click on the Firmware_Setup_2005_Dec_28(Europe).exe file. Click the Install button to proceed.

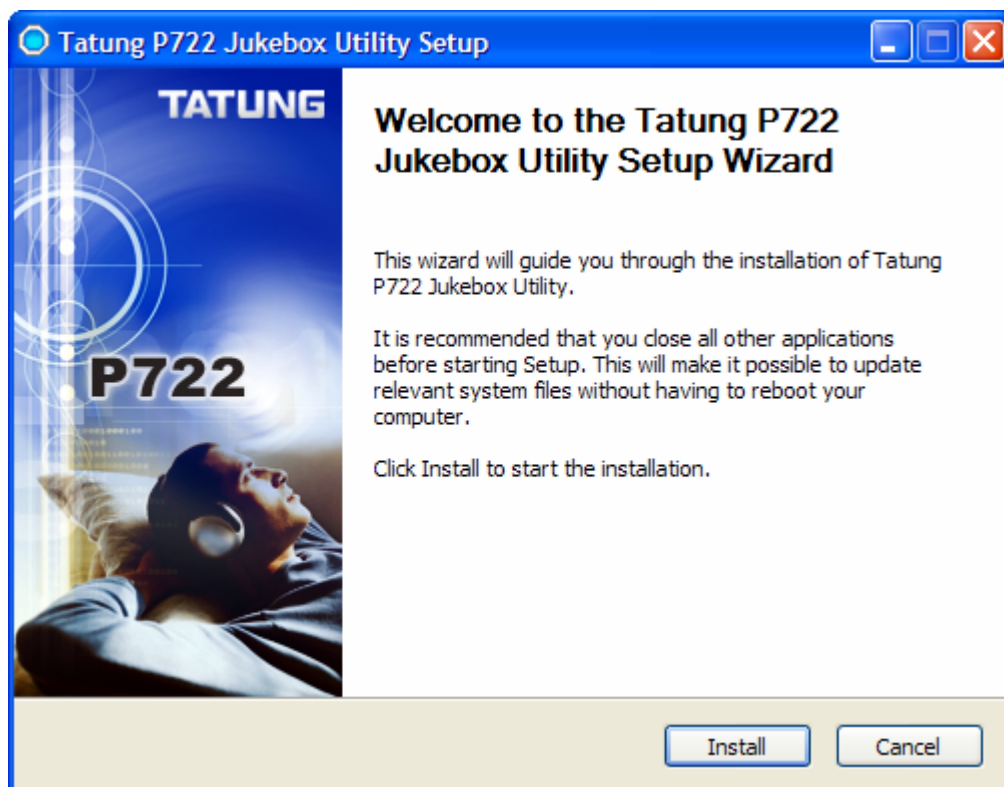

Step 2: Connect the P722 device to the computer via USB and then turn on the device.

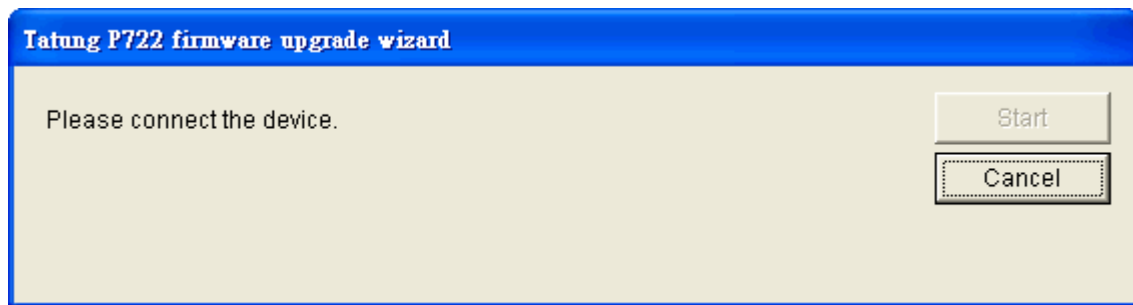


Step 3: Once the device is connected, click the Next button to proceed.

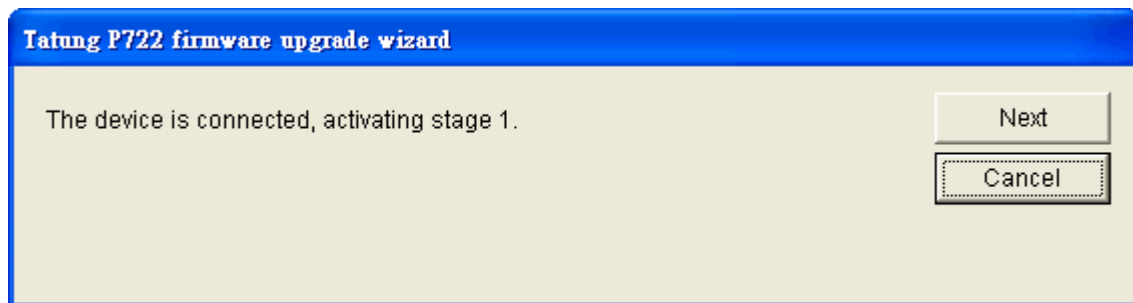


Step 4:


- Wait for the program to install the firmware; it may take a few seconds.
- When you are prompted to "Safely To Remove Hardware", disconnect the device from the computer and wait for it to restart.
(Note: Do not turn off or reset the device)
- At this point, please note that **THE FIRMWARE UPDATE IS NOT COMPLETED YET**, you need to reconnect the device back to the computer.

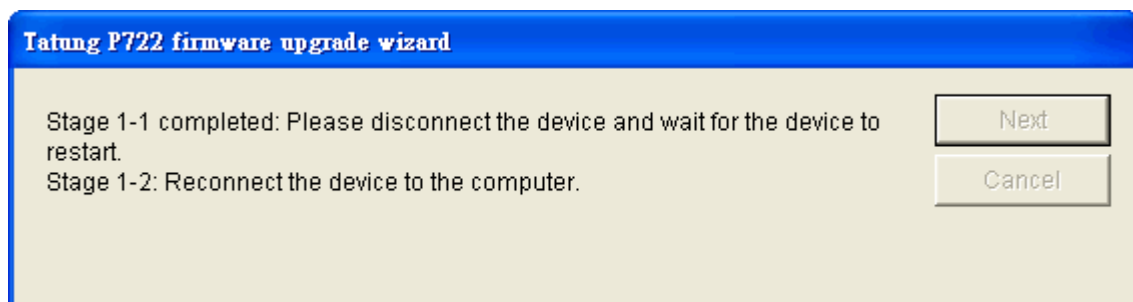

Step 5: Once the device is connected, click the Next button to proceed.

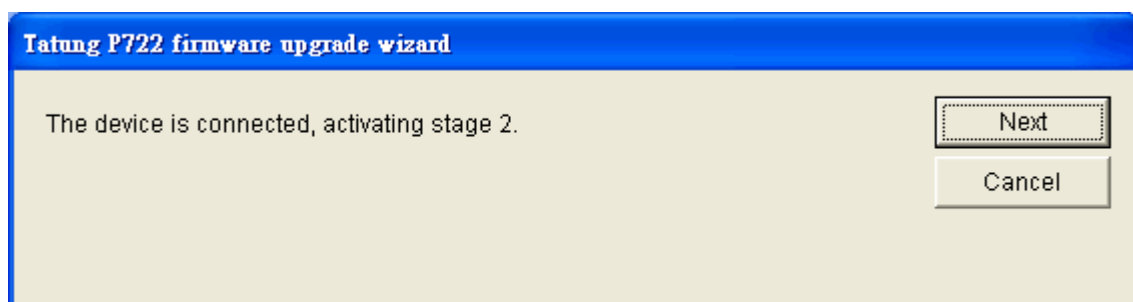

Step 6: When the installation is completed, click the Complete button and remove the P722 device from the computer.

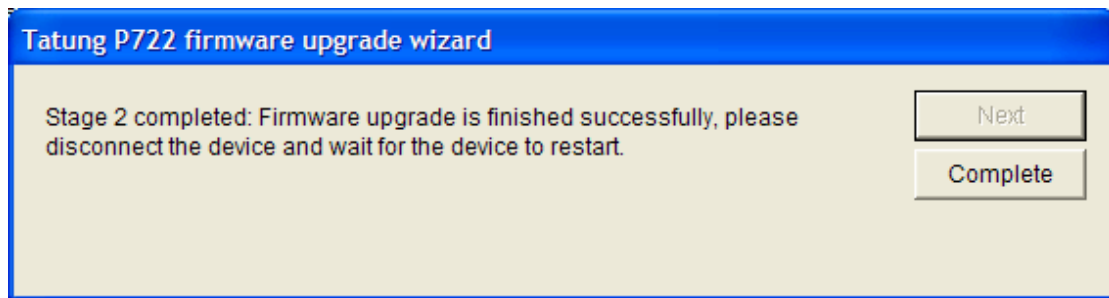

Note:

If you happen to delete the firmware setup file, you can also download it from the website at <http://support.eliohome.com>, on the P722 download page.