 


Auto Provision

To configure the IP phone please find the below steps:

- It is recommended that the IP phone be reset to factory settings to erase the old configuration.
- In Yealink IP phone go to menu -> settings->advance settings->reset configuration
- Login to the online portal, hover the cursor over **PHONE SYSTEM** and click on “**List of extensions**”.

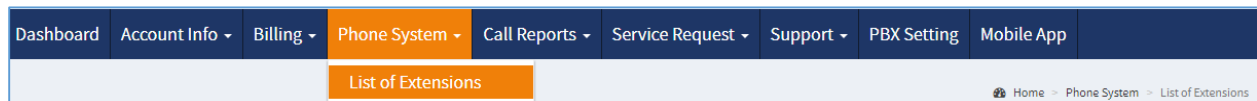

- Then, select the desired Extension and click on **ACTION** and select **AUTO PROVISION** from the drop down as shown below.

Ext/ Destination	Display Name	Action
101	101	Action
102	102	Action
103	103	<ul style="list-style-type: none"> Extension Setting Follow Me Setting Voicemail Settings Update Caller ID Voicemail List Call Reports Delete Auto Provision SMS Dashboard
104	104	
105	105	

- Once you click on Auto Provision, enter the required details (Device Name, Device Model & Phone MAC Address) and click on update.

Auto Provision
 ✕


Phone Device :

Phone Models :

Extension Number :

Phone MAC Addrss :

- Access the device configuration page by entering the device IP address in the browser (Eg: 192.168.X.XXX) and log in using credentials.
- Default username **admin** and password will be an **admin** for the Yealink device.

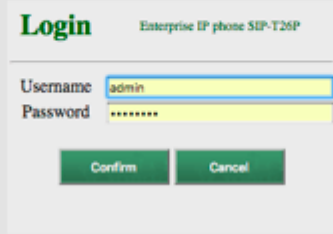


Login Enterprise IP phone SIP-T26P

Username:

Password:

- After login, select settings-> Auto provision, browse the cursor over the **Server URL**, and enter (http://XXX.vitelglobal.com) in the **server URL path field** as shown below.

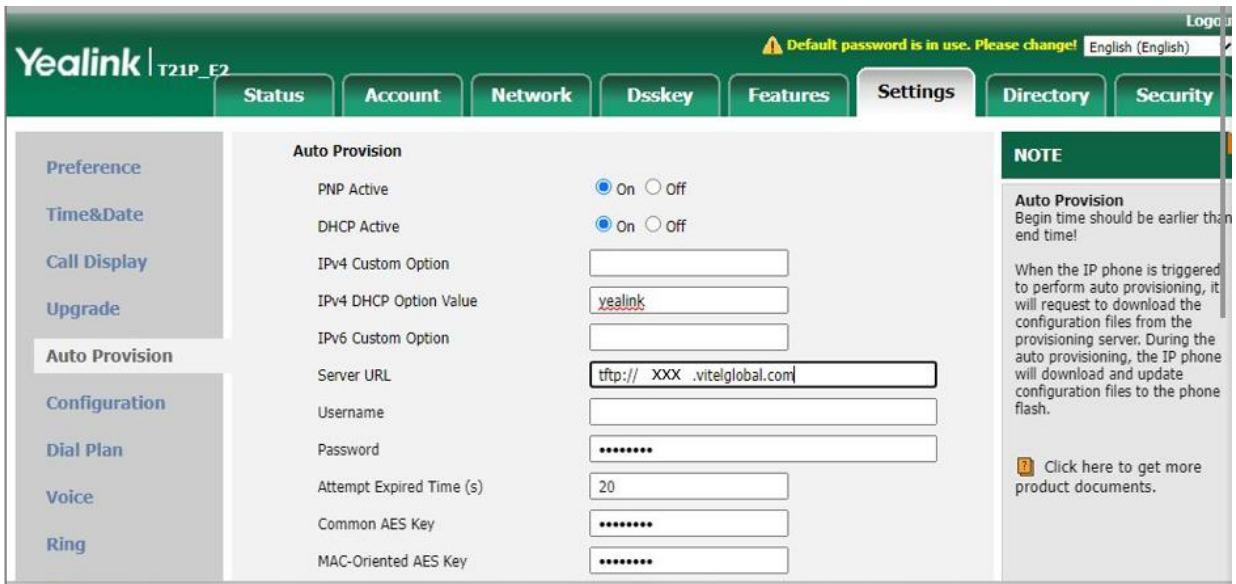

Yealink T21P_F2

Default password is in use. Please change! English (English)

Settings

Auto Provision

PNP Active ☒ On ☐ Off

DHCP Active ☒ On ☐ Off

IPv4 Custom Option

IPv4 DHCP Option Value

IPv6 Custom Option

Server URL

Username

Password

Attempt Expired Time (s)

Common AES Key

MAC-Oriented AES Key

NOTE


Auto Provision
Begin time should be earlier than end time!

When the IP phone is triggered to perform auto provisioning, it will request to download the configuration files from the provisioning server. During the auto provisioning, the IP phone will download and update configuration files to the phone flash.

Click here to get more product documents.

Configuration Dial Plan Voice Ring Tones Softkey Layout TR069 Voice Monitoring SIP Power Saving	Username	<input type="text"/>
	Password	<input type="password"/>
	Attempt Expired Time (s)	<input type="text" value="20"/>
	Common AES Key	<input type="password"/>
	MAC-Oriented AES Key	<input type="password"/>
	Zero Active	<input type="text" value="Disabled"/>
	Wait Time (1~100s)	<input type="text" value="5"/>
	Power On	<input checked="" type="radio"/> On <input type="radio"/> Off
	Repeatedly	<input type="radio"/> On <input checked="" type="radio"/> Off
	Interval (Minutes)	<input type="text" value="1440"/>
	Weekly	<input type="radio"/> On <input checked="" type="radio"/> Off
	Weekly Upgrade Interval (0~12week)	<input type="text" value="0"/>
	Inactivity Time Expire (0~120min)	<input type="text" value="0"/>
	Time	<input type="text" value="00"/> : <input type="text" value="00"/> -- <input type="text" value="00"/> : <input type="text" value="00"/>
	Day of Week	<input checked="" type="checkbox"/> Sunday <input checked="" type="checkbox"/> Monday <input checked="" type="checkbox"/> Tuesday <input checked="" type="checkbox"/> Wednesday <input checked="" type="checkbox"/> Thursday <input checked="" type="checkbox"/> Friday <input checked="" type="checkbox"/> Saturday
Flexible Auto Provision	<input type="radio"/> On <input checked="" type="radio"/> Off	
Flexible Interval Days	<input type="text" value="30"/>	
Flexible Time	<input type="text" value="02"/> : <input type="text" value="00"/> -- <input type="text" value=""/> : <input type="text" value=""/>	
<input type="button" value="Auto Provision Now"/>		
<input type="button" value="Confirm"/> <input type="button" value="Cancel"/>		

Configuration files to the phone flash.

 Click here to get more product documents.

- After making the above changes, click on Confirm and Auto Provision Now.

*****END*****