

# Table of Content

## Remote Control

- Remote Control Functions

## controlling the TV with your voice

- Pairing the TV to the Remote Control
- Using the Far-Field Voice Control

Built-in TV Voice Control

Hands-free TV Voice Control Gear

## Menu Setup

- Connecting to the Network
- Connecting to the Bluetooth Device
- Picture, Sound and System Settings

## Launcher

- Using the Apps
- Using the Signal Source
- Using T-Cast, TV-Guard and T-Channel
- Personalizing HOME SCREEN
- Using the Game Mode

# Remote Control

## Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control(s) supplied with your set can be used to navigate through the menus and to configure all the general settings.

- Figures and illustrations in this operation manual are provided for reference only and may differ from actual product appearance.
- The remote control type may be changed without notice, please refer to the remote control attached with your TV.
- Certain function may not be available for some models.

## RC802V remote control- AP



- To display the Settings menu.
- Standby / quit standby.
- To access the Smart TV homepage.
- To display the Option menu.
- To select input source.
- P+/-** To change channels.
- To control the volume.
- OK** To confirm an entry or selection. This button is also used to display the channel list in TV mode.
- To return to the previous menu or quit an app.
- To turn on the voice function. (Available only when the network connection works normally.)
- To pop up the virtual remote control keyboard when available.
- NETFLIX** To access Netflix. (Not available for some models.)
- To access T recommended apps.
- ▲/▼/◀/▶** Navigation direction buttons. The ▲/▼ buttons are also used to change channels in TV mode.

- Certain function may be accessed from the virtual remote control keyboard only, please press button on the remote to display it and operate accordingly.

- Note: All operations are completed on the remote control.

## How to Use the Remote Control

 
 
When using button for the first time, you will be prompted to pair the remote with the TV. Please follow the on-screen guide for pairing instructions.


- Keep the remote control and TV in 1 meter, press OK and button on the remote at the same time. You can use button after activating successfully.
- This voice search function is only available for content search from certain apps.
- Set languages in the settings menu under smart TV homepage to your local language or official language to enhance voice search successfully.



# Controlling the TV with Your Voice

## Pairing the TV to the Remote Control

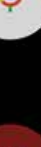Press  button to activate pairing, then press and hold OK and  Homepage button at the same time to start pairing the remote control and TV.

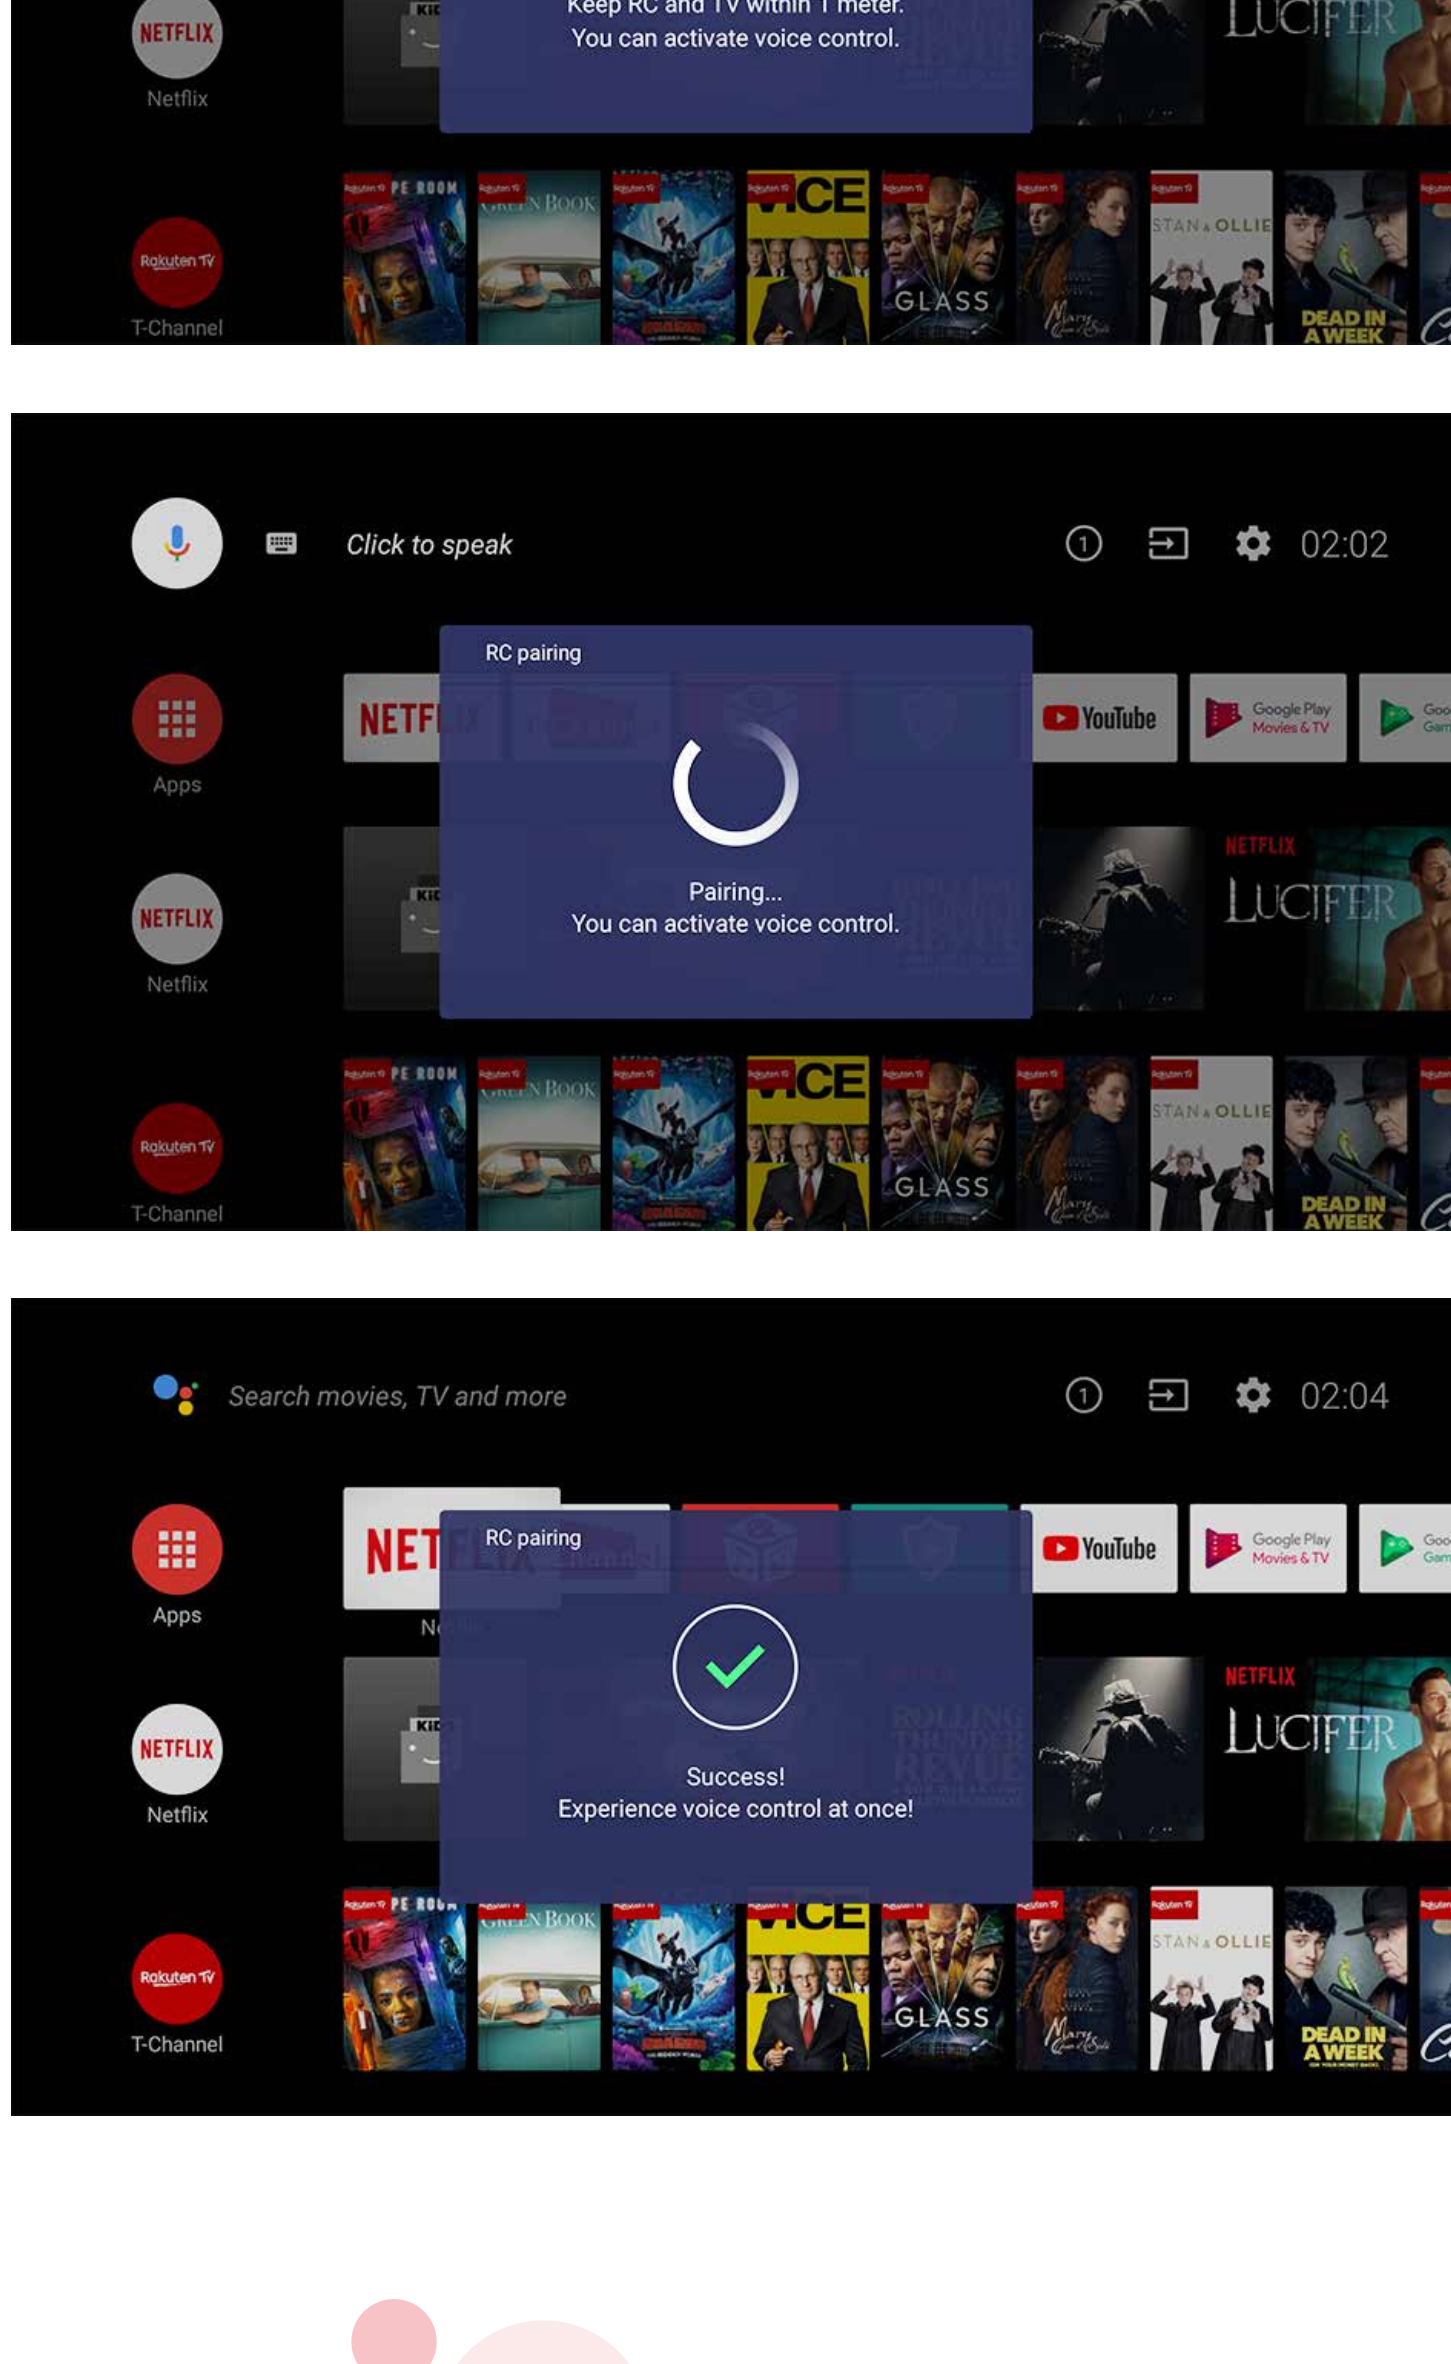

## Using the Far-Field Voice Control

There are two kinds of Far-Field Voice Control: Built-in Voice Control and Hands-free TV Voice Control.

- Note: Both Built-in TV Voice Control and Hands-free TV Voice Control are only available for selected models. For details, please refer to your local dealer.

### Built-in TV Voice Control


As for Built-in Voice Control, there is no need on external installation. You only need to turn on/off a button on the bottom of TV to activate/ inactivate voice control.


### Hands-free TV Voice Control


To use the Far-Field Voice Control, you will need to buy and install a Hands-free TV Voice Control device.


To install the Hands-free TV Voice Control:


1. Place the Hands-free TV voice control on the top centre of the TV set as illustrated. Keep it horizontal to get better function.
2. Attract the back cover of the TV by the support bracket of the Hands-free TV voice control.
3. Connect the USB cable of the Hands-free TV voice control to the black USB 2.0 socket on the TV.

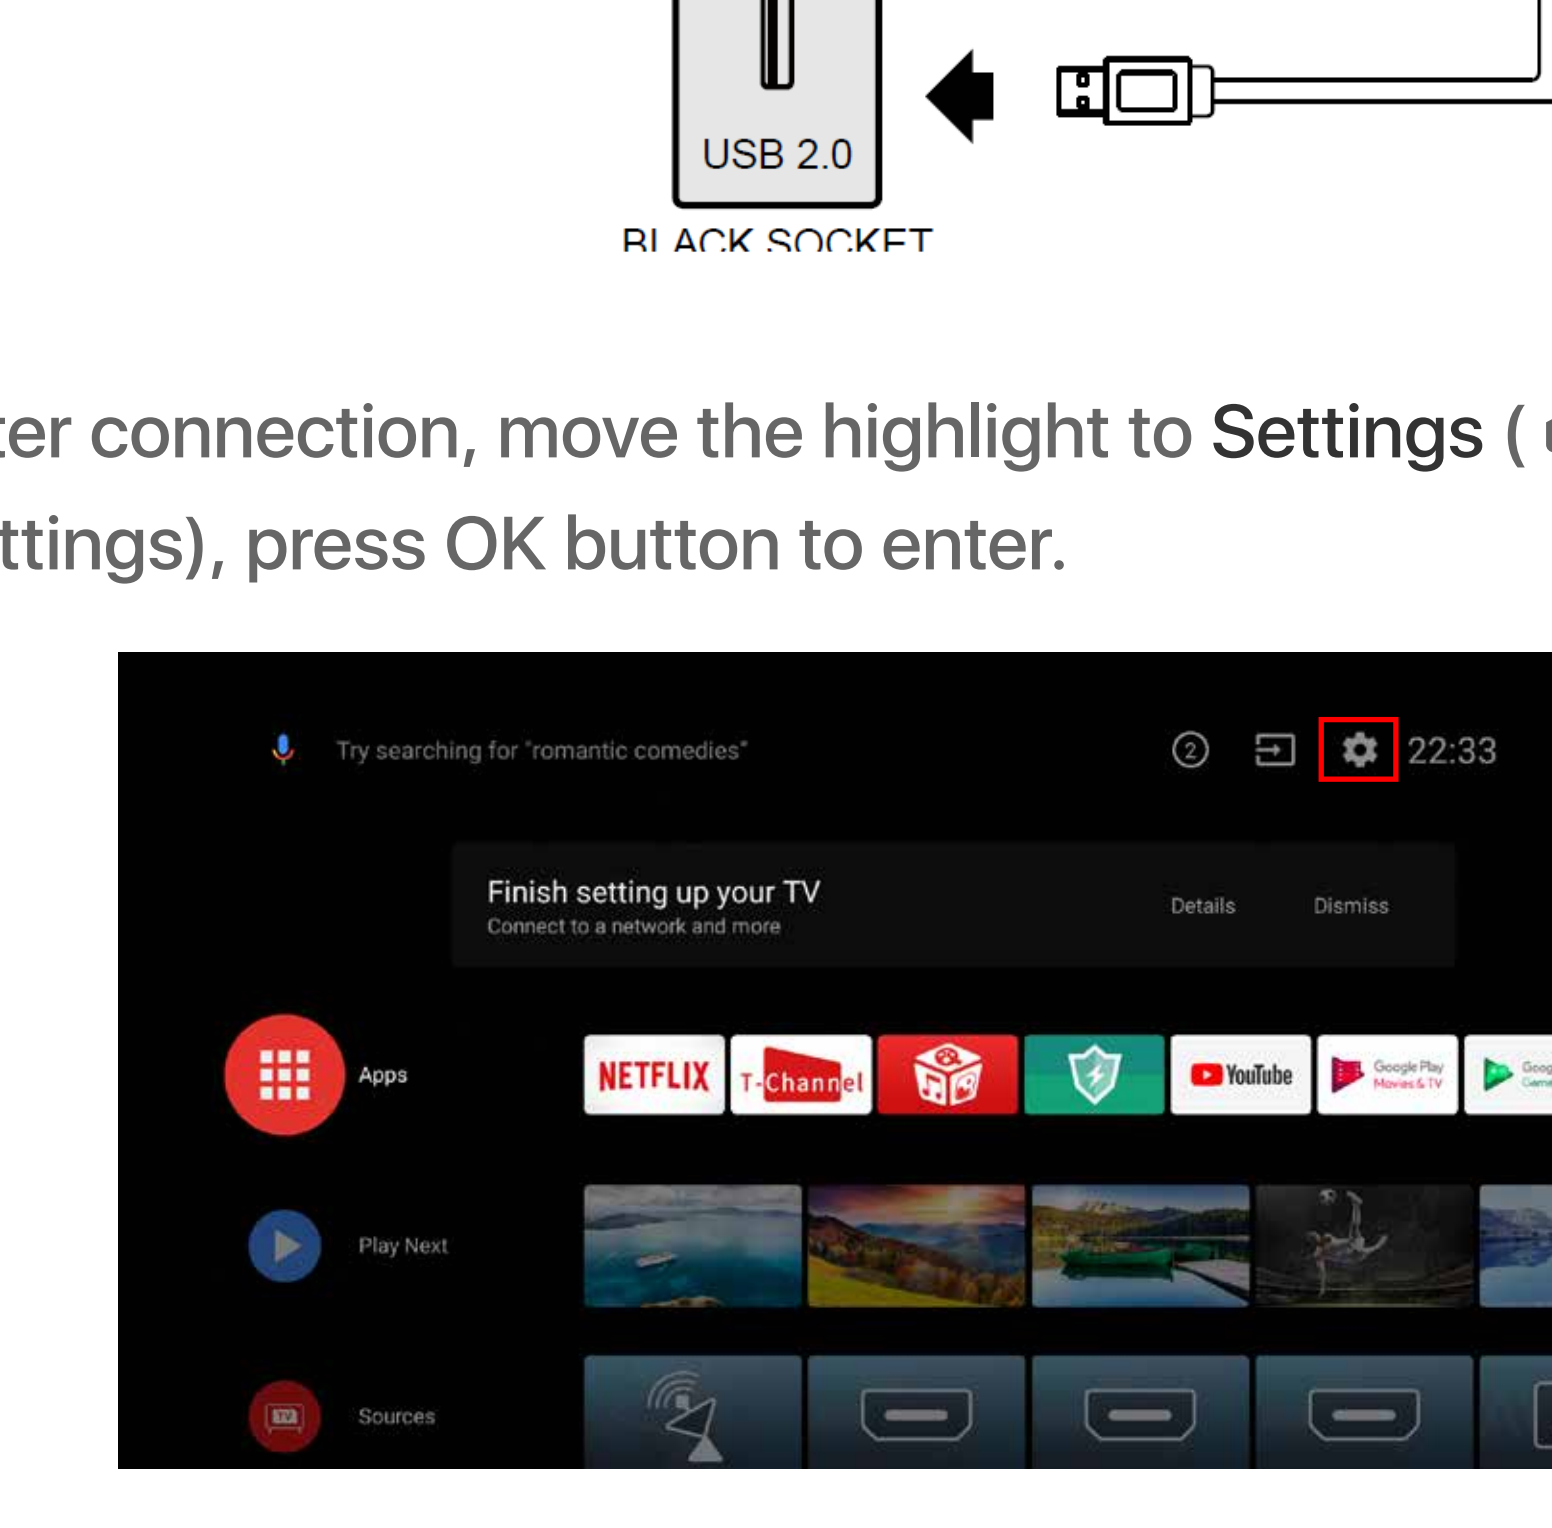

 
After connection, move the highlight to Settings (  > Settings), press OK button to enter.

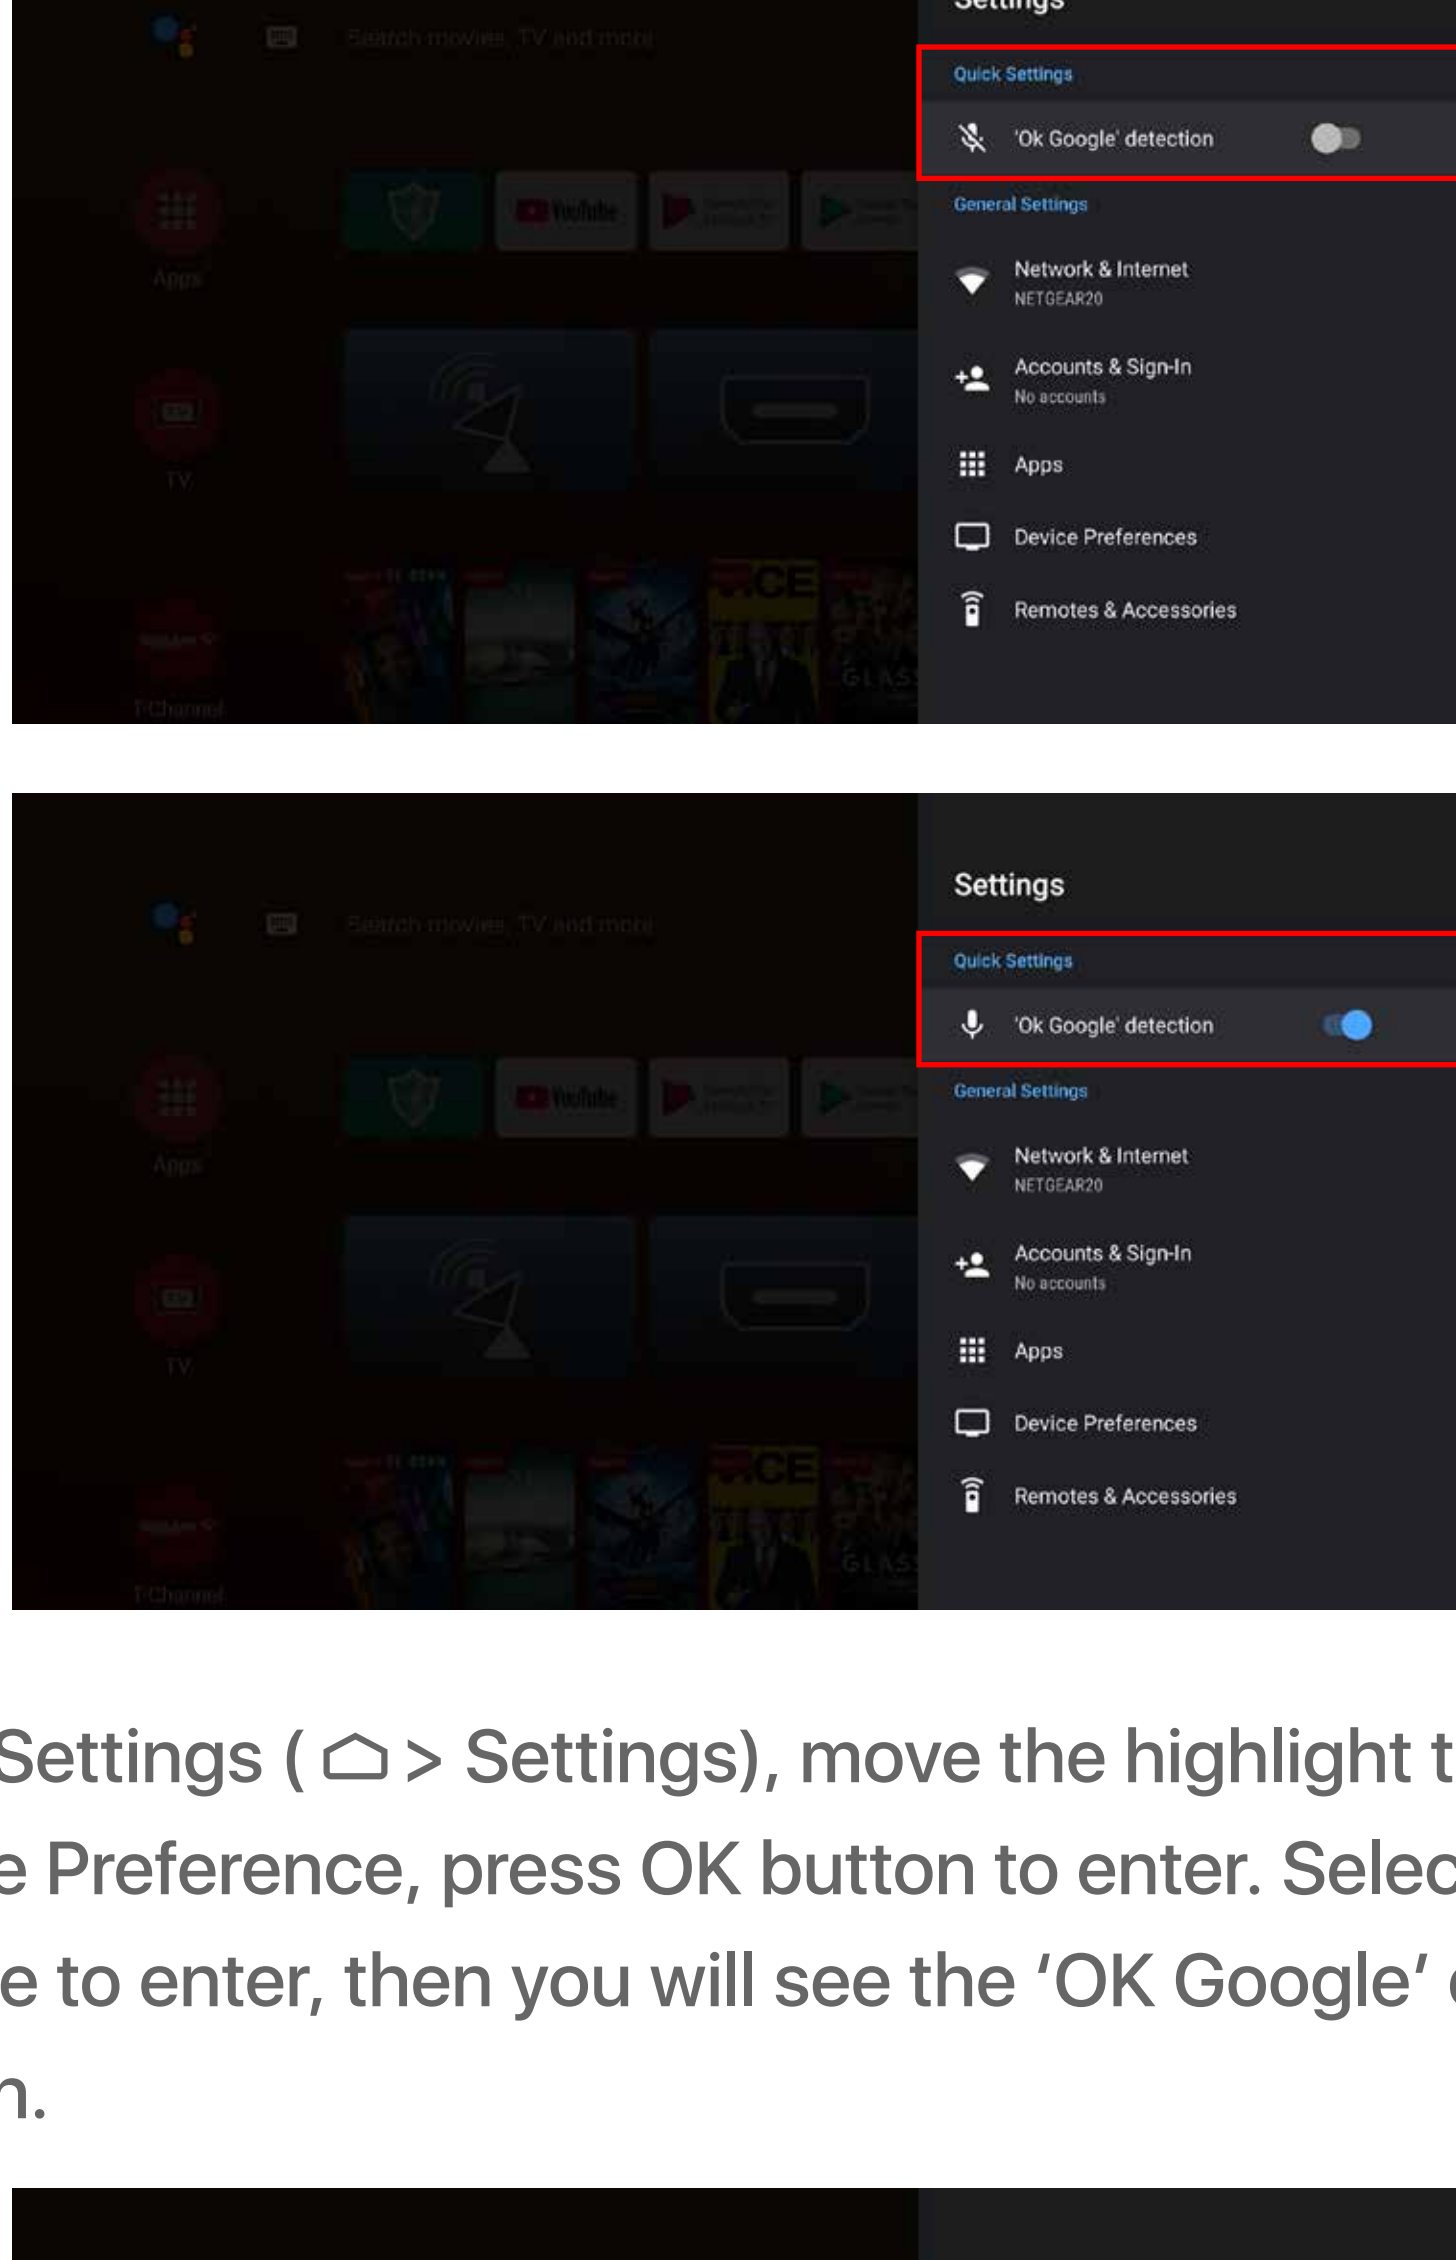


Or, in Settings (  > Settings), move the highlight to Device Preference, press OK button to enter. Select Google to enter, then you will see the 'OK Google' detection.

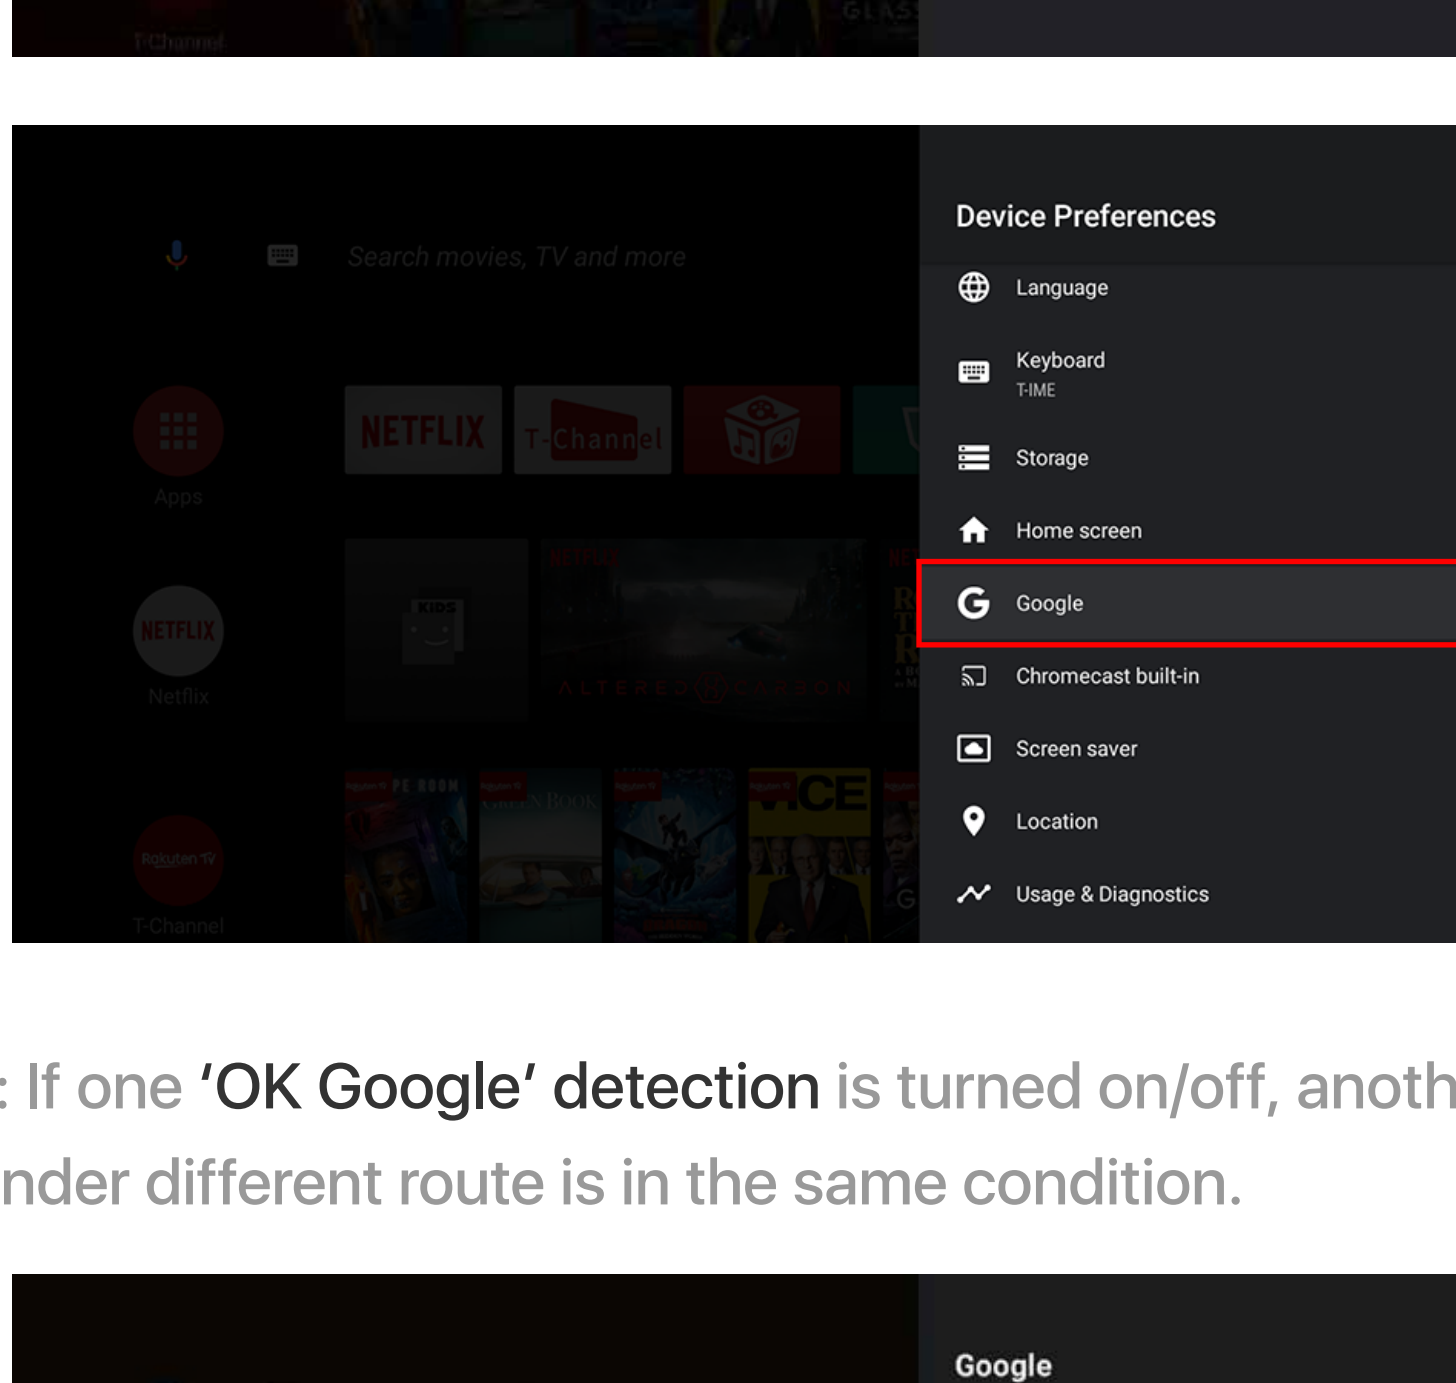

 
- Note: If one 'OK Google' detection is turned on/off, another one under different route is in the same condition.

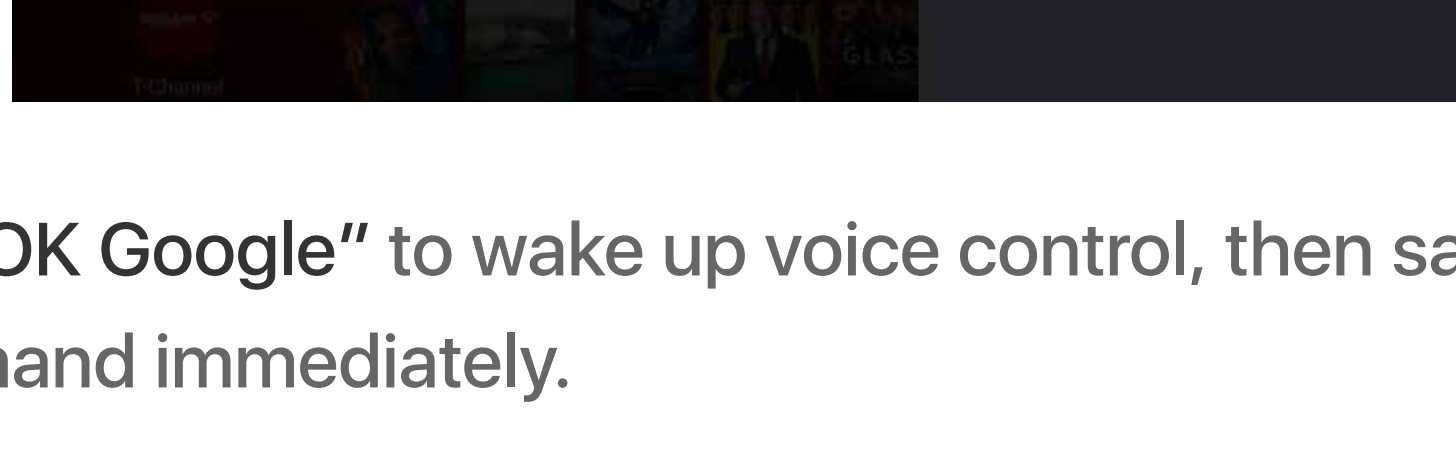

 Say "OK Google" to wake up voice control, then say the command immediately.

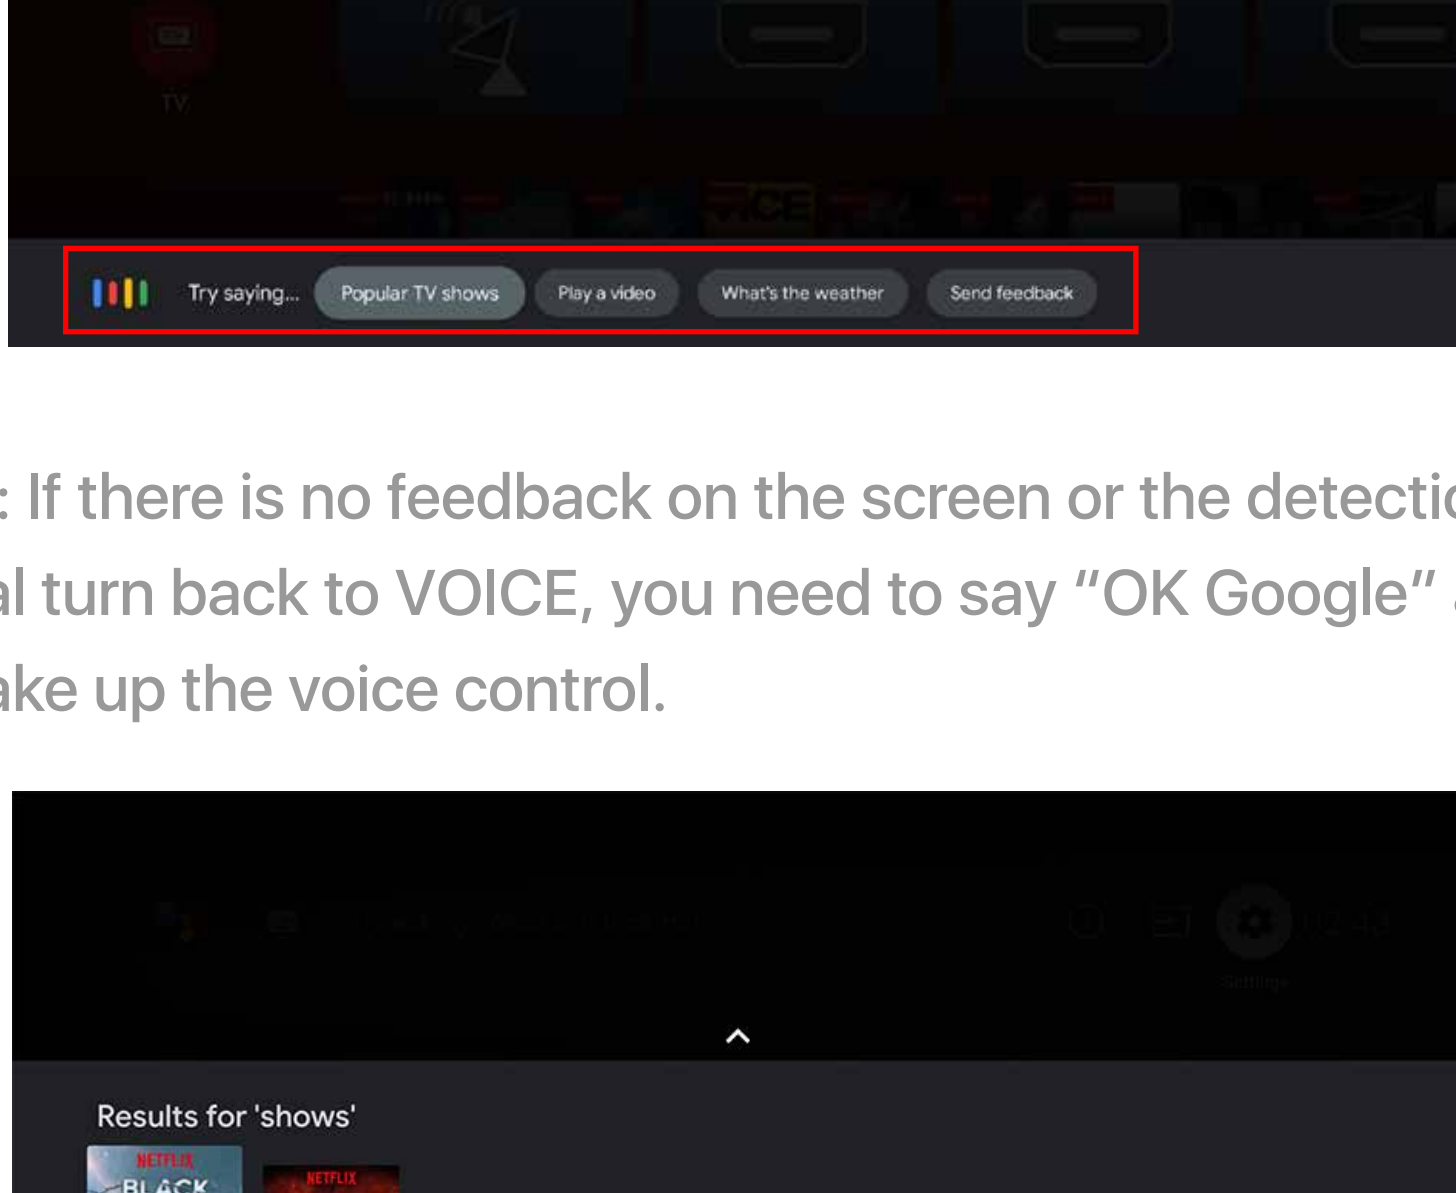

- Note: If there is no feedback on the screen or the detection signal turn back to VOICE, you need to say "OK Google" again to wake up the voice control.

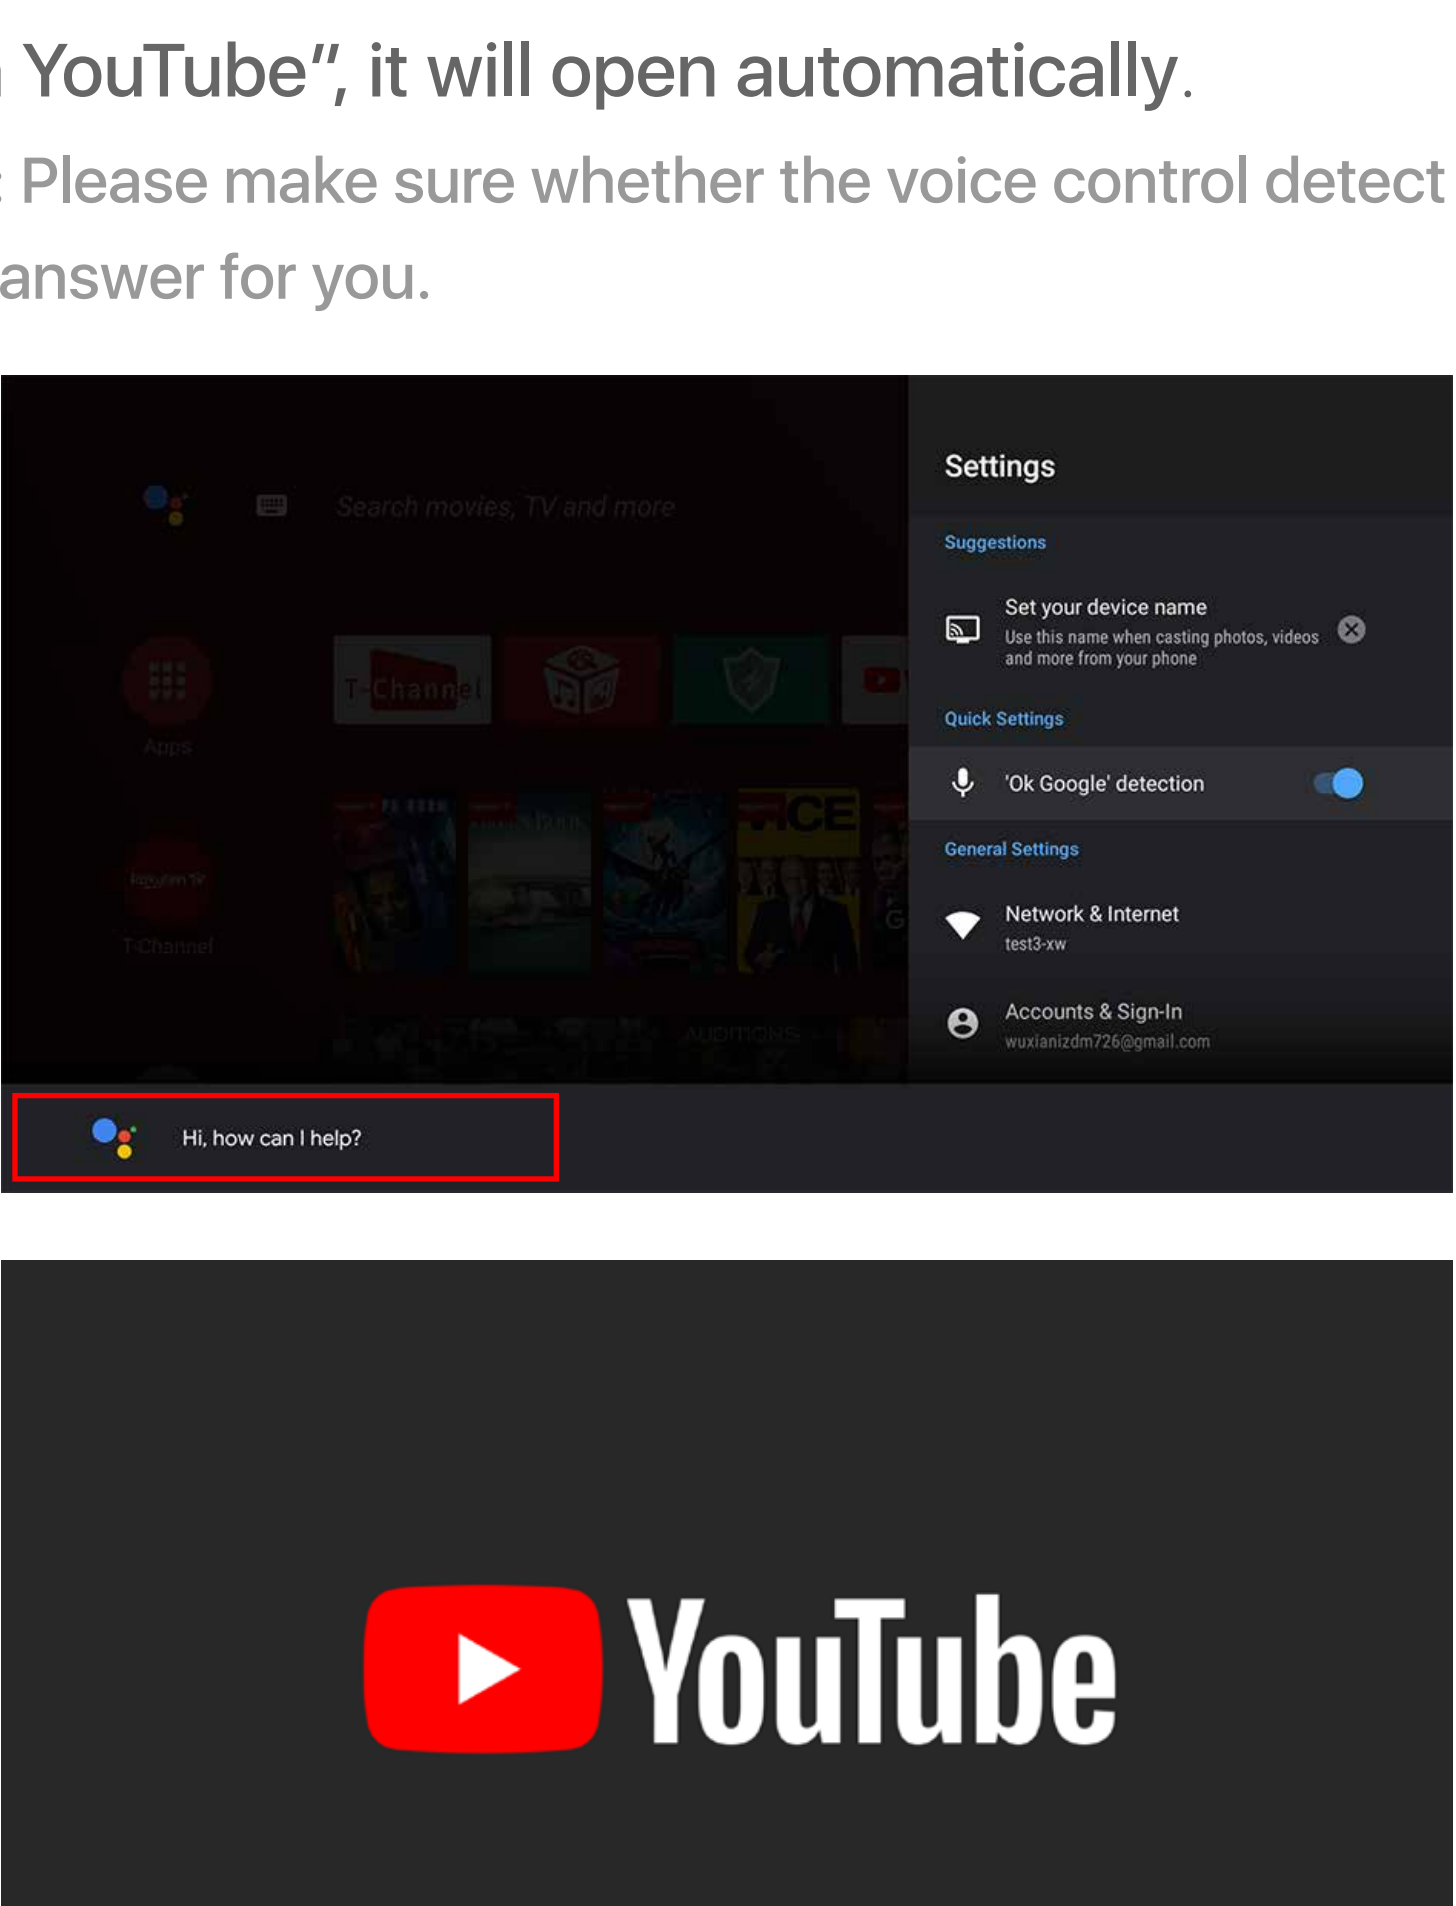

## Built-in Voice Control (TBA)


As for Built-in Voice Control, there is no need on external installation. You only need to turn on/off a button on the bottom of TV to activate/ inactivate voice control.




# Menu Setup

## Connecting to Network

Move the highlight to Settings (⏏ > Settings), press OK button to enter.


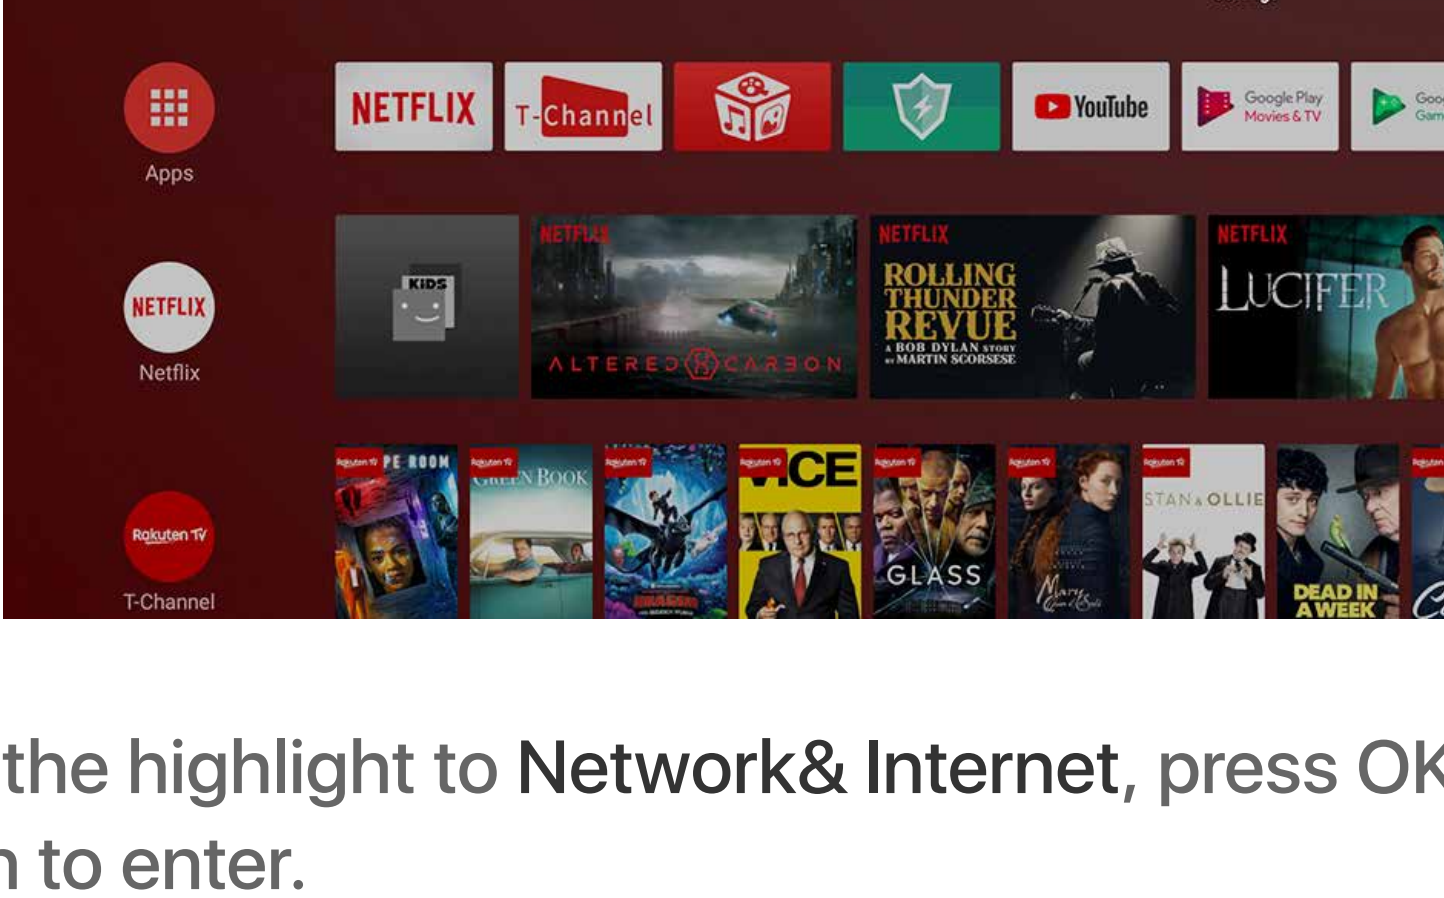


 Move the highlight to Network& Internet, press OK button to enter.



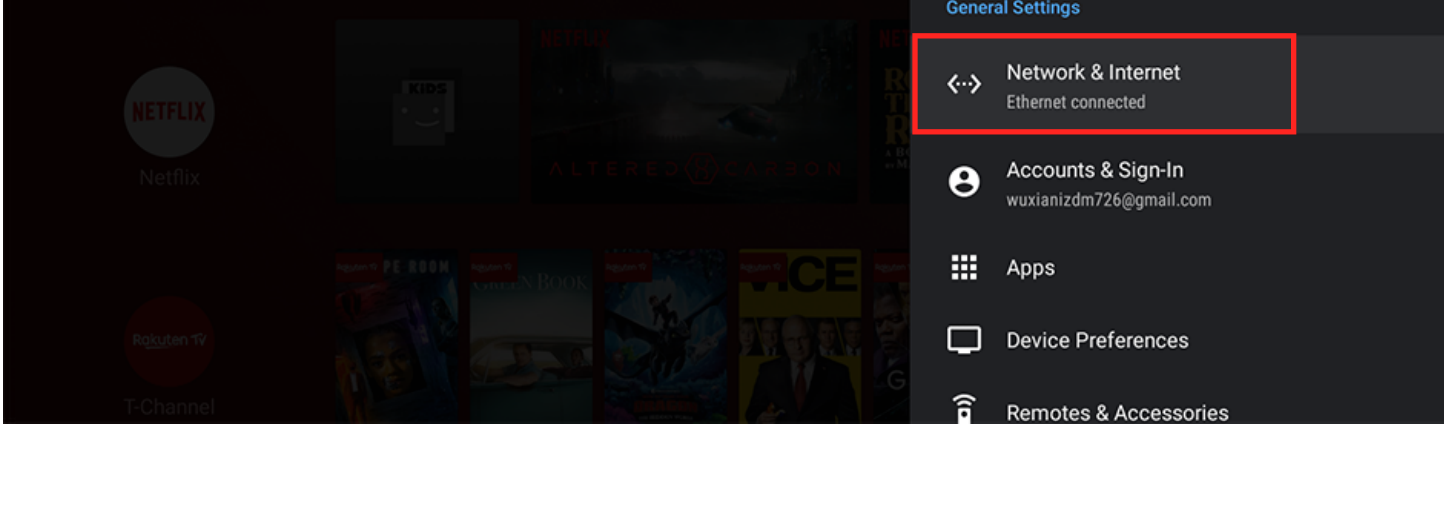


Move the highlight to Wi-Fi, press OK button to turn it on. Select a network and then press OK button to connect.

- Note: If the button beside Wi-Fi is highlighted, the Wi-Fi is on.

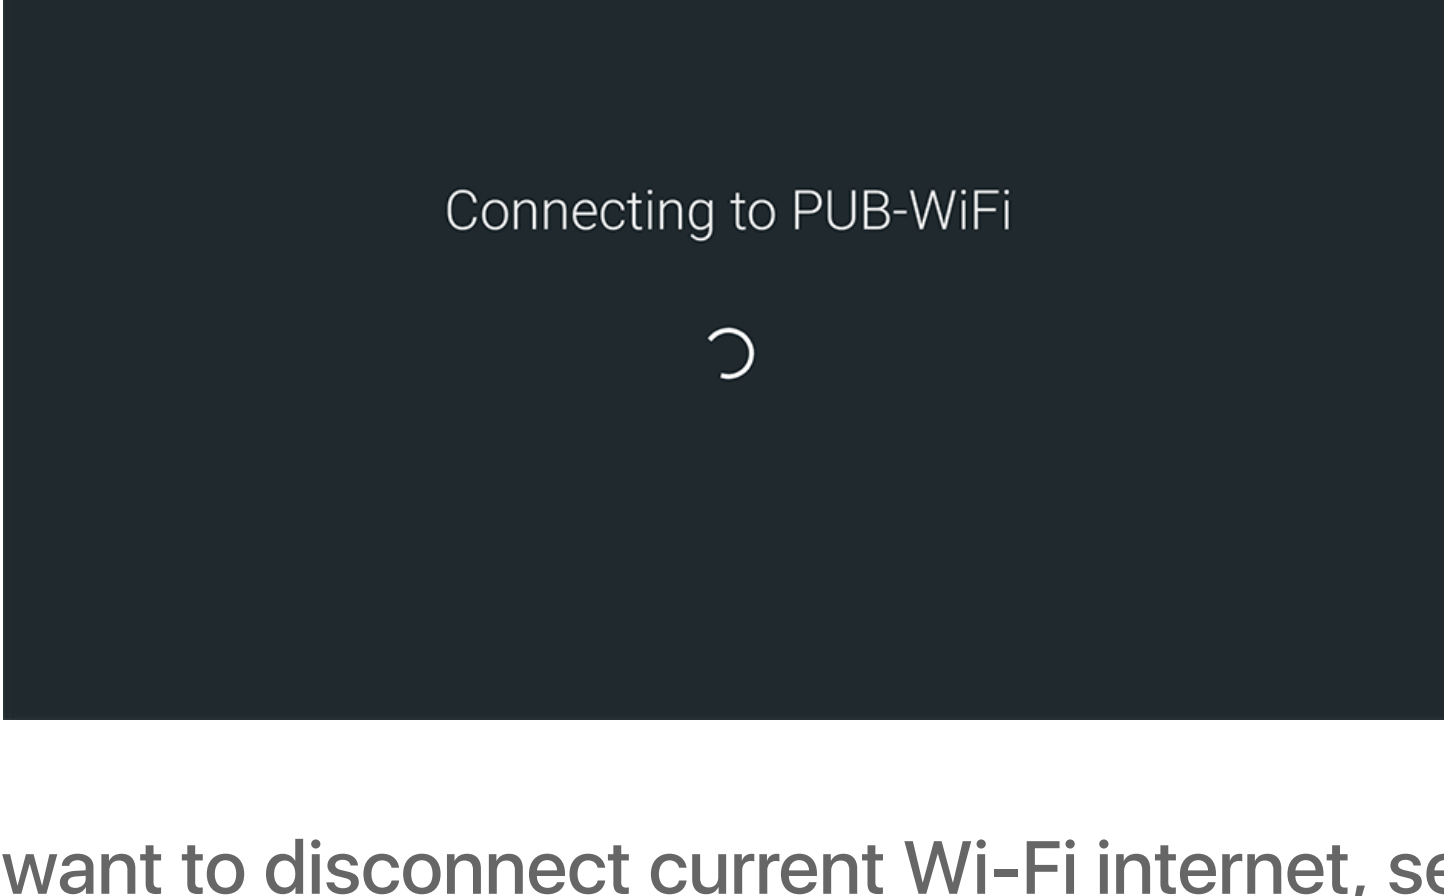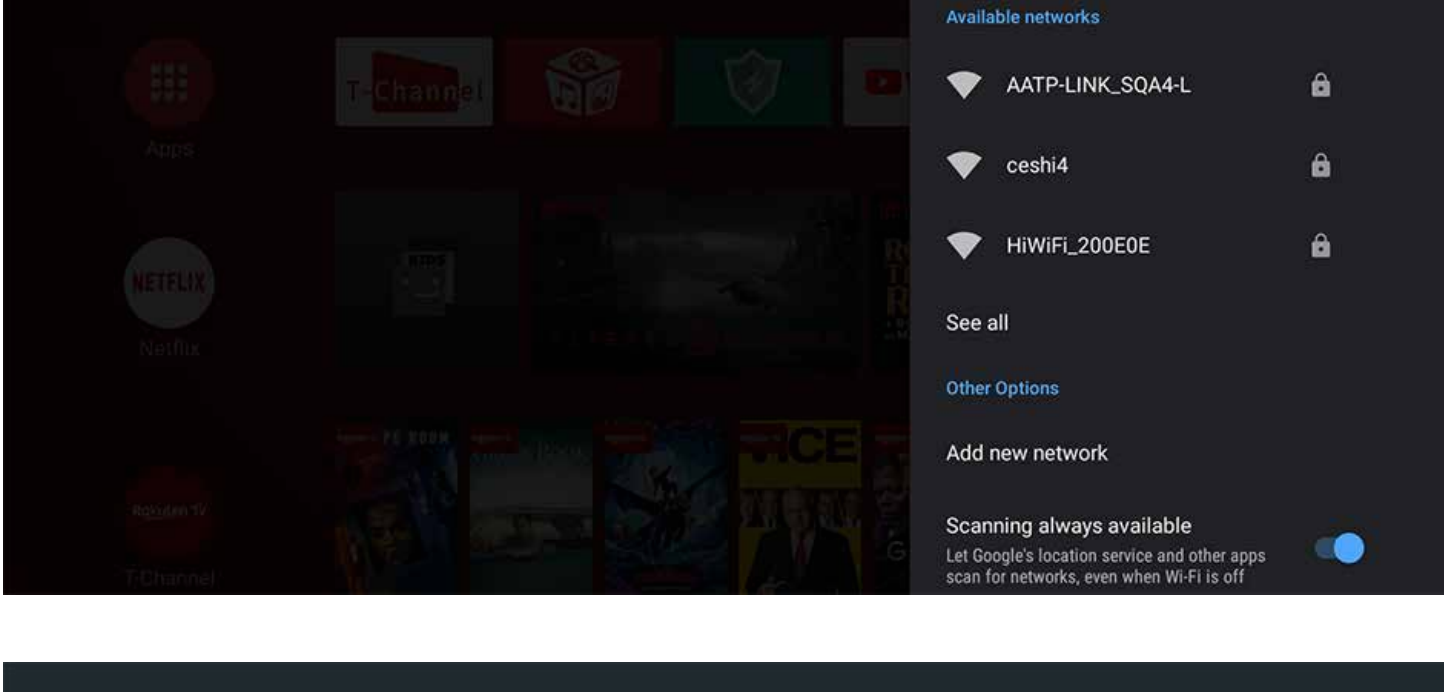


 If you want to disconnect current Wi-Fi internet, select the connected network and press OK button to enter, and select Forget network. Then follow the instruction on the screen.

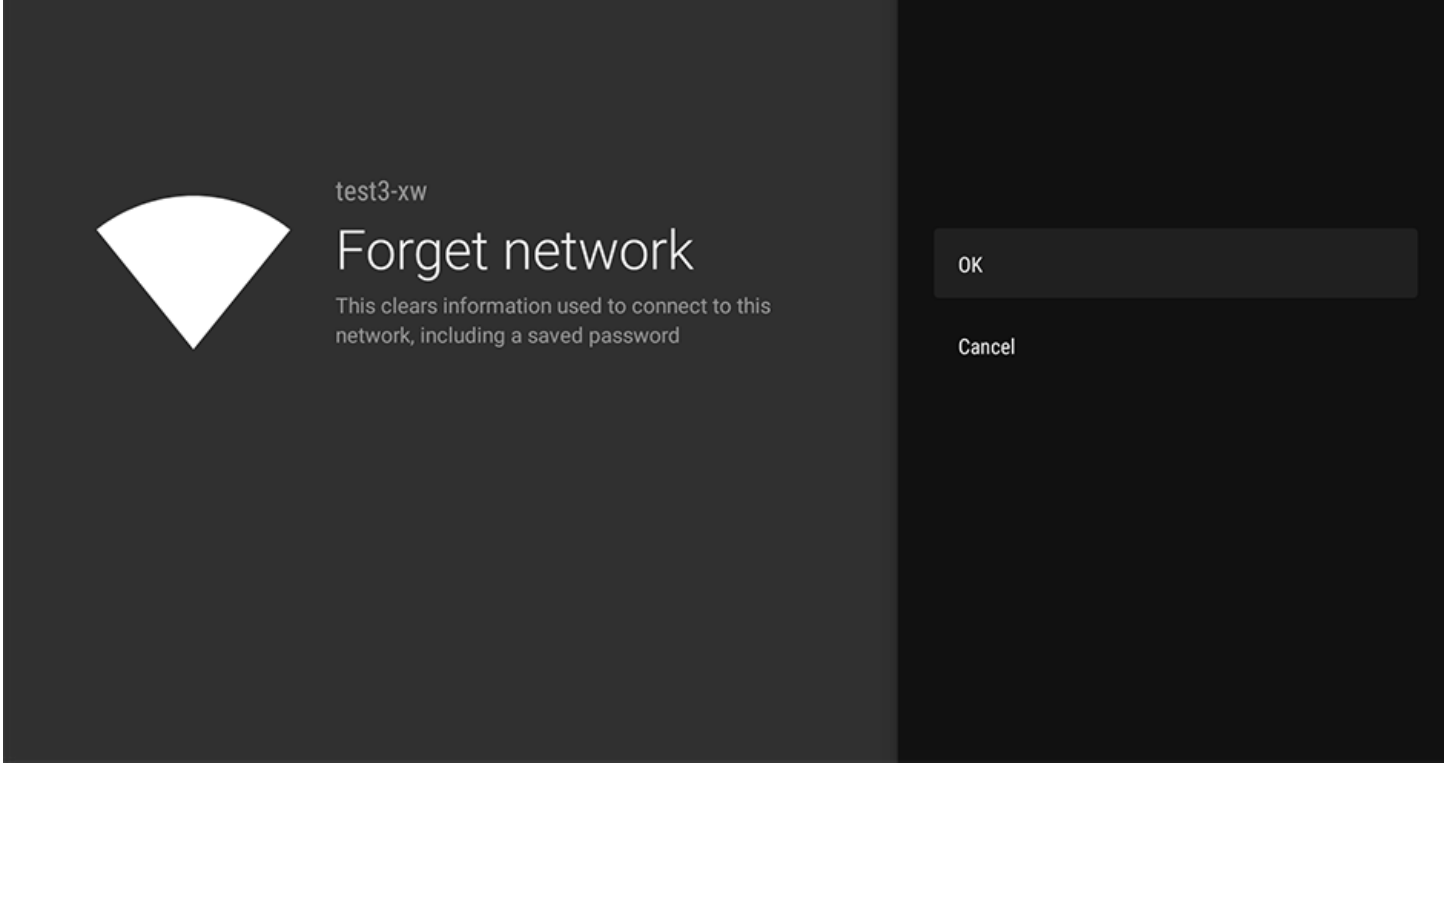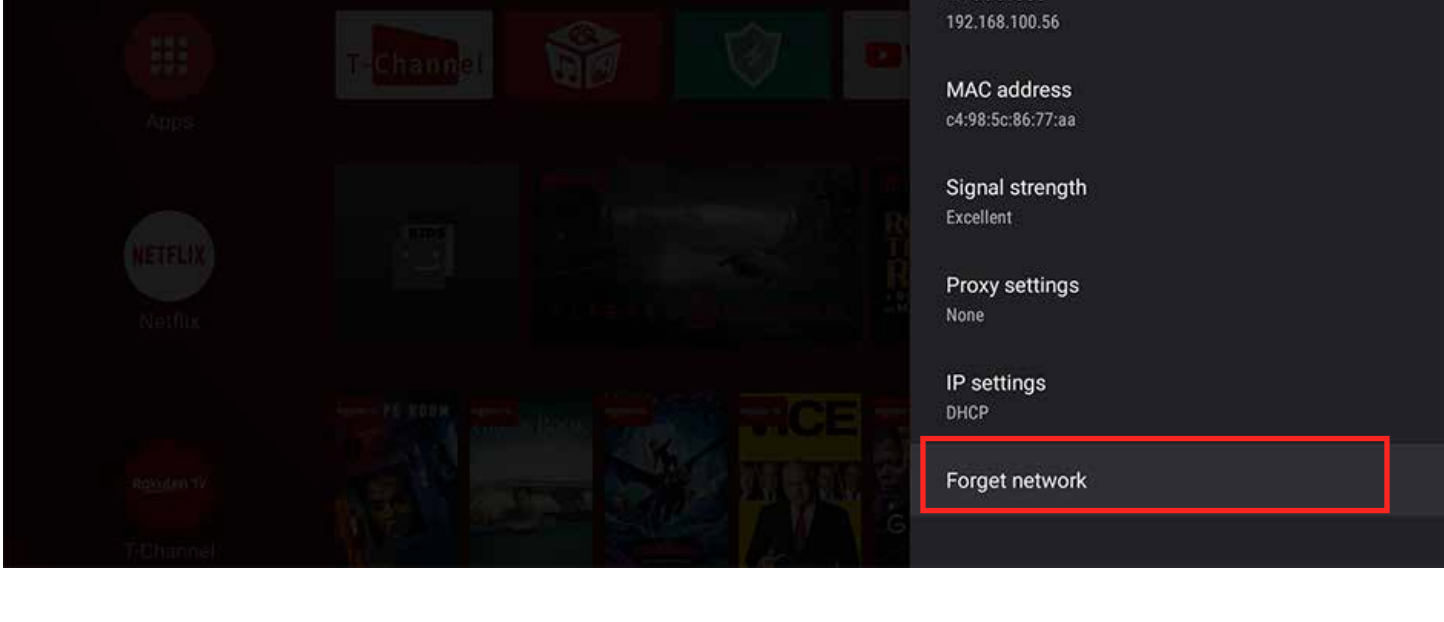
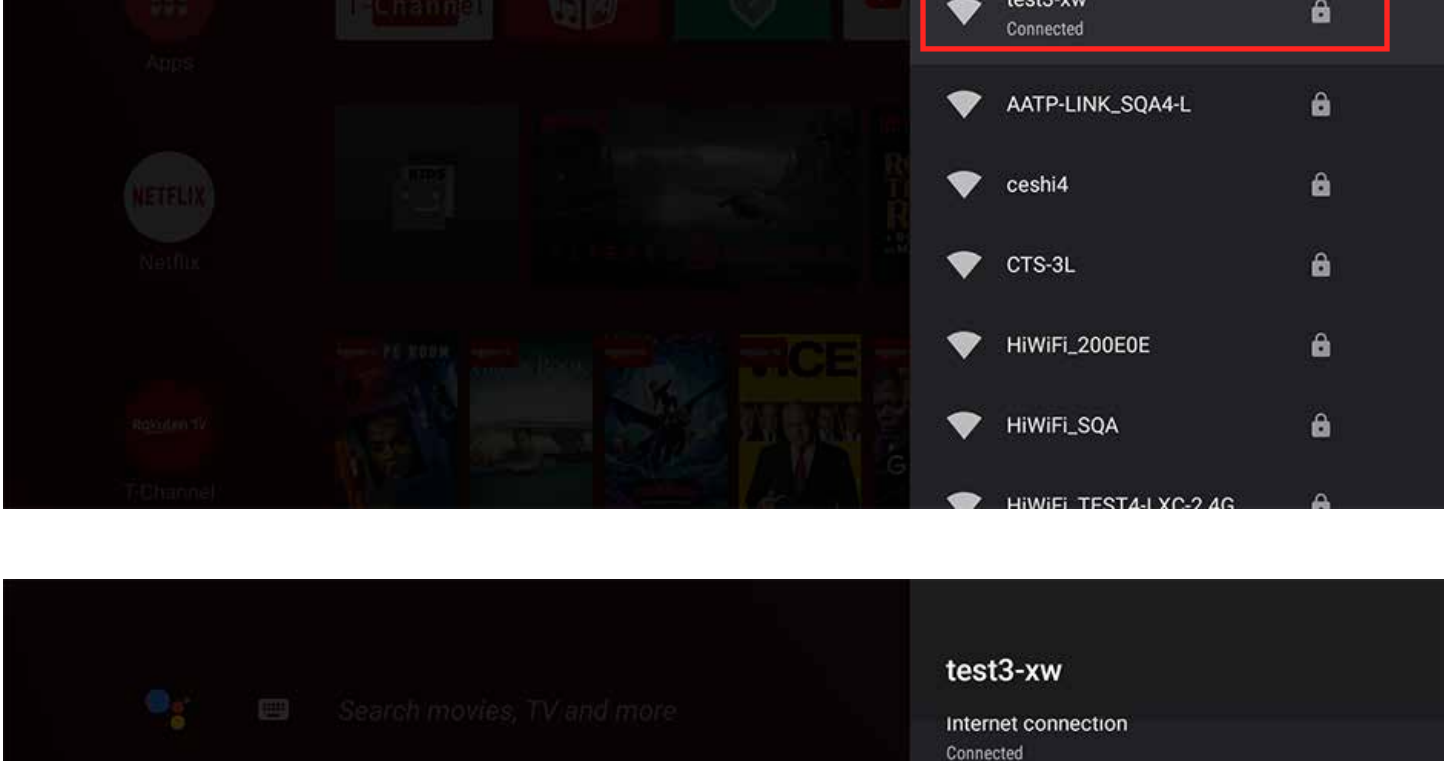


## Connecting to Bluetooth Devices

 In Settings (⏏ > Settings), move the highlight to Re-  
mote& Accessories, press OK button to enter.

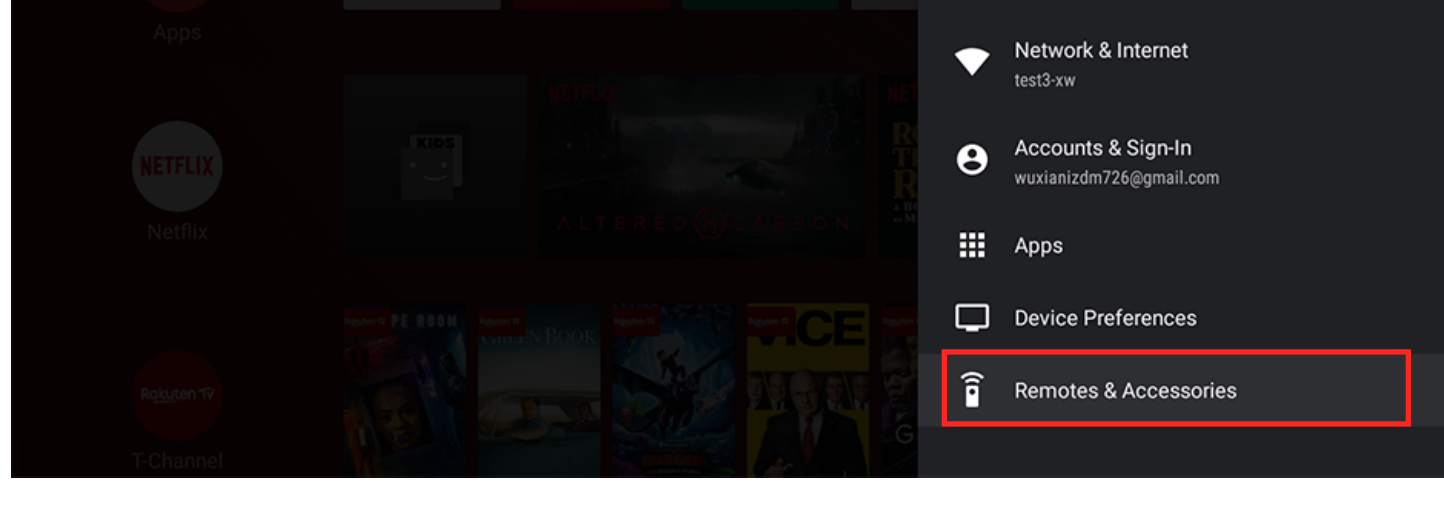

 
Select Add accessory, and the TV is ready to pair. Then follow the instruction on the screen.

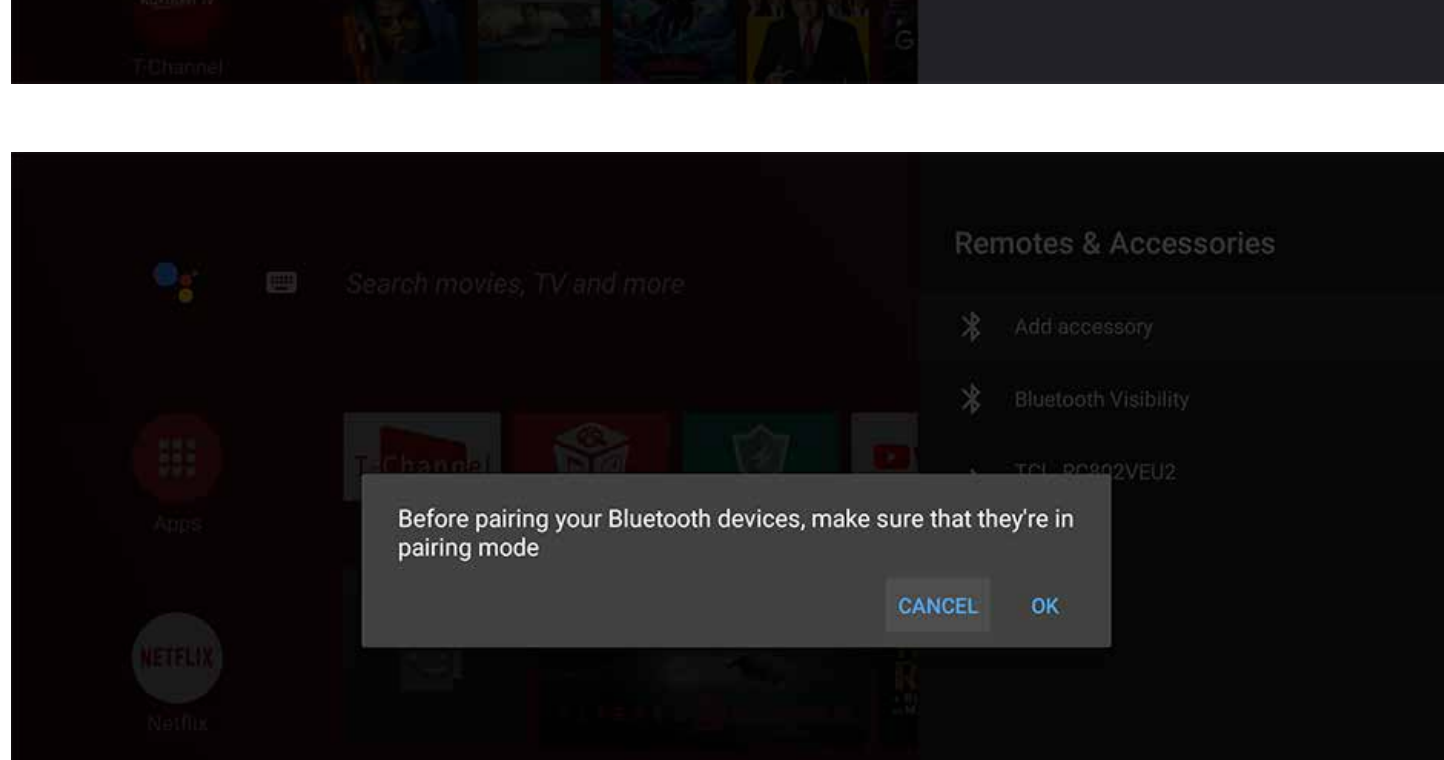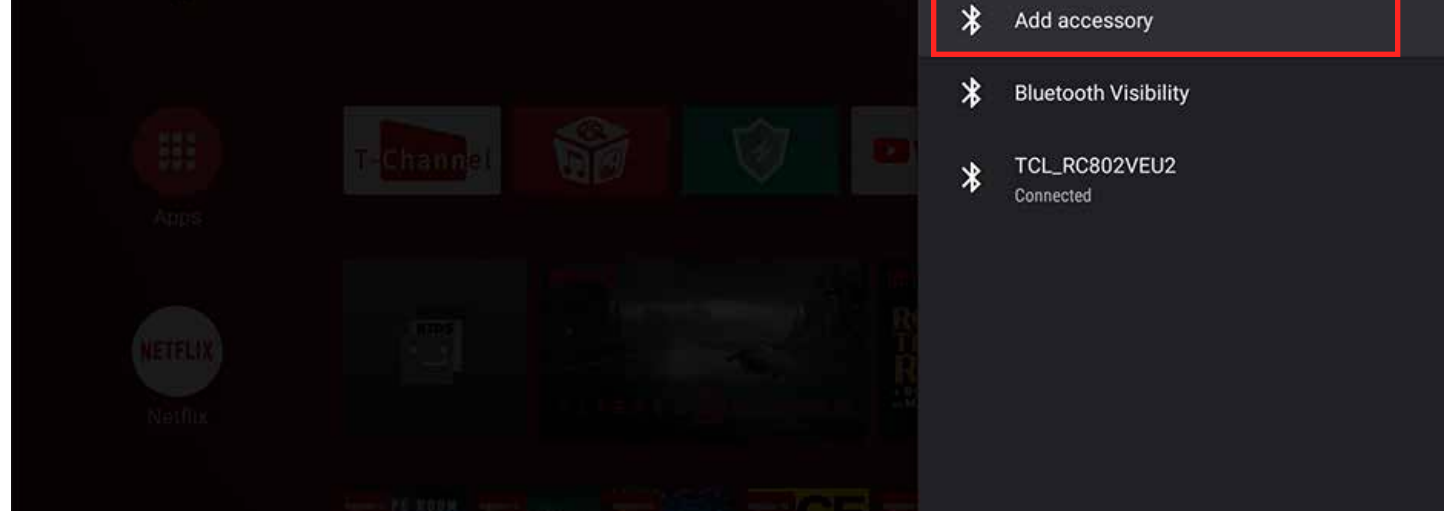

## Pictiure,Sound and System Settings

Press ⚙ button on the remote control, you can manage settings of Picture, Sound and System.

 - Note: Press OK button to enter each option and press Return button(←) to go back to previous step.

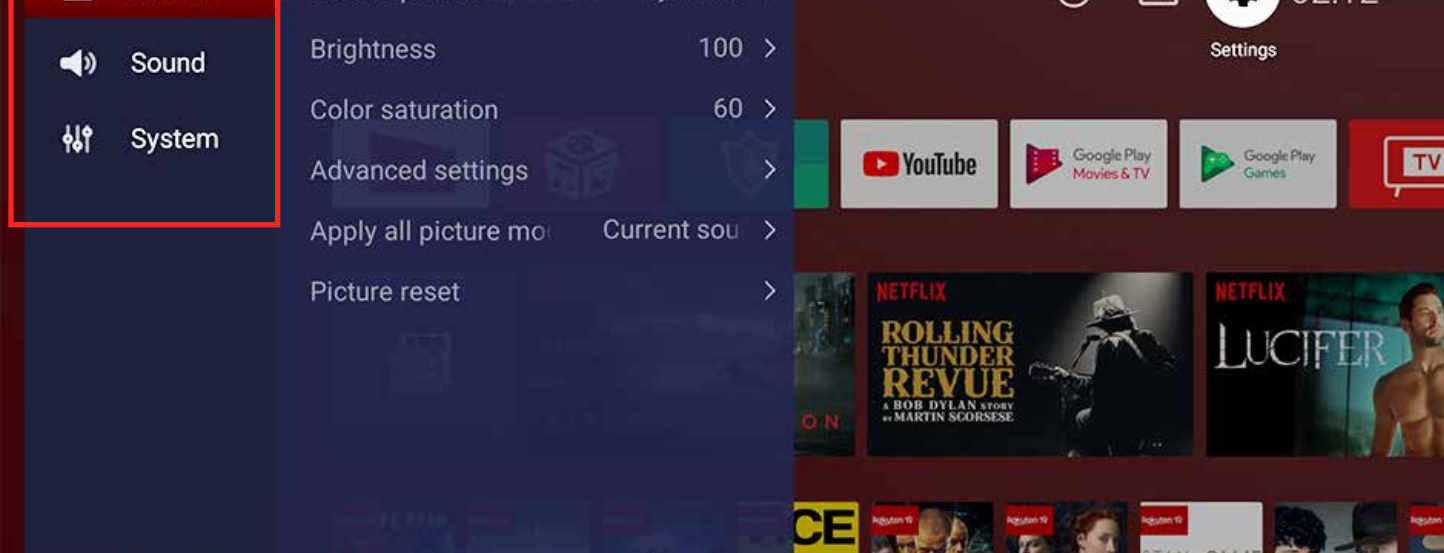





# Using the Apps

## Installing Apps


- a** On the Home Screen, move the highlight to Apps, press OK button to enter. ( ⇨ > Apps)

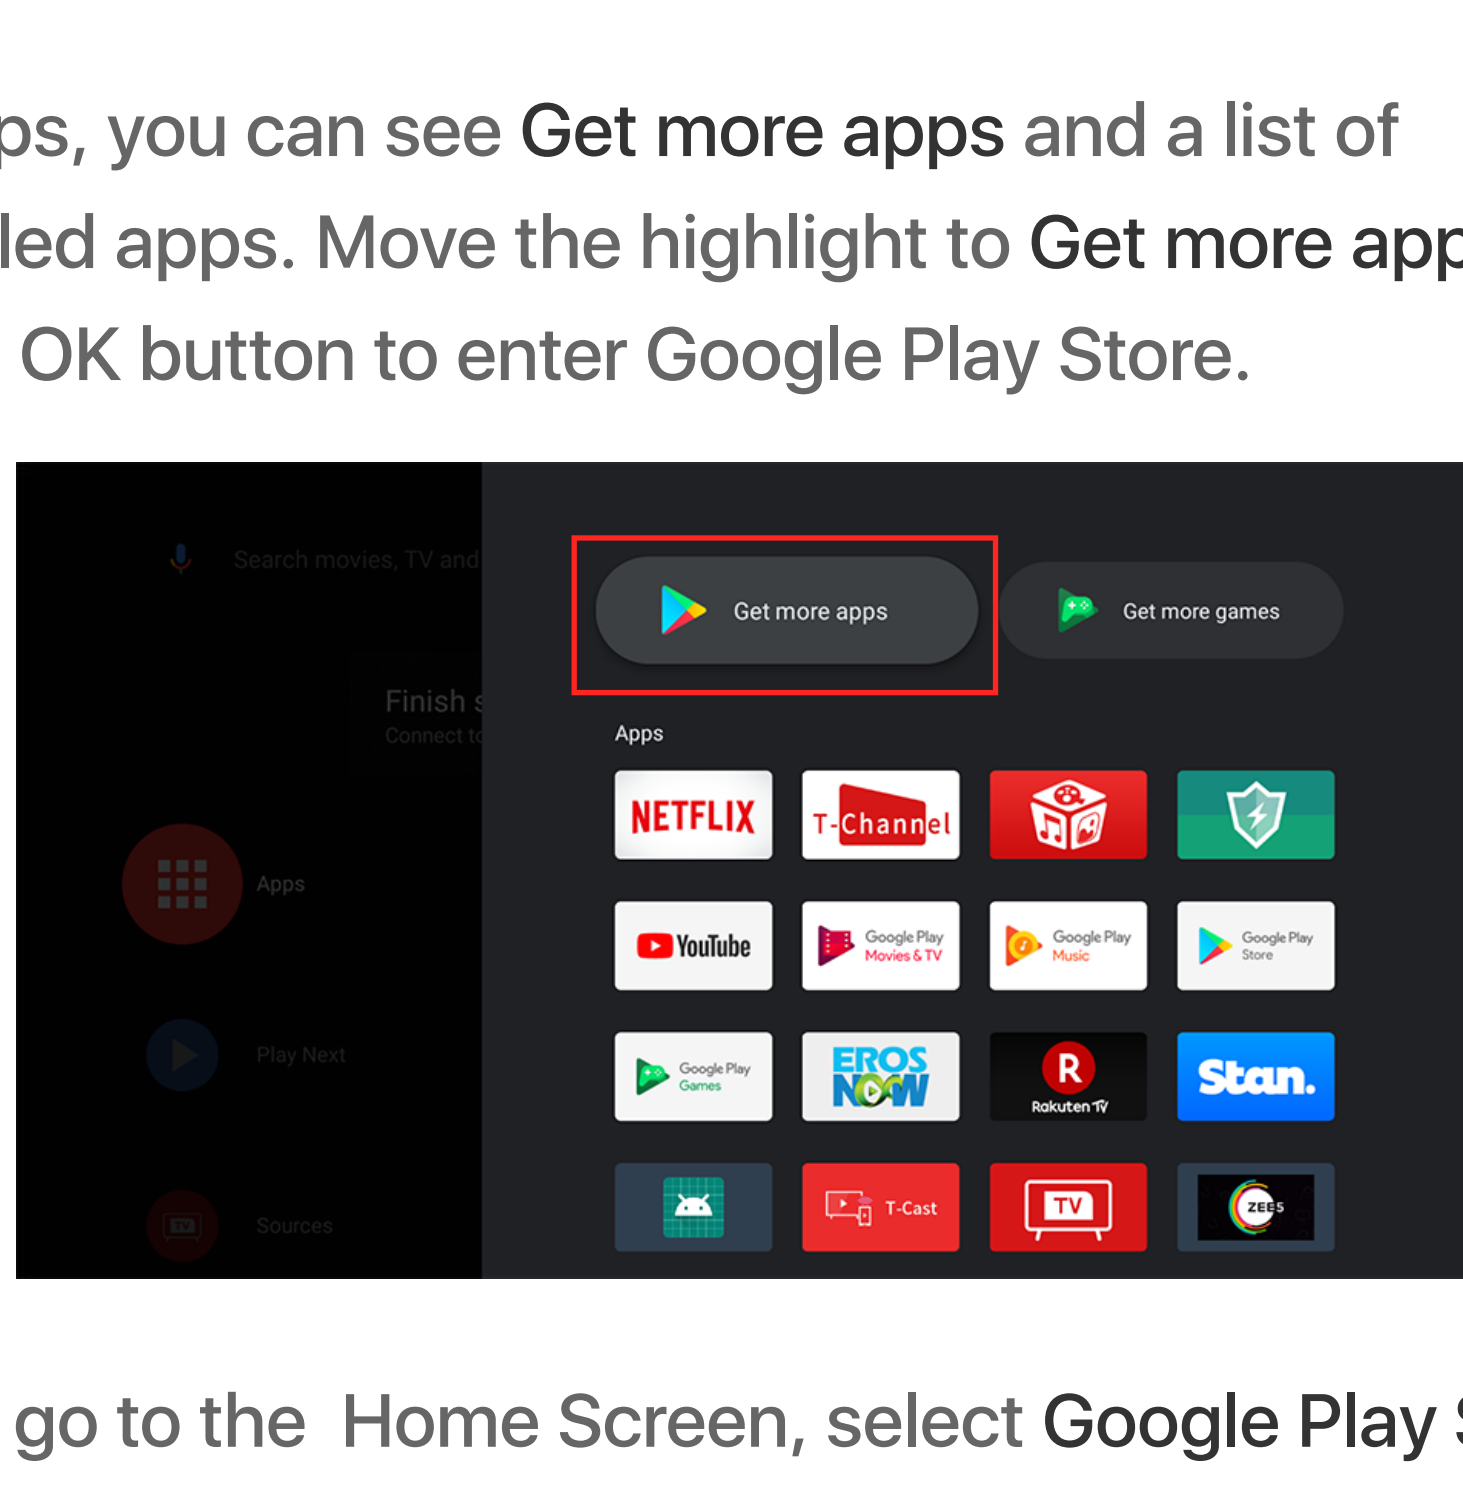

 
In Apps, you can see Get more apps and a list of installed apps. Move the highlight to Get more apps, press OK button to enter Google Play Store.

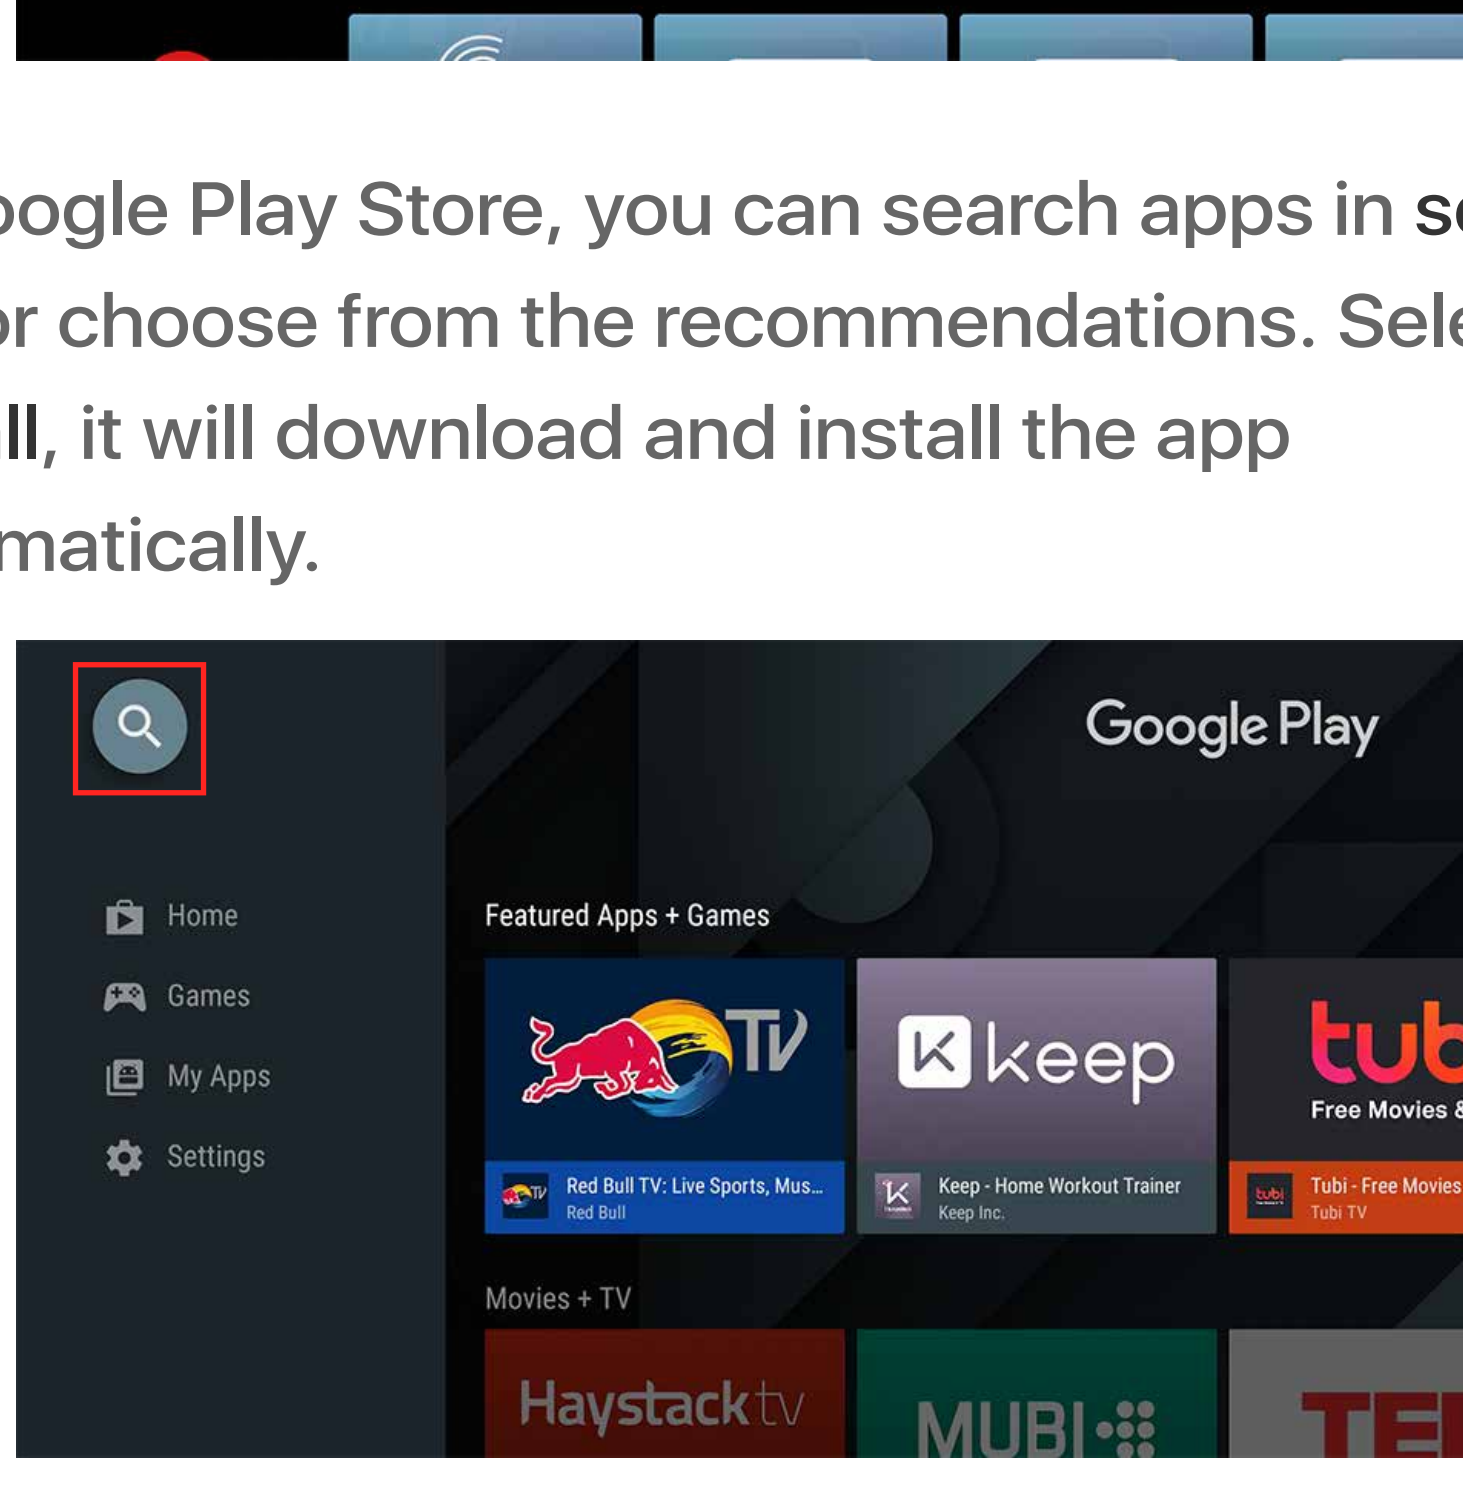


- b** Or, go to the Home Screen, select Google Play Store in Favourites.

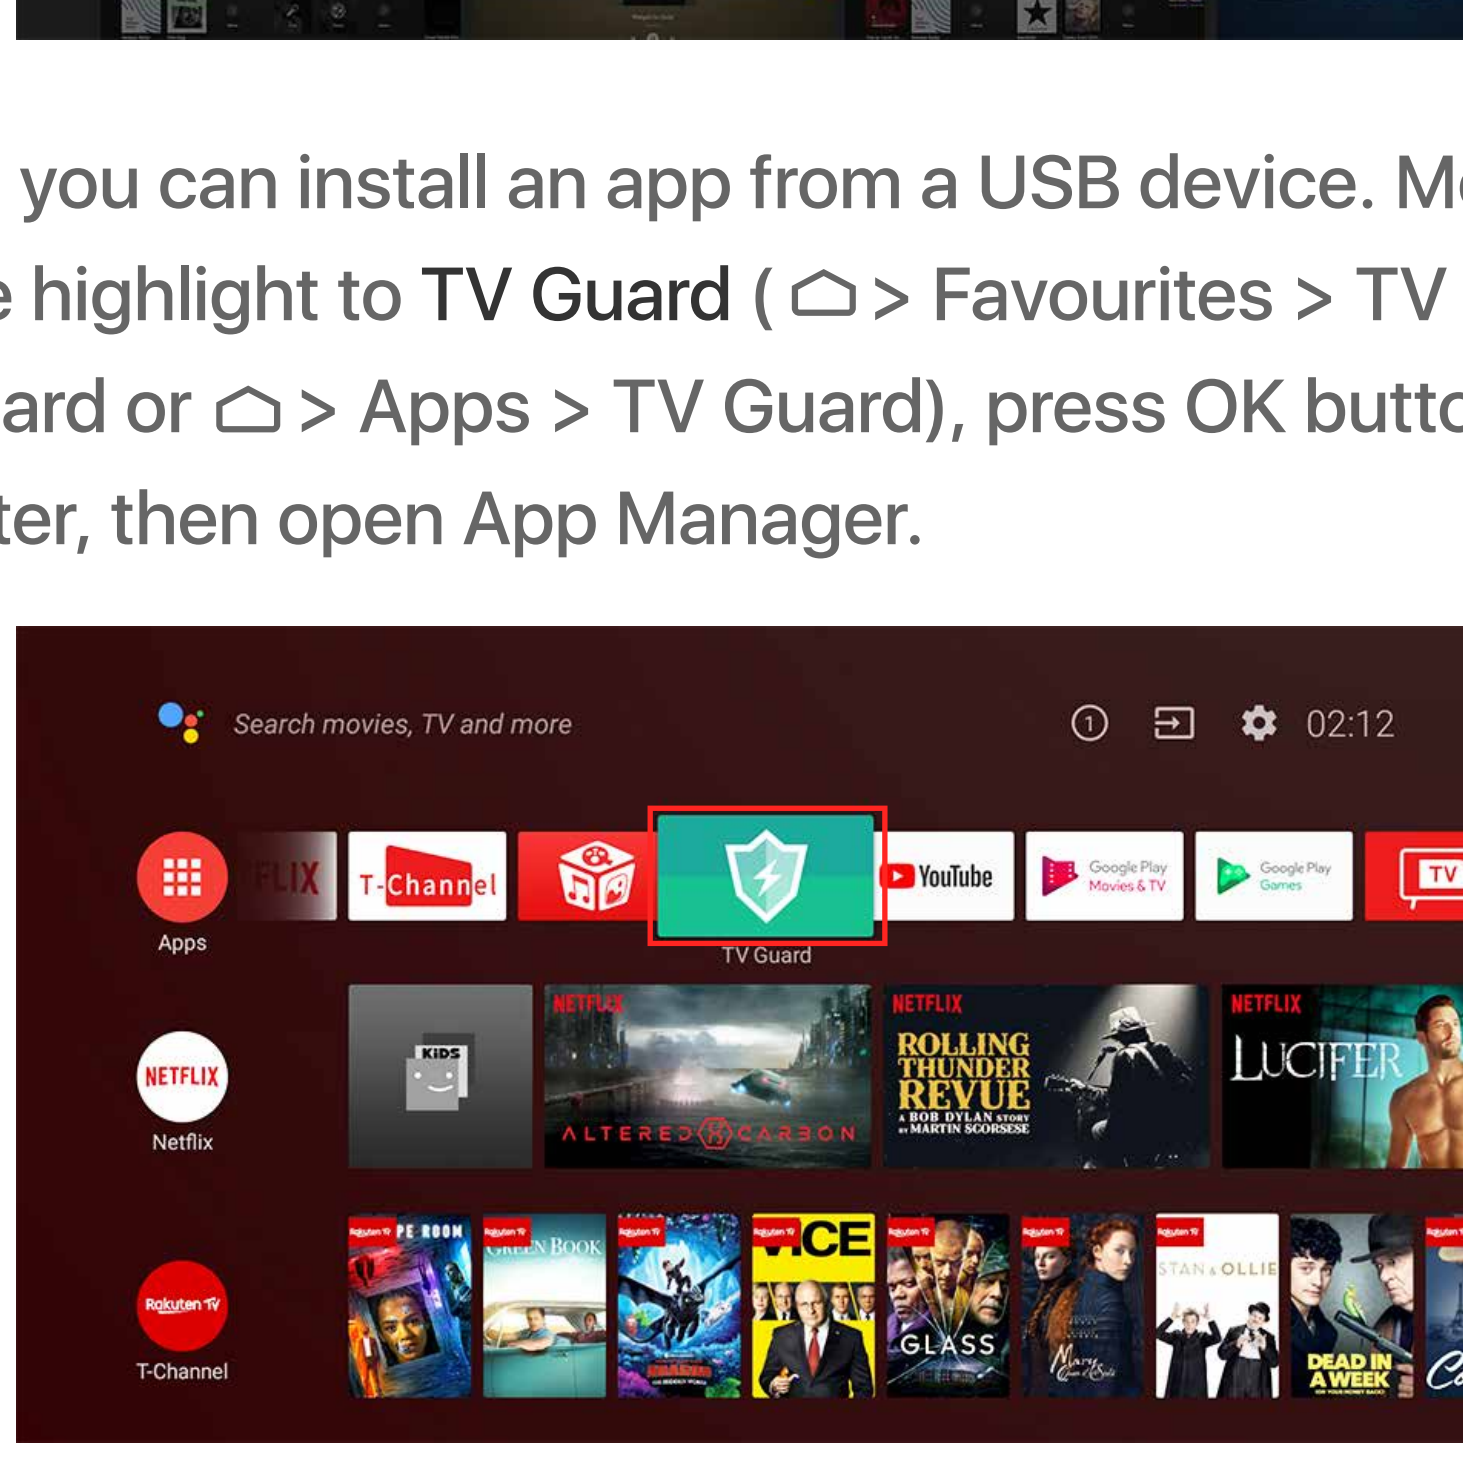

 
In Google Play Store, you can search apps in search bar or choose from the recommendations. Select Install, it will download and install the app automatically.

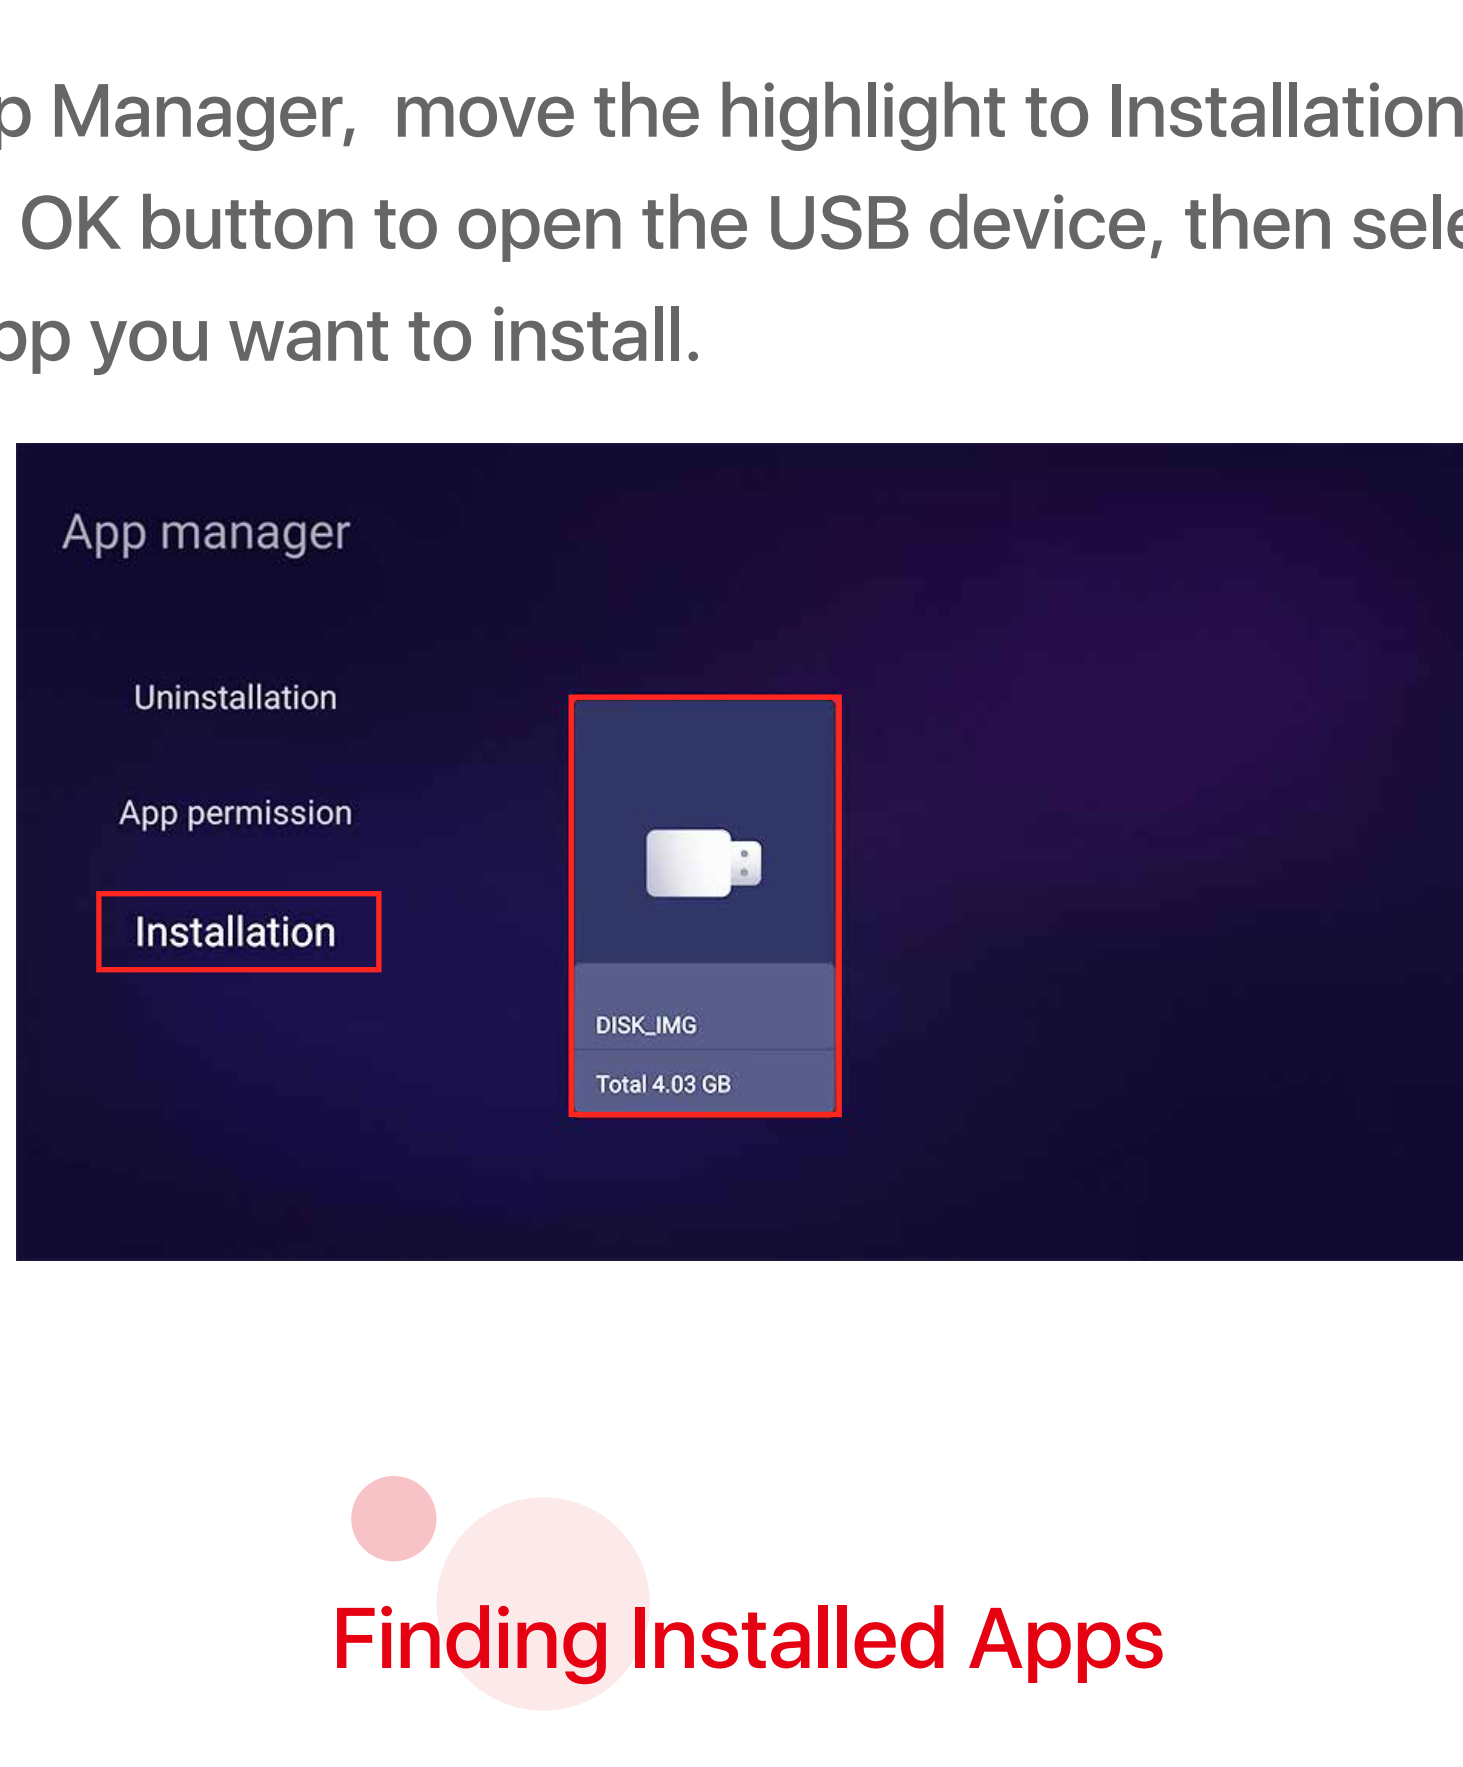

- c** Or, you can install an app from a USB device. Move the highlight to TV Guard ( ⇨ > Favourites > TV Guard or ⇨ > Apps > TV Guard), press OK button to enter, then open App Manager.

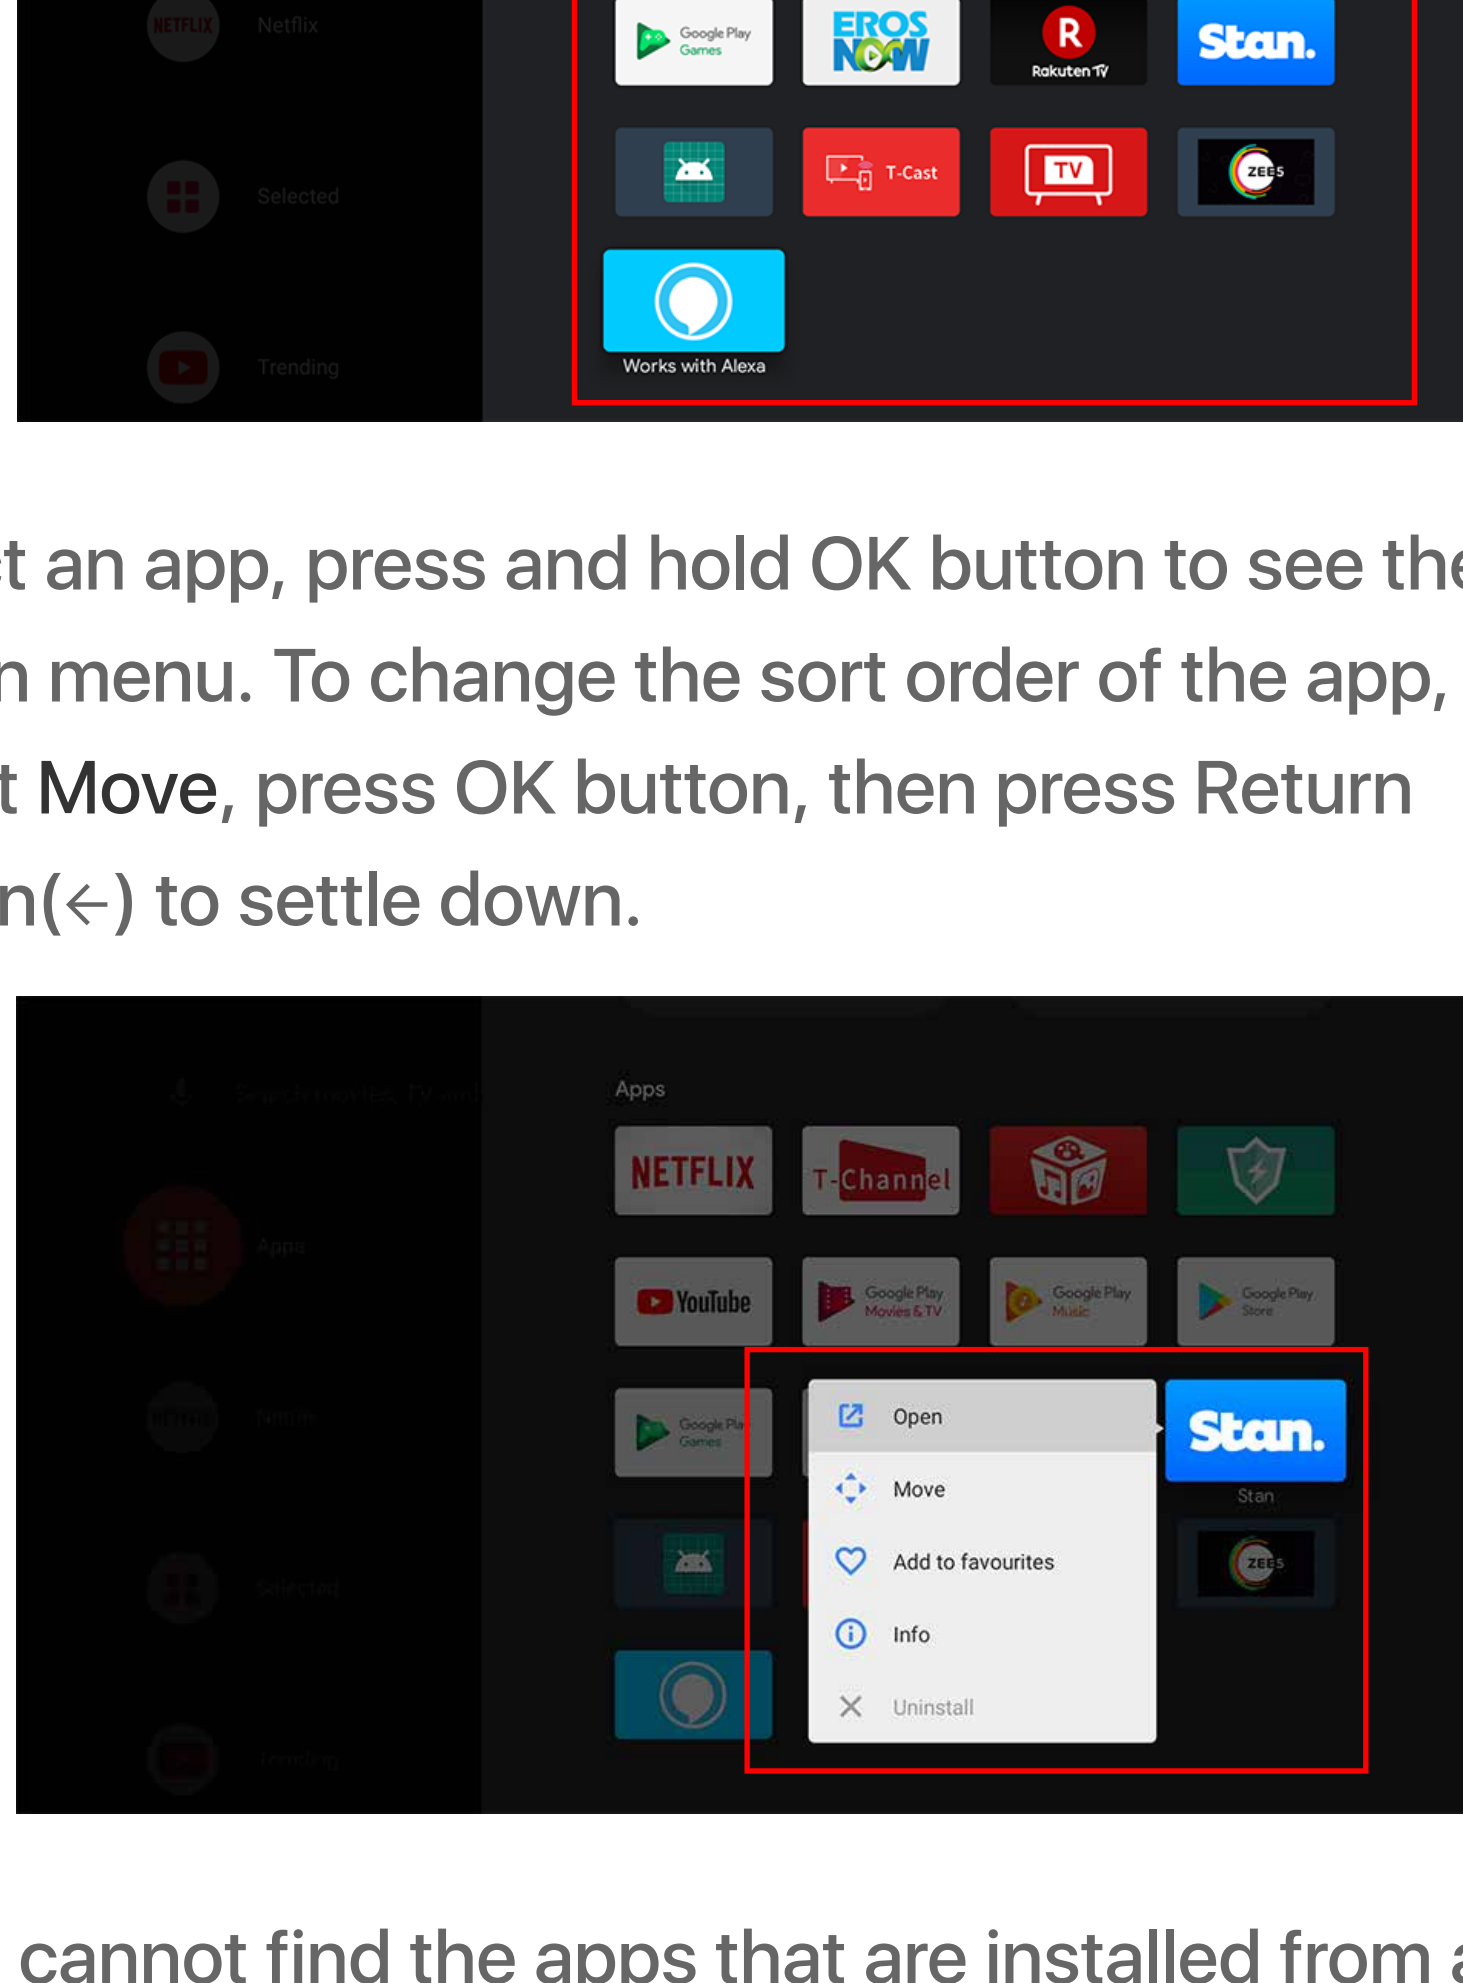


In App Manager, move the highlight to Installation, press OK button to open the USB device, then select the app you want to install.

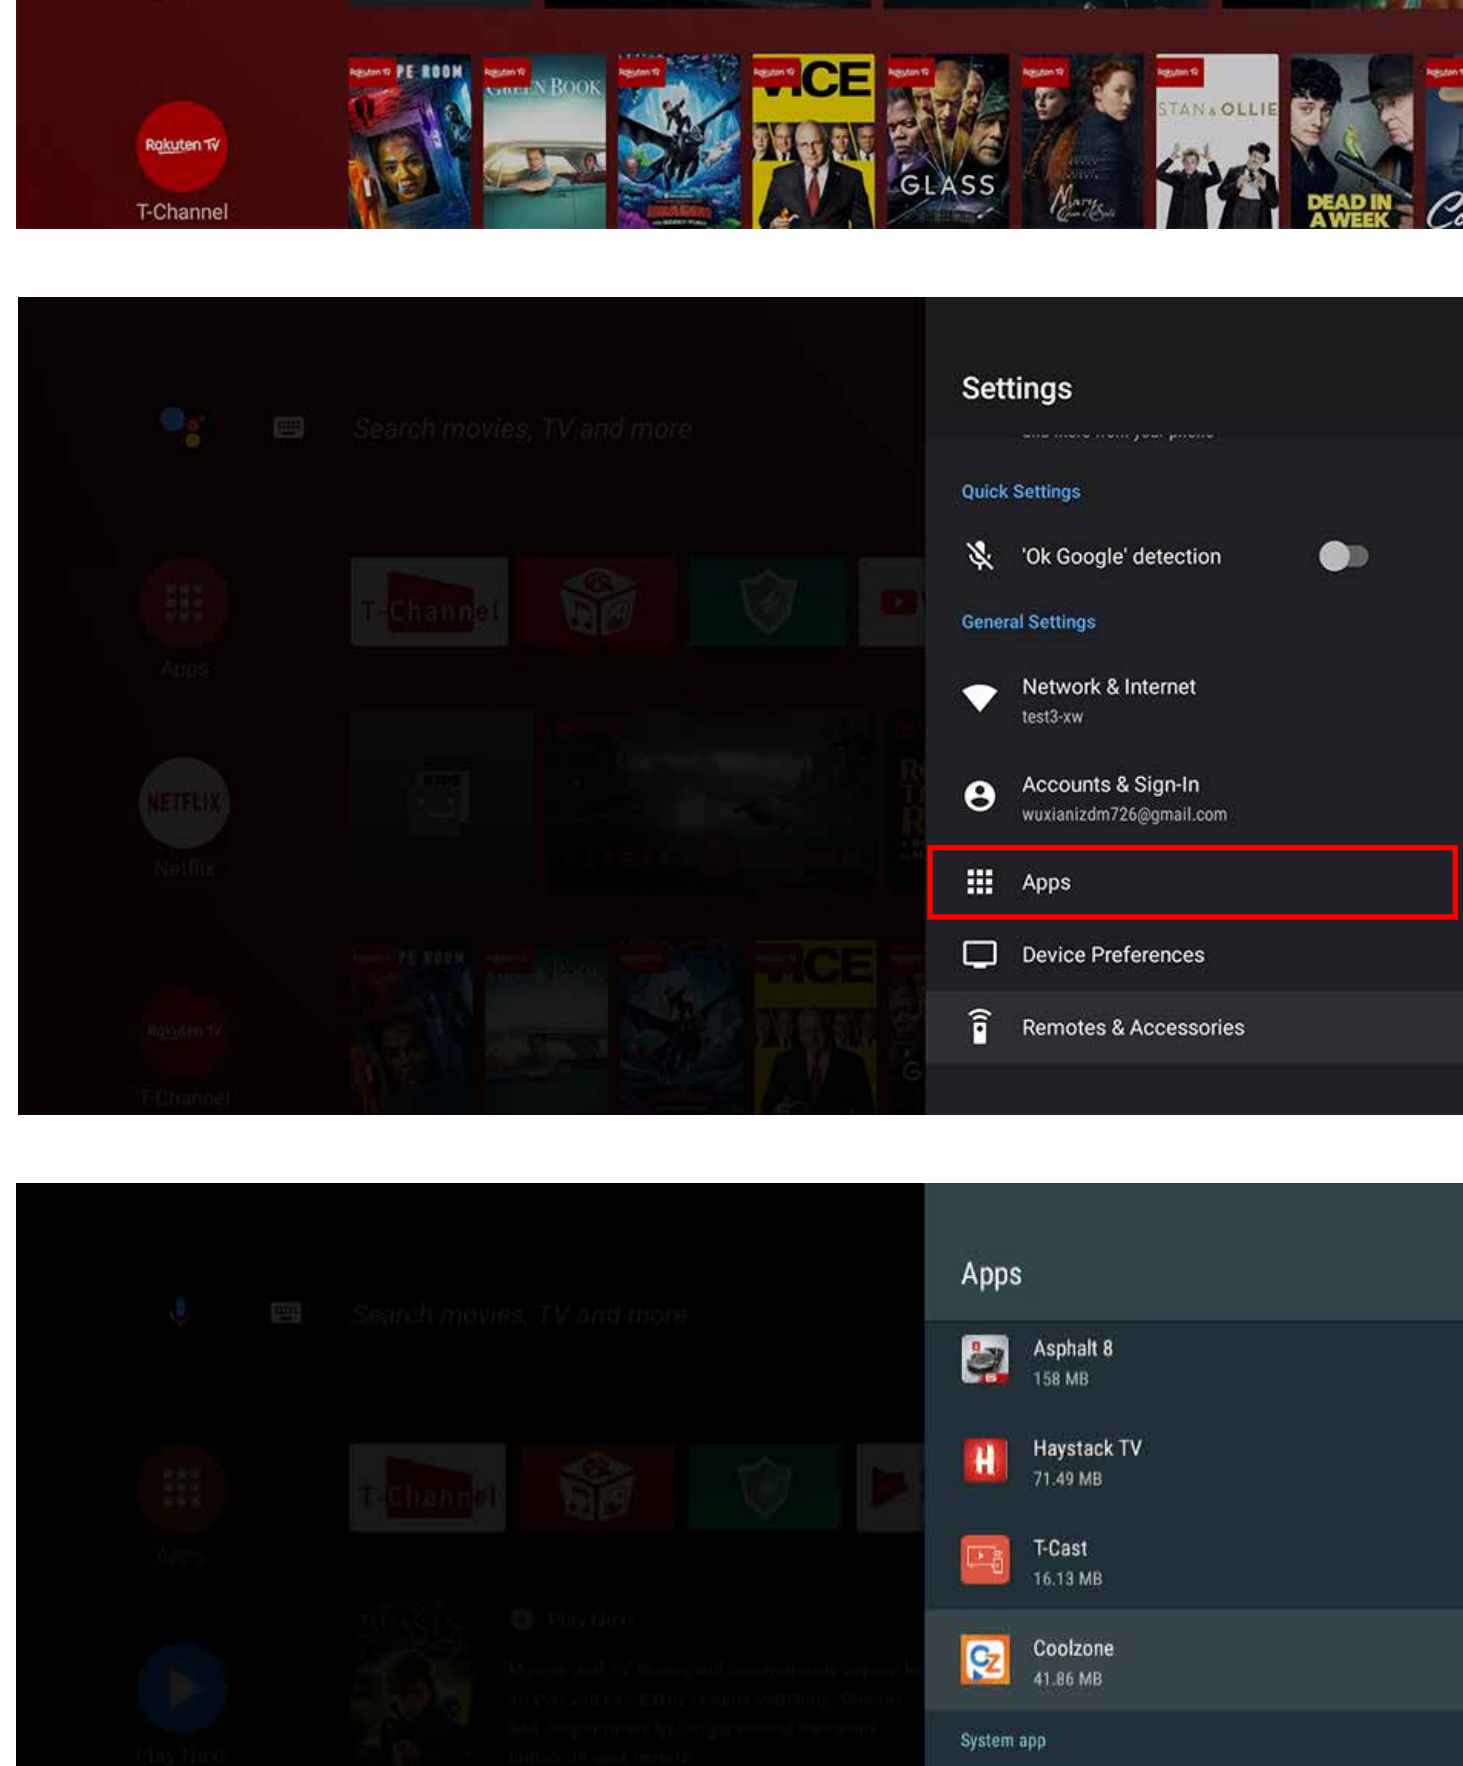


## Finding Installed Apps


 
All the apps you have installed are displayed in Apps ( ⇨ > Apps). Or, you can press and hold ⇨ Homepage button as a shortcut to Apps.

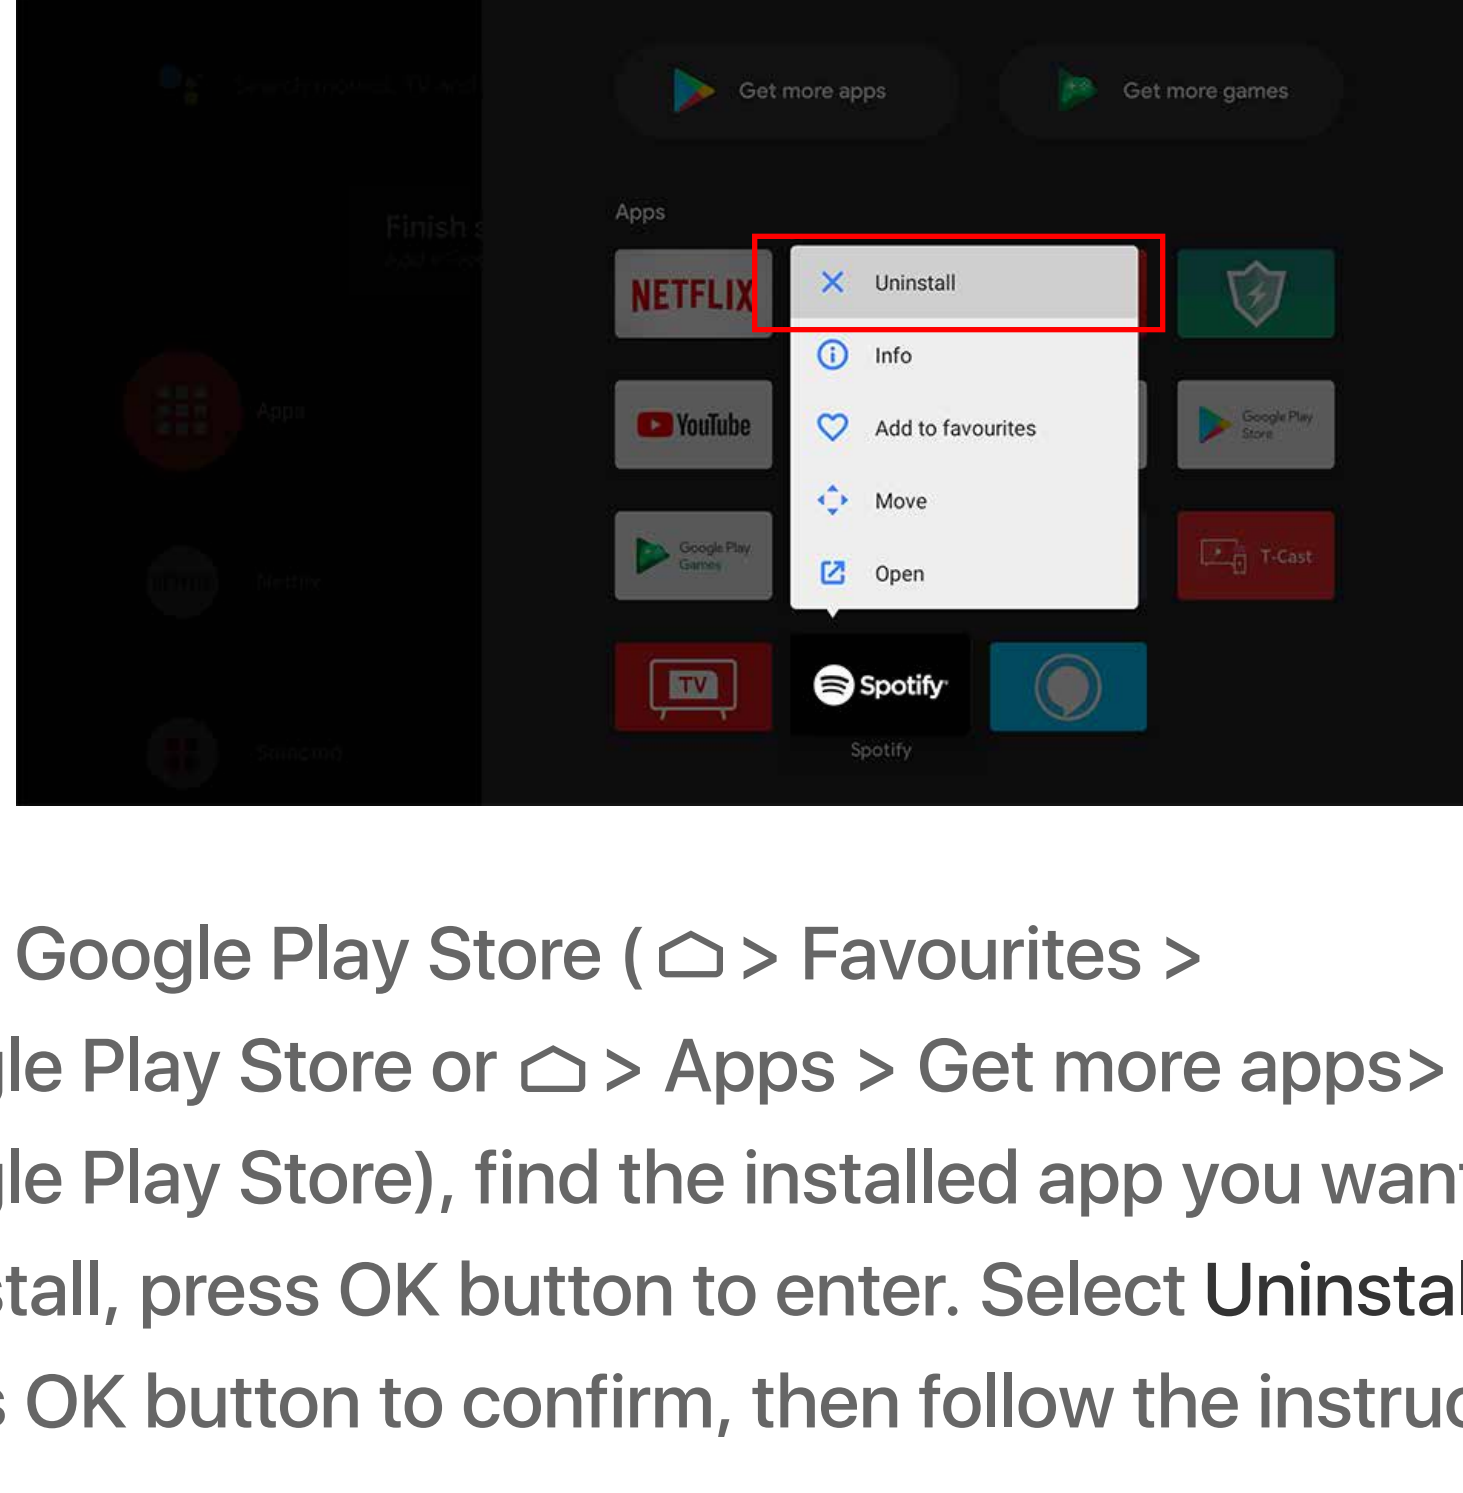

 Select an app, press and hold OK button to see the option menu. To change the sort order of the app, select Move, press OK button, then press Return button(⇨) to settle down.

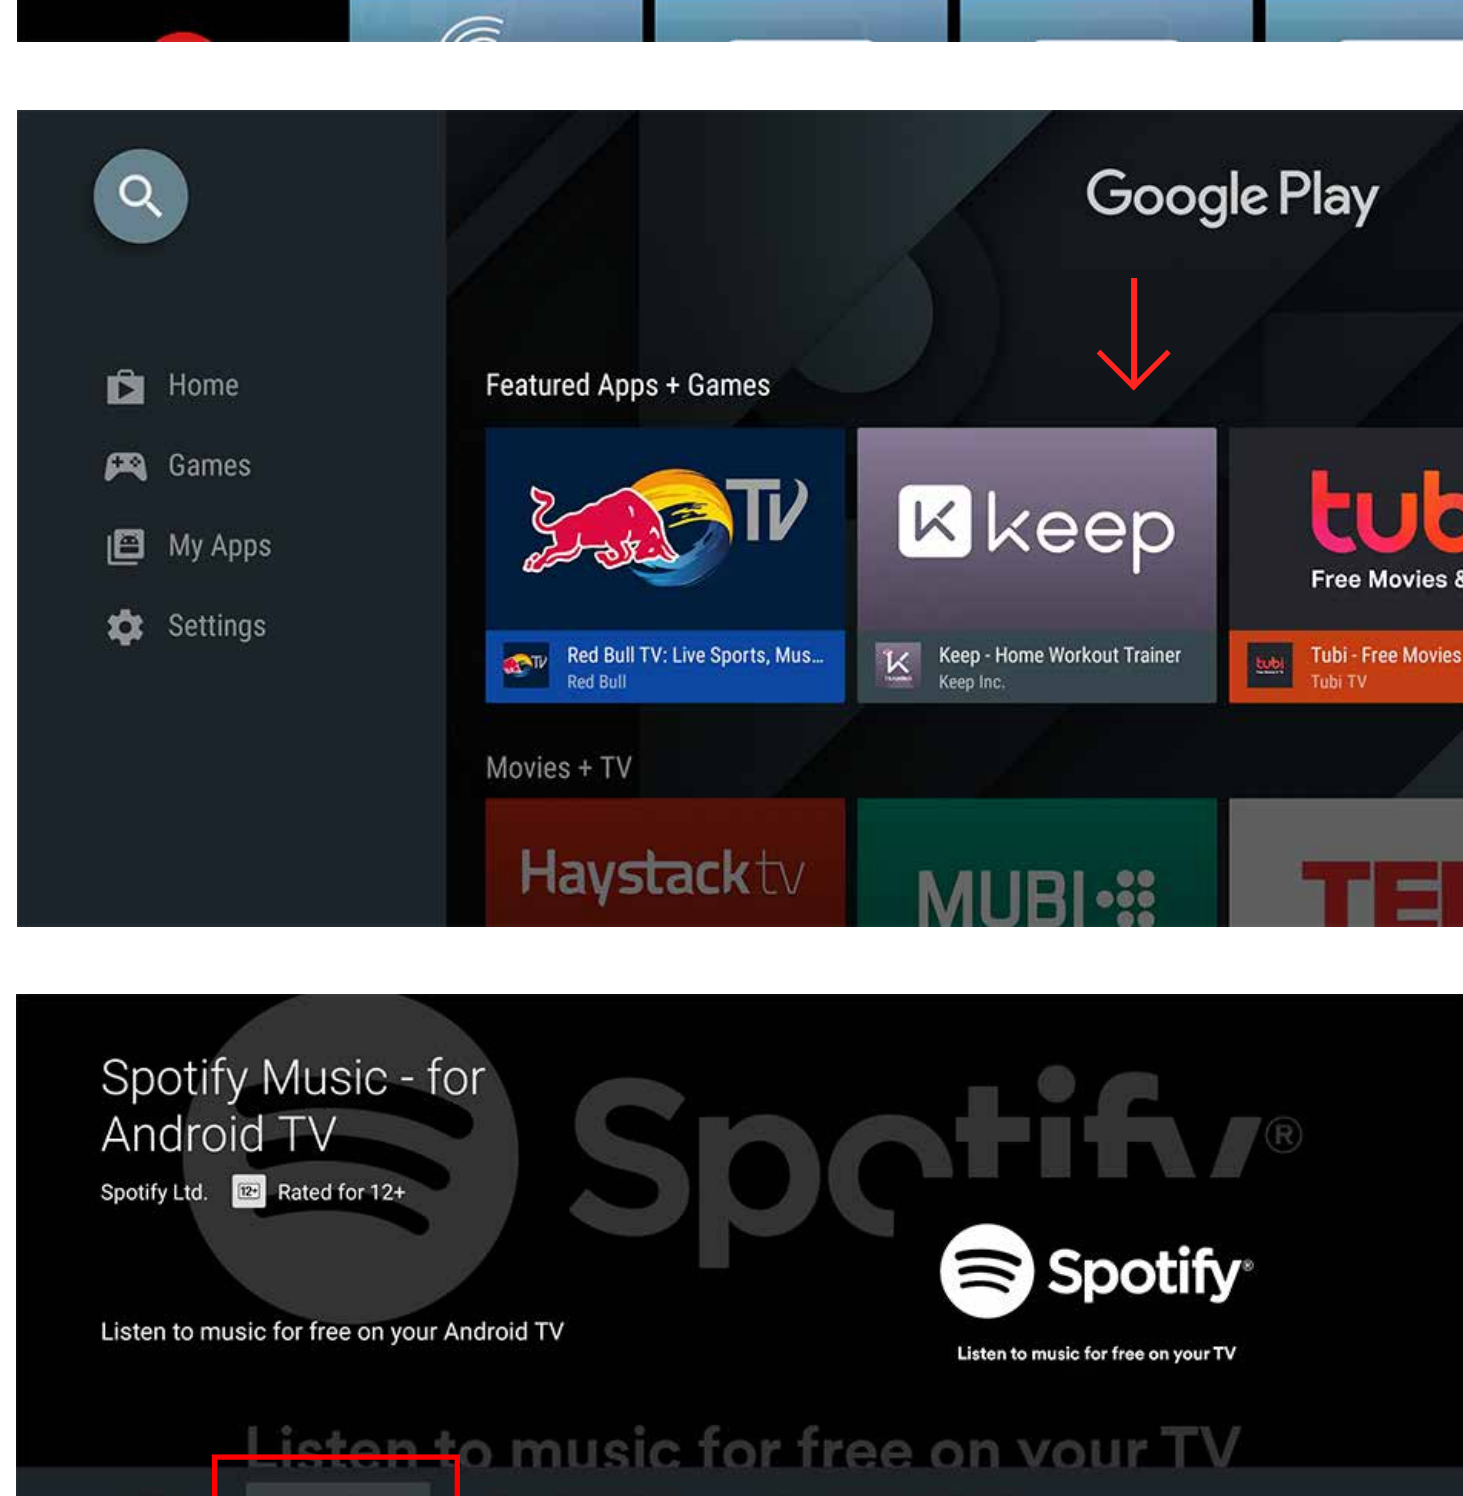

If you cannot find the apps that are installed from a USB device, go to the Home Screen, move the highlight to Setting, press OK button to enter.

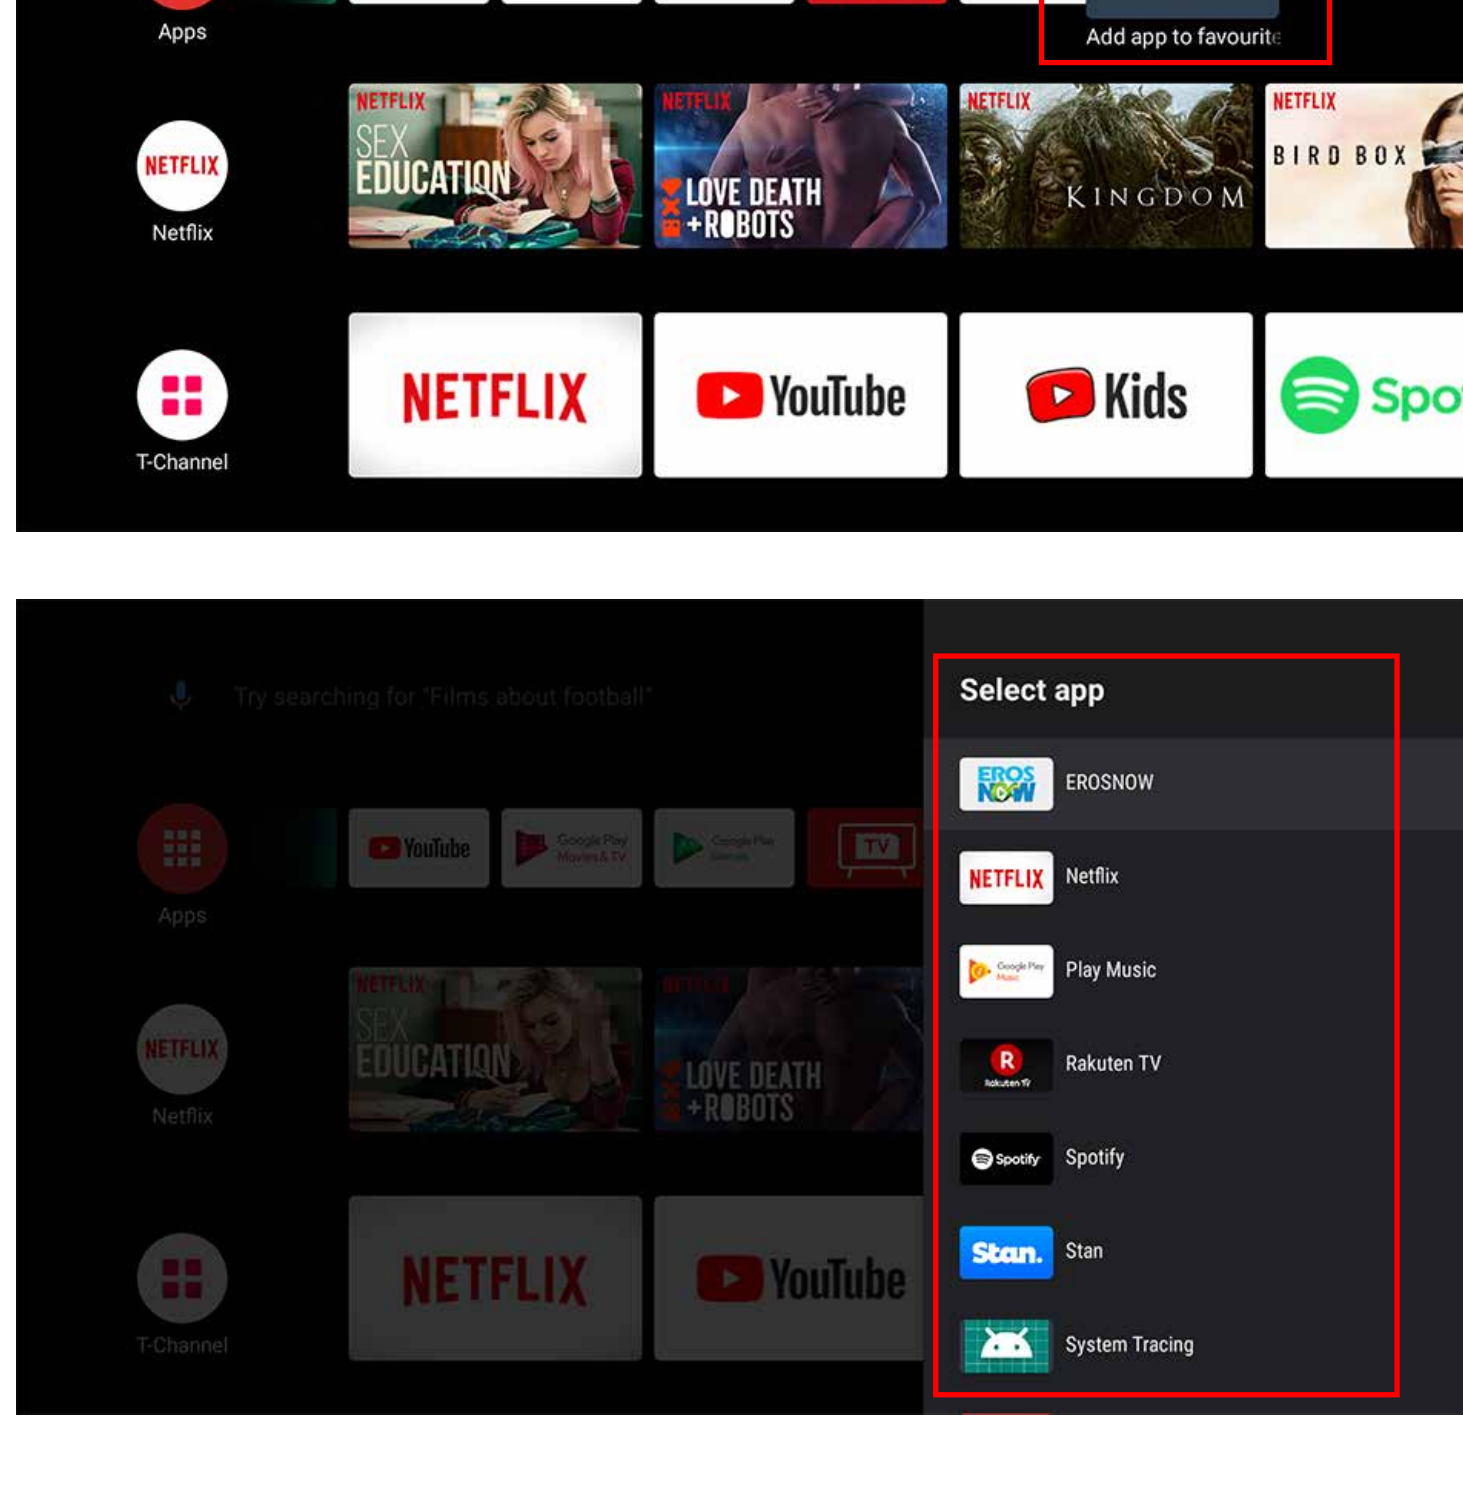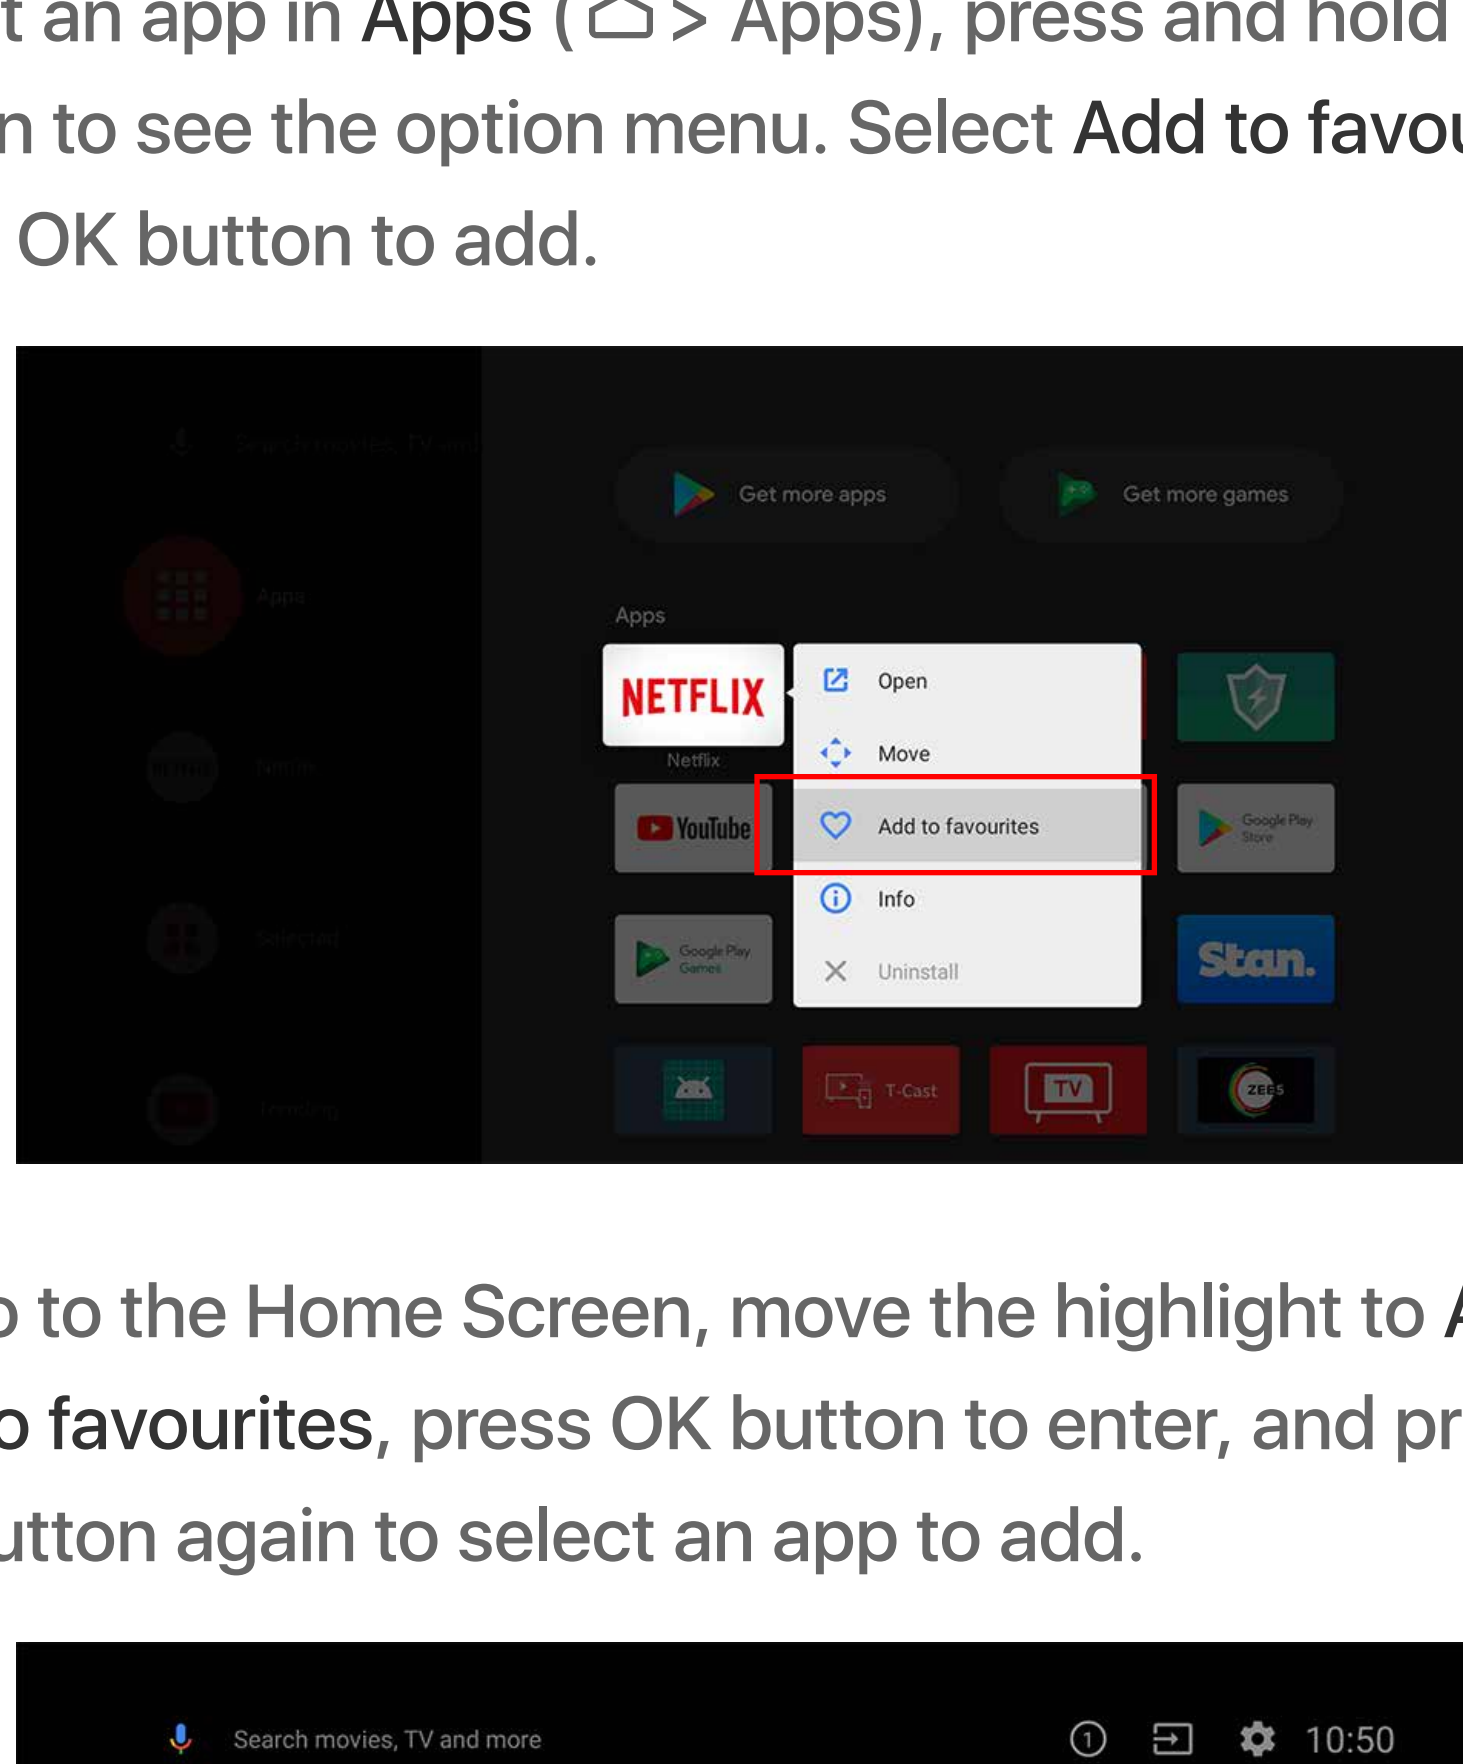

## Uninstalling Apps

Select an app in Apps ( ⇨ > Apps), press and hold OK button to see the option menu. Select Uninstall and press OK button to confirm, then follow the instruction on the screen.

- Note: Pre-installed apps cannot be deleted.



Or, in Google Play Store ( ⇨ > Favourites > Google Play Store or ⇨ > Apps > Get more apps> Google Play Store), find the installed app you want to uninstall, press OK button to enter. Select Uninstall and press OK button to confirm, then follow the instruction on the screen.



## Managing Favourite Apps

Select an app in Apps ( ⇨ > Apps), press and hold OK button to see the option menu. Select Add to favourites, press OK button to add.



Or, go to the Home Screen, move the highlight to Add app to favourites, press OK button to enter, and press OK button again to select an app to add.



 
On the Home Screen, move the highlight to an app in Favourites, press and hold OK button to see the option menu, then you can open, move or remove an app from favourites according to the on screen guide.





## Using Signal Sources


Move the highlight to Sources (⏏ > Sources), there are several connections for input from external devices. Select the one that you want to connect. After connection, press ⏏ Homepage button to return to Home Screen.

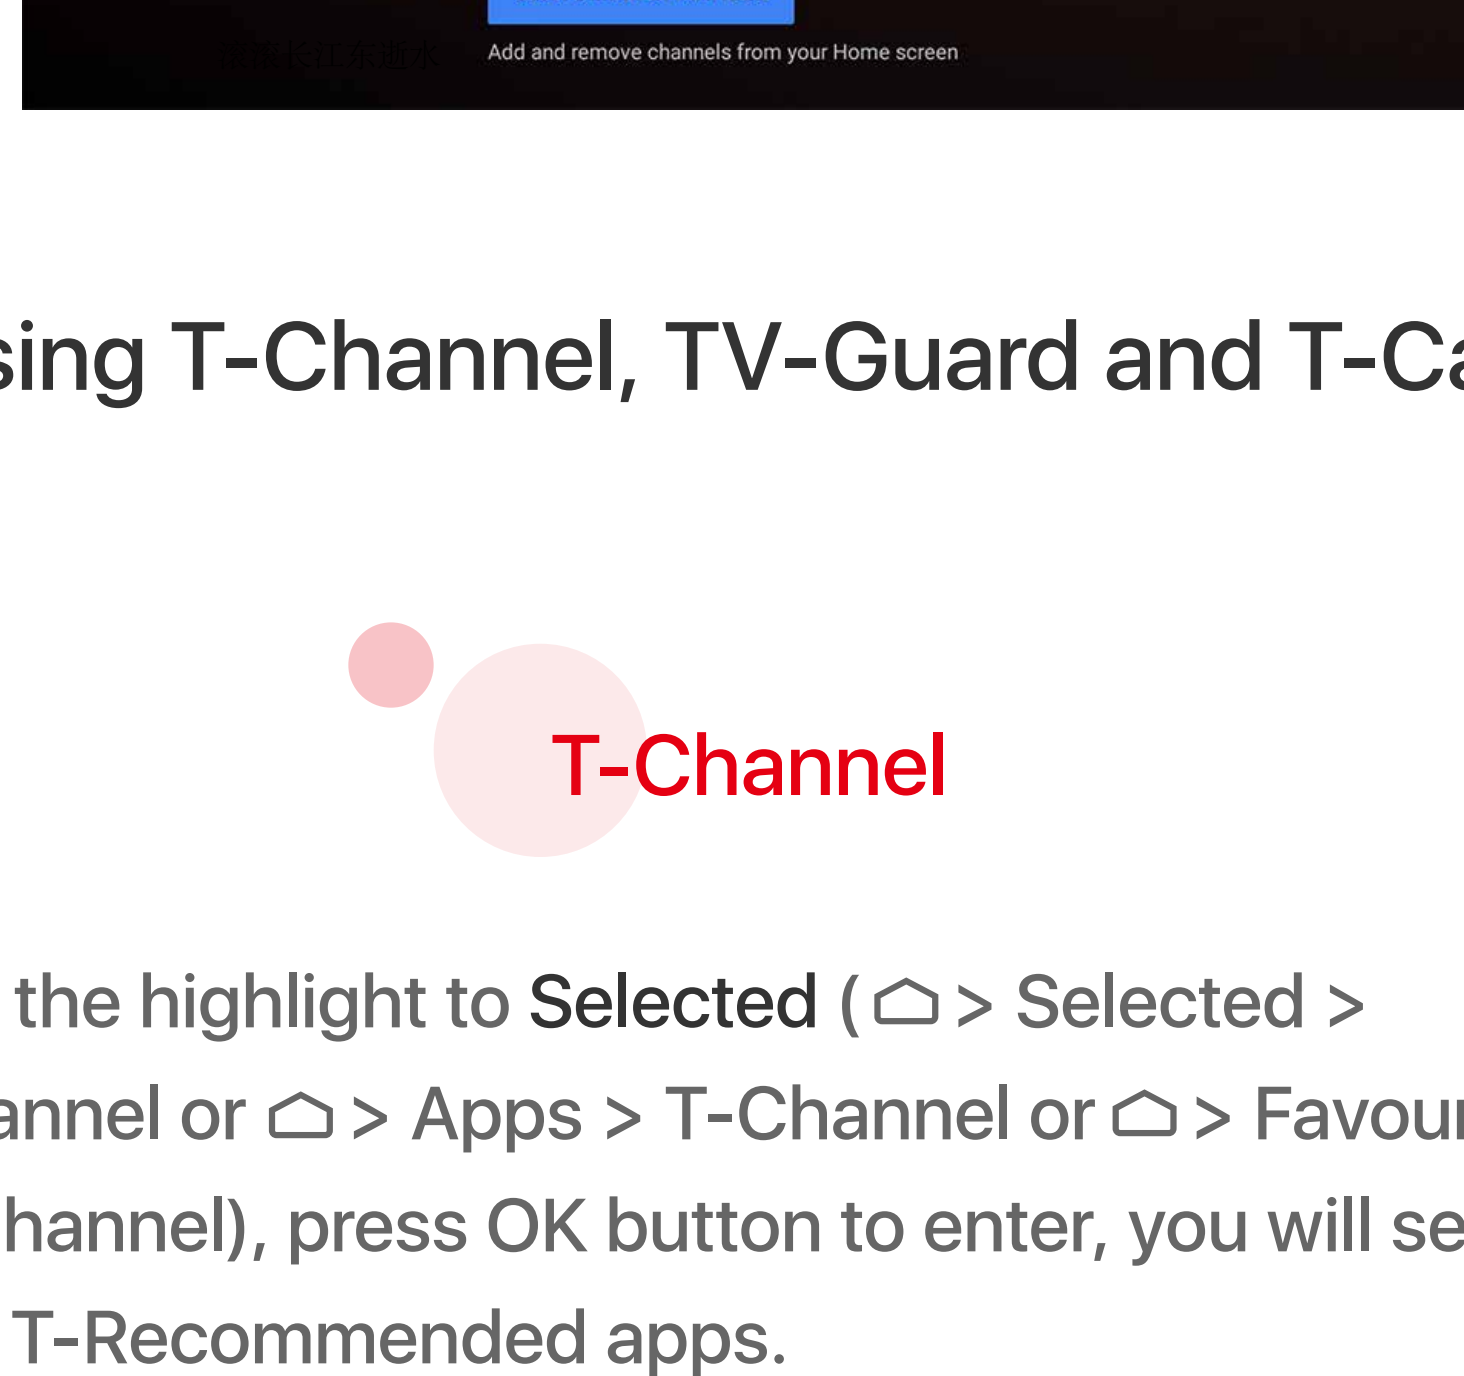

## Using T-Channel, TV-Guard and T-Cast


### T-Channel

 Move the highlight to Selected (⏏ > Selected > T-Channel or ⏏ > Apps > T-Channel or ⏏ > Favourites > T-Channel), press OK button to enter, you will see a list of T-Recommended apps.

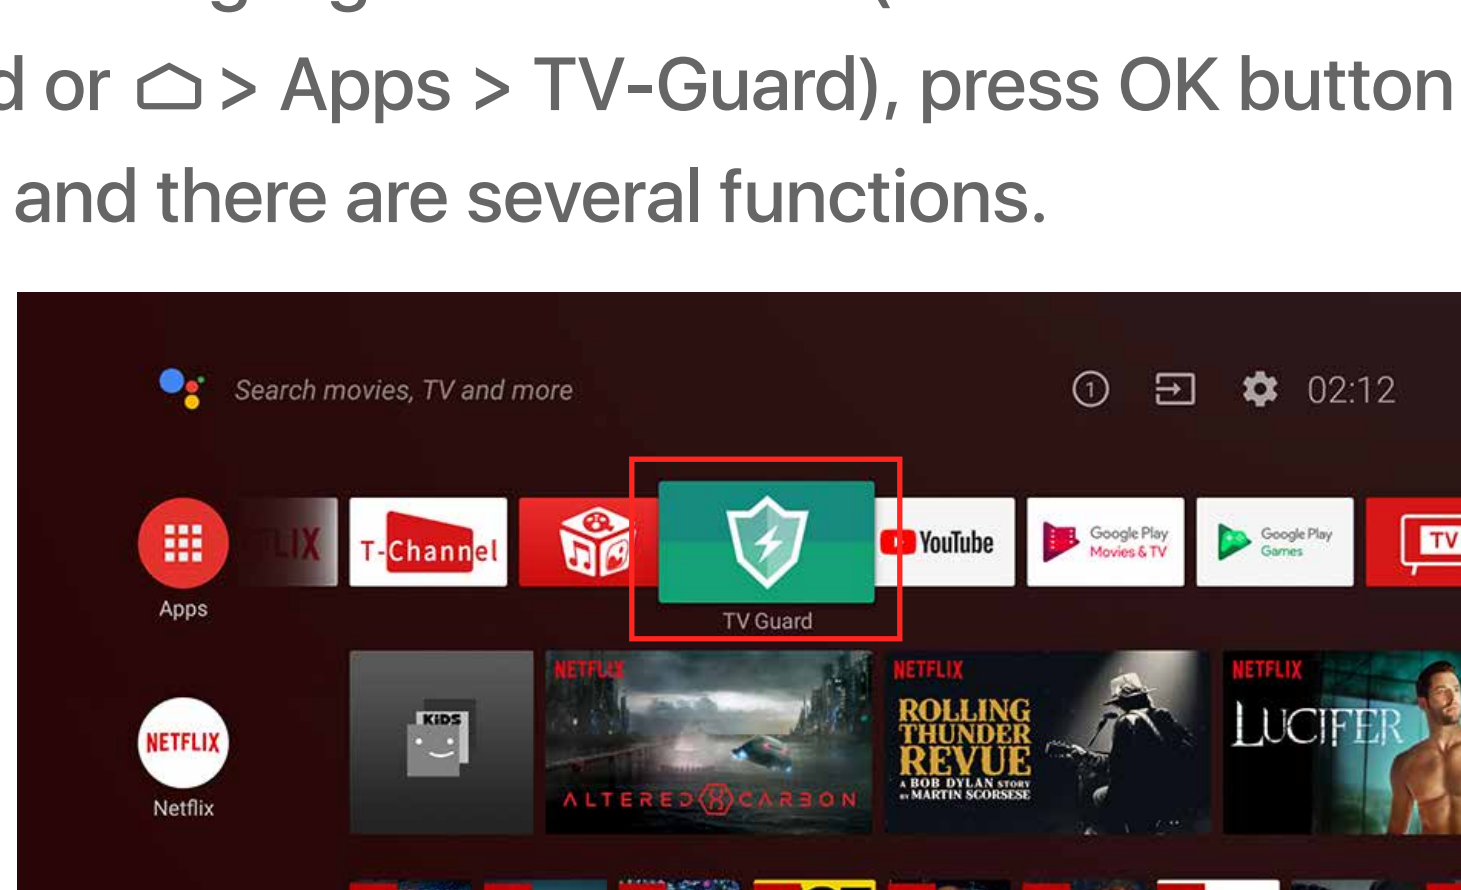


### TV-Guard



 
Move the highlight to TV Guard (⏏ > Favourites > TV Guard or ⏏ > Apps > TV-Guard), press OK button to enter and there are several functions.

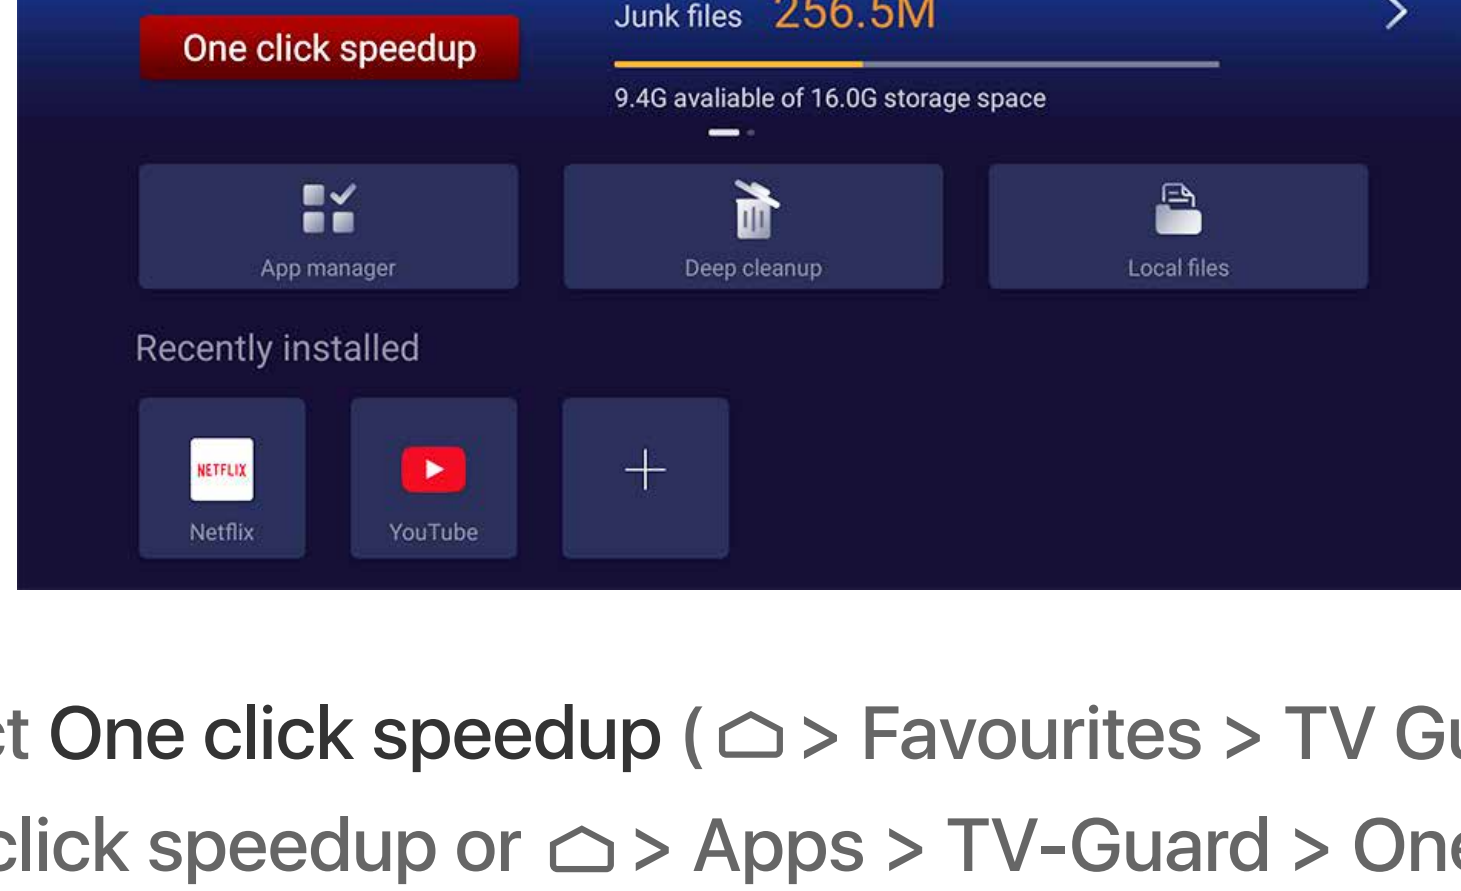

 
Select One click speedup (⏏ > Favourites > TV Guard > One click speedup or ⏏ > Apps > TV-Guard > One click speedup) it will scan and clean the junk files automatically.

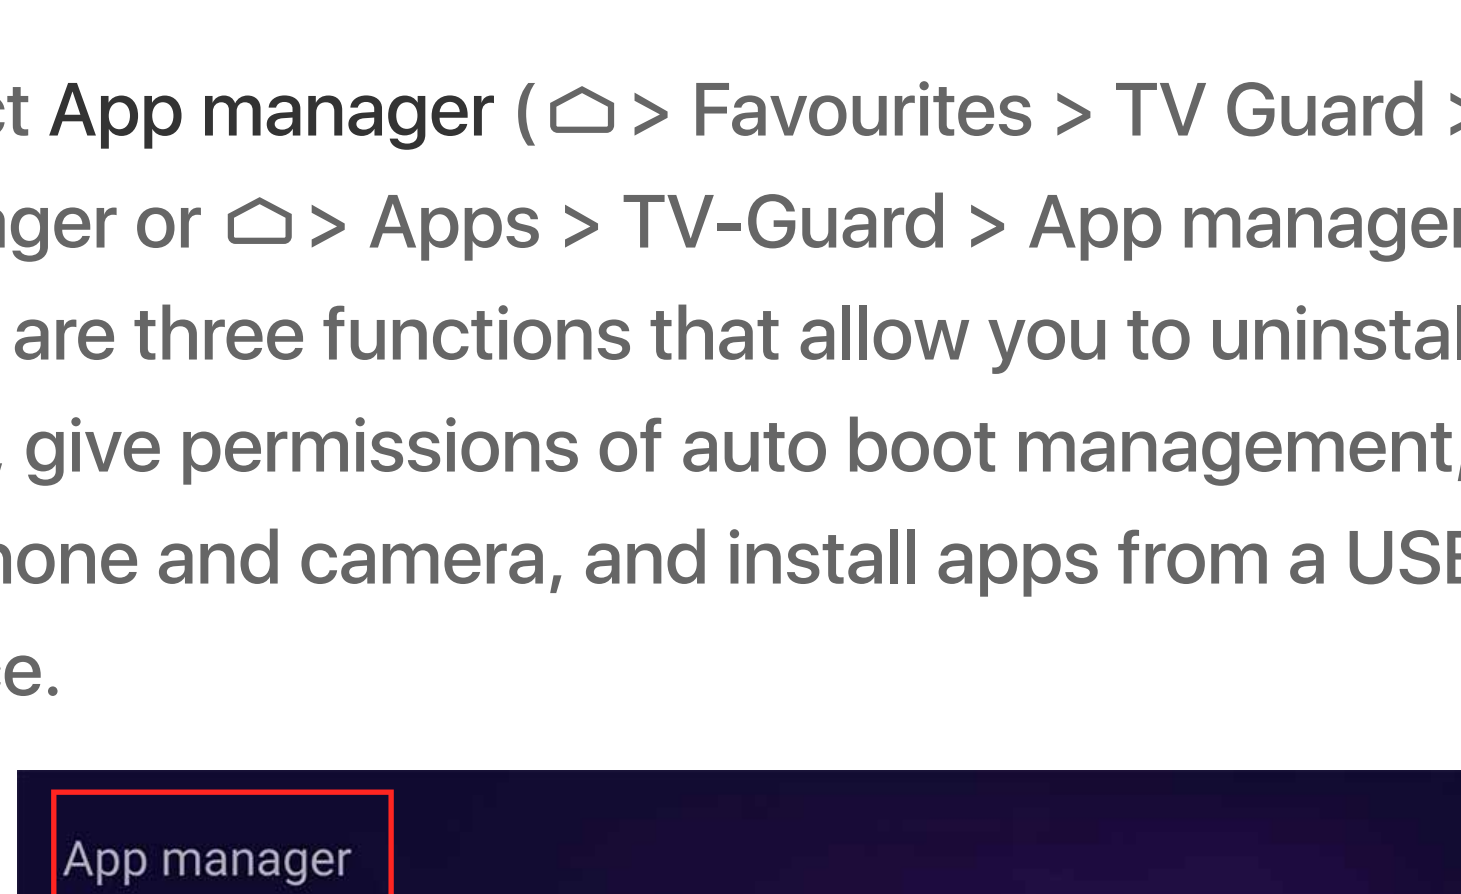



Select App manager (⏏ > Favourites > TV Guard > App manager or ⏏ > Apps > TV-Guard > App manager), there are three functions that allow you to uninstall apps, give permissions of auto boot management, microphone and camera, and install apps from a USB device.

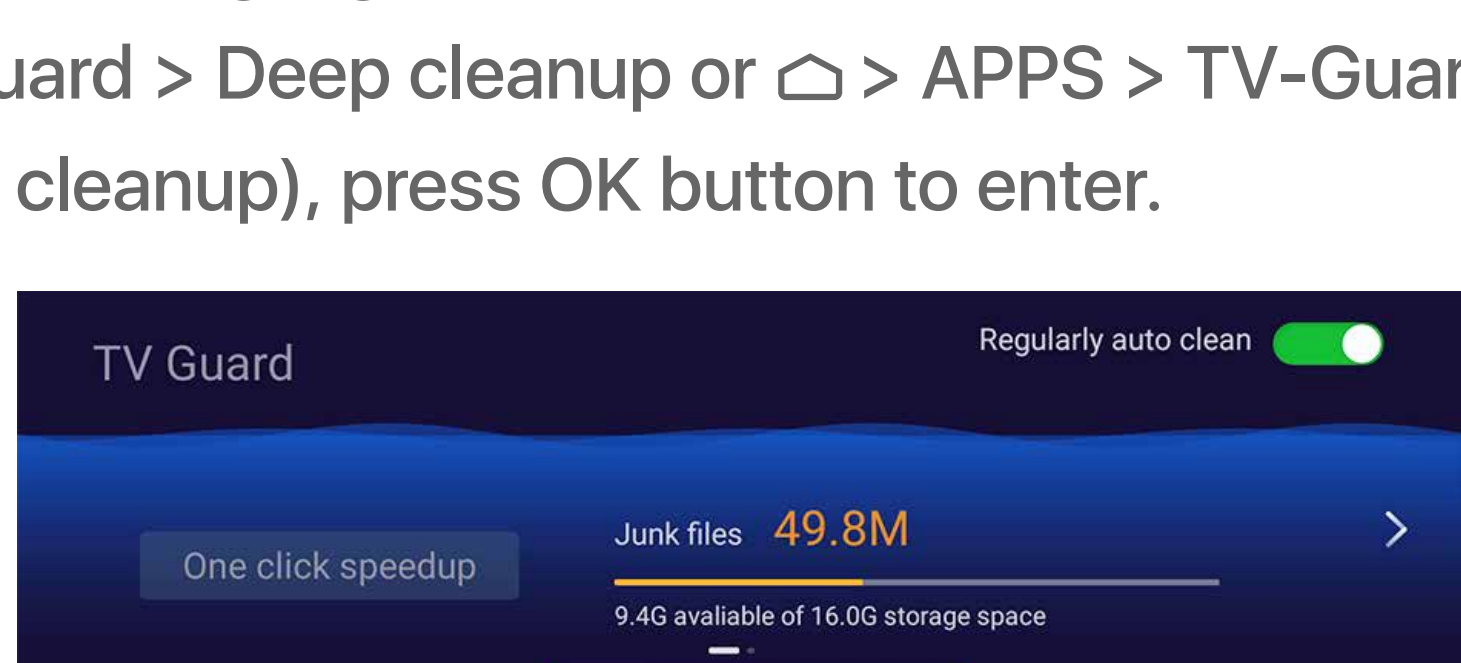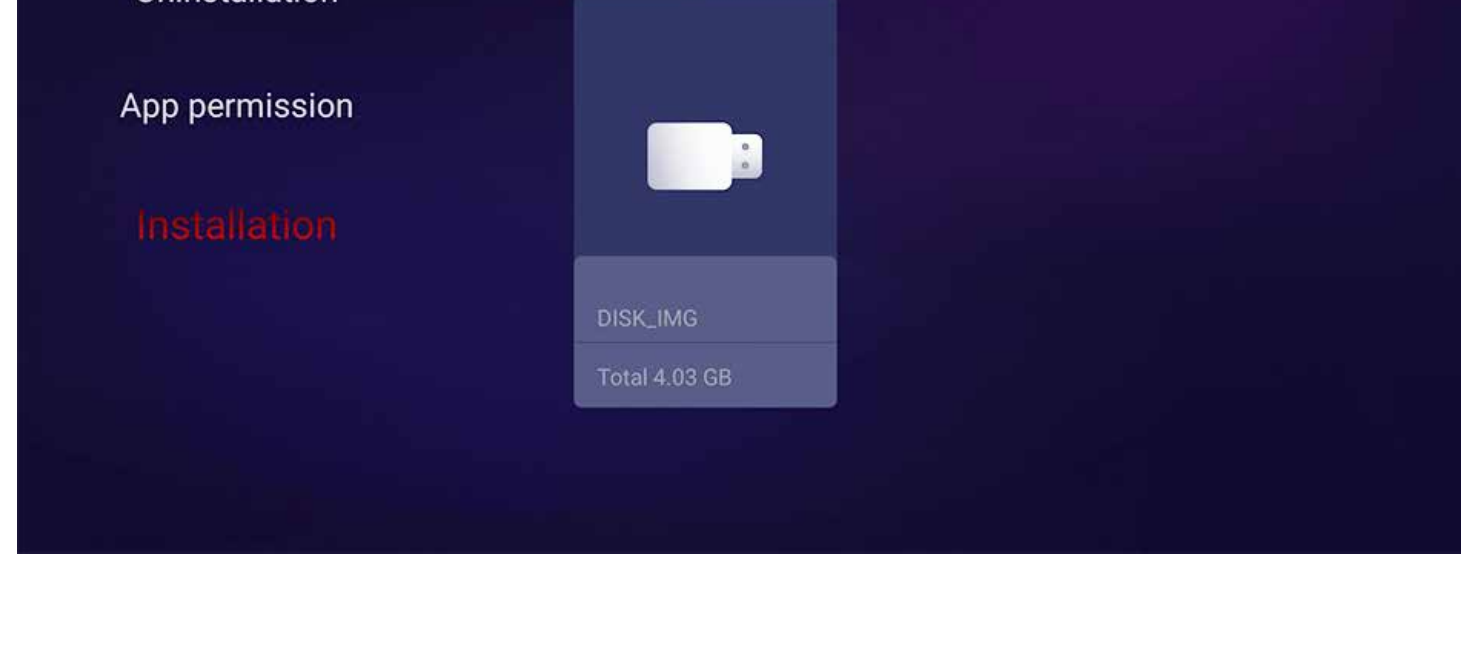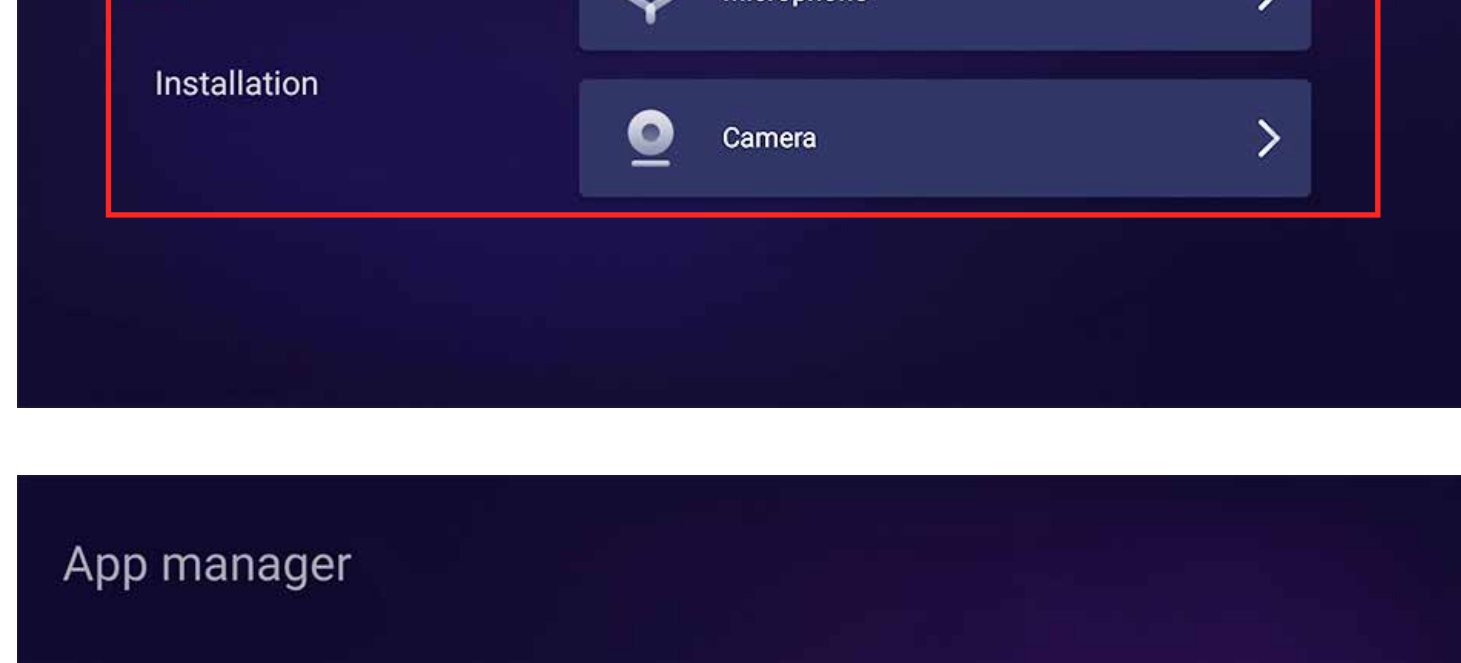

Move the highlight to Deep cleanup (⏏ > Favourites > TV Guard > Deep cleanup or ⏏ > APPS > TV-Guard > Deep cleanup), press OK button to enter.

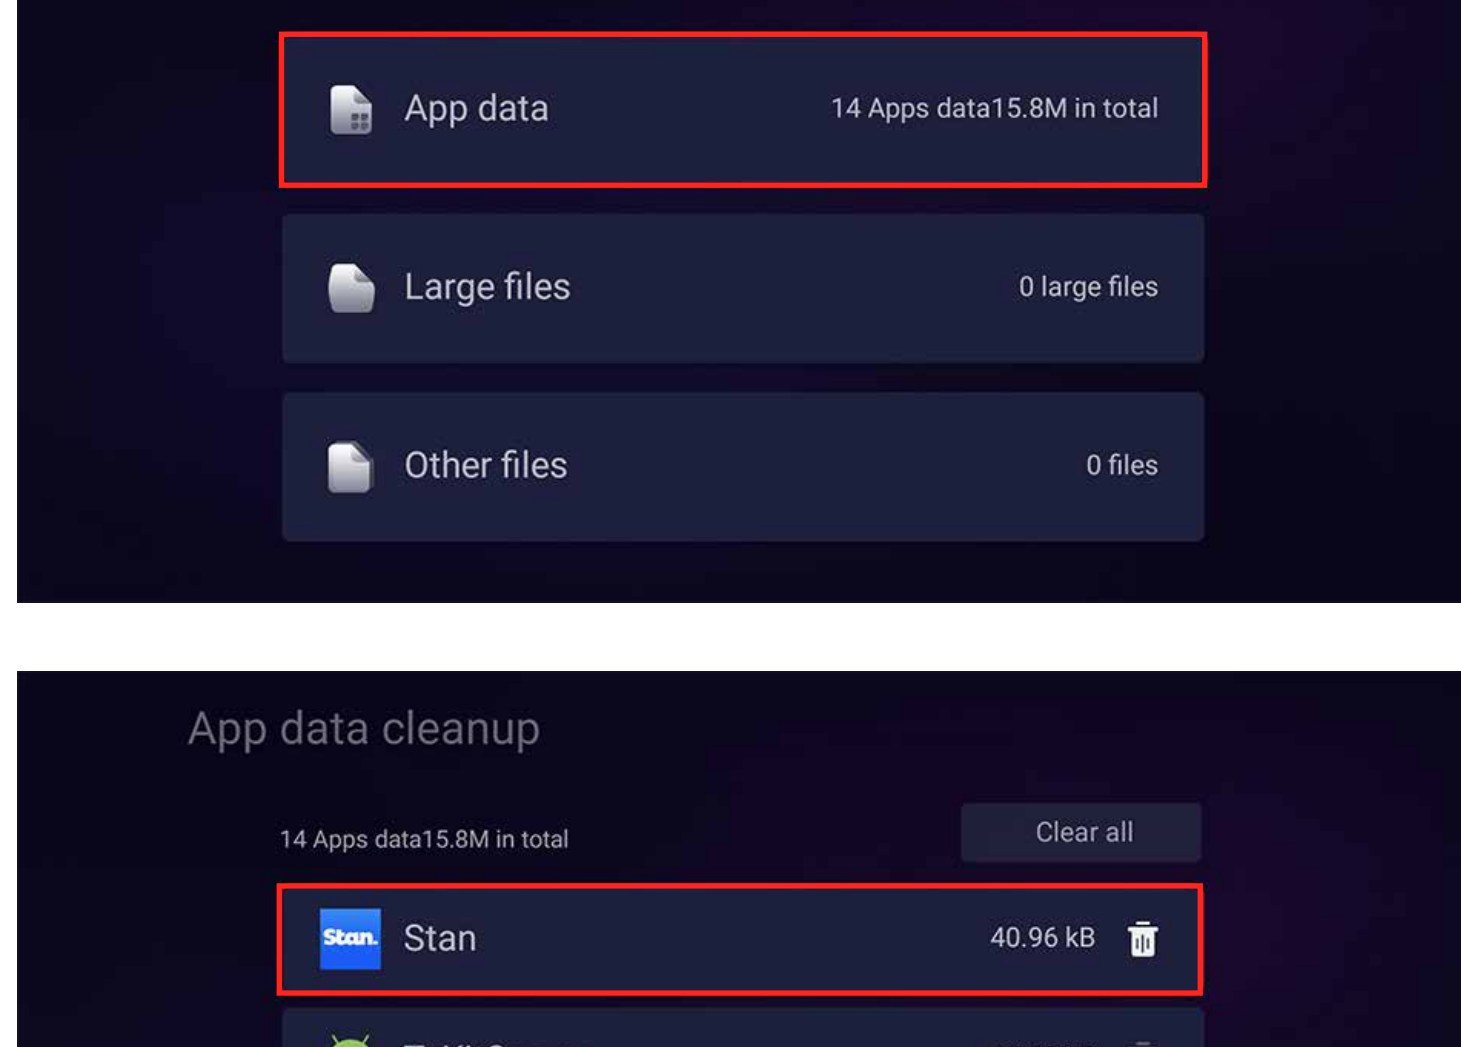


Select App data, you can clean-up caches in apps.


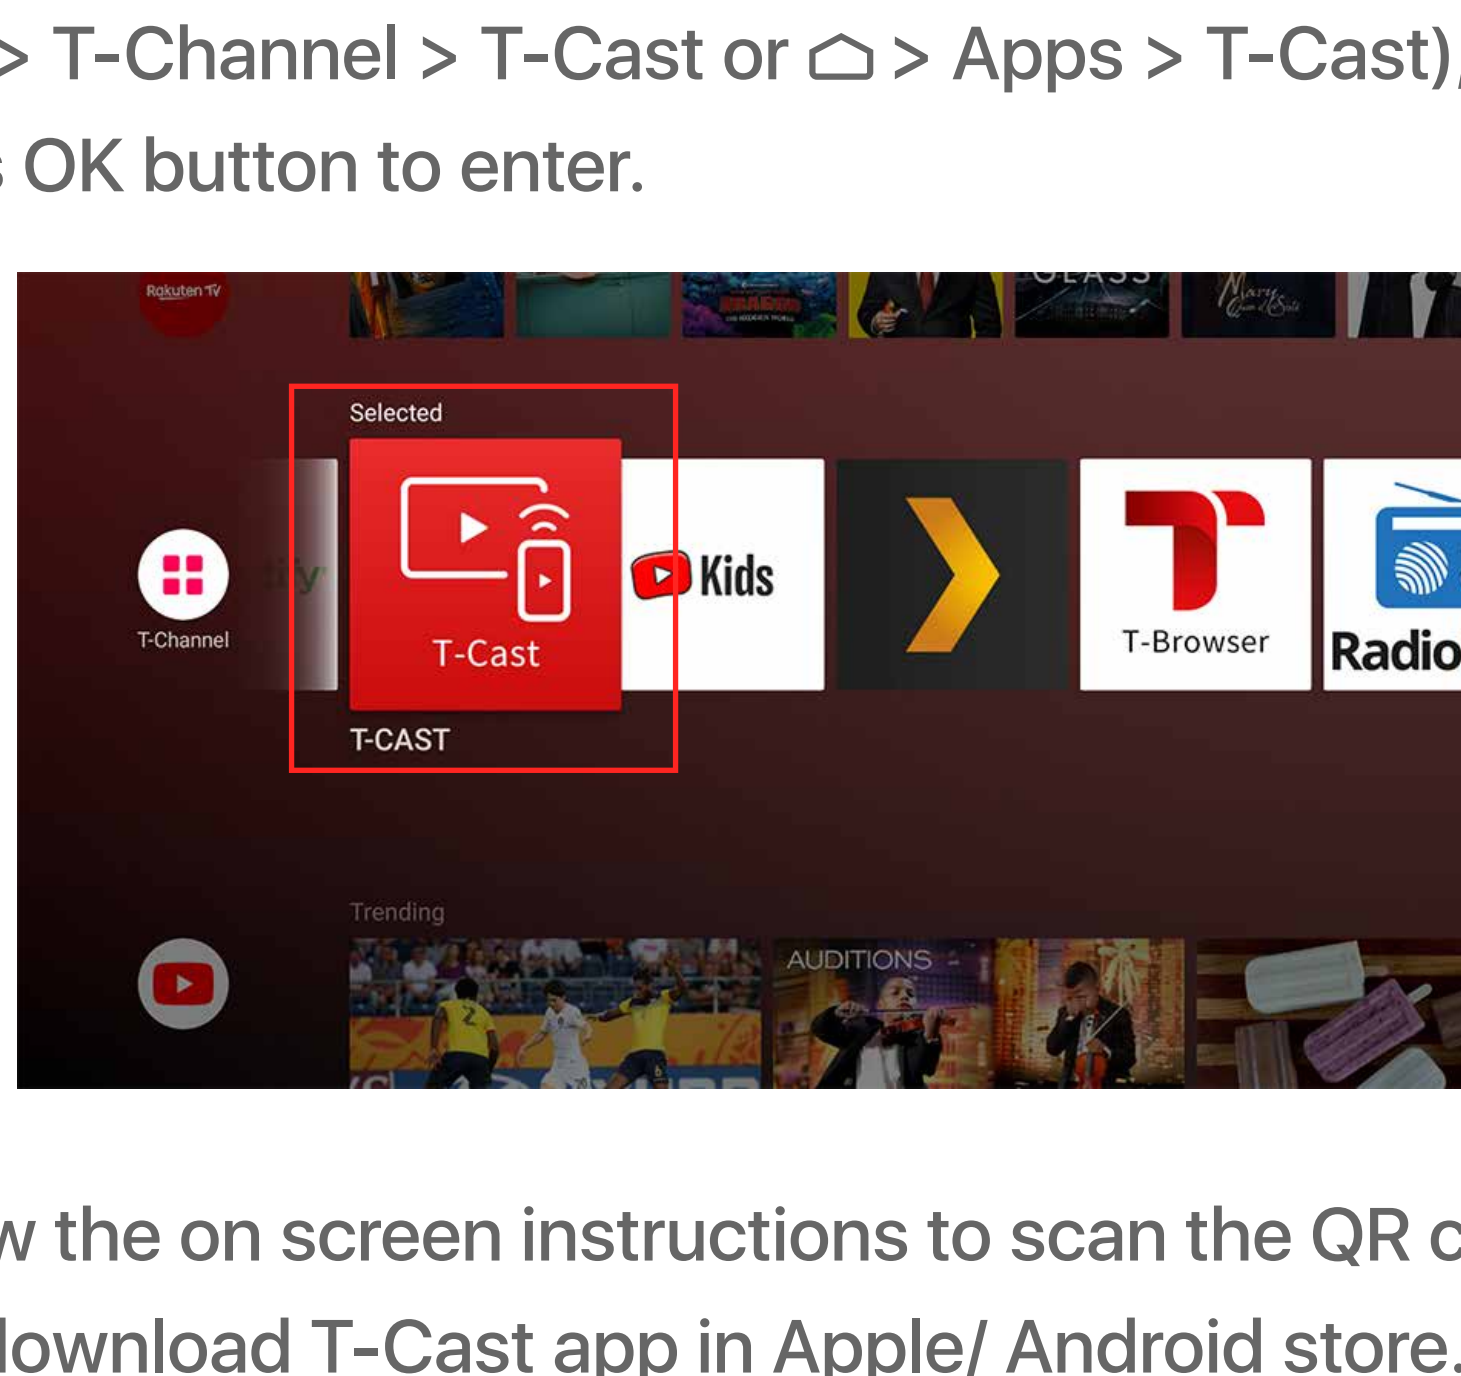
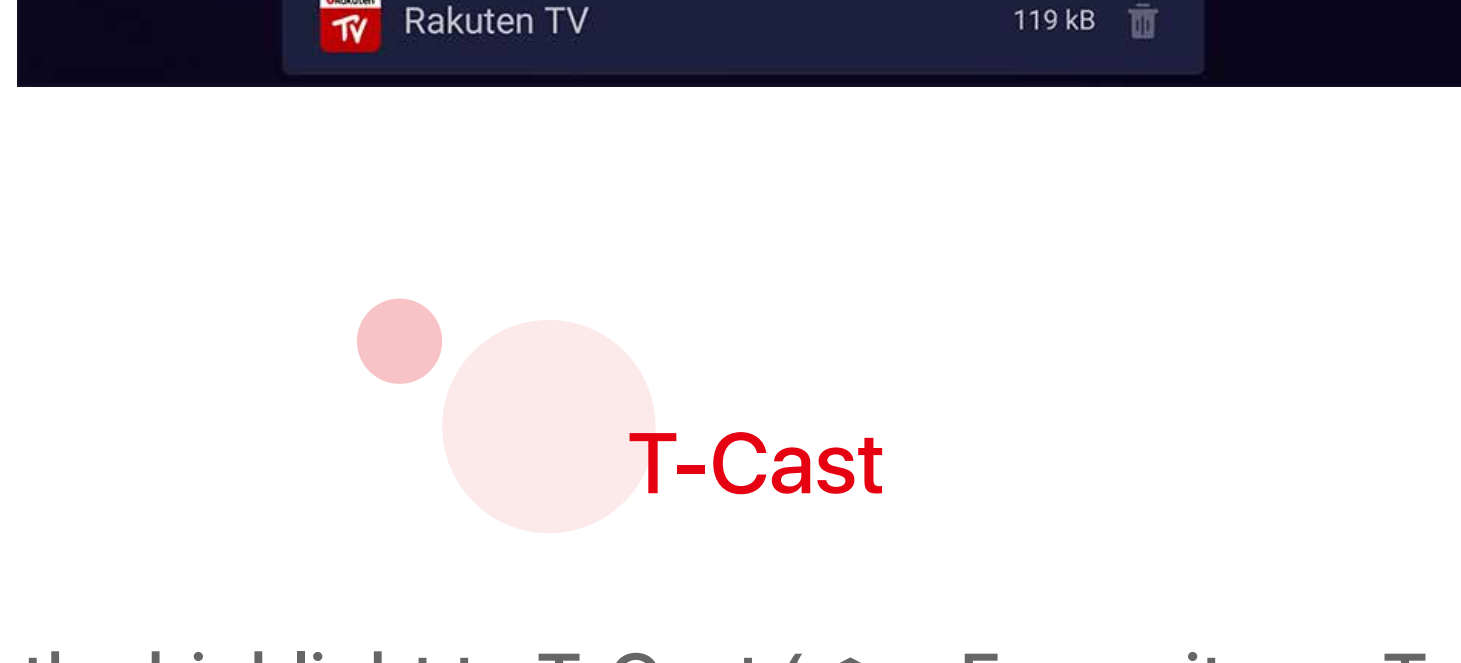


### T-Cast

Move the highlight to T-Cast (⏏ > Favourites > T-Cast or ⏏ > T-Channel > T-Cast or ⏏ > Apps > T-Cast), press OK button to enter.

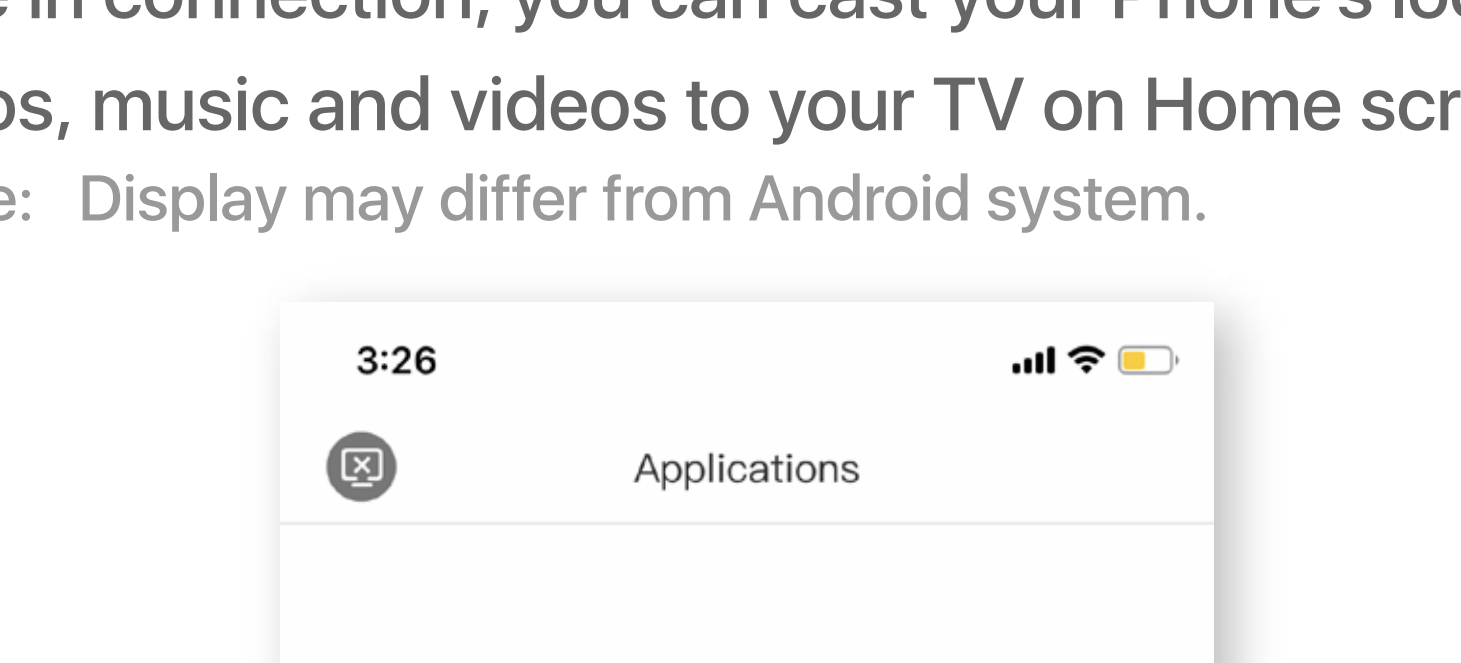

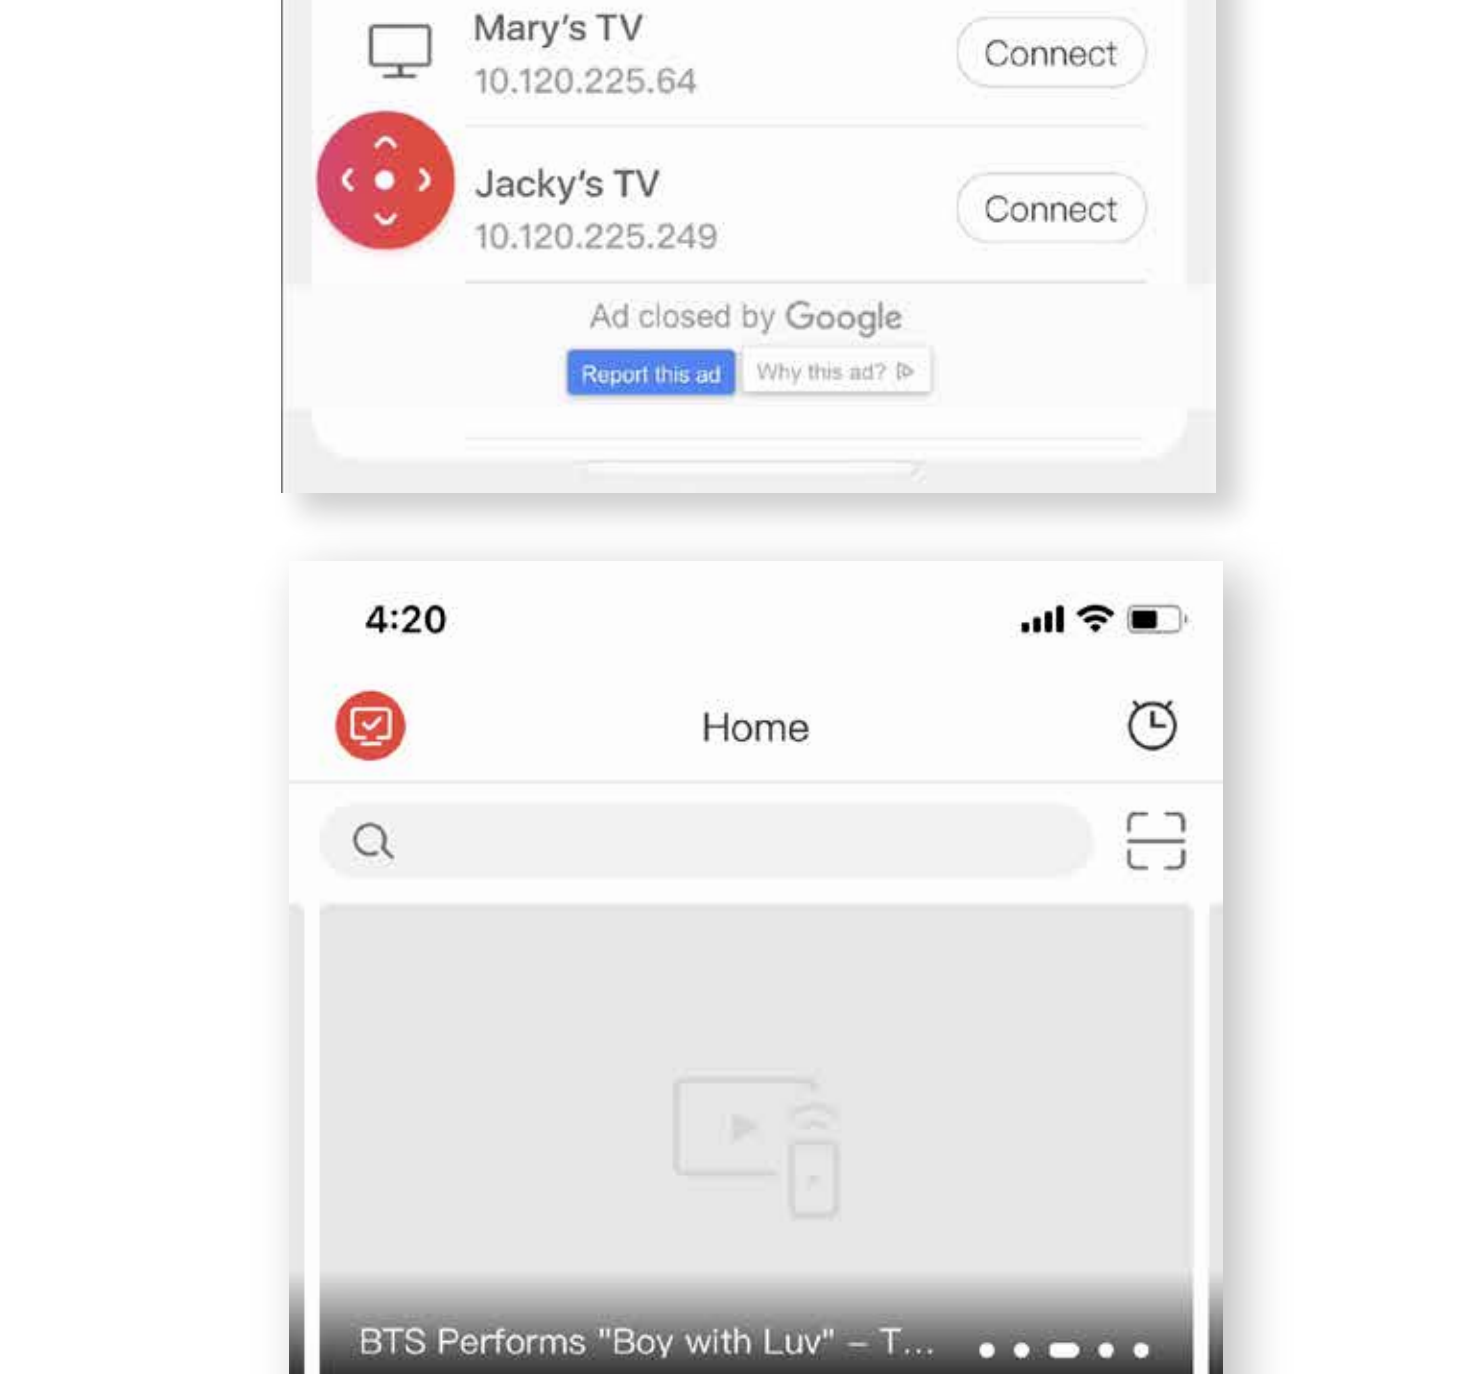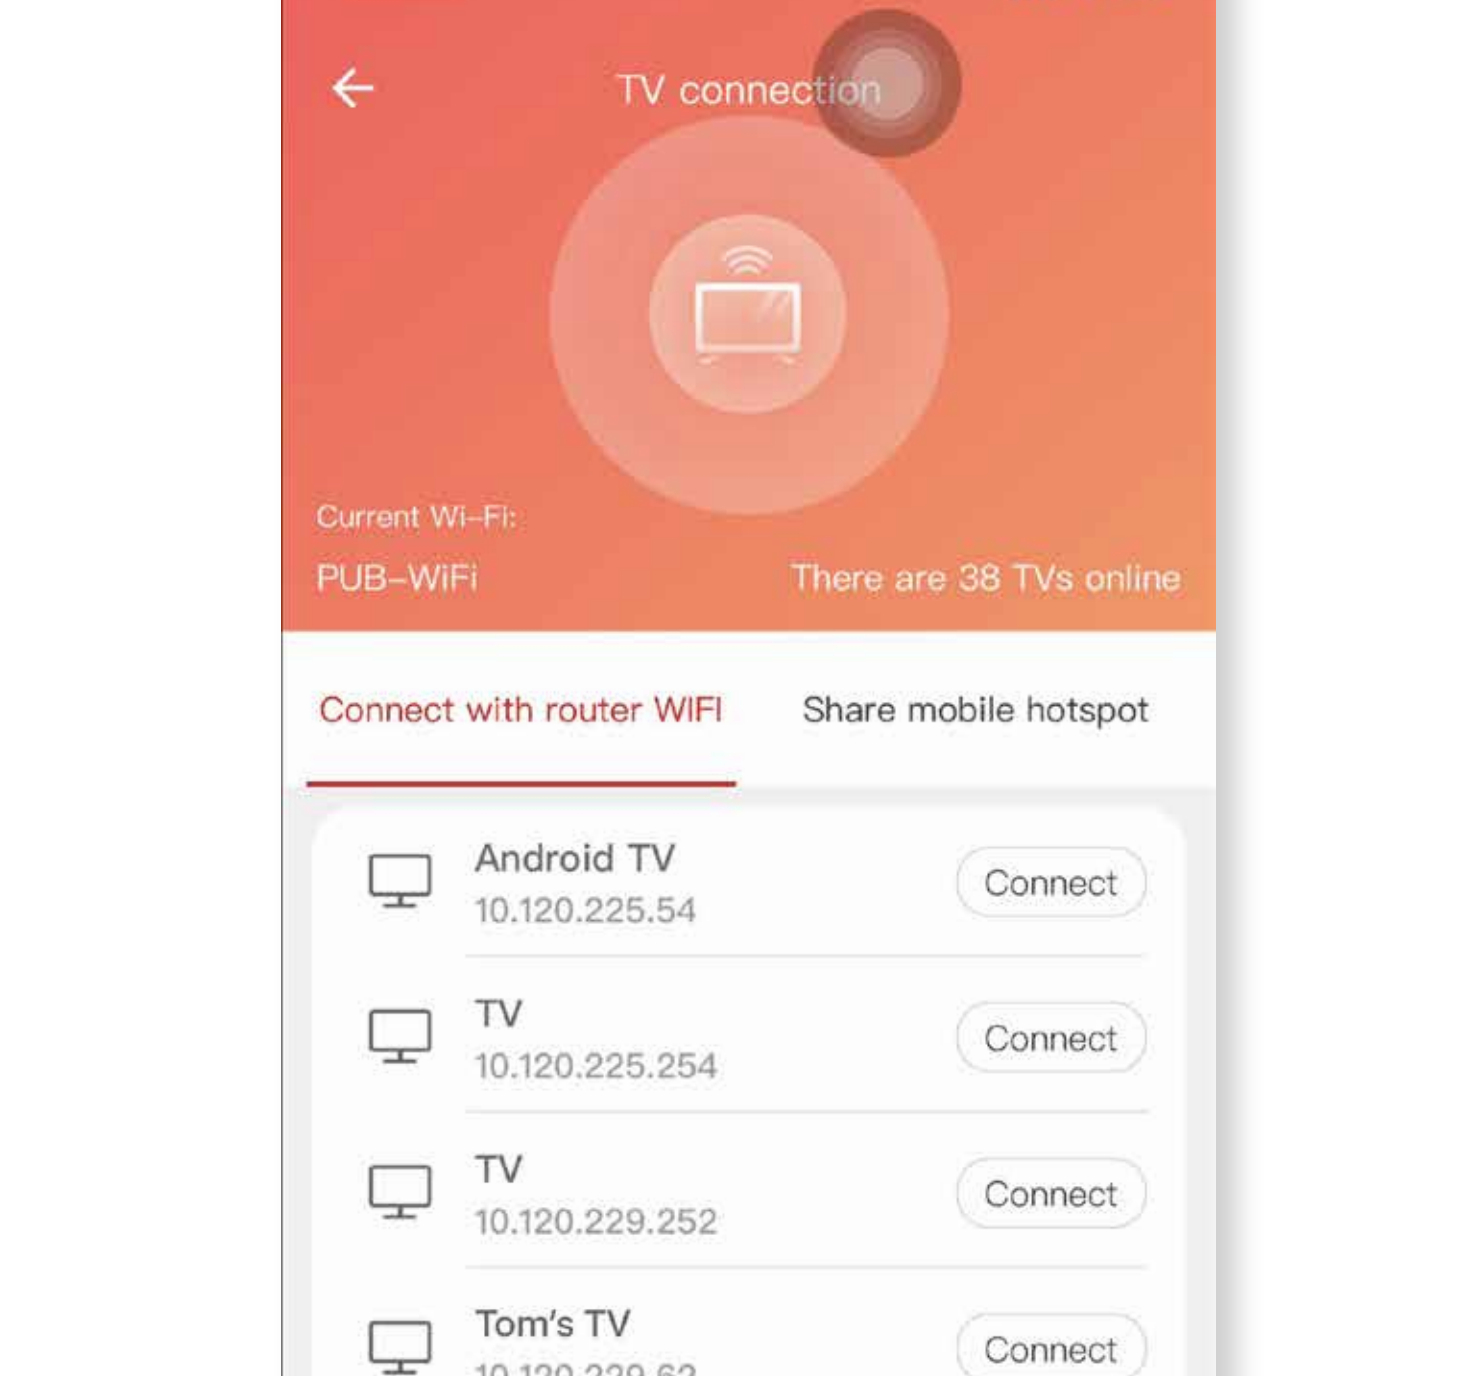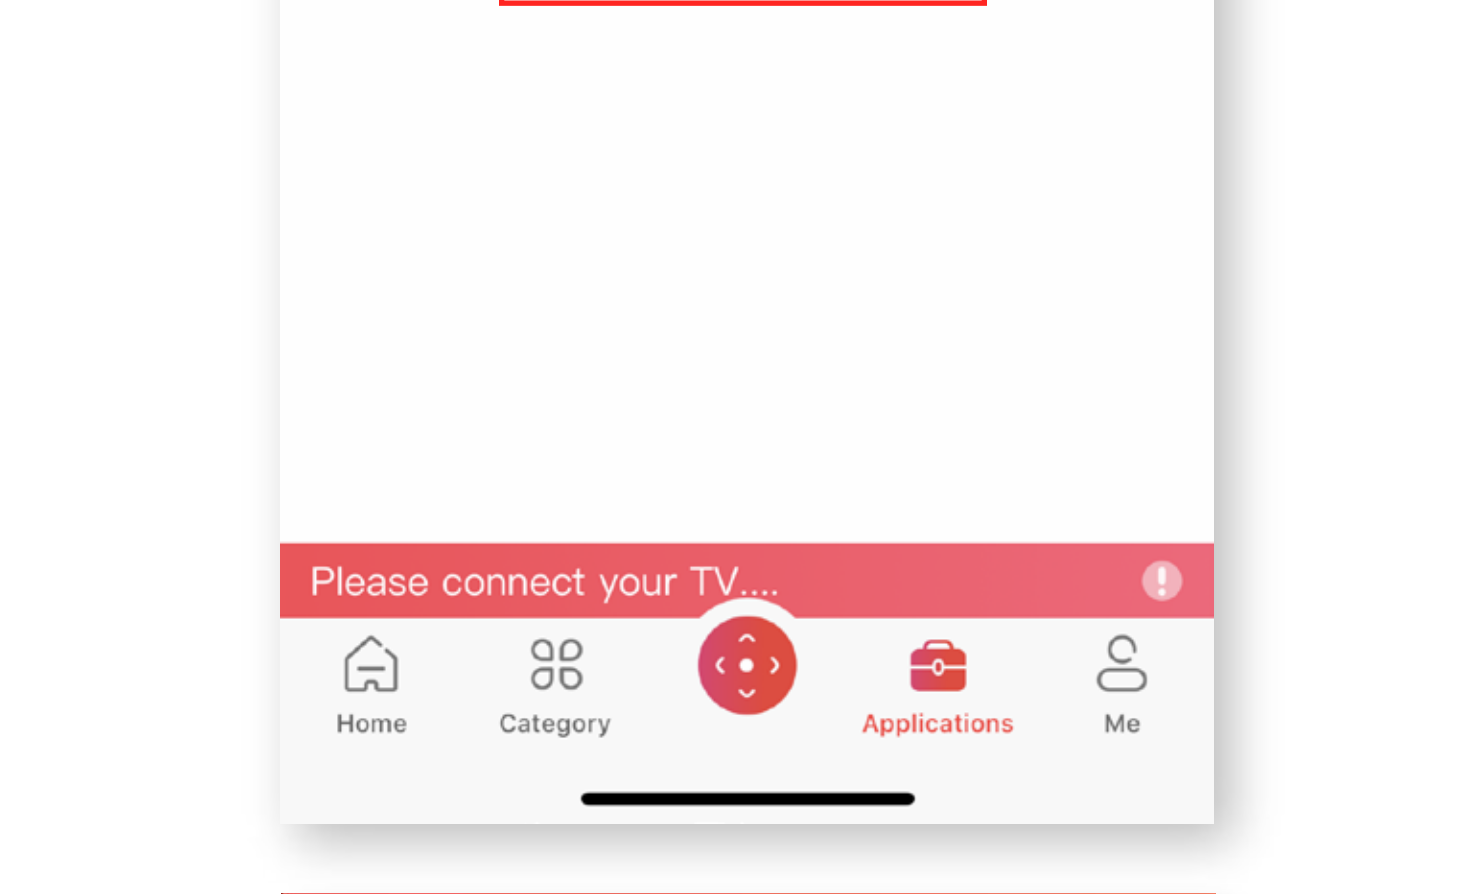


Follow the on screen instructions to scan the QR code and download T-Cast app in Apple/ Android store.






## Personalizing HOME SCREEN


Press  Homepage, then move the highlight to Customise channels ( > Customise channels), and press OK button to enter.


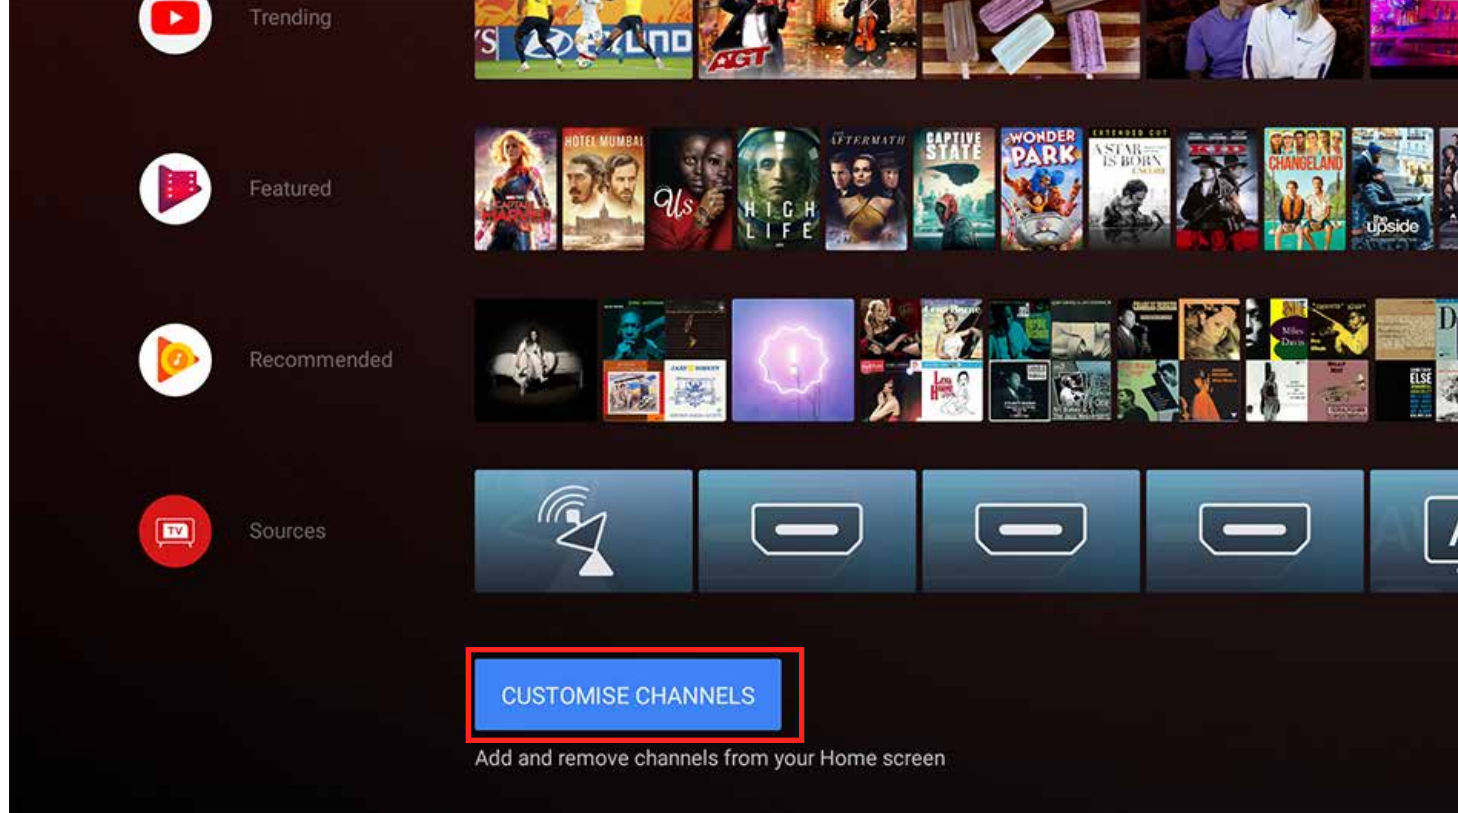



Move the highlight to a channel that you want to customize, press OK button to add or remove it from the Home Screen.


- Note: If the button beside a channel is highlighted, the channel is already on Home Screen.

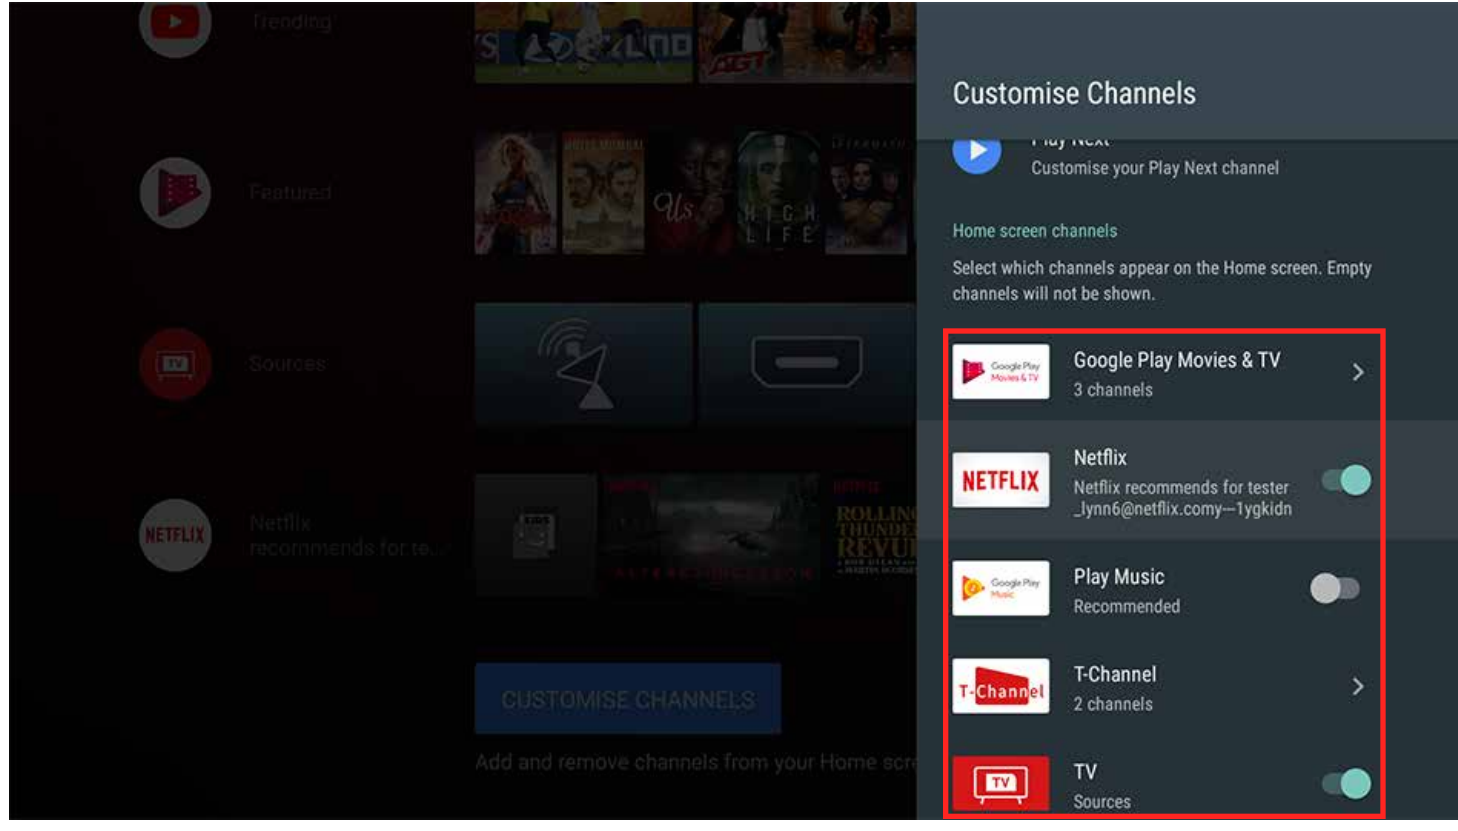

 
Move the highlight to a channel on the Home Screen, press Left button() on the remote control and then press OK button to start moving the channel.

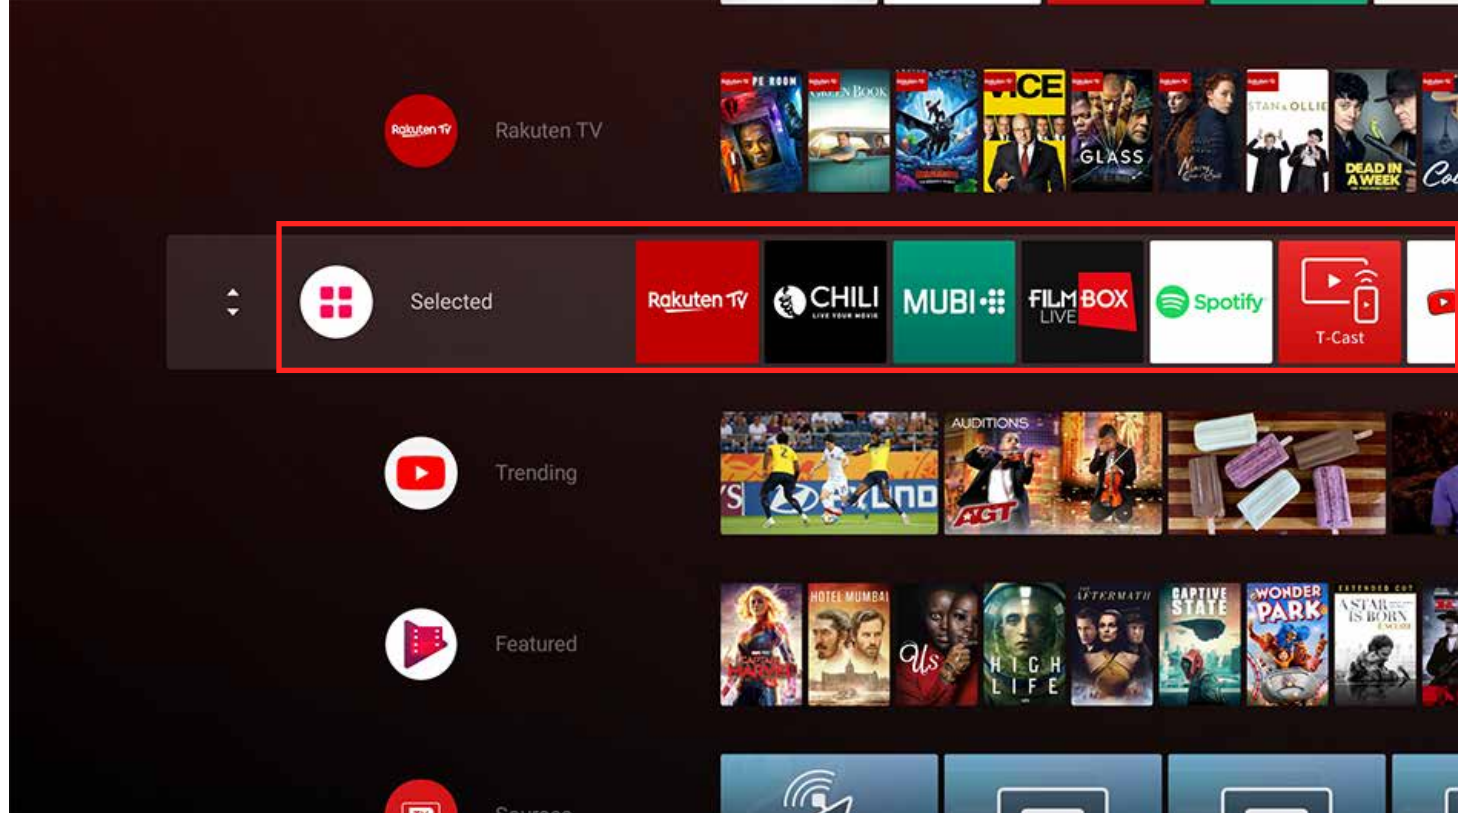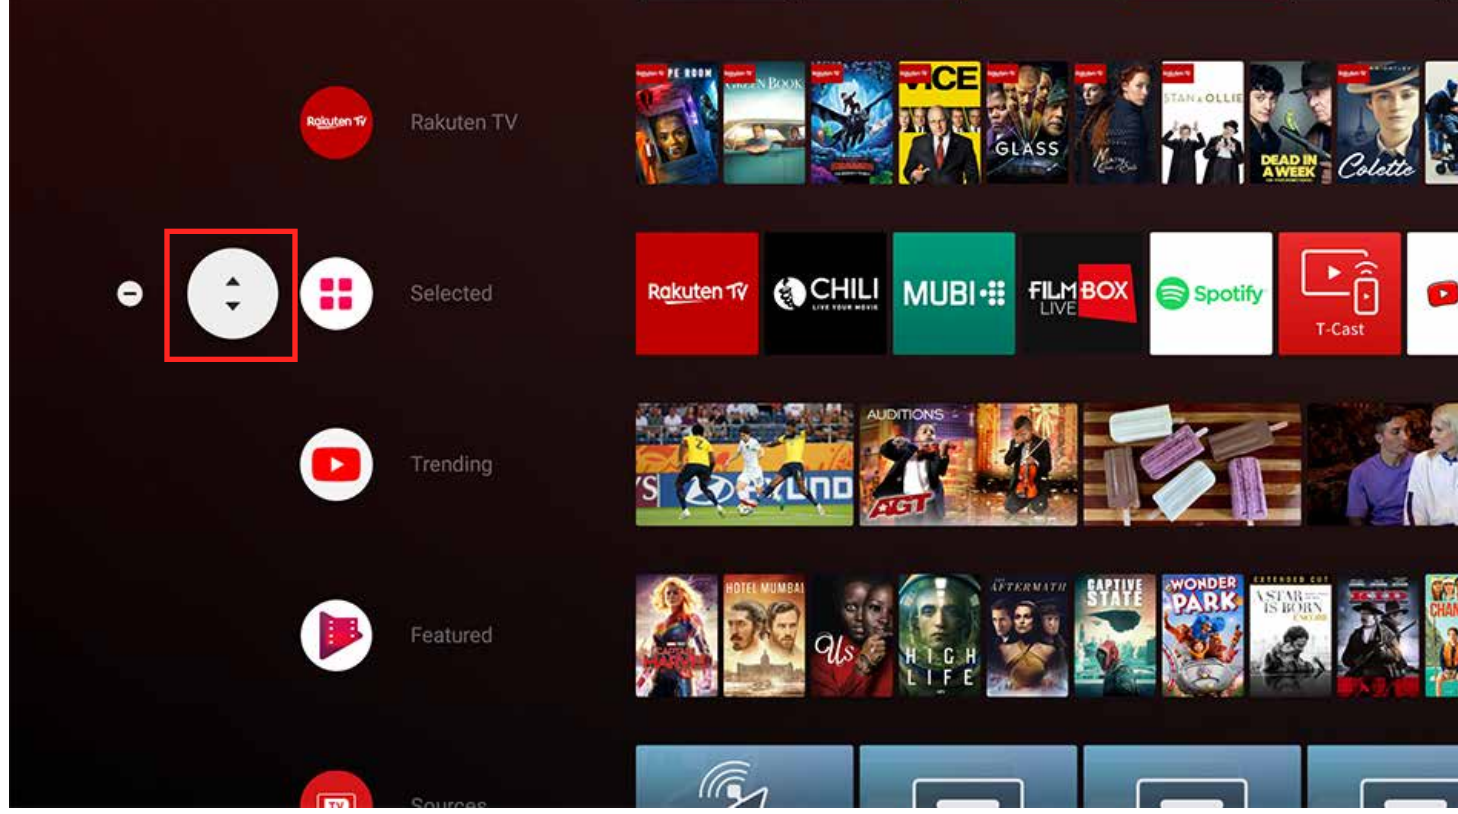


Then press Left button() again and press OK button to delete the channel from Home Screen.

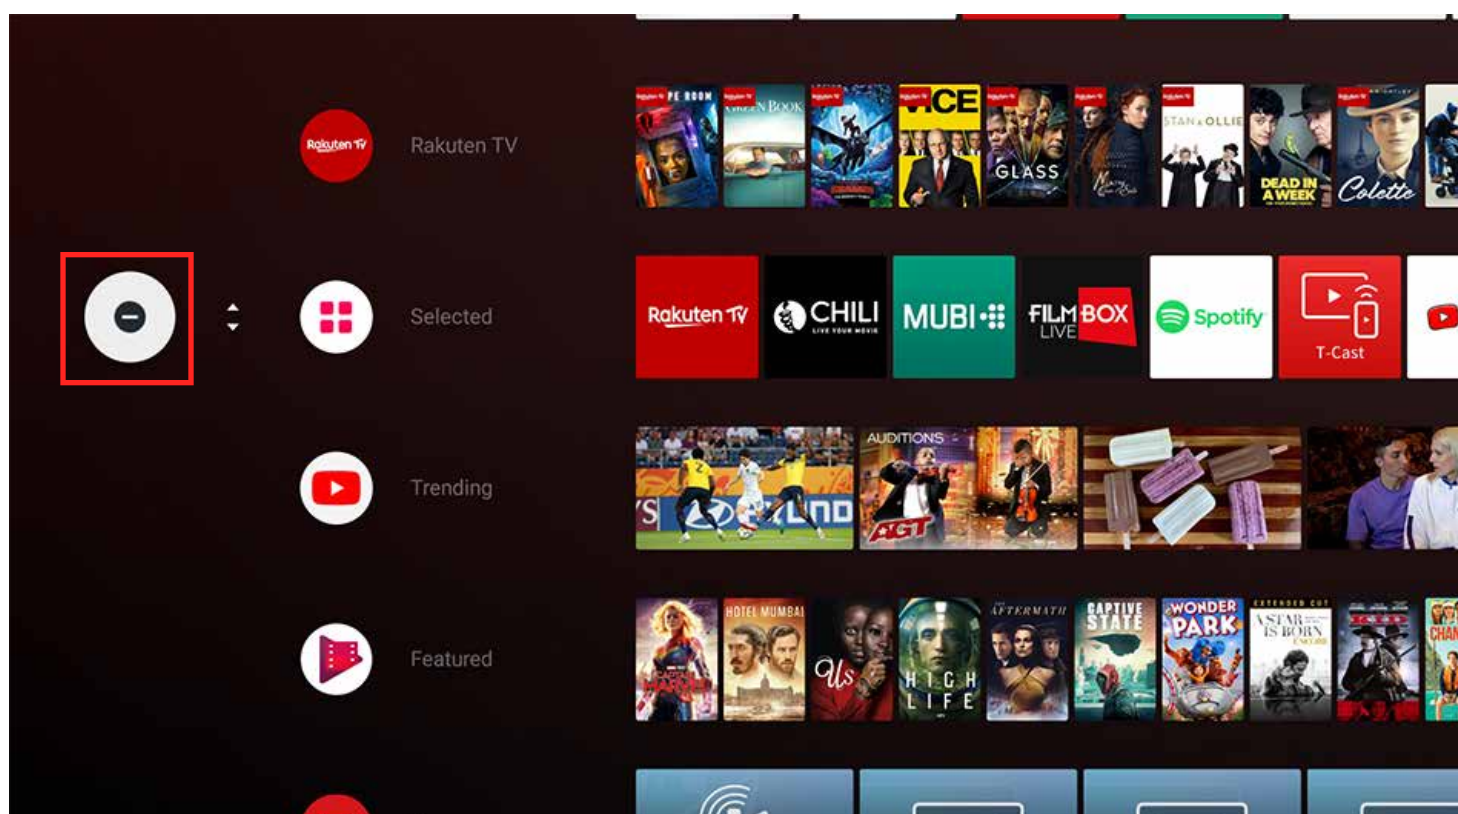

## Using the Game Mode

Press  button on the remote control, move the highlight to System, and then select Game mode, press OK button to turn on/off.

- Note: If Game mode is turned on, both Picture and Sound preset are locked.

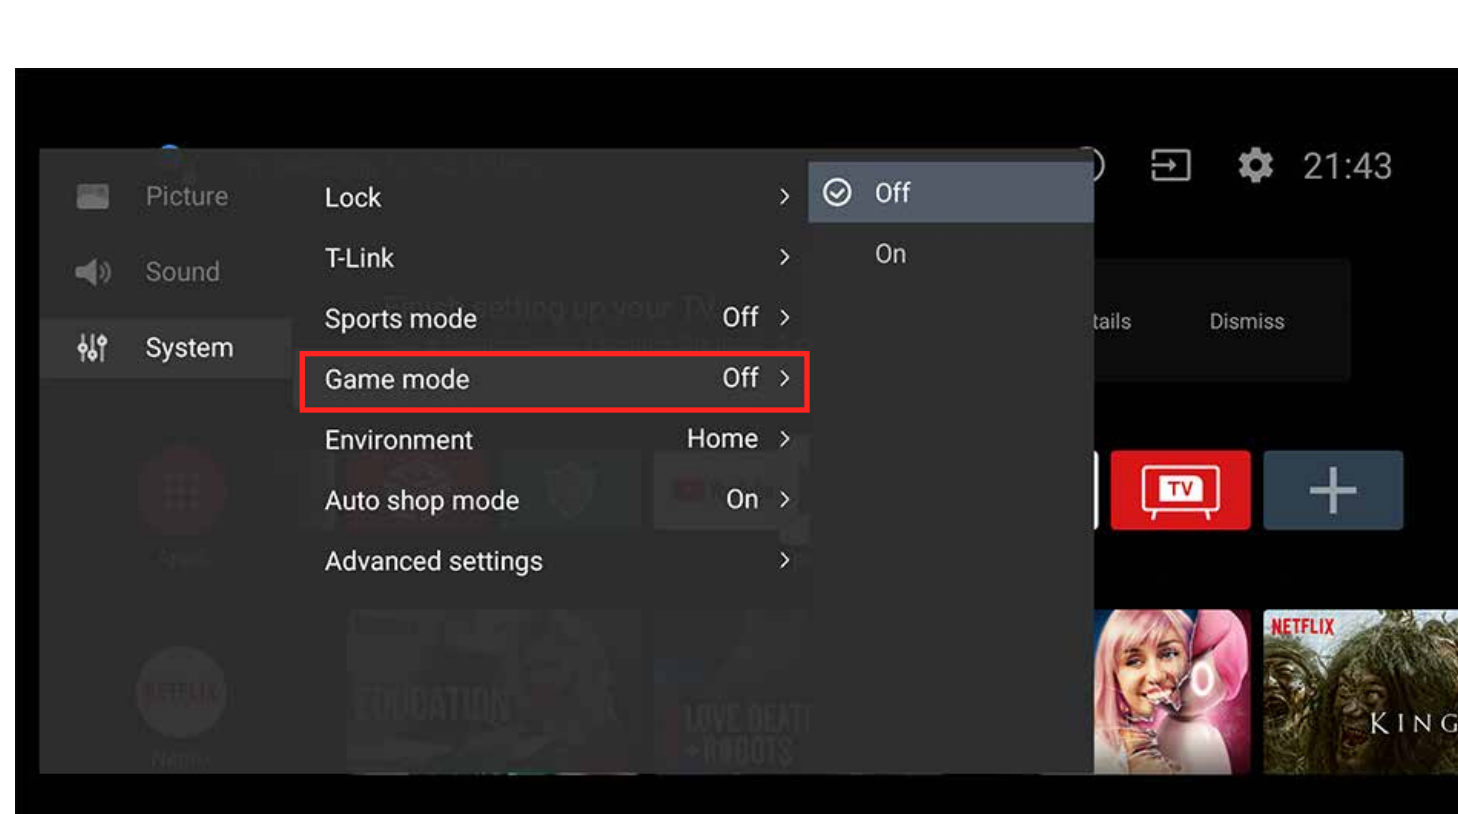

By turning Game mode on, the sound will be more surrounded and a lower colour saturation is displayed, which brings you a more comfortable gaming experience.

- Note: Game mode and Sports mode cannot be opened at the same time.