

# **INVERTER WIFI**

- **CONNECT TO RS 232 OR USB**
- **CONNECT 12V SUPPLY**
- **WAIT FOR 1 MINUTE**
- **CONNECT TO "INVERTER" ACCESS POINT**
- **PassPhrase: "inverter123" ALL LOWER CASE**
- **GO TO: 192.168.42.1**
- **INVERTER CONFIGURE PAGE WILL DISPLAY**