



***The TEENSY is on the BOTTOM side of the board;
 KNOBS and BUTTONS are on the TOP side of the board.