



# NVIDIA DGX SuperPOD

## Deployment Guide

Featuring NVIDIA DGX A100 Systems

# Document History

DG-11251-001

Version	Date	Authors	Description of Change
0.5	2022-12-22	Alex James, Davinder Singh, Greg Zynda, Mark Troyer, Rangam Addepalli, Robert Sohigian, Robert Strober, Scott Ellis, and Yang Yang	Early access
0.7	2023-01-18	Alex James, Charles Kim, Craig Tierney, and Robert Sohigian	Minor updates
1	2023-02-08	Rangam Addepalli and Robert Sohigian	Base Command Manager (BCM) 3.23.01
2	2023-03-01	Harmandeep Singh, Lawrence Hu, Rangam Addepalli, and Robert Sohigian	BCM 3.23.02
3	2023-04-11	Mihir Mehta, Rangam Addepalli, and Robert Sohigian	BCM 3.23.03 (network automation)

# Contents

Chapter 1. Initial Cluster Setup .....	1
Chapter 2. Head Node Configuration .....	10
2.1 Configure BCM to Allow MAC Addresses to PXE Boot.....	10
2.2 Setup Networking on DGX Systems.....	10
2.3 Identify the DGX Cluster Nodes .....	12
2.4 Identify the First CPU Node .....	12
2.5 Disable GPU Information Collection .....	13
2.6 Power On and Provision the Cluster Nodes.....	13
Chapter 3. High Availability.....	14
Chapter 4. Slurm and Jupyter Setup .....	29
4.1 Slurm .....	29
4.2 Jupyter Installation .....	31

---

# Chapter 1. Initial Cluster Setup

This document details how to deploy NVIDIA Base Command™ Manager (BCM) on NVIDIA DGX SuperPOD™ configurations.

Deployment of a DGX SuperPOD involves pre-setup, deployment, and use of BCM to provision the Slurm cluster.

Physical installation and network switch configuration should be completed before deploying BCM. In addition, information about the intended deployment should be recorded in a site survey.

The deployment stage of a DGX SuperPOD consists of using BCM to provision and manage the Slurm cluster.

1. Configure the NFS server.

User home directories (`home/`) and shared data (`cm_shared/`) directories must be shared between head nodes (such as the DGX OS image) must be stored on an NFS filesystem for HA availability. Because DGX SuperPOD does not mandate the nature of the NFS storage, the configuration is outside the scope of this document.

This DGX SuperPOD deployment uses the NFS export path provided in the site survey: `/var/nfs/general`.

Following parameters are recommended for the NFS server export file `/etc/exports`.


```
/var/nfs/general *(rw,sync,no_root_squash,no_subtree_check)
```

2. On the DGX A100 compute nodes, configure the SBIOS so that the nodes PXE boot by default.


BCM requires DGX systems to PXE boot.

- a. Using either KVM or a crash cart, connect to the DGX A100 system and enter the BIOS menu, and configure `Boot Option #1` to be `[NETWORK]`.

- b. Set other Boot devices to [DISABLED].

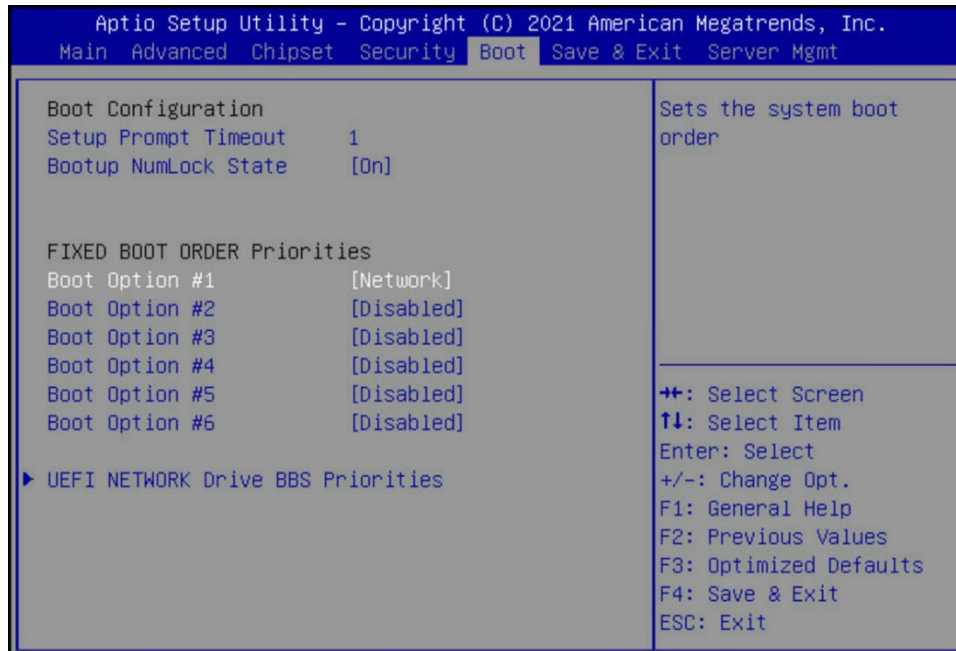


- c. Disable PXE boot devices except for Storage 4-2 and Storage 5-2.  
Set them to use IPv4.

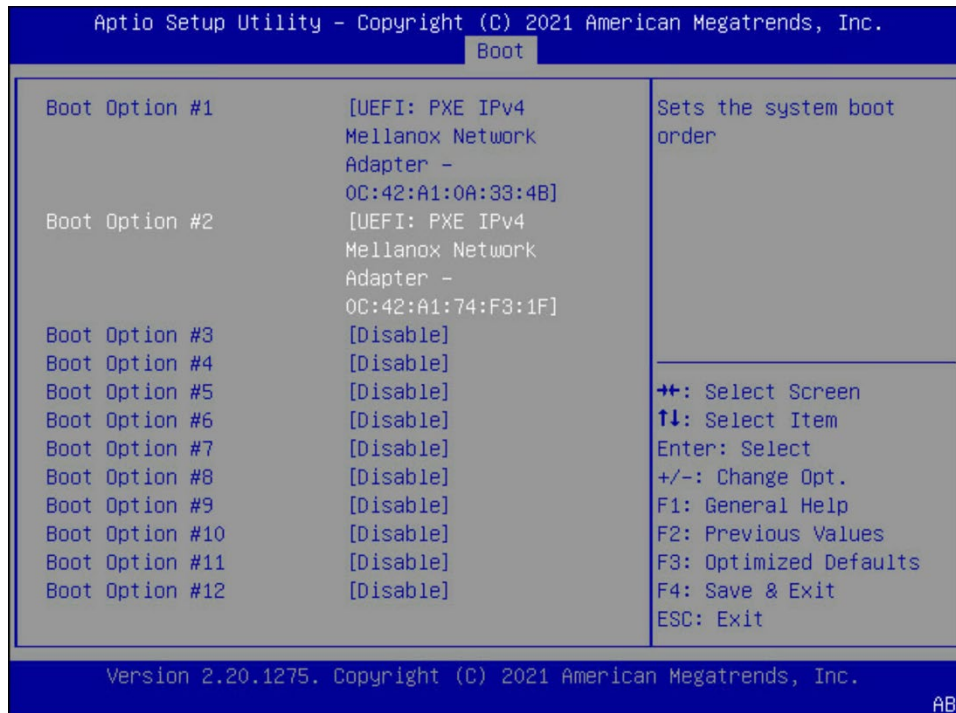

- d. Select Save & Exit the BIOS.


3. On the failover head node and the CPU nodes, ensure that Network boot is configured as the primary option. Ensure that the Mellanox ports connected on the network on the head and CPU nodes are set to Ethernet mode as well.

This is an example of a system that will boot from the network with Slot 1 Port 2 and Slot 2 Port 2.

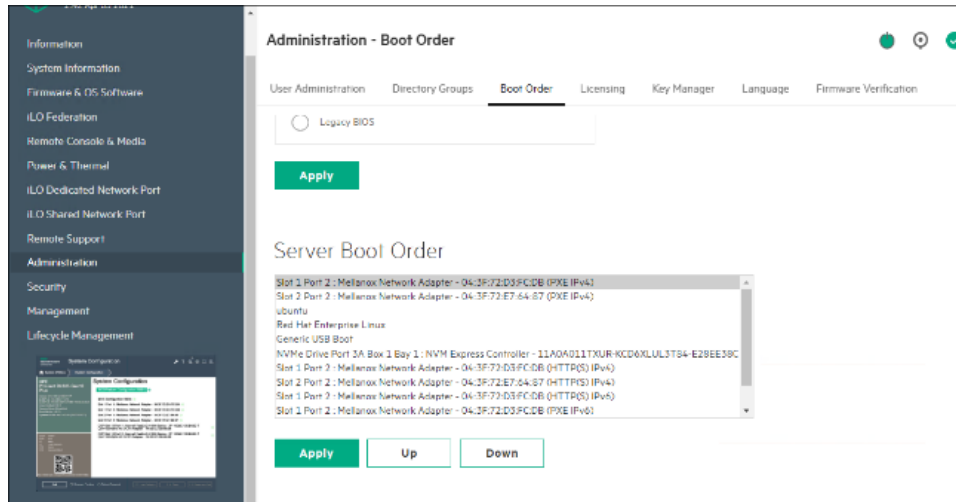

4. Download the BCM installer ISO from [Cloud Storage](#).
5. Burn the ISO to a DVD or to a bootable USB device.  
It can also be mounted as virtual media and installed using the BMC. The specific mechanism for the latter will vary by vendor.
6. Ensure that the BIOS of the target head node is configured in UEFI mode and that its boot order is configured to boot the media containing the Bright installer image.
7. Boot the installation media.
8. Follow the [Generated Network Configuration \(BCM\\_v3.23.03\) section](#) of the *BCM 3.0 Network Provisioning Guide*.  
After the network switches are provisioned, reboot the ISO and continue.

9. At the grub menu, choose Head Node Base OS Installer.

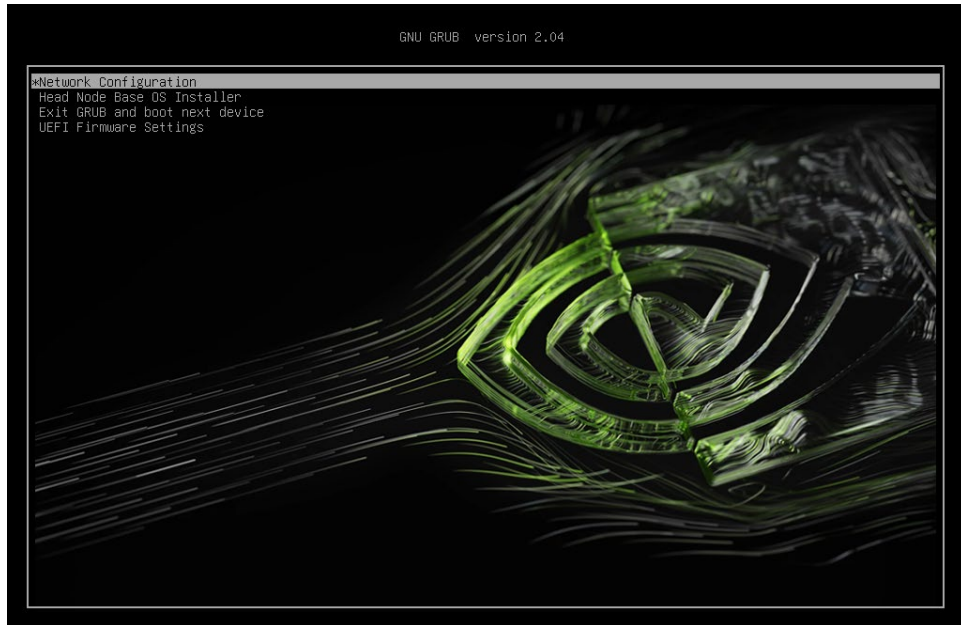


10. After booting and at the Welcome screen, choose `Start` and then select `NEXT` to begin installation.




11. Provide a hostname and initial password, and then select `NEXT`.

Confirm or update the hostname of the primary head node and enter a password for the `bcm_install` user. This information will be used to login to the head node after the OS is installed and to complete configuring BCM.

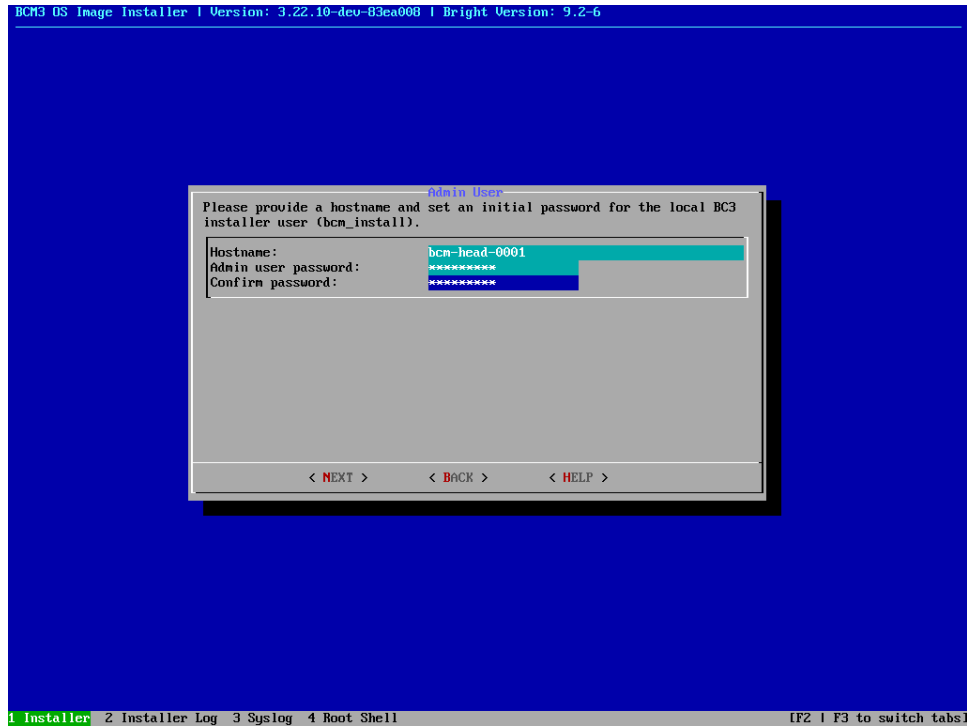


12. Choose one or more install disks and then select `NEXT`.

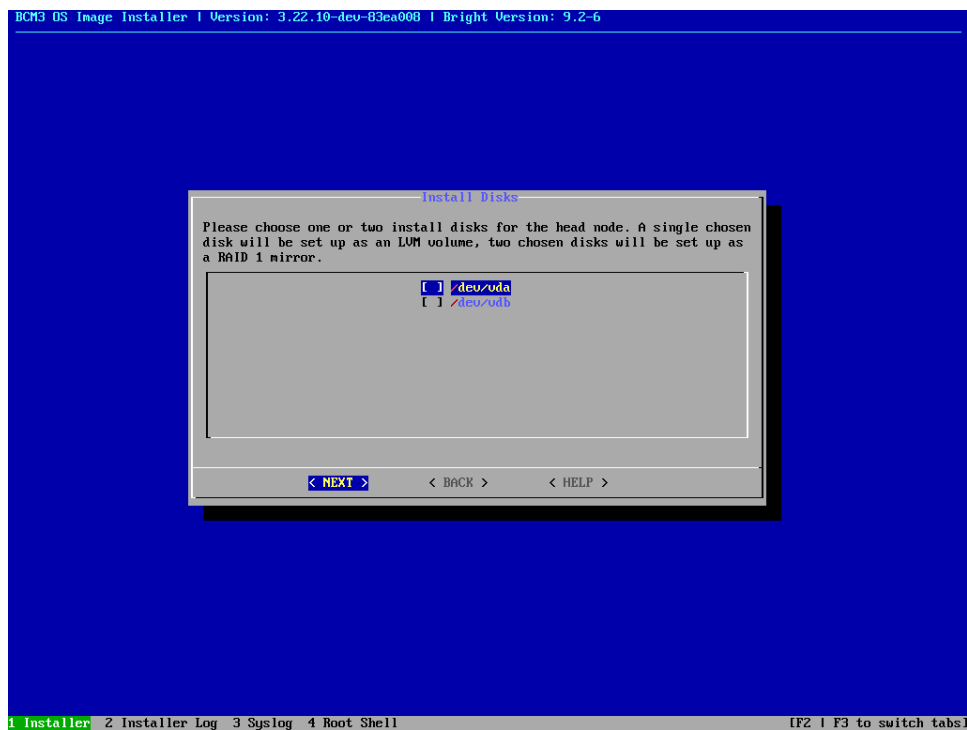





13. Choose the primary network interface for the head node and then select **NEXT**.  
This is the `internalnet` interface and should have Internet access.

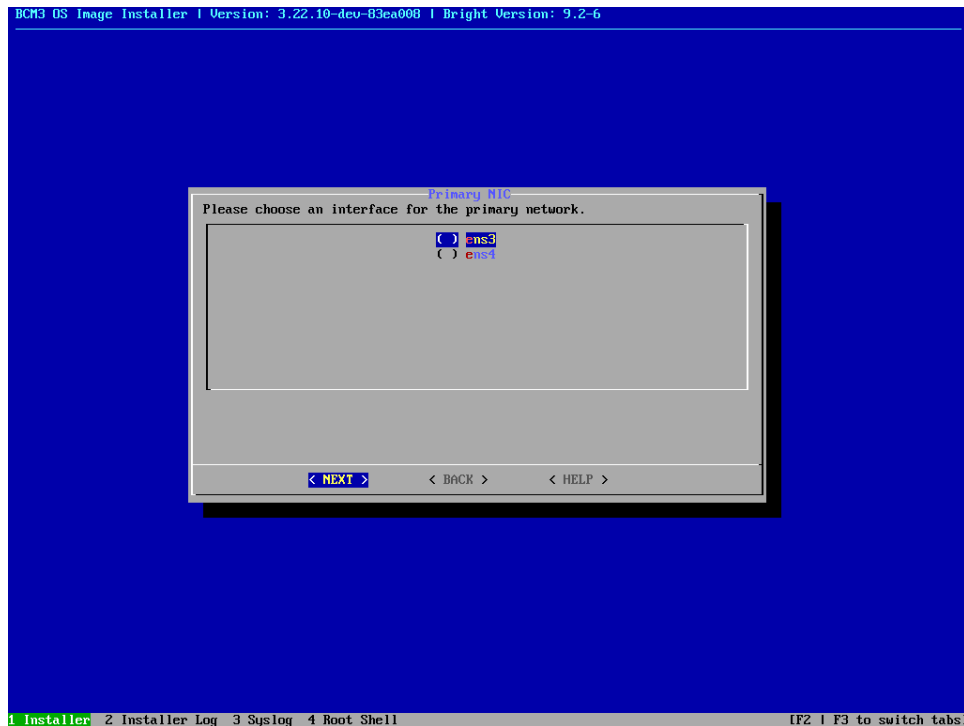


14. Choose **Static** or **DHCP** for IP address assignment and then select **NEXT**.

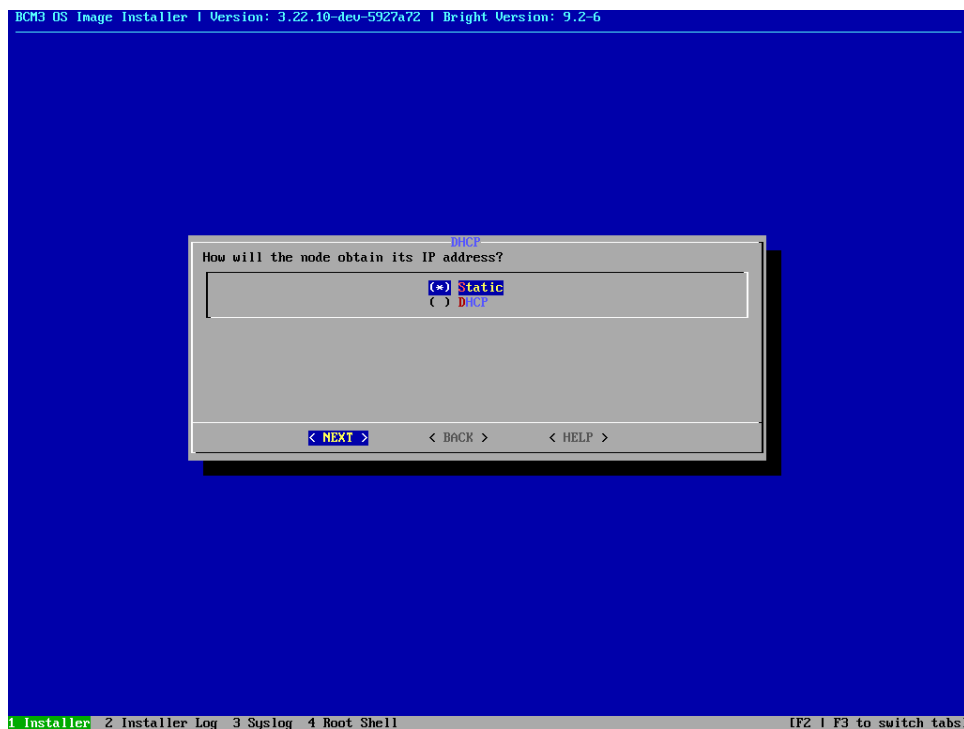

15. If the network is to be statically configured, enter the parameters and then select NEXT.

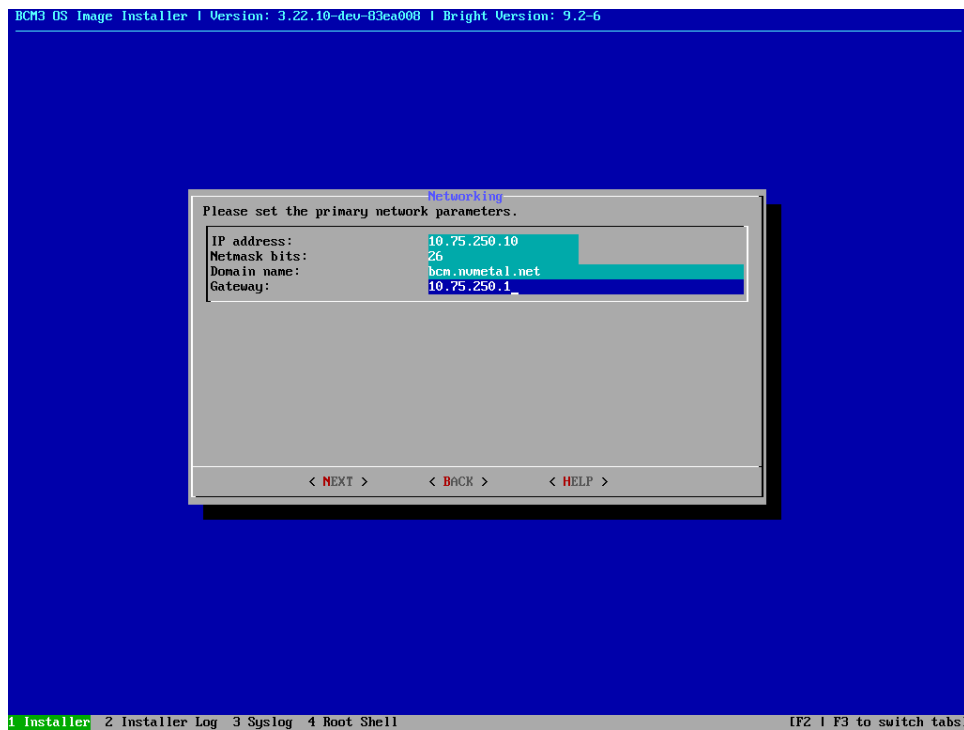

16. Confirm the settings at the summary screen and then select START to install the OS.

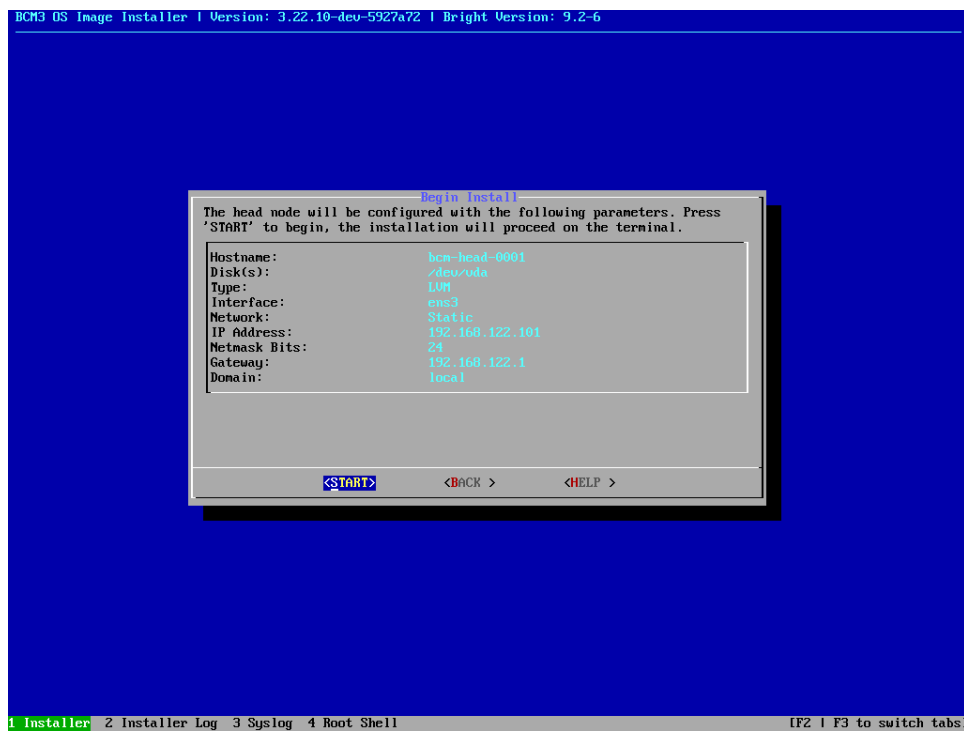

17. Track the installation on the resulting screen.

```
Beginning OS installation
Installation log: /var/log/bcn3_os_installer.log

Initializing installer environment..... [OK]
Mounting the installation ISO..... [OK]
Setting up the head node disk(s)..... [OK]
Mounting created partitions..... [OK]
Extracting base distribution data to hard disk..... [OK]
Creating fstab file..... [OK]
Extracting BCM provisioning files..... _

1 Installer 2 Installer Log 3 Syslog 4 Root Shell [F2 | F3 to switch tabs]
```

18. When the OS installation completes, select **yes** to reboot.

```
BCM3 OS Image Installer | Version: 3.22.10-dev-83ea908 | Bright Version: 9.2-6

Installation has completed
successfully! System is ready for
reboot.

Do you wish to reboot now?

< Yes > < No >

1 Installer 2 Installer Log 3 Syslog 4 Root Shell [F2 | F3 to switch tabs]
```

19. After the host reboots, login as the `bcm_install` user using the password provided to the OS installer. `ssh` can be used instead of the out-of-band console at this point.

20. Run the `configure_install` command.

```
sudo /opt/bcm/configure_install
```


21. After the configuration completes, run the `install` command.

```
sudo /opt/bcm/installer/install
```

22. When installation completes, make note of the randomly generated password for the `bcm` admin user, and select `ok` to reboot.



**Note:** The root password was saved to `/root/.root` and the MySQL password was saved to `/root/.mysql`. Both files will be available after the system reboots.

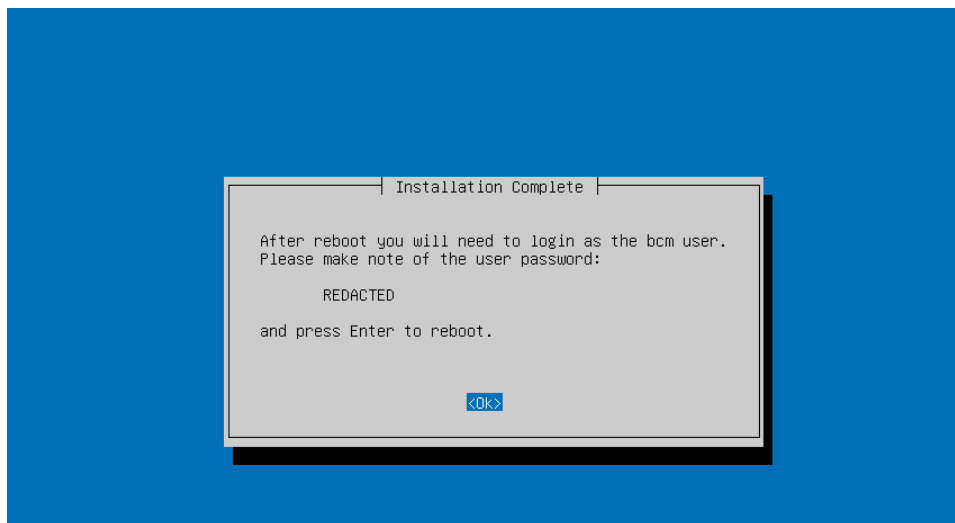

**Note:** At this step there will be one DGX node and one CPU node in the device list. These hosts will not have MAC and IP assignments.

Before proceeding, configure interfaces and IP addresses in each node category.

23. Clone the DGX nodes.

`dgx01` was created during head node installation. Clone it to create the DGX nodes.

```
% device
% foreach --clone dgx01 -n dgx02..[dgxXX] ()
% commit
```

24. Check the nodes and their categories.

Extra options are used for `device list` to make the format more readable.

```
% device list -f hostname:20,category:10,ip:20,status:15
```

hostname (key)	category	ip	status
bcm-head-01		10.130.122.254	[ UP ]
dgx01	dgxnodes	10.130.122.5	[ DOWN ]
dgx02	dgxnodes	10.130.122.6	[ DOWN ]
dgx03	dgxnodes	10.130.122.7	[ DOWN ]
dgx04	dgxnodes	10.130.122.8	[ DOWN ]

25. License cluster by running the `request-license` and providing product key.

```
request-license
Product Key (XXXXXX-XXXXXX-XXXXXX-XXXXXX-XXXXXX) :
```

---

## Chapter 2. Head Node Configuration

This section address configuration steps to be performed on BCM head nodes.

### 2.1 Configure BCM to Allow MAC Addresses to PXE Boot

1. Use the root (not `cmsh`) shell.
2. In `/cm/local/apps/cmd/etc/cmd.conf`, uncomment the `AdvancedConfig` parameter.  
`AdvancedConfig = { "DeviceResolveAnyMAC=1" } # modified value`
3. Restart the `CMDaemon` to enable reliable PXE booting from bonded interfaces.  
`# systemctl restart cmd`

The `cmsh` session will be disconnected because of restarting the `CMDaemon`. Type `connect` to reconnect after the `CMDaemon` has restarted. Or enter `exit` and then restart `cmsh`.

### 2.2 Setup Networking on DGX Systems

The steps that follow are performed on the head node and should be run on all DGX systems.



**Note:** Double check the MAC address for each interface and the IP number for the `bond0` interface. Mistakes here will be difficult to diagnose.

1. Set the MAC addresses on the physical interfaces.

```
# cmsh
% device
% use dgx01
% interfaces
% use ipmi0
% set ip 10.130.111.68
% set gateway 10.130.111.65
% use enp225s0f1np1
% set mac B8:CE:F6:2F:08:69
% use enp97s0f1np1
% set mac B8:CE:F6:2D:0E:A7..
% % commit
```

## 2. Verify the configuration.

```
% get provisioninginterface
bond0
% interfaces
% list
```

Type	Network device name	IP	Network	Start if
bmc	ipmi0	10.130.111.68	ipminet	always
bond	bond0 [prov]	10.130.122.5	internalnet	always
physical	enp225s0f1np1 (bond0)	0.0.0.0		always
physical	enp97s0f1np1 (bond0)	0.0.0.0		always

## 3. Configure InfiniBand interfaces on DGX nodes

The following procedure adds four physical InfiniBand interfaces for a single DGX system (dgx01).

```
% / # go to top level of CMSH
% device
% use dgx01
% interfaces
% add physical ibp12s0
% set ip 10.149.0.5
% set network ibnet
% add physical ibp75s0
% set ip 10.149.1.5
% set network ibnet
% add physical ibp141s0
% set ip 10.149.2.5
% set network ibnet
% add physical ibp186s0
% set network ibnet
% set ip 10.149.3.5

% list
```

Type	Network device name	IP	Network	Start if
bmc	ipmi0	10.130.111.69	ipminet	always
bond	bond0 [prov]	10.130.122.5	internalnet	always
physical	enp225s0f1np1 (bond0)	0.0.0.0		always
physical	enp97s0f1np1 (bond0)	0.0.0.0		always
physical	ibp12s0	10.149.0.5	ibnet	always
physical	ibp141s0	10.149.2.5	ibnet	always
physical	ibp186s0	10.149.3.5	ibnet	always
physical	ibp75s0	10.149.1.5	ibnet	always

```
% device commit
```

## 2.3 Identify the DGX Cluster Nodes

1. Identify the nodes by setting the MAC address for the provisioning interface for each node to the MAC address listed in the site survey.

```
% device
% use dgx01
% set mac b8:ce:f6:2f:08:69
% use dgx02
% set mac 0c:42:a1:54:32:a7
% use dgx03
% set mac 0c:42:a1:0a:7a:51
% use dgx04
% set mac 1c:34:da:29:17:6e
% foreach -c dgx (get mac)
B8:CE:F6:2F:08:69
0C:42:A1:54:32:A7
0C:42:A1:0A:7A:51
1C:34:DA:29:17:6E
```

2. If all the MAC addresses are set properly, commit the changes.

```
% device commit
% quit
```

## 2.4 Identify the First CPU Node

1. Set the IP address for the IPMI interface.

```
% device
% use bcm-cpu-01
% interfaces
% use ipmi0
% set ip 10.127.1.15
% set gateway 10.127.1.1
% commit
```

2. Set the MAC addresses for the Ethernet interfaces.

```
% device
% use bcm-cpu-01
% interfaces
% use ens2f0np0
% set mac 88:e9:a4:92:26:ba
% use ens2f1np1
% set mac 88:e9:a4:92:26:bb
% commit
```

3. Set the IP address for the `bond0` interface.

```
% device
% use bcm-cpu-01
% interfaces
% use bond0
% set ip 10.127.3.15
% commit
```

## 2.5 Disable GPU Information Collection

In BCM 2.23.03, GPU information collection must be disabled.

On the head node, run the following command:

```
sudo /cm/local/apps/cmd/sbin/cm-manipulate-advanced-config.py -i '*'  
"SysInfoCollectGPU=0"
```

## 2.6 Power On and Provision the Cluster Nodes

Now that the required post-installation configuration has been completed, it is time to power on and provision the cluster nodes. After the initial provisioning, power control will be available from within Bright using the `cmsh` or Bright View. But for this initial provisioning it is necessary to power them on outside of Bright (that is, using the power button or a KVM).

It will take several minutes for the nodes to go through their BIOS. After that, you should see the node status progress as the nodes are being provisioned. Watching the `/var/log/messages` and `/var/log/node-installer` log files to verify that everything is proceeding smoothly.



# Chapter 3. High Availability

This section covers how to configure high availability (HA) using `cmha-setup` CLI wizard.

1. Ensure that both head nodes are licensed.

The MAC address for the secondary head was provided when the cluster license was installed.

```
% main licenseinfo | grep ^MAC
MAC address / Cloud ID          04:3F:72:E7:67:07|14:02:EC:DA:AF:18
```

2. Configure the shared storage (NFS).

Mounts configured in `fsmounts` will be automatically mounted by the `CMDaemon`.

```
% device
% use master
% fsmounts
% add /nfs/general
% set device 10.130.122.252:/var/nfs/general
% set filesystem nfs
% commit
```

```
% show
```

Parameter	Value
Device	10.130.122.252:/var/nfs/general
Revision	
Filesystem	nfs
Mountpoint	/nfs/general
Dump	no
RDMA	no
Filesystem Check	NONE
Mount options	defaults

3. Verify that the shared storage is mounted.

```
# mount | grep '/nfs/general'
10.130.122.252:/var/nfs/general on /nfs/general type nfs4
(rw,relatime,vers=4.2,rsize=1048576,wsiz=1048576,namlen=255,hard,proto=tcp,timeo
=600,retrans=2,sec=sys,clientaddr=10.130.122.254,local_lock=none,addr=10.130.122.
252)
```

- Verify that head node has power control over the cluster nodes.

```
% device
% power -c dgx status
[-head1->device]% power -c dgx status
ipmi0 ..... [  ON   ] dgx01
ipmi0 ..... [  ON   ] dgx02
ipmi0 ..... [  ON   ] dgx03
ipmi0 ..... [  ON   ] dgx04
[bcm-head-01->device]%
```

- Power off the cluster nodes.


The cluster nodes must be powered off before configuring HA.

```
% power -c dgx off
ipmi0 ..... [  OFF  ] dgx01
ipmi0 ..... [  OFF  ] dgx02
ipmi0 ..... [  OFF  ] dgx03
ipmi0 ..... [  OFF  ] dgx04
```

- Start the `cmha-setup` CLI wizard as the root user on the primary head node.

```
# cmha-setup
```


- Choose `Setup` and then select `SELECT`.

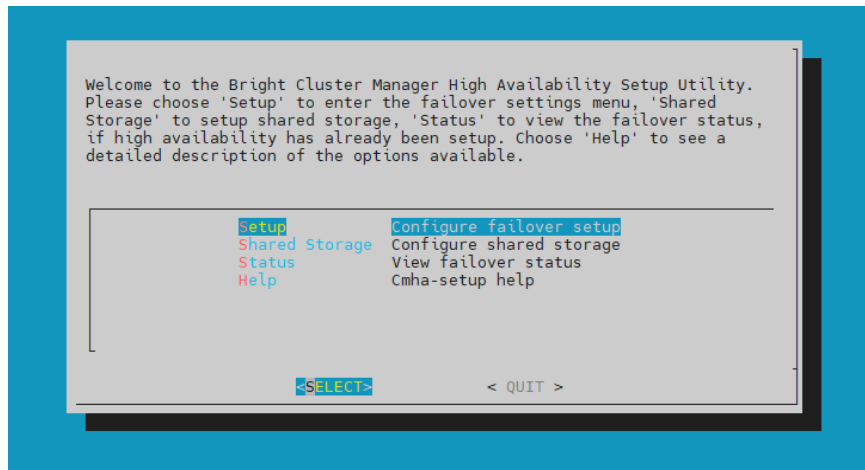

- Choose `Configure` and then select `NEXT`.




9. Verify that the cluster license information found `cmha-setup` is correct and then select `CONTINUE`.

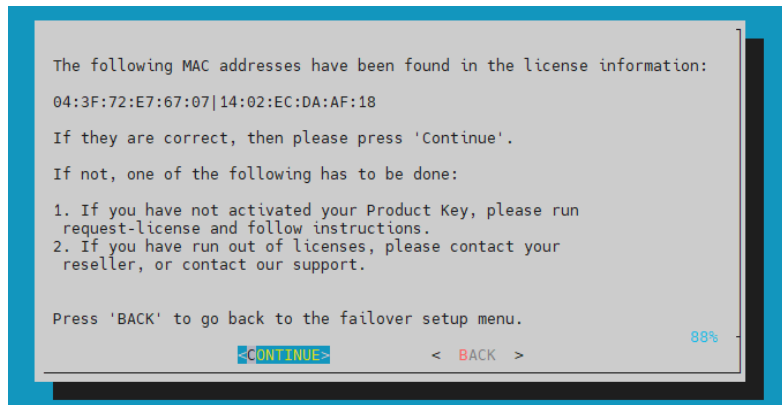


10. Configure an external Virtual IP address that will be used by the active head node in the HA configuration and then select `NEXT`.

This will be the IP that should always be used for accessing the active head nodes.

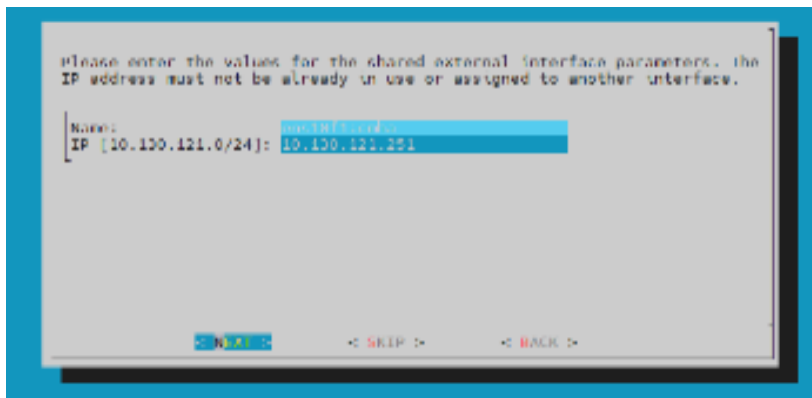

11. Provide an internal Virtual IP address that will be used by the active head node in the HA configuration.

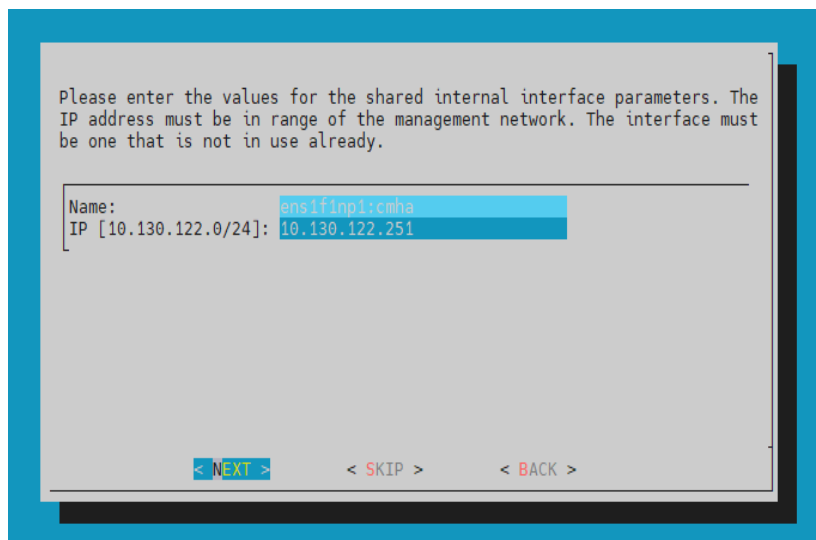

12. Provide the name of the secondary head node.

Name...	Network.....	Primary IP.....	Secondary IP
ens1f1np1	[10.130.122.0/24]	10.130.122.254	10.130.122.253
ens10f1	[10.130.121.0/24]	10.130.121.254	10.130.121.253
ipmi0	[10.130.111.64/26]	10.130.111.66	10.130.111.67
ens10f0	[10.130.111.64/26]	10.130.111.126	10.130.111.125

13. Since DGX SuperPOD uses the internal network as the failover network, select `SKIP`.

This screen takes parameters of a dedicated failover network that will be created. Please keep in mind, to select a network name different from those that have been defined already.


Name:	failovernet
Base address:	10.151.0.0
Netmask:	255.255.0.0
Domain name:	failover.cluster

14. Configure the IP addresses for the secondary head node that the wizard is about to create.

Please enter the hostname of the secondary head node.

Name:	basepod-head2
-------	---------------


15. The wizard shows a summary of the information that it has collected. The VIP that will be assigned to the internal and external interfaces, respectively.

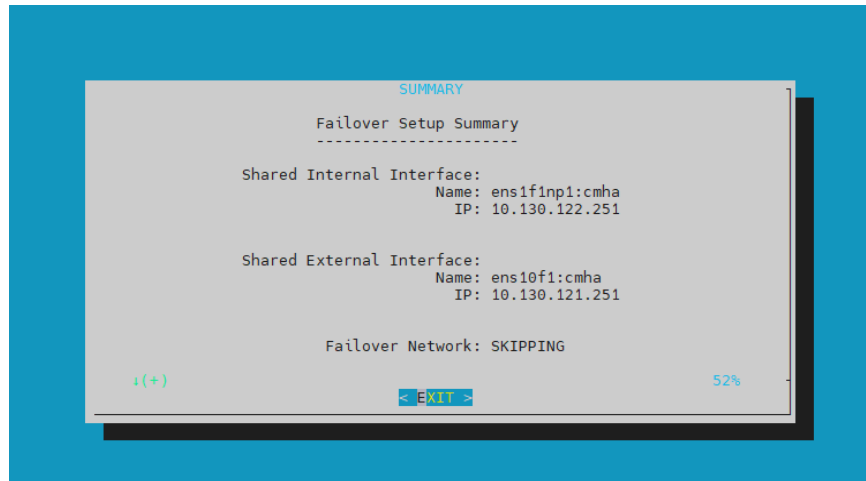

16. Select `yes` to proceed with the failover configuration.




17. Enter the MySQL root password.  
The auto-generated password is in `/root/.mysql`.

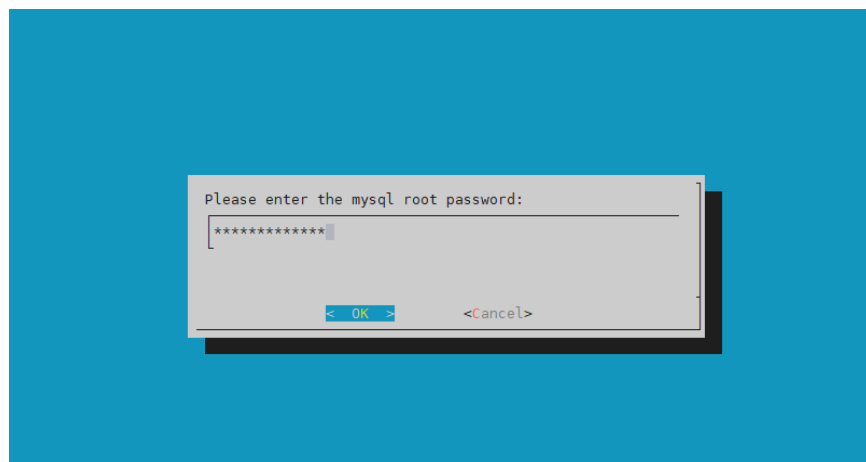


18. The wizard implements the first steps in the HA configuration. If all the steps show OK, press ENTER to continue. The progress is shown below.

```
Initializing failover setup on master..... [ OK ]
Updating shared internal interface..... [ OK ]
Updating shared external interface..... [ OK ]
Updating extra shared internal interfaces..... [ OK ]
Cloning head node..... [ OK ]
Updating secondary master interfaces..... [ OK ]
Updating Failover Object..... [ OK ]
Restarting cmdaemon..... [ OK ]
Press any key to continue
```

19. Run the `/cm/cm-clone-install --failover` command on the secondary head node. This should be a one-time network boot.

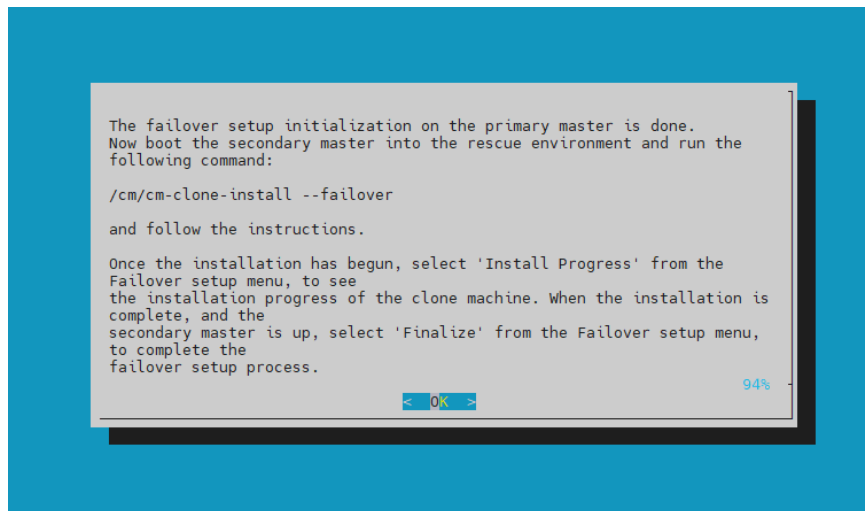

20. PXE boot the secondary head node.  
Because this is the initial boot of this node, it must be done using BMC or physical power button
21. Select RESCUE from the grub menu.

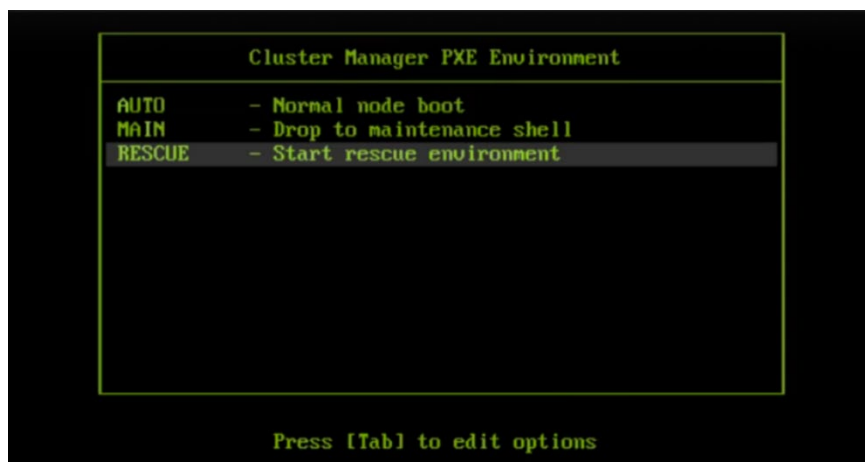

22. After the secondary head node has booted into the rescue environment, run the `/cm/cm--clone-install --failover` command, then enter yes when prompted. The secondary head node will be cloned from the primary.

```
|
| *Welcome to the Cluster Manager rescue environment*
|-----|
| Creating failover/clone nodes:
| * Install the secondary head node
|
|   $ /cm/cm-clone-install --failover
|
| * Create a clone of the primary head node
|
|   $ /cm/cm-clone-install --clone --hostname=new-hostname
|
| * Install the secondary (failover) head node and reboot automatically
|
|   $ /cm/cm-clone-install --failover --reboot
|
| * Help
|
|   $ /cm/cm-clone-install --help
|-----|

ClusterManager login: root (automatic login)

Linux ClusterManager 5.13.0-39-generic #44720.04.1-Ubuntu SMP Thu Mar 24 16:43:35 UTC 2022 x86_64
root@ClusterManager:~# /cm/cm-clone-install --failover
Network interface to use [default: ens0]: ensif1np1
Please wait while bringing up network...
Please wait while authentication is being set up....
Enter the password of the headnode node to continue.
root@master's password:
Please wait while installation begins...
Verifying license ..... [ OK ]
Getting disk layout ..... [ OK ]
The head node disk layout is saved in /cm/_headnodedisksetup.xml
(u - view, e - edit, c - continue ): c
info: Detecting device '/dev/nvme0n1': found
info: Valid device nvme0n1. All checks have succeeded.
The contents of the following disks will be erased.
/dev/nvme0n1
Do you want to continue [yes/no]? yes_
```

23. When cloning is completed, enter `y` to reboot the secondary head node. The secondary must be set to boot from its hard drive. PXE boot should not be enabled.

```
|
| *Welcome to the Cluster Manager rescue environment*
|-----|
| Creating failover/clone nodes:
| * Install the secondary head node
|
|   $ /cm/cm-clone-install --failover
|
| * Create a clone of the primary head node
|
|   $ /cm/cm-clone-install --clone --hostname=new-hostname
|
| * Install the secondary (failover) head node and reboot automatically
|
|   $ /cm/cm-clone-install --failover --reboot
|
| * Help
|
|   $ /cm/cm-clone-install --help
|-----|


ClusterManager login: root (automatic login)

Linux ClusterManager 5.13.0-39-generic #44720.04.1-Ubuntu SMP Thu Mar 24 16:43:35 UTC 2022 x86_64
root@ClusterManager:~# /cm/cm-clone-install --failover
Network interface to use [default: ens0]: ensif1np1
Please wait while bringing up network...
Please wait while authentication is being set up....
Enter the password of the headnode node to continue.
root@master's password:
Please wait while installation begins...
Verifying license ..... [ OK ]
Getting disk layout ..... [ OK ]
The head node disk layout is saved in /cm/_headnodedisksetup.xml
(u - view, e - edit, c - continue ): c
info: Detecting device '/dev/nvme0n1': found
info: Valid device nvme0n1. All checks have succeeded.
The contents of the following disks will be erased.
/dev/nvme0n1
Do you want to continue [yes/no]? yes
Getting mount points ..... [ OK ]
Partitioning hard drive ..... [ OK ]
Mounting partitions ..... [ OK ]
Syncing hard drive ..... [ OK ]
Finalizing installation ..... [ OK ]
Do you want to reboot[y/n]:y_
```


24. Wait for the secondary head node to reboot and then continue the HA setup procedure on the primary head node.

25. Select `finalize` from the `cmha-setup` menu.

This will clone the MySQL database from the primary to the secondary head node.

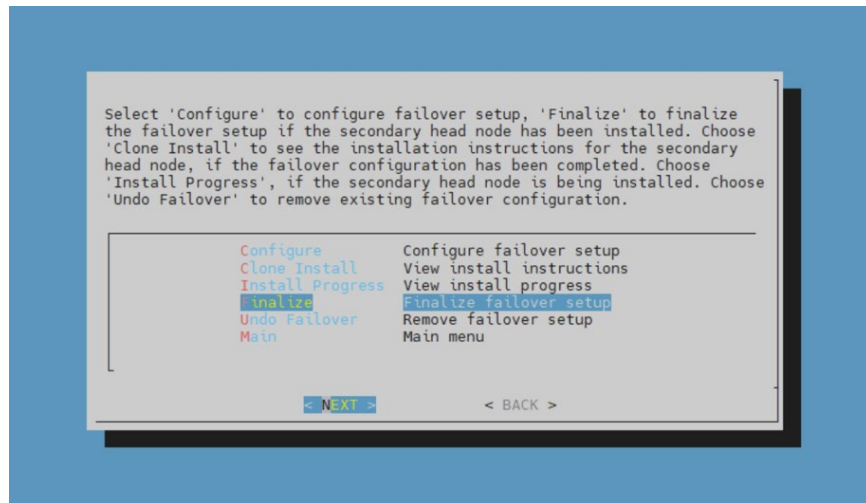


26. Select <CONTINUE> on the confirmation screen.

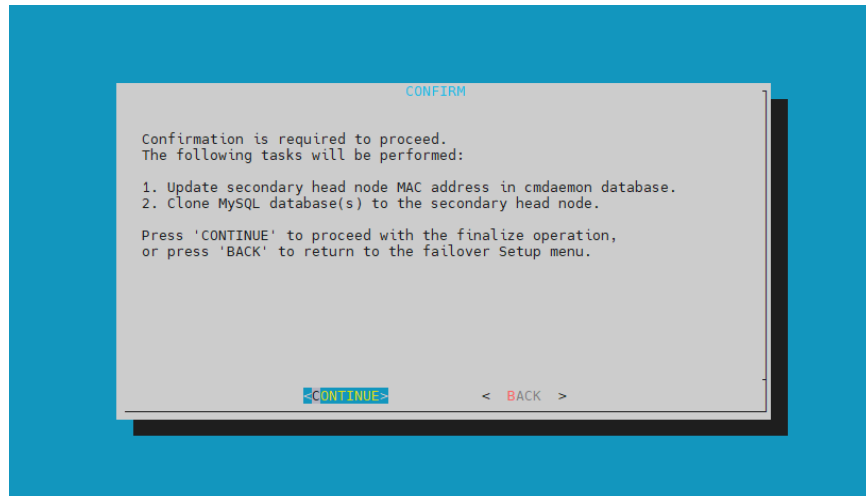


27. Enter the MySQL root password.

The auto-generated password is in `/root/.mysql`.

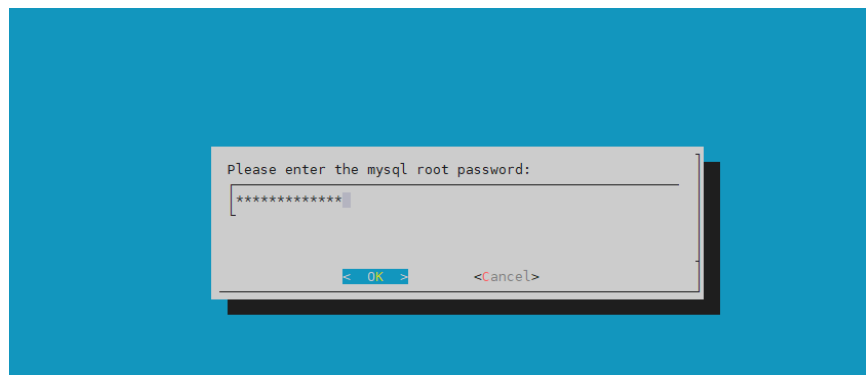




28. The `cmha-setup` wizard continues. Press `ENTER` to continue when prompted.

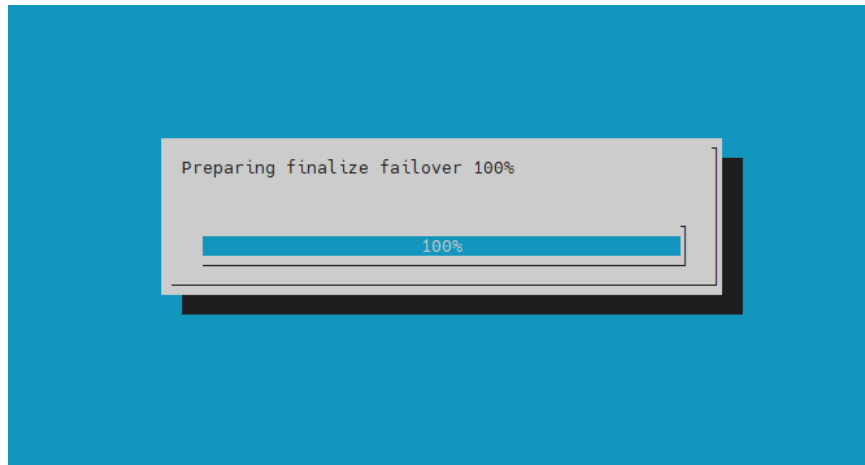

The progress is shown below:

```
Updating secondary master mac address..... [ OK ]
Initializing failover setup on bcm-head-02..... [ OK ]
Stopping cmdaemon..... [ OK ]
Cloning cmdaemon database..... [ OK ]
Checking database consistency..... [ OK ]
Starting cmdaemon, chkconfig services..... [ OK ]
Cloning workload manager databases..... [ OK ]
Cloning additional databases..... [ OK ]
Update DB permissions..... [ OK ]
Checking for dedicated failover network..... [ OK ]
Press any key to continue
```

29. The `Finalize` step is now completed. Select `<REBOOT>` and wait for the secondary head node to reboot.

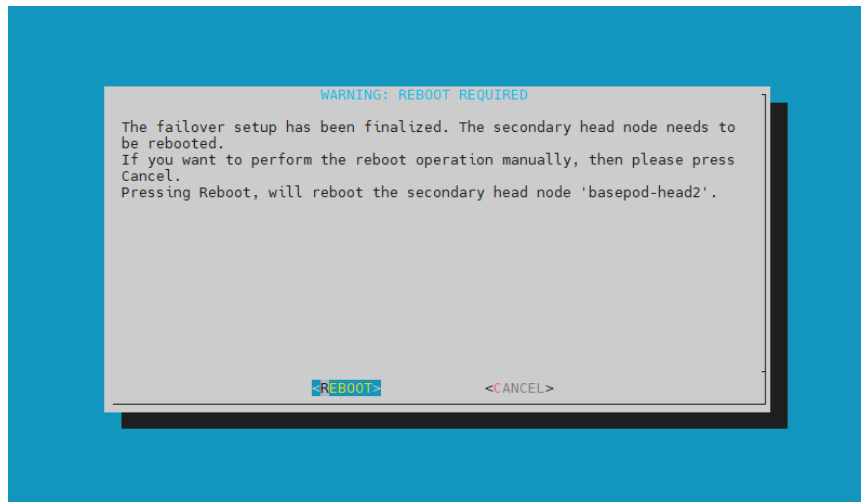

30. The secondary head node is now UP.


```
% device list -f hostname:20,category:12,ip:20,status:15
hostname (key)      category      ip            status
-----
bcm-head-01         10.130.122.254 [  UP  ]
bcm-head-02         10.130.122.253 [  UP  ]
dgx01               dgx           10.130.122.5  [ DOWN ]
dgx02               dgx           10.130.122.6  [ DOWN ]
dgx03               dgx           10.130.122.7  [ DOWN ]
dgx04               dgx           10.130.122.8  [ DOWN ]
```

31. Select Shared Storage from the cmha-setup menu.


In this final HA configuration step, cmha-setup will copy the /cm/shared and /home directories to the shared storage, and it configures both head nodes and all cluster nodes to mount it.



32. Choose NAS and then select SELECT.

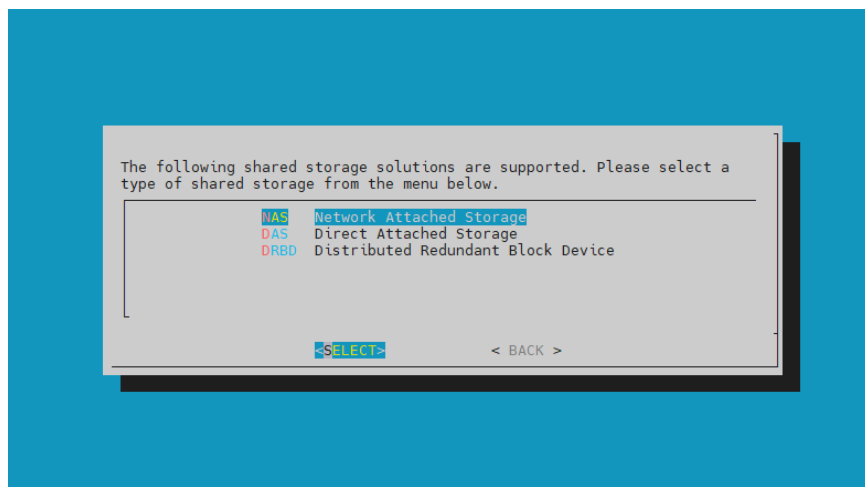


33. Choose both `/cm/shared` and `/home` and then select `NEXT`.

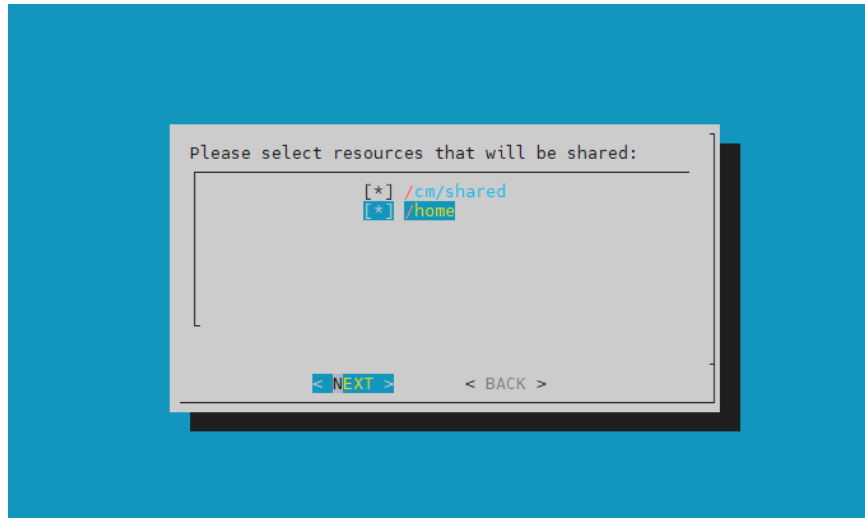

34. Provide the IP number of the NAS host, and the path that the `/cm/shared` and `/home` directories should be copied to on the shared storage.

In this case, `/var/nfs/general` is exported, so the `/cm/shared` directory will be copied to `10.130.122.252:/var/nfs/general/cmshared`, and it will be mounted over `/cm/shared` on the cluster nodes.

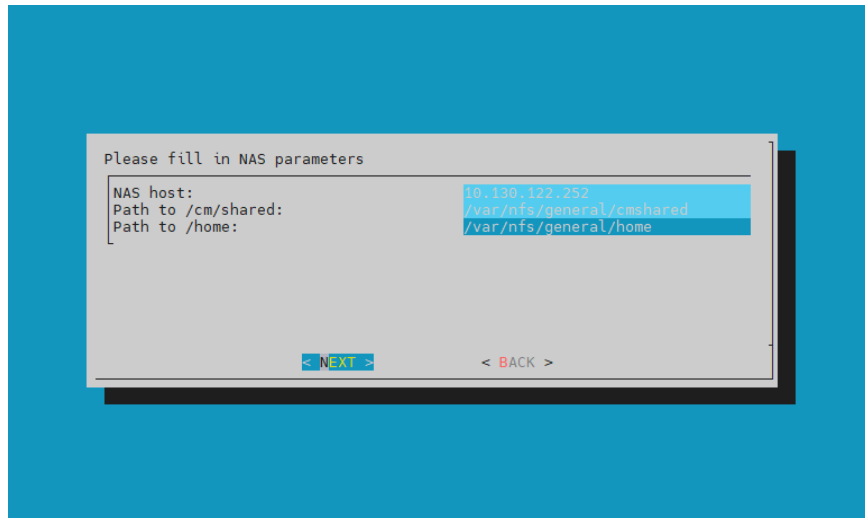

35. The wizard shows a summary of the information that it has collected. Press `ENTER` to continue.


36. Select `Yes` to continue.

This will initiate a copy and update to `fsexports`.



37. The `cmha-setup` wizard proceeds with its work.


When it completes, select `ENTER` to finish HA setup.

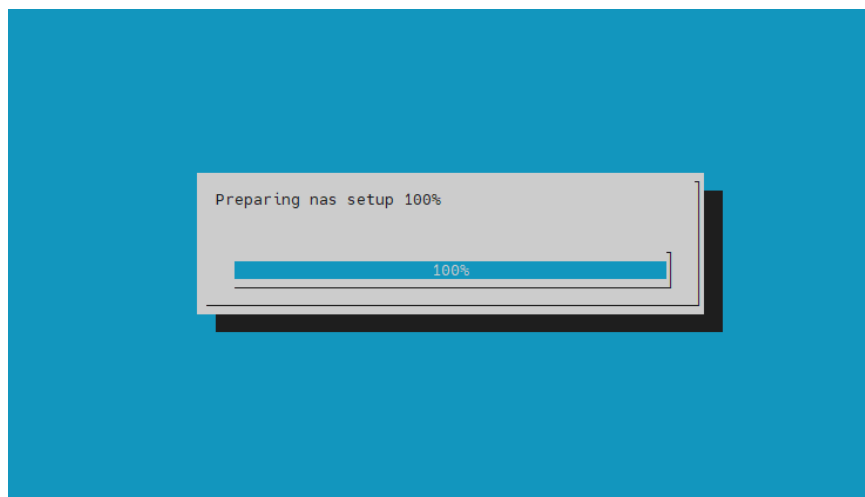

The progress is shown below:

```
Copying NAS data..... [ OK ]
Mount NAS storage..... [ OK ]
Remove old fsmounts..... [ OK ]
Add new fsmounts..... [ OK ]
Remove old fsexports..... [ OK ]
Write NAS mount/unmount scripts..... [ OK ]
Copy mount/unmount scripts..... [ OK ]
Press any key to continue
```

38. `cmha-setup` is now complete. `EXIT` the wizard to return to the shell prompt.
39. Run the `cmsh status` command to verify that the failover configuration is correct and working as expected.

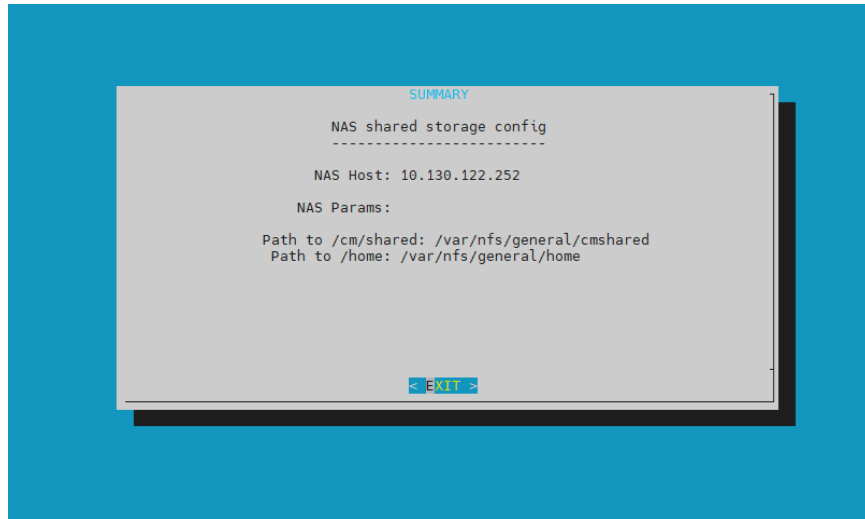

The command tests the configuration from both directions: from the primary head node to the secondary, and from the secondary to the primary. The active head node is indicated by an asterisk.

```
# cmha status
Node Status: running in active mode

bcm-head-01* -> bcm-head-02
  failoverping [ OK ]
  mysql       [ OK ]
  ping        [ OK ]
  status      [ OK ]

bcm-head-02 -> bcm-head-01*
  failoverping [ OK ]
  mysql       [ OK ]
  ping        [ OK ]
  status      [ OK ]
```

40. Verify that the `/cm/shared` and `/home` directories are being mounted from the NAS server.

```
# mount
. . . some output omitted . . .
10.130.122.252:/var/nfs/general/cmshared on /cm/shared type nfs4
(rw,relatime,vers=4.2,rsz=32768,wsz=32768,namlen=255,hard,proto=tcp,timeo=600
,retrans=2,sec=sys,clientaddr=10.130.122.253,local_lock=none,addr=10.130.122.252)
10.130.122.252:/var/nfs/general/home on /home type nfs4
(rw,relatime,vers=4.2,rsz=32768,wsz=32768,namlen=255,hard,proto=tcp,timeo=600
,retrans=2,sec=sys,clientaddr=10.130.122.253,local_lock=none,addr=10.130.122.252)
```

41. Login to the head node to be made active and run `cmha makeactive`.

```
# ssh bcm-head-02
# cmha makeactive

=====
This is the passive head node. Please confirm that this node should
become
the active head node. After this operation is complete, the HA status of
the head nodes will be as follows:

bcm-head-02 will become active head node (current state: passive)
bcm-head-01 will become passive head node (current state: active)
=====

Continue(c)/Exit(e)? c

Initiating failover..... [ OK ]

bcm-head-02 is now active head node, makeactive successful
```

42. Run the `cmsh status` command again to verify that the secondary head node has become the active head node.

```
# cmha status
Node Status: running in active mode

bcm-head-02* -> bcm-head-01
  failoverping [ OK ]
  mysql        [ OK ]
  ping         [ OK ]
  status       [ OK ]

bcm-head-01 -> bcm-head-02*
  failoverping [ OK ]
  mysql        [ OK ]
  ping         [ OK ]
  status       [ OK ]
```

43. Manually failover back to the primary head node.

```
# ssh bcm-head-01
# cmha makeactive

=====
This is the passive head node. Please confirm that this node should become
the active head node. After this operation is complete, the HA status of
the head nodes will be as follows:

bcm-head-01 will become active head node (current state: passive)
bcm-head-02 will become passive head node (current state: active)
=====

Continue(c)/Exit(e)? c

Initiating failover..... [ OK ]

bcm-head-01 is now active head node, makeactive successful
```

44. Run the `cmsh status` command again to verify that the primary head node has become the active head node.

```
# cmha status
Node Status: running in active mode

bcm-head-01* -> bcm-head-02
  failoverping [ OK ]
  mysql        [ OK ]
  ping         [ OK ]
  status       [ OK ]

bcm-head-02 -> bcm-head-01*
  failoverping [ OK ]
  mysql        [ OK ]
  ping         [ OK ]
  status       [ OK ]
```

45. Power on the cluster nodes.

```
# cmsh -c "power -c dgx on"
ipmi0 ..... [ ON ] dgx01
ipmi0 ..... [ ON ] dgx02
ipmi0 ..... [ ON ] dgx03
ipmi0 ..... [ ON ] dgx04
```

46. This concludes the setup and verification of HA.

---

# Chapter 4. Slurm and Jupyter Setup

## 4.1 Slurm

1. Install Slurm.

```
sudo /opt/bcm/provisioning/install_slurm
```

This script will create the `slogin` nodes.

2. Update the interface names on the `slogin` nodes.

```
% device use slogin-01
```

Update interface names, If the `slogin-01` does not have the expected interface names ,

```
% use networkdevicename
```

```
% set networkdevicename new-name
```

3. Assign the MAC addresses to the `slogin` nodes.

```
device use slogin-01
```

```
set mac <MAC address>
```

4. Rerun the `install_slurm` script.

```
/opt/bcm/provisioning/install_slurm
```

5. Reboot all the non-headnode systems involved with Slurm.

```
cmsh
```

```
device
```

```
reboot -c slogin
```

```
reboot -c dgxnodes
```

6. Modify the `slurmclient-gpu` role to remove the `slurm-client` role and convert `slurm-client-gpu` to use that name instead to simplify the configuration.

```
cmsh
```

```
configurationoverlay
```

```
remove slurm-client
```

```
commit
```

```
use slurm-client-gpu
```

```
set name slurm-client
```

```
commit
```

```
roles
```

```
use slurmclient
```



7. Clear the `Type` value and set the correct core association with each GPU entry for maximum performance.

```
genericresources
use gpu0
clear type
set cores 48-63,176-191
use gpu1
clear type
set cores 48-63,176-191
use gpu2
clear type
set cores 16-31,144-159
use gpu3
clear type
set cores 16-31,144-159
use gpu4
clear type
set cores 112-127,240-255
use gpu5
clear type
set cores 112-127,240-255
use gpu6
clear type
set cores 80-95,210-223
use gpu7
clear type
set cores 80-95,210-223
commit
```

The `gres.conf` file will be updated automatically by BCM—these settings align with the expectations of various scripts and tools in the NVIDIA ecosystem and will then maximize compatibility of this environment with those scripts and tools.

8. If the `/home` directory is not mounted on the nodes, increase the number of retries.

Due to a race condition between the `bond0` interface being up and `/home` being mounted, sometimes `/home` will not be mounted. Increasing the number of retries should fix the issue.

```
cmsh
category
use dgxnodes
fsmounts
use home
set mountoptions "x-systemd.mount-timeout=150,defaults,_netdev,retry=2"
```

## 4.2 Jupyter Installation

1. Configure the Jupyter service on the head node.

```
/opt/bcm/provisioning/install_jupyter -j <hostname>.
```

2. Set services to use cm-jupyterhub.

```
% device
% use bcm-head-01
% services
% use cm-jupyterhub
```

3. Set the runif parameter to ACTIVE.

```
% set runif active
% commit
```

4. Ensure that the Service and Run if parameter are correctly set.

```
% show
Parameter                                Value
-----
Revision
Service                                  cm-jupyterhub
Run if                                    ACTIVE
Monitored                                yes
Autostart                                yes
Timeout                                  -1
Belongs to role                           yes
Sickness check script
Sickness check script timeout             10
Sickness check interval                   60
```

## Notice

This document is provided for information purposes only and shall not be regarded as a warranty of a certain functionality, condition, or quality of a product. NVIDIA Corporation ("NVIDIA") makes no representations or warranties, expressed or implied, as to the accuracy or completeness of the information contained in this document and assumes no responsibility for any errors contained herein. NVIDIA shall have no liability for the consequences or use of such information or for any infringement of patents or other rights of third parties that may result from its use. This document is not a commitment to develop, release, or deliver any Materials (defined below), code, or functionality.

NVIDIA reserves the right to make corrections, modifications, enhancements, improvements, and any other changes to this document, at any time without notice.

Customer should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

NVIDIA products are sold subject to the NVIDIA standard terms and conditions of sale supplied at the time of order acknowledgement, unless otherwise agreed in an individual sales agreement signed by authorized representatives of NVIDIA and customer ("Terms of Sale"). NVIDIA hereby expressly objects to applying any customer general terms and conditions with regards to the purchase of the NVIDIA product referenced in this document. No contractual obligations are formed either directly or indirectly by this document.

No license, either expressed or implied, is granted under any NVIDIA patent right, copyright, or other NVIDIA intellectual property right under this document. Information published by NVIDIA regarding third-party products or services does not constitute a license from NVIDIA to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property rights of the third party, or a license from NVIDIA under the patents or other intellectual property rights of NVIDIA.

Reproduction of information in this document is permissible only if approved in advance by NVIDIA in writing, reproduced without alteration and in full compliance with all applicable export laws and regulations, and accompanied by all associated conditions, limitations, and notices.

THIS DOCUMENT AND ALL NVIDIA DESIGN SPECIFICATIONS, REFERENCE BOARDS, FILES, DRAWINGS, DIAGNOSTICS, LISTS, AND OTHER DOCUMENTS (TOGETHER AND SEPARATELY, "MATERIALS") ARE BEING PROVIDED "AS IS." NVIDIA MAKES NO WARRANTIES, EXPRESSED, IMPLIED, STATUTORY, OR OTHERWISE WITH RESPECT TO THE MATERIALS, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF NONINFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL NVIDIA BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF NVIDIA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Notwithstanding any damages that customer might incur for any reason whatsoever, NVIDIA's aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms of Sale for the product.

## Trademarks

NVIDIA, the NVIDIA logo, DGX, DGX NVIDIA SuperPOD, and NVIDIA Base Command Manager are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. Other company and product names may be trademarks of the respective companies with which they are associated.

## Copyright

© 2023 NVIDIA Corporation. All rights reserved.