



High-accuracy Digital LC Meter

Here's a handy piece of test gear you can build for yourself – a Digital LC Meter for measuring inductance and capacitance over a wide range. It's based on an ingenious measurement technique, delivers surprising accuracy and is easy to build.

MANY modern DMM's (digital multimeters) have capacitance measuring ranges, especially the up-market models. So it's not hard to measure the value of capacitors, as long as their value is more than about 50pF or so.

Below that level, DMMs are not very useful for capacitance measurements. Dedicated digital capacitance meters are available, of course, and they generally measure down to a few pF or so. But if you want to measure things like stray capacitance, they too are of limited use.

It's even worse when it comes to measuring inductors. Very few DMMs

have the ability to measure inductance, so in many cases you have to use either an old-type inductance bridge or a 'Q' meter. Both of these are basically analogue instruments, and don't offer either high resolution or particularly high accuracy.

Micro solution

It's different for professionals, who for the last 20 years or so have been able to use digital LCR meters. These allow you to measure almost any passive component quickly and automatically, often measuring not just their primary parameter (like inductance or capacitance) but one or more secondary parameters

as well. However, many of these instruments carry a hefty price tag, keeping them well out of reach for many of us.

Fortunately, thanks to microcontroller technology, that situation has changed somewhat in the last few years, with much more affordable digital instruments now becoming available. These include both commercial and DIY instruments, along with the unit described here.

Main features

As shown in the photographs, our new Digital LC Meter is very compact. It's easy to build, has an LCD readout and fits snugly inside a UB3-size utility box. It won't break the bank either – we estimate that you should be able to build it for less than £40.

Despite its modest cost, it offers automatic direct digital measurement over a wide range for both capacitance (C) and inductance (L) with 4-digit resolution. In fact, it measures capacitance from just 0.1pF up to 800nF and inductance from 10nH to 70mH.

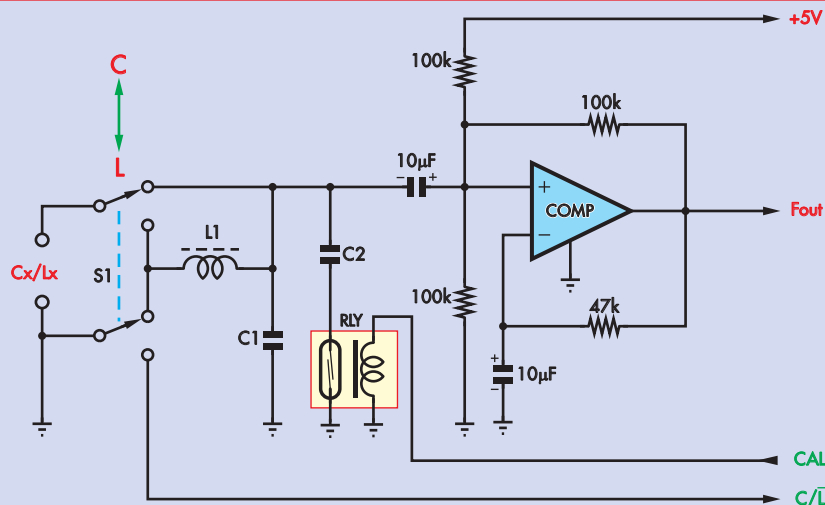


Fig.1: the circuit uses a wide-range test oscillator, the frequency of which varies when an unknown inductor (L_x) or capacitor (C_x) is connected. This oscillator is in turn monitored using a microcontroller which accurately calibrates the unit and measures the change in oscillator frequency. The microcontroller then calculates the unknown component's inductance or capacitance and displays the result on an LCD.

HOW IT WORKS: THE EQUATIONS

(A) In calibration mode

(1) With just L1 and C1: $F1 = \frac{1}{2 \cdot \pi \cdot \sqrt{L1 \cdot C1}}$

(2) With C2 added to C1: $F2 = \frac{1}{2 \cdot \pi \cdot \sqrt{L1 \cdot (C1+C2)}}$

(3) From (1) and (2), we can find C1:

$$C1 = \frac{F2^2}{(F1^2 - F2^2)} \cdot C2$$

(4) Also from (1) and (2), we can find L1:

$$L1 = \frac{1}{4 \cdot \pi^2 \cdot f^2 \cdot C1}$$

(B) In measurement mode

(5) When C_x is connected: $F_3 = \frac{1}{2\pi \cdot \sqrt{L_1 \cdot (C_1 + C_x)}}$

$$\text{so } C_x = C_1 \cdot \left(\frac{F_1^2}{F_3^2} - 1 \right)$$

(6) Or when L_x is connected:

$$F3 = \frac{1}{2.\pi.\sqrt{(L1+Lx).C1}}$$

$$\text{so } L_x = L_1 \bullet \left(\frac{F_1^2}{F_2^2} - 1 \right)$$

NOTE: F2 & F3 should always be lower than F1

Measurement accuracy is also surprisingly good, at better than $\pm 1\%$ of reading.

It operates from 9V to 12V DC, drawing an average current of less than 20mA. This means that it can be powered from either a 9V alkaline battery inside the case, or from an external plugpack supply.

How it works

The meter's impressive performance depends on an ingenious measurement technique which was developed about 12 years ago by Neil Hecht, of Washington state in the US. It uses a wide-range test oscillator whose frequency is varied by connecting the unknown inductor or capacitor you're measuring. The resulting change in frequency is measured by a microcontroller, which then calculates the component's value and displays it directly on an LCD readout.

So there are basically only two key parts in the meter: (1) the test oscillator itself and (2) the microcontroller which measures its frequency (with and without the component being measured) and calculates the component's value.

To achieve reliable oscillation over a wide frequency range, the test oscillator is based on an analogue comparator with positive feedback around it – see Fig. 1. This configuration has a natural inclination to oscillate because of the

very high gain between the comparator's input and output.

When power (+5V) is first applied, the comparator's non-inverting (+) input is held at half the supply voltage (+2.5V) by a bias divider formed by two 100k Ω resistors. However, the voltage at the inverting input is initially zero because the 10 μ F capacitor at this input needs time to charge via the 47k Ω feedback resistor. So, with its non-inverting input much more positive than its inverting input, the comparator initially switches its output high (ie, to +5V).

Once it does so, the $10\mu\text{F}$ capacitor on the inverting input begins charging via the $47\text{k}\Omega$ resistor and so the voltage at this input rises exponentially. As soon as it rises slightly above the $+2.5\text{V}$ level, the comparator's output suddenly switches low.

This low voltage is fed back to the comparator's non-inverting input via a 100k Ω feedback resistor. It is also coupled through the 10 μ F input

capacitor to a tuned circuit formed by inductor L1 and capacitor C1. This makes the tuned circuit 'ring' at its resonant frequency.

Oscillation

As a result, the comparator and the tuned circuit now function as an oscillator at that resonant frequency. In effect, the comparator effectively functions as a ‘negative resistance’ across the tuned circuit, to cancel its losses and maintain oscillation.

Once this oscillation is established, a square wave of the same frequency appears at the comparator's output and it is this frequency (F_{out}) that is measured by the microcontroller. In practice, before anything else is connected into the circuit, F_{out} simply corresponds to the resonant frequency of L1, C1 and any stray capacitance that may be associated with them.

When power is first applied to the meter, the microcontroller measures

Specifications

- **Inductance Range:** from about 10nH to over 70mH (4-digit resolution)
- **Capacitance Range:** from about 0.1pF to over 800nF (4-digit resolution)
- **Range Selection:** automatic (capacitors must be non-polarised types)
- **Sampling Rate:** approximately five measurements per second
- **Expected Accuracy:** better than $\pm 1\%$ of reading, $\pm 0.1\text{pF}$ or $\pm 10\text{nH}$
- **Power Supply:** 9V to 12V DC at less than 20mA (non-backlit LCD module). Can be operated from an internal 9V battery or an external plugpack.

Parts List – High-accuracy Digital LC Meter

*1 PC board, code 745 (Main), size 125 × 58mm	1 M3 nut (metal)
*1 PC board, code 746 (Adpt.), size 36 × 16mm	2 M2 × 6mm machine screws (for S1)
*1 PC board, code 747 (Bar), size 41 × 21mm	4 M3 × 12mm nylon screws
1 UB3-size box, 130 × 68 × 44mm	8 M3 nylon nuts
1 16×2 LCD module (Jaycar QP-5515 or QP-5516 or similar – see panel)	4 M3 nylon nuts with integral washers
1 5V 10mA DIL reed relay (Jaycar SY-4030)	1 9V battery-snap lead
1 100μH RF inductor (L1)	1 10kΩ horizontal trimpot (VR1)
1 4.0MHz crystal, HC-49U	Semiconductors
1 DPDT subminiature slider switch (S1)	1 PIC16F628A microcontroller, pre-programmed – see text (IC1)
1 SPST momentary contact pushbutton switch (S2)	1 7805 +5V regulator (REG1)
1 SPDT mini toggle switch (S3)	1 1N4148 signal diode (D1)
1 18-pin DIL IC socket	1 1N4004 1A rect. diode (D2)
1 2.5mm PC-mount DC connector	Capacitors
1 4×2 section of DIL header strip	1 22μF 16V radial elect.
1 7×2 section of DIL header strip	2 10μF 16V radial elect.
1 jumper shunt	1 10μF 16V tantalum
1 binding-post/banana socket, red	1 100nF monolithic
1 binding-post/banana socket, black	2 1nF MKT or polystyrene (1% if possible) (C1, C2)
2 PC terminal pins, 1mm dia	2 33pF NPO ceramic
4 M3 × 15mm tapped spacers	Resistors (0.25W 1% metal film)
4 M3 × 6mm csk head machine screws	3 100kΩ 2 4.7kΩ
5 M3 × 6mm pan head machine screws	1 68kΩ 4 1kΩ
	1 47kΩ
	* Available as a set from the <i>EPE PCB Service</i>

this frequency (F1) and stores it in memory. It then energises reed relay RLY1, which switches capacitor C2 in parallel with C1 and thus alters the oscillator frequency (ie, it lowers it). The microcontroller then measures and stores this new frequency (F2).

Next, the microcontroller uses these two frequencies, plus the value of C2 to accurately calculate the values of both C1 and L1. If you're interested, the equations it uses to do this are shown in the top (Calibration Mode) section of the box titled 'How it works: the equations'.

Following these calculations, the microcontroller turns relay RLY1 off again to remove capacitor C2 from the circuit, allowing the oscillator frequency to return to F1. The unit is now ready to measure the unknown inductor or capacitor (Cx or Lx).

Into the unknown

As shown in Fig.1, the unknown component is connected across the test terminals. It is then connected to the

oscillator's tuned circuit via switch S1.

When measuring an unknown capacitor, S1 is switched to position 'C' so that the capacitor is connected in parallel with C1. Alternatively, for an unknown inductor, S1 is switched to position 'L' so that the inductor is connected in series with L1.

In both cases, the added values of Cx or Lx again causes the oscillator frequency to change, to a new frequency (F3). As with F2, this will always be lower than F1. So, by measuring F3 as before, and monitoring the position of S1 (which is done via the C/L connection at IC1 pin 12), the microcontroller can calculate the value of the unknown component using one of the equations shown in the lower section of the equations box – ie, the section labelled 'In measurement mode'.

From these equations, you can see that the micro has some fairly solid 'number crunching' to do, both in the calibration mode when it calculates the values of L1 and C1, and then

in the measurement mode, when it calculates the value of Cx or Lx. Each of these values needs to be calculated to a high degree of resolution and accuracy. To achieve this, the micro's firmware needs to make use of some 24-bit floating point maths routines.

Circuit details

How this ingenious yet simple measurement scheme is used to produce a practical LC meter can be seen from the full circuit diagram of the High-Accuracy Digital LC Meter, shown in Fig.2. It's even simpler than you might have expected, because there's no separate comparator to form the heart of the measurement oscillator. Instead, we're making use of a comparator that's built into the microcontroller (IC1) itself.

As shown, microcontroller IC1 is a PIC16F628A and it actually contains two analogue comparators which can be configured in a variety of ways. Here we are using comparator 1 (CMP1) as the measurement oscillator. Comparator 2 (CMP2) is used only to provide some additional 'squaring up' of the output from CMP1, and its output then drives the internal frequency counting circuitry.

The oscillator circuitry is essentially unchanged from that shown in Fig.1. Note that IC1 controls relay RLY1 (which switches calibrating capacitor C2 in and out of circuit) via its I/O port B's RB7 line (pin 13). Diode D1 prevents the micro's internal circuitry from being damaged by inductive spikes when RLY1 switches off.

In operation, IC1 senses which position switch S1 is in using RB6 (pin 12). This is pulled high internally when S1b is in the 'C' position, and low when S1b is in the 'L' position. Crystal X1 (4MHz) sets the clock frequency for IC1, while the associated 33pF capacitors provide the correct loading to ensure reliable starting of the clock oscillator.

The results of IC1's calculations are displayed on a standard 2×16 line LCD module. This is driven directly from the micro itself, via port pins RB0 to RB5. Trimpot VR1 allows the LCD contrast to be optimised.

Firmware and link functions

The firmware in IC1 is designed to automatically perform the calibration function just after initial start-up. However, this can also be performed at any other time using switch S2.

Pressing this switch simply pulls the micro's MCLR pin (4) down, so that the micro is forced to reset and start up again, recalibrating the circuit in the process.

Links LK1 to LK4 are not installed for normal use, but are used for the initial setting up, testing and calibration. As shown, these links connect between RB3 to RB0 and ground respectively.

For example, if you fit LK1 and then press S2 to force a reset, the micro will activate RLY1 (to switch capacitor C2 into circuit) and measure oscillator frequency F2. This is then displayed on the LCD.

Similarly, if you fit LK2 and press S2, the micro simply measures the initial oscillator frequency (F1) and displays this on the LCD. This allows you to not only make sure that the oscillator is operating, but also you can check its frequency as well. We'll have more to say about this later.

Links LK3 and LK4 allow you to perform manual calibration ‘tweaks’ to the meter. This is useful if you have access to a capacitor whose value is very accurately known (because it has been measured using a full-scale LCR meter, for example).

With LK3 fitted, the capacitance reading decreases by a small amount each time it makes a new measurement (which is about five times per second). Conversely, if LK4 is fitted instead, the microcontroller increases the capacitance reading by a small increment each time it performs a new measurement.

Each time a change is made, the adjustment factor is stored in the micro's EEPROM, and this calibration value is then applied to future measurements. Note also that although the calibration is made using a 'standard' capacitor, it also affects the inductance measurement function.

In short, the idea is to fit the jumper to one link or the other (ie, to LK3 or LK4) until the reading is correct. The link is then removed.

As mentioned above, links LK1 to LK4 are all left out for normal operation. They're only used for troubleshooting and calibration.

Power supply

Power for the circuit is derived from an external 9V to 12V DC source. This can come from either a plugpack supply or from an internal 9V battery. The switched DC power input socket

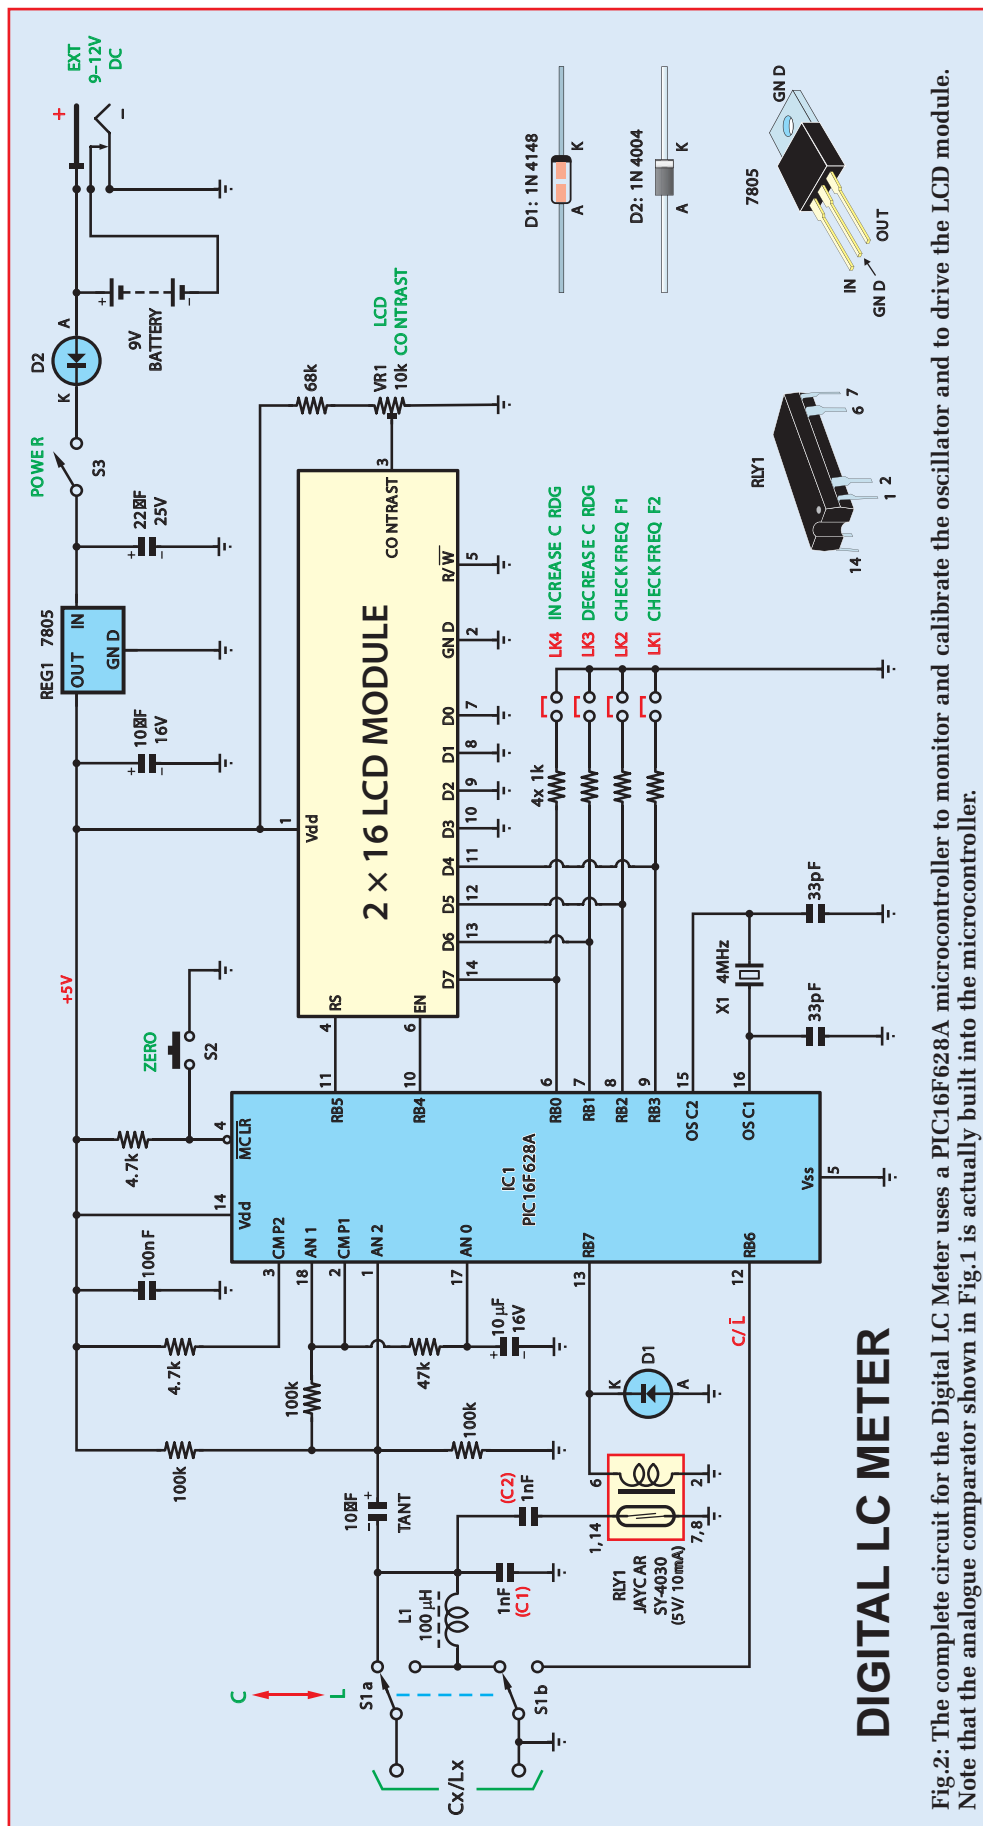


Fig.2: The complete circuit for the Digital LC Meter uses a PIC16F628A microcontroller to monitor and calibrate the oscillator and to drive the LCD module. Note that the analogue comparator shown in Fig.1 is actually built into the microcontroller.



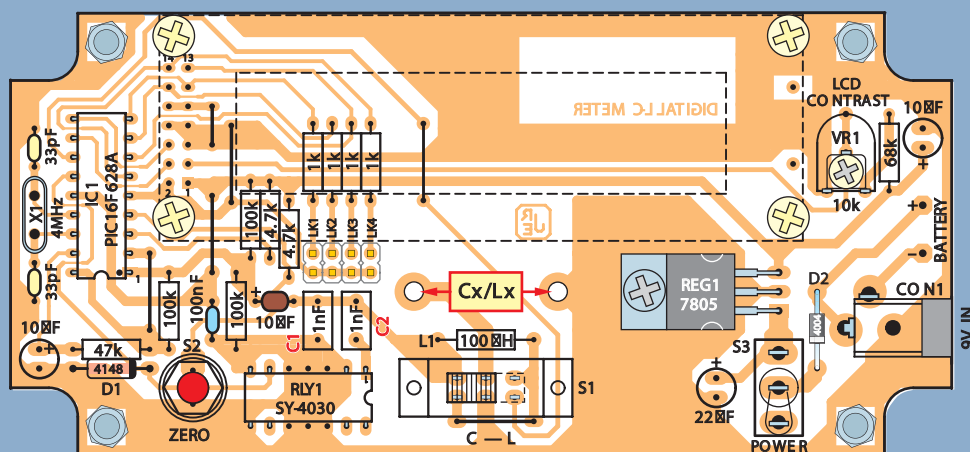


Fig.3: follow this layout diagram to build the Digital LC Meter, but don't solder in the switches or the test terminals until after these parts have been mounted on the front panel. The 2-way pin headers for links LK1-LK4 are installed on the copper side of the board – see text.

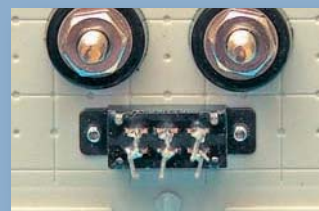

Part of the back of the case lid before the PC board assembly is attached, showing the 'extension leads' soldered to slide switch S1's terminals.

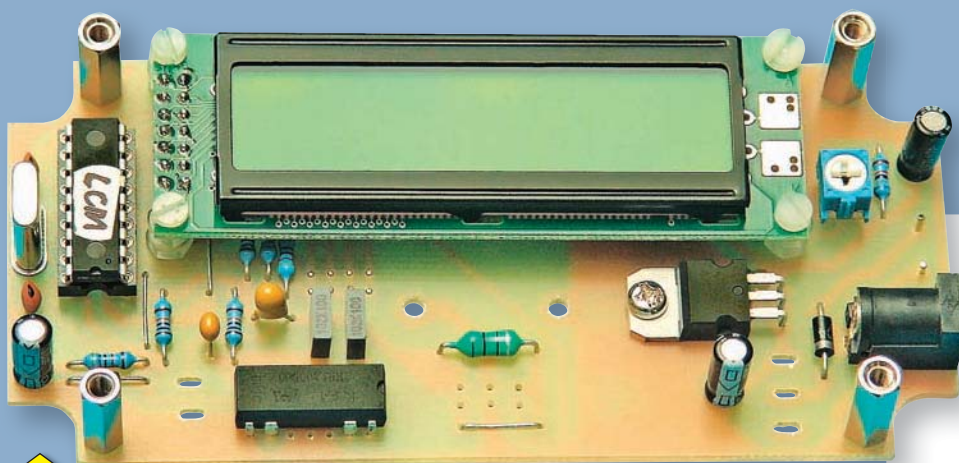

The PC board assembly is attached to the case lid using M3 × 15mm spacers and M3 × 6mm countersink (csk) machine screws. Make sure that the assembly is secure before soldering the switch lugs and test terminals.

automatically disconnects the battery when the plugpack supply is connected.

The incoming DC rail is fed via reverse polarity protection diode D2 and power switch S3 to regulator REG1 – a standard 7805 device. The resulting +5V rail at REG1's output is then used to power IC1 and the LCD module.

Software


The software files are available via the *EPE* Library site, accessed via **www.epemag.com**. Pre-programmed PICs are available from

Magenta Electronics – see their advert in this issue for contact details.

Construction






Because it uses so few parts, the unit is very easy to build. All the parts, except for switches S1 to S3 and the Cx/Lx input terminals, are mounted on a PC board, code 745, measuring 125 × 58mm. This board is available from the *EPE PCB Service*.

The LCD module connects to a 7x2 DIL pin header at one end of the board, and is supported at either end using M3 nylon screws and nuts.

- 
- Fig.3 shows the parts layout on the PC board. Here's the suggested order of fitting the components to the PC board:
- 1) Fit DC power connector CON1 and the two 1mm PC board terminal pins for the internal battery connections.
 - 2) Fit the six wire links, four of which go under where the LCD module is later fitted. Don't forget the link immediately below switch S1.
 - 3) Install the 4x2 DIL pin header used for links LK1 to LK4. **Note that this item must be mounted on the copper side of the board (not on the top),** so that a jumper can later be fitted to any of the links when the board assembly is attached to the box lid).

To install this header, just push the ends of the longer sides of the pins into the board holes by 1-2mm, then solder them carefully to the pads. That done, push the plastic strip down the pins so that it rests against the solder joints,

 Table 1: Resistor Colour Codes

	No.	Value	4-Band Code (1%)	5-Band Code (1%)
	3	100kΩ	brown black yellow brown	brown black black orange brown
	1	68kΩ	blue grey orange brown	blue grey black red brown
	1	47kΩ	yellow violet orange brown	yellow violet black red brown
	2	4.7kΩ	yellow violet red brown	yellow violet black brown brown
	4	1kΩ	brown black red brown	brown black black brown brown

leaving the clean outer ends of all pins free to take a jumper shunt.

- 4) Fit a 7×2 DIL pin header for the LCD module connections. This header is fitted to the top of the PC board in the usual way.
- 5) Install the 11 resistors, seven of which go under the LCD module. Table 1 shows the resistor colour codes, but you should also check each resistor using a DMM before soldering in position on the board.
- 6) Install trimpot VR1, followed by inductor L1 and reed relay RLY1.
- 7) Fit the five non-polarised capacitors, followed by the 10μF tantalum, the two 10μF radial electrolytics and the 22μF radial electrolytic. Note that the tantalum capacitor and the electrolytics are polarised, so take care with their orientation.
- 8) Install DIL relay RLY1, the 18-pin socket for IC1 and the 4MHz crystal X1. Follow these parts with diodes D1 and D2 and regulator REG1.
Note that the regulator's leads are bent downwards through 90° 6mm from the body, so that they pass through the holes in the board. Before soldering the leads, secure the metal tab to the PC board using an M3 × 6mm machine screw and nut.
- 9) Secure the LCD module to the PC board, using four M3 × 12mm cheesehead nylon screws and 12 nuts (three on each screw). Fig.4 shows the details.
At each mounting point, two plain nuts act as spacers between the module and the PC board, while a third nut with an integral washer is fitted to secure the assembly under the PC board. Note that when you're fitting the module to the top of the board, it should be lowered carefully so that the holes at the lefthand end slip down over the pins of the 7×2 DIL strip fitted earlier.
- 10) Solder the 14 pin connections on the top of the LCD module using a fine-pointed iron.
- 11) Plug the programmed PIC16F628A (IC1) into its socket, then fit four M3 × 15mm tapped spacers to the PC board mounting points. Secure these spacers using M3 × 6mm pan-head screws.

That completes the board assembly. It can now be placed to one side while you work on the case.

Preparing the case

As shown in the photographs, the PC board assembly is mounted on the lid of a standard UB3-size box.

If you're building the Digital LC Meter from a kit, the plastic case will probably be supplied with all holes drilled and with screen-printed lettering for the front panel. If so, it will be simply a matter of fitting the switches and binding 'test' posts to the lid.

Note that slide switch S1 is secured using two M2 × 6mm machine screws, while switches S2 and S3 are mounted using their own mounting nuts and lockwashers. The binding posts mount to the panel in the same way.

If you have to drill the case holes yourself, you can use a photocopy of the front panel artwork (Fig.5) as a drilling template. In addition, you will have to drill/ream a 10mm diameter hole in the righthand end of the box to give access to the DC connector (CON1). This hole should be positioned 22mm from the front edge of the case and 9mm down from the lid, so that it aligns correctly with CON1.

That done, a copy of the front panel artwork can be attached to the lid using an even smear of neutral-cure silicone sealant and the holes cut out using a sharp hobby knife.

Once all the panel hardware is in place, the next step is to fit the PC board. The first thing to note here is that the rear lugs of switches S2 and S3 will pass through their PC pads when the board is mounted on the lid, with just enough metal protruding to allow soldering.

This also applies to the binding post terminals. **However, slide switch S1's lugs are not long enough for this, so after the switch is mounted on the lid, a short length of tinned copper wire (eg, a resistor lead offcut) must be soldered to each lug to extend its length.**

By the way, when you're fitting these short extension wires, it's a good idea to make a small hook at the end of each wire and pass it through the lug's hole before squeezing it with needle-nose pliers. The idea here is to ensure that, once soldered, it's not going to fall out when the lower ends of the wires are later soldered to the board pads.

Once the extension wires have been fitted, you should be able to fit the PC board assembly on the lid so that all the switch and binding post leads pass through their matching board holes.

That done, you can fasten it all together using four M3 × 6mm countersink head screws, which pass through the front of the lid and into the spacers.

The assembly can now be completed by soldering the switch and binding post leads and by fitting the battery snap connector.

Checkout and calibration

Your LC meter is now ready for testing and calibration. To do this, first connect a plugpack supply or a 9V alkaline battery to the unit, set slider switch S1 to the 'Capacitance' position and switch on using S3. As soon as power is applied, the message 'Calibrating' should appear on the LCD for a second or two, then the display should change to read 'C = NN.N pF', where NN.N is less than 10pF.

If this happens, then your meter is probably working correctly, so just leave it for a minute or two to let the test oscillator stabilise. During this time the capacitance reading may vary slightly by a few tenths of a picofarad as everything settles down – that's normal.


Now press 'Zero' button S2 for a second or two and release it. This forces the microcontroller to start up again and recalibrate, so you'll briefly see the 'Calibrating' message again and then 'C = 0.0pF'. This indicates that the microcontroller has balanced out the stray capacitance and reset its zero reference.

Troubleshooting

If you don't get any messages displayed on the LCD, chances are that you've connected either the battery snap lead or the plugpack lead's connector with reversed polarity. Check the supply connections carefully. With power applied, you should be able to measure +5V on pin 14 of IC1 with respect to ground (0V).

Alternatively, if you get some messages on the LCD, but they're not as described, it's time to check that the meter's test oscillator is working properly. To do this, switch off, fit jumper shunt LK2 (ie, at the back of the board), then apply power and watch the LCD.

After the 'Calibrating' message, the micro should display an eight-digit number which represents the oscillator frequency F1. This should be between about 00042000 and 00058000, if your components for L1 and C1 are within the usual tolerance.

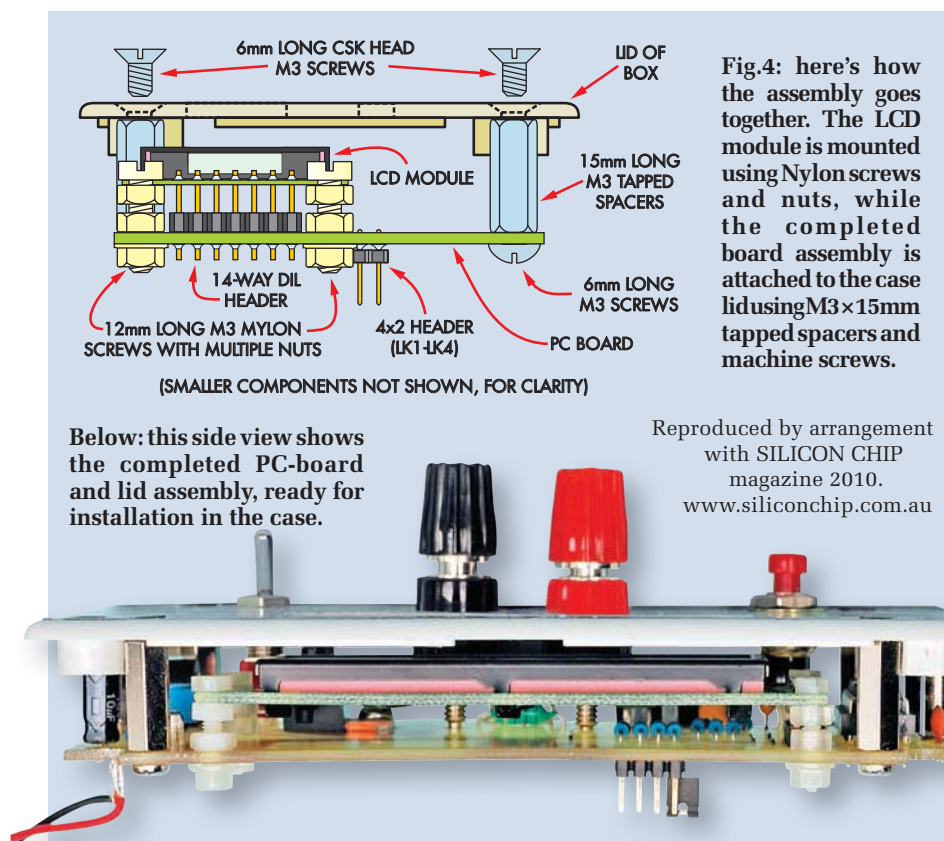

If the figure you get for F1 is '00000000', your test oscillator isn't working and you will need to switch off and look for the cause. The possibilities include missed solder joints, a poor solder joint involving one of the oscillator components, or perhaps a tiny sliver of solder bridging adjacent copper tracks or pads.

If you do get a figure in the correct range, write the value down, then switch off and transfer the jumper shunt to the LK1 position. Re-apply power and check that the LCD now shows a different

eight-digit number after calibrating. This will be F2 – ie, the oscillator frequency when capacitor C2 is switched in parallel with C1.

Because the two capacitors are nominally the same value, F2 should be very close to 71% of F1. That's because doubling the capacitance reduces the frequency by a factor equal to the square root of two (ie, $1/\sqrt{2} = 0.707$). If your reading for F2 is well away from 71% of F1, you may need to replace C2 with another capacitor whose value is closer to C1.

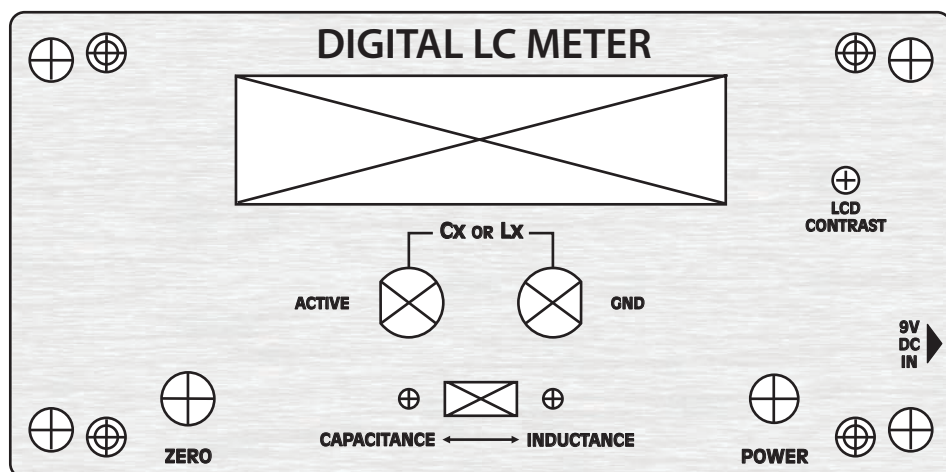


Fig.5: this full-size front-panel artwork can be used as a drilling template for the front panel.

On the other hand, if F2 is exactly the same as F1, this suggests that relay RLY1 is not actually switching C2 in at all. This could be due to a poor solder joint on one of RLY1's pins or you may have wired it into the board the wrong way around.

Once you do get sensible readings for F1 and F2, your Digital LC Meter will be ready for calibration and/or use. If you don't have a capacitor of a known value to perform your own accurate calibration, you'll have to rely on the meter's own self-calibration (which relies largely on the accuracy of capacitor C2). In this case, just remove any jumpers from LK1 to LK4 and fit your meter assembly into its box, using self-tapping screws to hold everything together.

The battery sits in the bottom of the case. It is secured by wrapping it in foam, so that it is firmly wedged in place when the lid assembly is fitted to the case.

Fine-tuning the calibration

If you happen to have a capacitor of known value (because you've been able to measure it with a high-accuracy LCR meter), you can easily use it to fine-tune the Digital LC Meter's calibration.

First, switch the unit on and let it go through its 'Calibrating' and 'C = NN.N pF' sequence. That done, wait a minute or two and press the Zero button (S2), ensuring that the LCD then shows the correctly zeroed message – ie, 'C = 0.0 pF'.

Next, connect your known-value capacitor to the test terminals and note the reading. It should be fairly close to the capacitor's value, but may be somewhat high or low.

If the reading is too low, install link LK4 on the back of the board and watch the LCD display. Every 200ms or so, the reading will increment as the PIC microcontroller adjusts the meter's scaling factor in response to the jumper. As soon as the reading reaches the correct figure, quickly remove the jumper to end the calibration adjustment.

Conversely, if the meter's reading for the known capacitor is too high, follow the same procedure, but with the jumper in the LK3 position. This will cause the micro to decrement the meter's scaling factor each time it makes a measurement, and as before, the idea is to remove LK3 as soon as the reading reaches the correct figure.



Fig.6: this is what appears on the LCD screen after zeroing the unit in Capacitance mode.

If you are not fast enough in removing the jumper during either of these calibration procedures, the microcontroller will 'overshoot'. In that case, you simply need to use the opposite procedure to bring the reading back to the correct figure. In fact, you may need to adjust the calibration back and forth a few times until you're satisfied that it is correct.

As previously mentioned, the PIC microcontroller saves its scaling factor in its EEPROM after every measurement during these calibration procedures. That means that you only have to do the calibration once. Note also when you calibrate the meter in this way using a known-value capacitor, it's also automatically calibrated for inductance measurements.

Using it

The Digital LC Meter is easy to use. Initially, you just switch it on, set S1 to Capacitance (NOT Inductance), wait a minute or two for it to stabilise and then zero it using pushbutton S2. It's then just a matter of connecting the unknown component to the test terminals, selecting 'Capacitance' or 'Inductance' using S1 and reading the component's value off the LCD.

Alternatively, you can zero the Digital LC Meter on the 'Inductance' range by fitting the shorting bar shown in Fig.7 (since this bar has virtually zero inductance). This shorting bar is initially connected between the test terminals, and switch S2 is then pressed to zero the reading. That done,

Using A Backlit LCD

Either the Jaycar QP-5515 LCD module (no backlight) or the QP-5516 LCD module (with backlight) or similar can be used with this project.

If you intend running the unit from a plugpack or if battery use will only be for short periods, then the backlit version can be used. Alternatively, for general battery use, we recommend the non-backlit version – its current consumption is much lower and so the battery will last a lot longer.

Adaptor board for very small capacitors

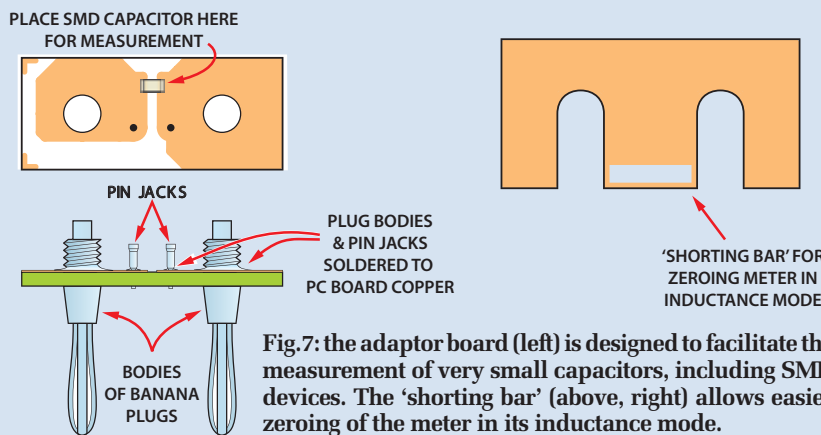


Fig.7: the adaptor board (left) is designed to facilitate the measurement of very small capacitors, including SMD devices. The 'shorting bar' (above, right) allows easier zeroing of the meter in its inductance mode.

TO help measure very small capacitors—including trimmers and SMD capacitors—we have designed a small adaptor board which can be plugged into the meter's binding post terminals. This adaptor board provides a pair of closely spaced pin jacks, along with copper pads separated by a 1mm gap.

The pin jacks make it easier to measure small leaded capacitors and very small trimmers, while the copper pads alongside are for measuring SMD capacitors.

The adaptor board is easily assembled. It mounts copper-side-up on two banana plugs, which are soldered to the copper around the two large holes.

That done, the two pin jacks (cut from a SIL or DIL socket strip) are soldered into the two smaller holes.

To use this adaptor board, you simply plug it into the top of the Digital LC Meter's binding posts and then press the Zero button (S2) to force the meter to cancel out the additional stray capacitance. You can then measure small leaded capacitors, trimmers or SMD capacitors simply by applying them to the top of the adaptor.

Finally, we have also designed a second small adaptor board which acts as a 'shorting bar'. It connects between the two normal binding posts of the Digital LC Meter, to allow zeroing of the meter in its **inductance** mode.

the shorting bar is removed and the unknown inductor connected across the test terminals.

Note, if you don't have S1 (Capacitance/Inductance) in the correct position, the micro will usually give

an 'Over Range' error message on the LCD. This will also occur if the component's value is outside the meter's measuring range – ie, above about 800nF for capacitors or 70mH for inductors.

EPE

Acknowledgements

The Digital LC Meter described in this article is based on a 1998 design by Neil Hecht of 'Almost All Digital Electronics', in Auburn, Washington, US (see his website at www.aade.com).


Mr Hecht's design used a PIC16C622 microcontroller, together with an LM311 comparator in the measuring oscillator. His firmware also made use of floating-point maths routines for PIC processors. These were written by Frank Testa, and made available on the website of PIC manufacturer Microchip Technology (www.microchip.com).

Since then, various people have produced modified versions of the design, including Australian radio amateur Phil Rice, VK3BHR of Bendigo, Victoria. Mr Rice and others have also modified the firmware and adapted it to use the PIC16F628 micro with its internal comparator. They also added the firmware calibration facility. Further information on Mr Rice's version can be found on the website of the Midland Amateur Radio Club (www.marc.org.au).

In summary, a great deal of the credit for this latest version of the design must go to those earlier designers. The author acknowledges their work.

Low Cost 8051 μ C Starter Kit/ Development Board **HT-MC-02**

HT-MC-02 is an ideal platform for small to medium scale embedded systems development and quick 8051 embedded design prototyping. **HT-MC-02** can be used as stand-alone 8051 μ C Flash programmer or as a development, prototyping and educational platform

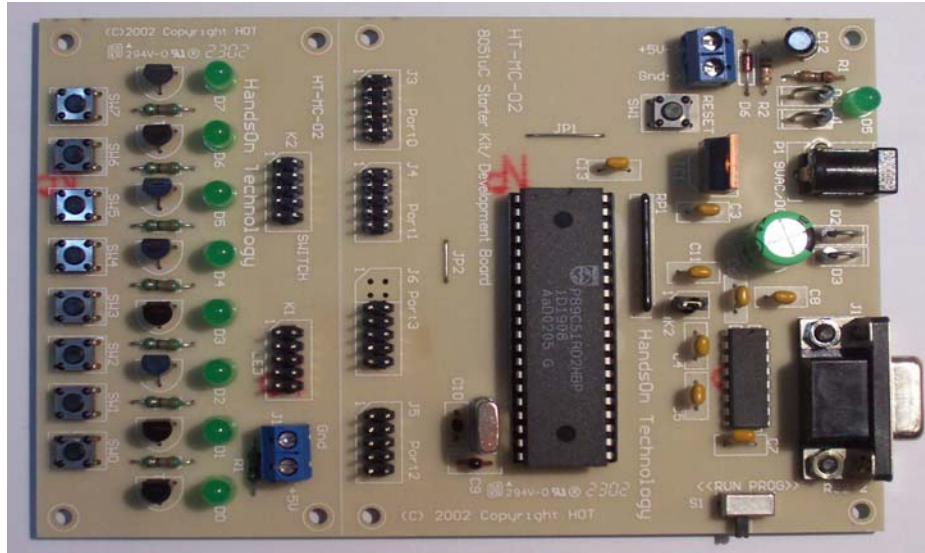

Main Features:


- 8051 Central Processing Unit.
- On-chip Flash Program Memory with In-System Programming (ISP) and In Application Programming (IAP) capability.
- Boot ROM contains low level Flash programming routines for downloading code via the RS232.
- Flash memory reliably stores program code even after 10,000 erase and program cycles.
- 10-year minimum data retention.
- Programmable security for the code in the Flash. The security feature protects against software piracy and prevents the contents of the Flash from being read.
- 4 level priority interrupt & 7 interrupt sources.
- 32 general purpose I/O pins connected to 10pins header connectors for easy I/O pins access.
- Full-duplex enhanced UART – Framing error detection Automatic address recognition.
- Programmable Counter Array (PCA) & Pulse Width Modulation (PWM).
- Three 16-bits timer/event counters.
- AC/DC (9~12V) power supply – easily available from wall socket power adapter.
- On board stabilized +5Vdc for other external interface circuit power supply.
- Included 8x LEDs and pushbuttons test board (free with **HT-MC-02** while stock last) for fast simple code testing.
- Industrial popular window **Keil C** compiler and assembler included (Eval. version).
- Free **Flash Magic** Windows software for easy program code down loading.

PLEASE READ **HT-MC-02 GETTING STARTED MANUAL** BEFORE OPERATE THIS BOARD
INSTALL ACROBAT READER (AcrobatReader705 Application) TO OPEN AND PRINT ALL DOCUMENTS

HandsOn Technology

<http://www.handsontec.com>

creativity for tomorrow's better living...

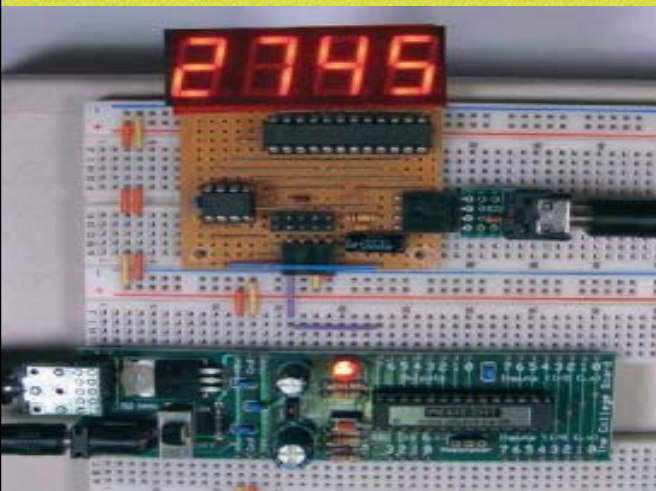


HandsOn Technology is a manufacturer of high quality educational and professional electronics kits and modules, uController development/evaluation boards. Inside you will find Electronic Kits and fully assembled and tested Modules for all skill levels. Please check back with us regularly as we will be adding many new kits and products to the site in the near future.

Do you want to stay up to date with electronics and computer technology? Always looking for useful hints, tips and interesting offers?

Inspiration and goals...

HandsOn Technology provides a multimedia and interactive platform for everyone interested in electronics. From beginner to diehard, from student to lecturer... Information, education, inspiration and entertainment. Analog and digital; practical and theoretical; software and hardware...

HandsOn Technology provides Designs, ideas and solutions for today's engineers and electronics hobbyists.

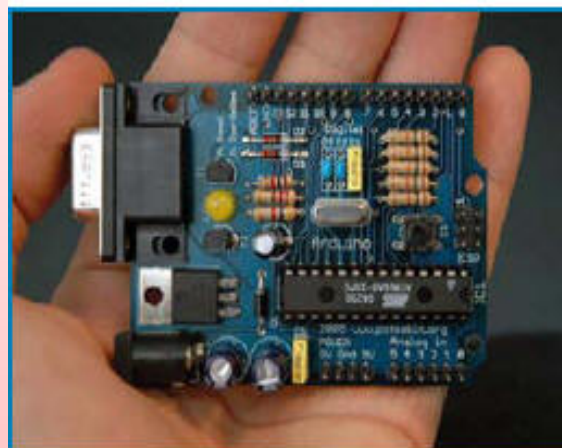


Creativity for tomorrow's better living...

HandsOn Technology believes everyone should have the tools, hardware, and resources to play with cool electronic gadgetry. HandsOn Technology's goal is to get our "hands On" current technology and information and pass it on to you! We set out to make finding the parts and information you need easier, more intuitive, and affordable so you can create your awesome projects. By getting technology in your hands, we think everyone is better off

We here at HandsOn like to think that we exist in the same group as our customers >> curious students, engineers, prototypers, and hobbyists who love to create and share. We are snowboarders and rock-climbers, painters and musicians, engineers and writers - but we all have one thing in common...we love electronics! We want to use electronics to make art projects, gadgets, and robots. We live, eat, and breathe this stuff!!

If you have more questions, go ahead and poke around the website, or send an email to sales@handsontec.com. And as always, feel free to let your geek shine - around here, we encourage it...

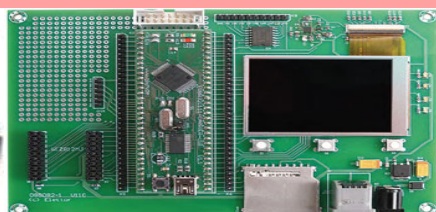

<http://www.handsontec.com>