


Reuse Library Read Me


By: Braden Rothwell

How to add reuse library:


1. In NX navigate to the reuse library navigator on the resource bar.

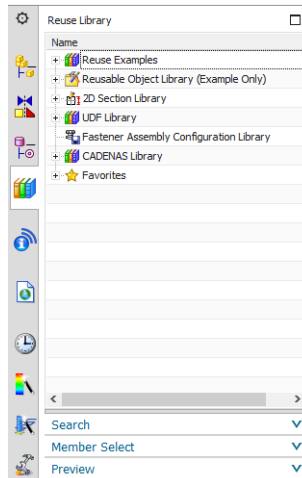


2. Right click inside the reuse library navigator and select Library Management

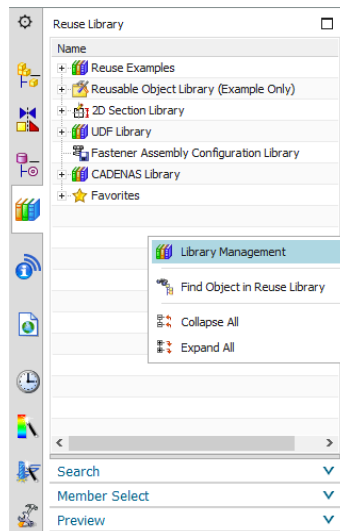


3. Inside the Reuse Library Management window, select Add Library and navigate to the LSMReuseLib folder stored on your computer. Select this folder and click OK. Click OK.

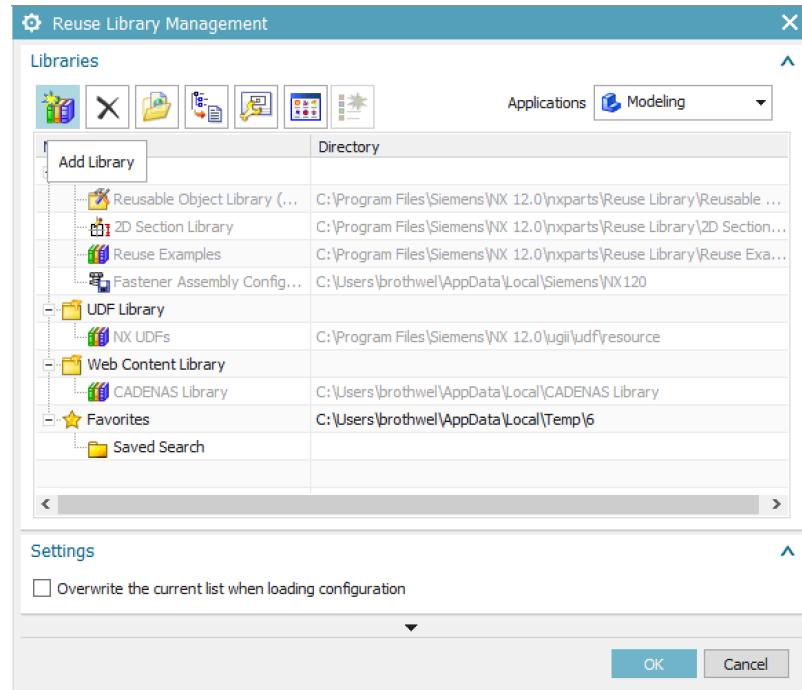

4. You should now see the LSMReuseLib in the Reuse Library Navigator. To add a part from the reuse library, right click the part in the Member Select Navigator and select Insert.

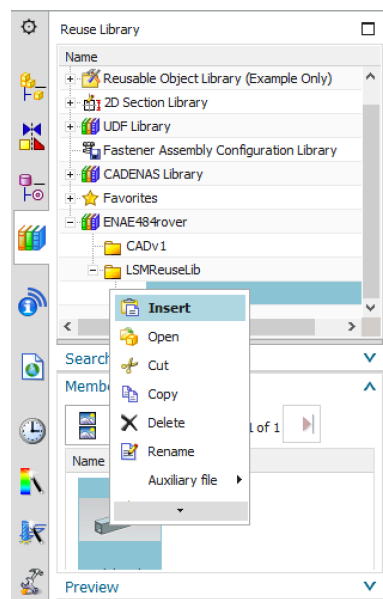

5. Select the origin and the Reuse Paste window will open. You are now able to edit all Detail Parameters of the part. Once done editing the detail parameters, click OK. DONE.

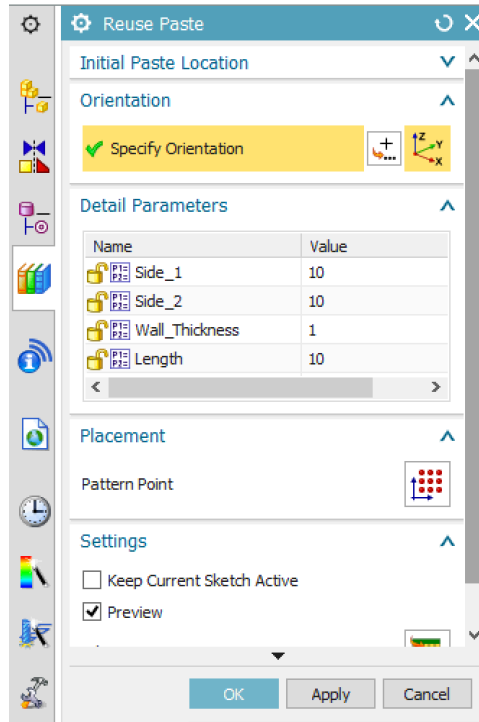

I will be updating the reuse library often with generic parts we feel are used frequently but require different dimensions. If you want a part added to the reuse library let me know and I will do my best to get it in there.