


BEEVERYCREATIVE Bootloader Updater - v2.0.0

Follow the next steps to update the bootloader of your printer:

1. Turn **OFF** your printer.
2. Find the FTDI cable that went with your BEETHEFIRST and connect it to your PC.
3. Connect the FTDI cable to your BEETHEFIRST as seen on the next picture (green cable on the left side):




4. Go to the “update” folder in your BEESOFT installation directory and execute the Updater.jar file:

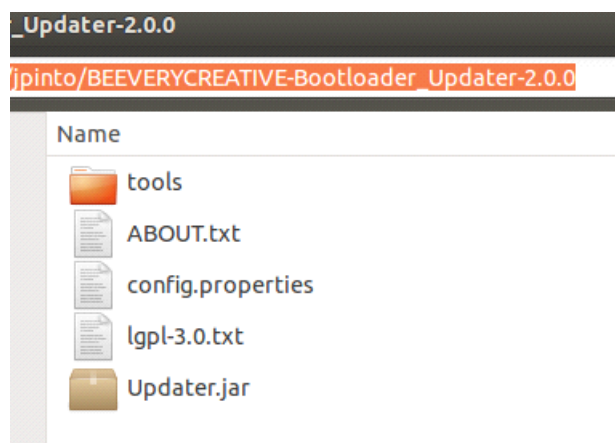


5. If the file config.properties is present in the directory, the application will read the configuration inside that points to the default Bootloader file inside the “tools” directory. If you want to be able to browse the filesystem for a custom bootloader file, please remove the config.properties file from the directory.


Configuration file detected:

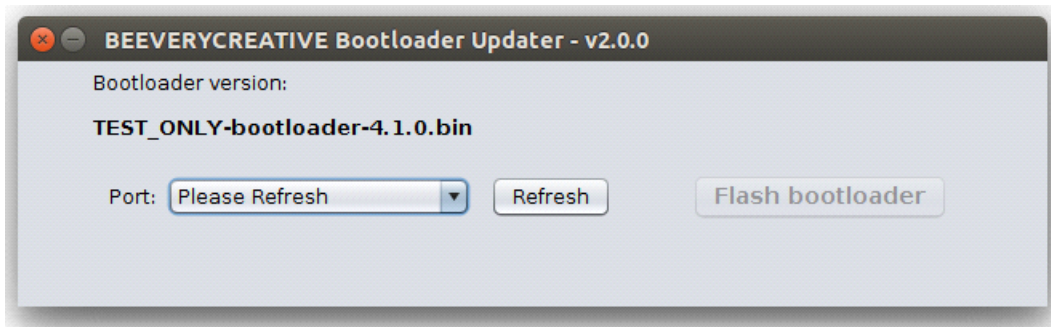

Configuration file not present:

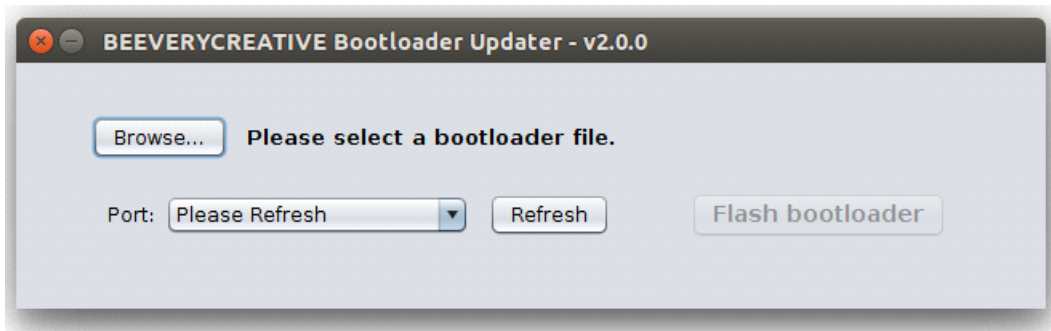

6. Click "Refresh" button so the application can find the correct serial port (it may take a few seconds):

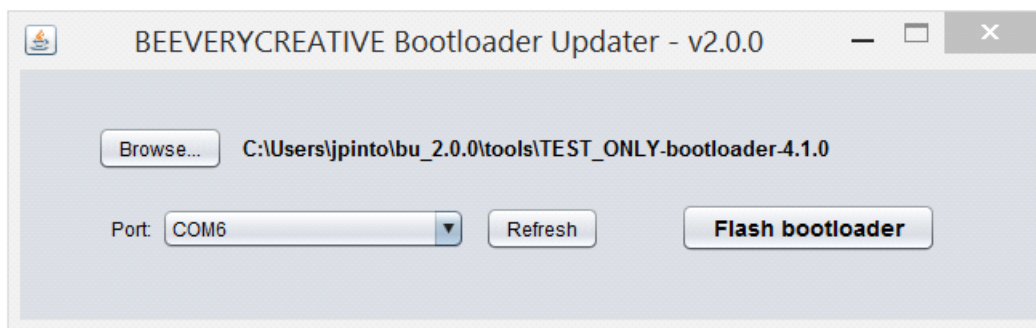

7. Click "Update" button so the application will start trying to flash the Bootloader file.

8. Turn ON your printer.

9. Wait a few seconds until get the confirmation:

