

You are here: [PJRC Store](#) ► [Teensy 32 bit](#) ► OctoWS2811 Adaptor

PJRC Store

• [Full Product List](#)

► [Teensy 32 bit](#)

- [Teensy 4.1](#)
- [Teensy 4.1 Pins](#)
- [Teensy 4.0](#)
- [Teensy 4.0 Pins](#)
- [Teensy 3.2](#)
- [Teensy 3.2 Pins](#)
- [Teensy-LC](#)
- [Teensy-LC Pins](#)
- [Teensy 3.5](#)
- [Teensy 3.5 Pins](#)
- [Teensy 3.6](#)
- [Teensy 3.6 Pins](#)
- [Color Touchscreen](#)
- [Prop Shield](#)
- [Prop Shield Lowcost](#)
- [Pins 14x1](#)
- [Pins 24x1](#)
- [Socket 14x1](#)
- [Socket 24x1](#)
- [USB Micro-B Cable](#)
- [USB Host Cable](#)
- [Audio Adaptor](#)
- [Microphone](#)
- [Audio Tutorial](#)
- [Audio Tutorial Parts](#)
- [Audio Ground](#)

[Isolator](#)

- [PT8211 Audio Kit](#)
- [Ethernet Kit](#)
- [Pins+Socket 3x2](#)
- [Wiz820+SD Adaptor](#)

► [OctoWS2811](#)

[Adaptor](#)

- [MKL02/04 Chip](#)
- [PSRAM Chip](#)

Teensy 3.2-4.1 OctoWS2811 Adaptor

Add To Order	OCTO28_ADAPTOR	OctoWS2811 Adaptor for Teensy 3.2 - 4.1	\$10.00
------------------------------	----------------	---	---------

Recommended Accessories:

 Using Teensy 3.2 or 4.0: [Sockets 14x1](#) (2), [Pins 14x1](#) (2)

 Using Teensy 3.5 or 3.6 or 4.1: [Sockets 14x1](#) (2), [Pins 14x1-D](#) (2)

 Inventory Status: **In Stock**

Last physical count: Jan 19, 2021

This adaptor board connects [Teensy 3.2](#) - [Teensy 4.1](#) to thousands of LEDs using the [OctoWS2811 Library](#).

The adaptor features a 74HCT245 buffer chip and 100 ohm impedance matching resistors. CAT6 Ethernet cable is used from this board to the LED strips. CAT6 cable is designed for very high bandwidth, minimal cross-talk between twisted pairs, and 100 ohm impedance, for a very high quality signal. The RJ-45 network jacks allow your LED array to be easily disconnected from the electronics.




OctoWS2811 Adaptor
with Teensy 3.2 - 4.1

LED Limits

(per Teensy)


What limits the number of LEDs can you use with each

- [Tutorial Kit](#)
- [RGB LED](#)
- [Pot, 25K](#)
- [Pins 14x1-D](#)
- [Breadboard](#)
- ✚ [Teensy 8 bit](#)
- ✚ [MP3 Player](#)
- ✚ [8051 Dev Board](#)
- ✚ [Discontinued](#)
- [Payment Options](#)
- [Privacy Policy](#)

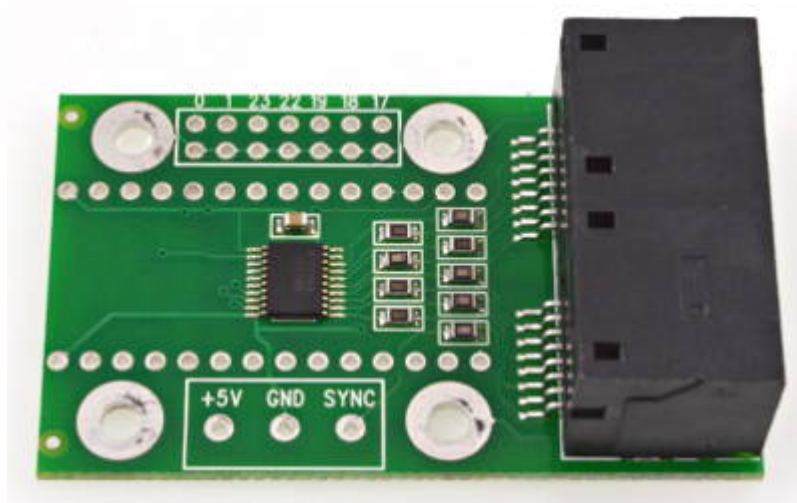

Four self-threading screws are supplied with the OctoWS2811 Adaptor board.

Teensy 3.x is added on top of the adaptor using stacking header pins, or a header and socket pair if you wish to be able to remove the Teensy 3.x board.

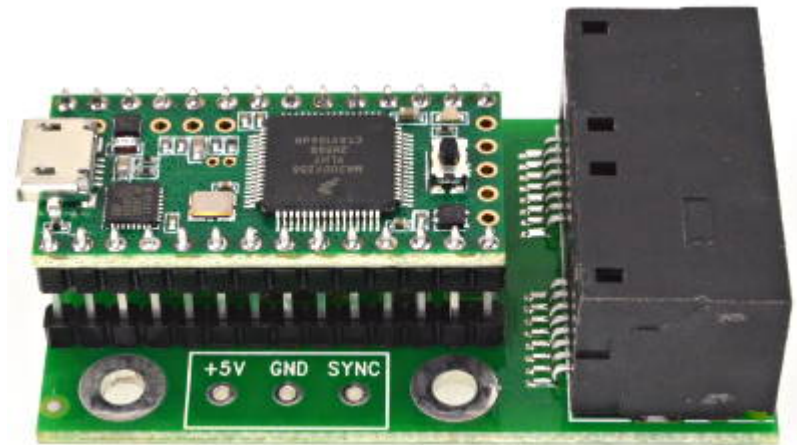

[Teensy 3.2](#), [Pins](#), and CableGaurd 500 enclosure are sold separately. Four screws are included.

This adaptor can also be used with the larger Teensy 3.5, 3.6, 4.1 boards using [double insulator pins](#) and [sockets](#). Together, these are tall enough to allow the longer board with SD socket to overhang the RJ-45 connectors.

Teensy?

1872: Teensy 3.0's RAM limit (90% used)

[4320 tested in this project](#)

4416: 60 HZ refresh


6000: 120V USA power*

8800: 30 Hz refresh (uses 86% of Teensy 3.2's available RAM)

10920: Absolute maximum limit due to DMA hardware

To connect more LEDs, use multiple Teensy and OctoWS2811 Adaptors with their SYNC signals tied together.

* - Approximate, based on typical power supply efficiency and standard 15 amp circuit breakers

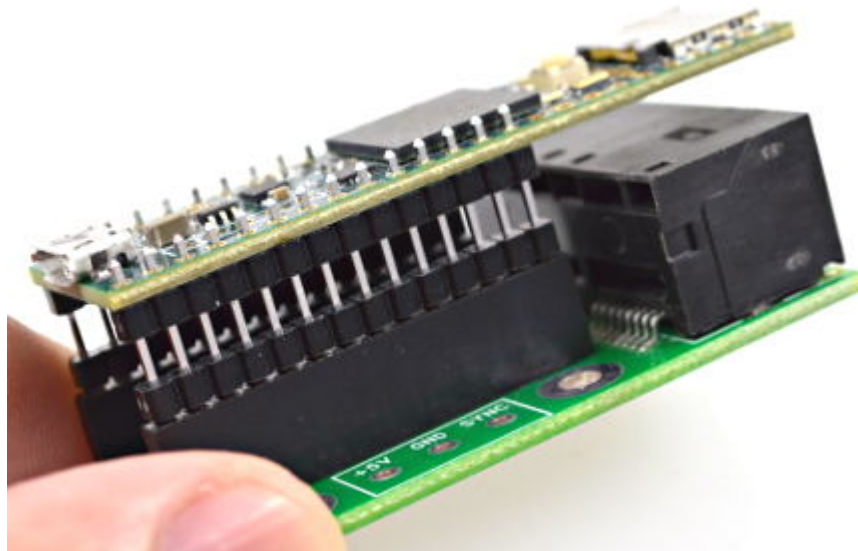


[Teensy 3.6](#), [Pins](#), [sockets](#), and CableGaurd 500 enclosure are sold separately. Four screws are included.

This adaptor board is designed to fit inside a CableGaurd 500 Coax Demarcation Enclosure (not sold by PJRC). The CG-500 is a very durable enclosure meant for outdoor applications. The outside size is approximately 6.5 by 8 inches (16.5 by 20.3 cm). Even though this is the smallest CableGaurd enclosure, there's plenty of room inside for even two OctoWS2811 adaptors.

The included self-threading screws fit the mounting posts on the CG-500 enclosure.



The eight LED outputs are sent on two CAT6 Ethernet cables.

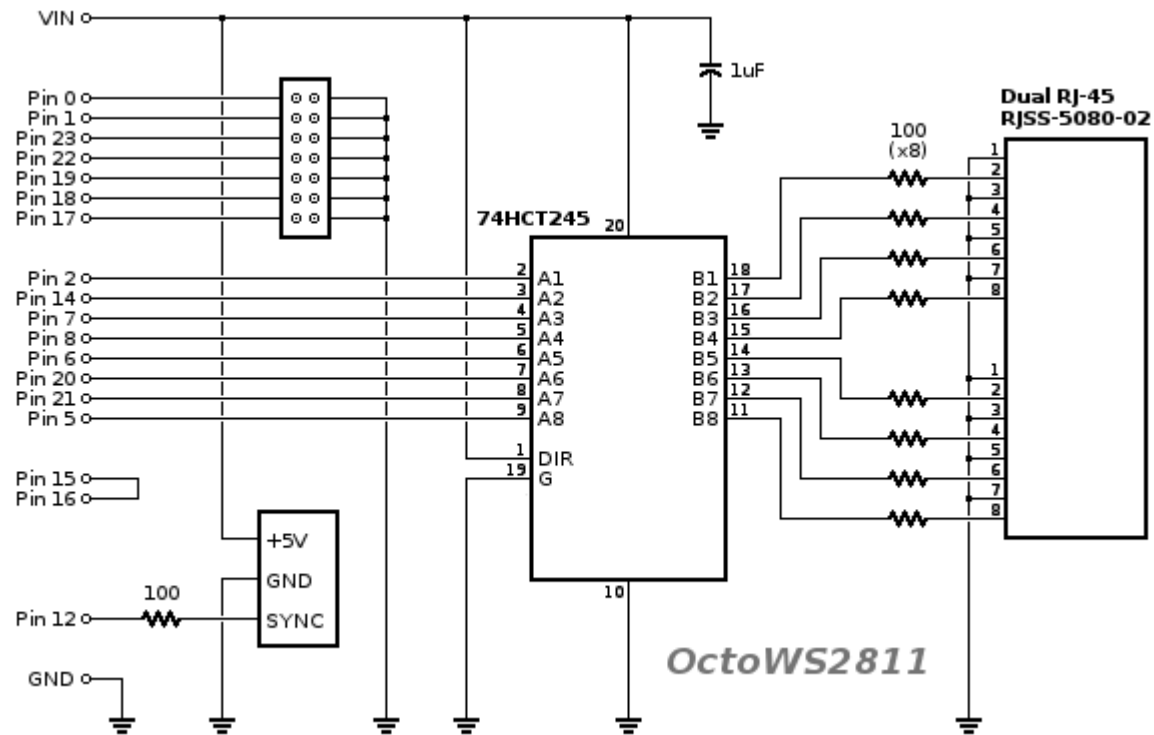

Signals with CAT6 T568B Termination:


(most CAT6 cables sold in the USA are this type)

Top RJ-45 Jack			Bottom RJ-45 Jack	
Wire	Signal		Wire	Signal
Orange	LED Strip #1 Data		Orange	LED Strip #5 Data
White/Orange	LED Strip #1 Ground		White/Orange	LED Strip #5 Ground
Blue	LED Strip #2 Data		Blue	LED Strip #6 Data
White/Blue	LED Strip #2 Ground		White/Blue	LED Strip #6 Ground
Green	LED Strip #3 Data		Green	LED Strip #7 Data
White/Green	LED Strip #3 Ground		White/Green	LED Strip #7 Ground
Brown	LED Strip #4 Data		Brown	LED Strip #8 Data
White/Brown	LED Strip #4 Ground		White/Brown	LED Strip #8 Ground

Signals with CAT6 T568A Termination:

Top RJ-45 Jack			Bottom RJ-45 Jack	
Wire	Signal		Wire	Signal
Green	LED Strip #1 Data		Green	LED Strip #5 Data
White/Green	LED Strip #1 Ground		White/Green	LED Strip #5 Ground
Blue	LED Strip #2 Data		Blue	LED Strip #6 Data
White/Blue	LED Strip #2 Ground		White/Blue	LED Strip #6 Ground
Orange	LED Strip #3 Data		Orange	LED Strip #7 Data
White/Orange	LED Strip #3 Ground		White/Orange	LED Strip #7 Ground
Brown	LED Strip #4 Data		Brown	LED Strip #8 Data
White/Brown	LED Strip #4 Ground		White/Brown	LED Strip #8 Ground


To prepare the data cables, simply cut a CAT6 Ethernet cable in half and carefully strip away the outer jacket to expose long enough sections of the twisted pairs to reach all of your LED strips. Each twisted pair feeds the data input and ground of a single strip.

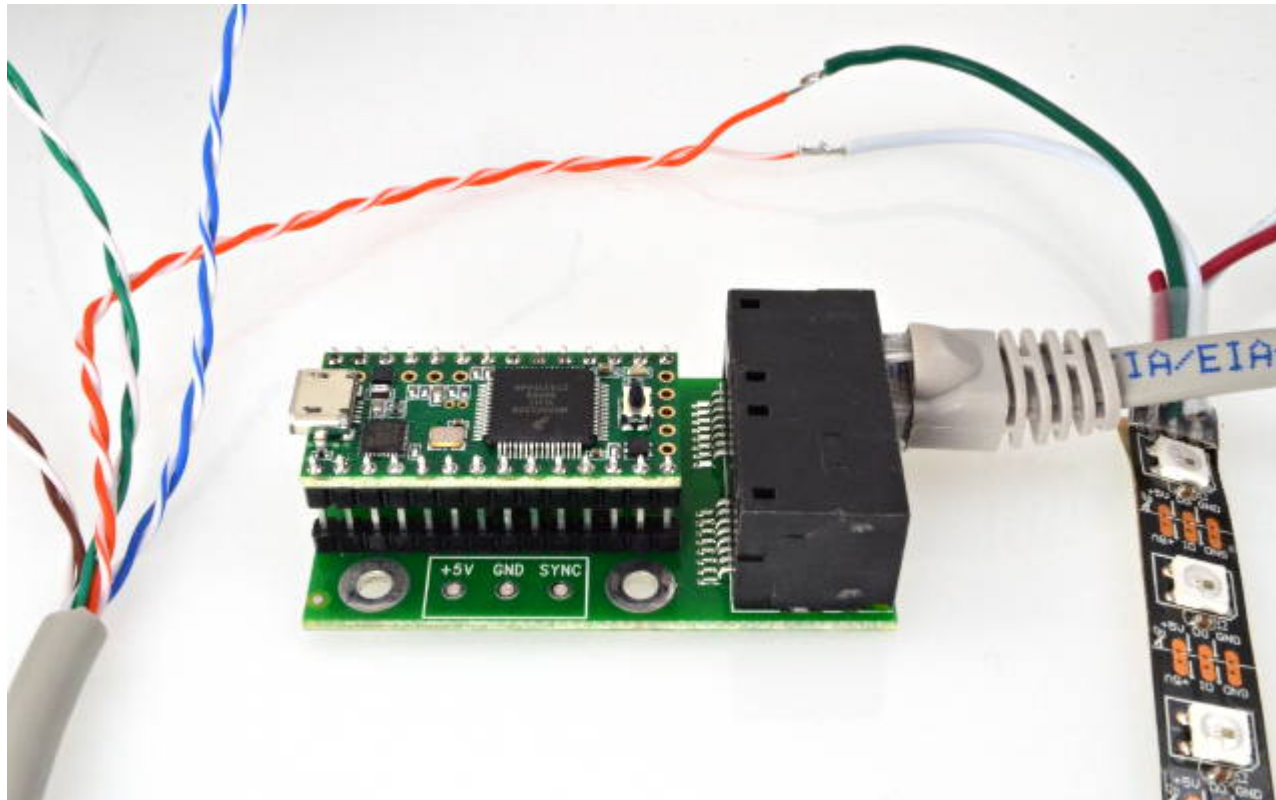


For best results, the **LED power supply ground and Teensy signal ground should meet at or near the LED strip signal inputs**. The LED power supplies should be located as close as possible to the LED strips and connected with large diameter wires, to minimize voltage loss due to high current flow.

Do not underestimate the wire sizes needed to deliver power to your LEDs. The most common problem in large LED projects is inadequate power wiring, usually causing flickering or wrong colors.

If Teensy 3.2 will be powered by the LED strip power supply, 5V and ground wires should be run together with the CAT6 cables and connected to the +5V and GND pads on the adaptor boards. The 5.08 mm spacing terminal block may be soldered to the adaptor board, or the wires can be soldered directly. Of course, the VIN-VUSB pads on Teensy 3.2 should be cut apart if Teensy 3.2 receives external power, to avoid feeding the LED power back into your computer.

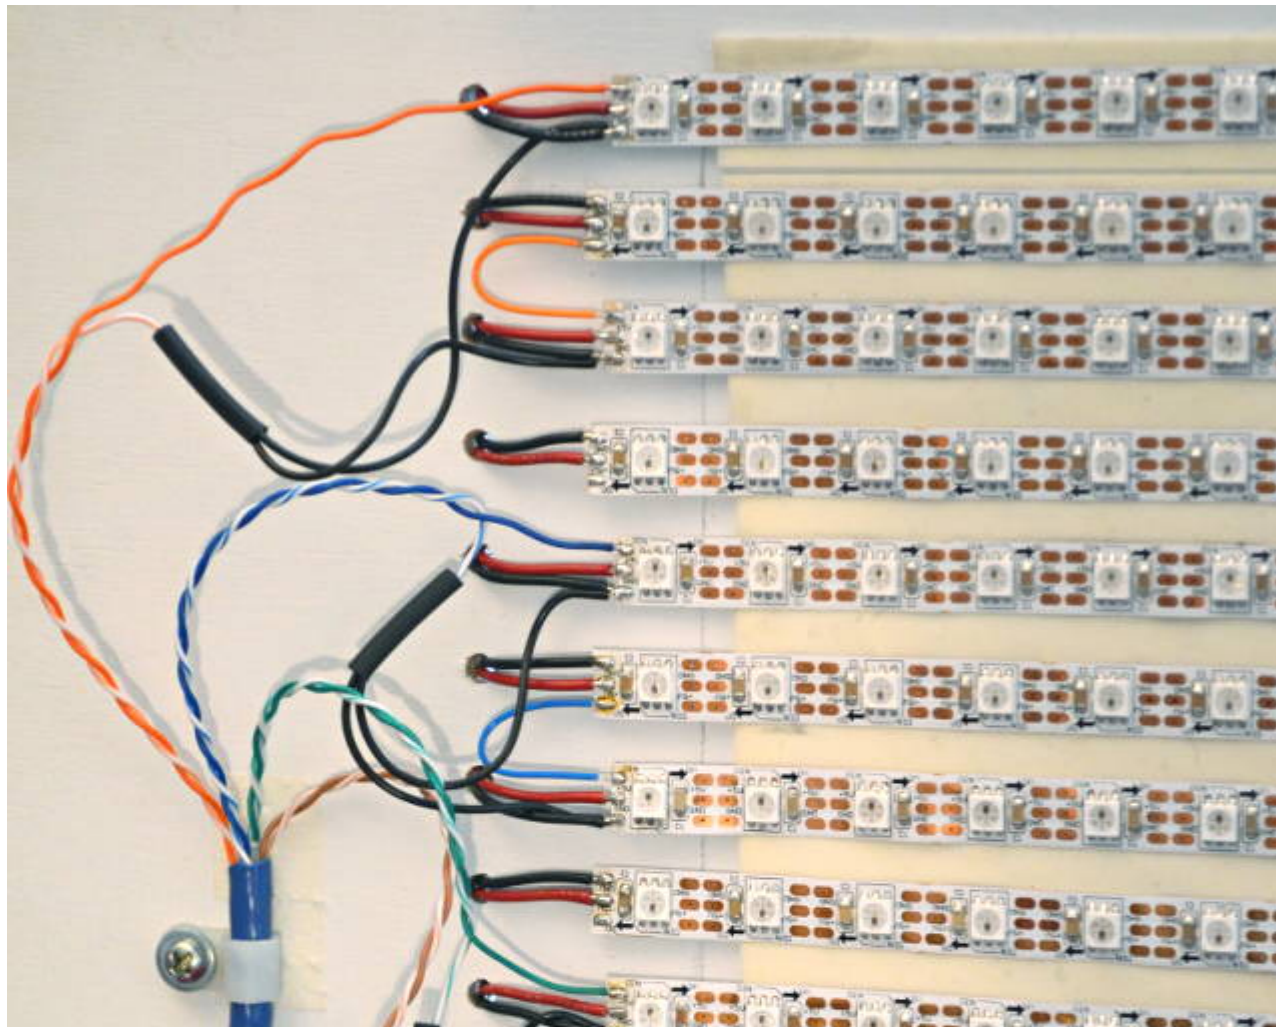

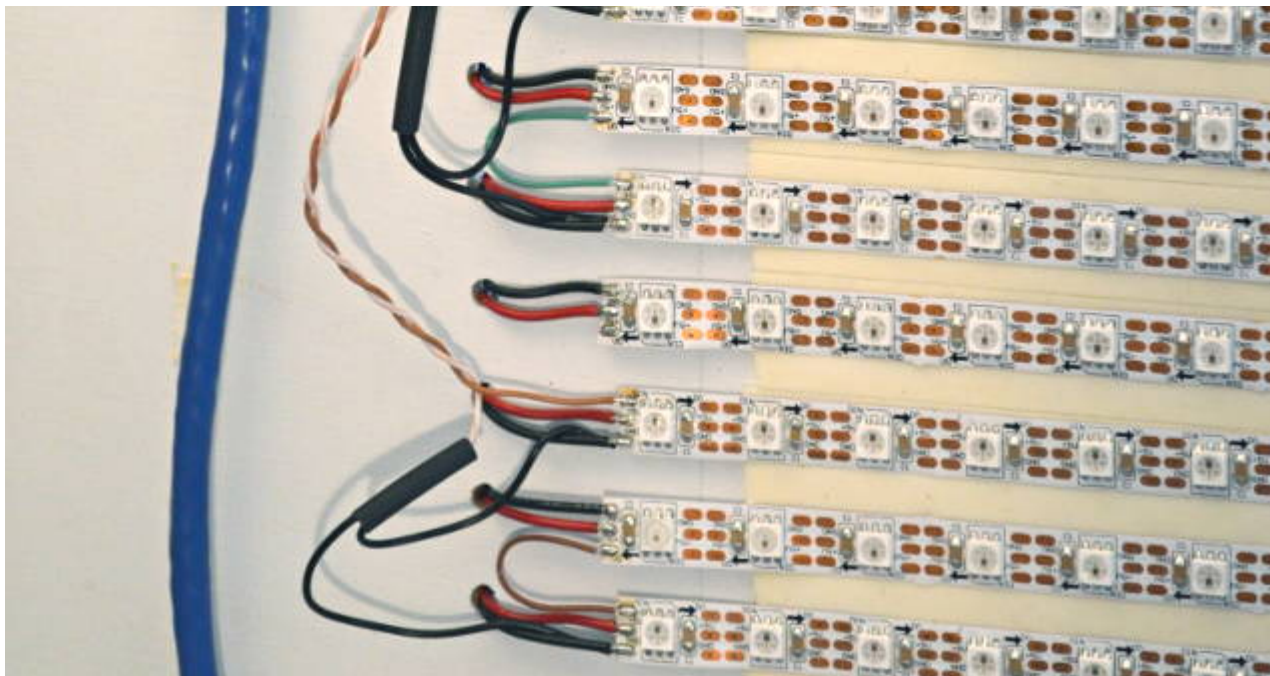

In this example, each OctoWS2811 signal feeds 4 LED strips in back-and-forth rows. The power supplies are mounted to the back side of the display with short, #22 wires feeding power to each LED strip of 60 LEDs.

Short, heavy wires for power, with signal and power grounds meeting at the LED strips provides the highest quality signals without signal interference due to the voltage loss along the power ground lines. Together with the OctoWS2811 adaptor's 5V buffer chip and accurate 100 ohm impedance matching to quality CAT6 cable, this wiring style gives a LED project the best quality signal and power delivery.

TODO: signal quality tests with different length CAT6 cables....

Possible use with APA102 LEDs

It may be possible to use this board with FastLED to drive a long strip of APA102 LEDs, by configuring for SPI output on pins 7 and 14.

Details here:

<https://plus.google.com/104301636682478764269/posts/ibHn1CzM6x2>

[Photo with wiring for APA102](#)

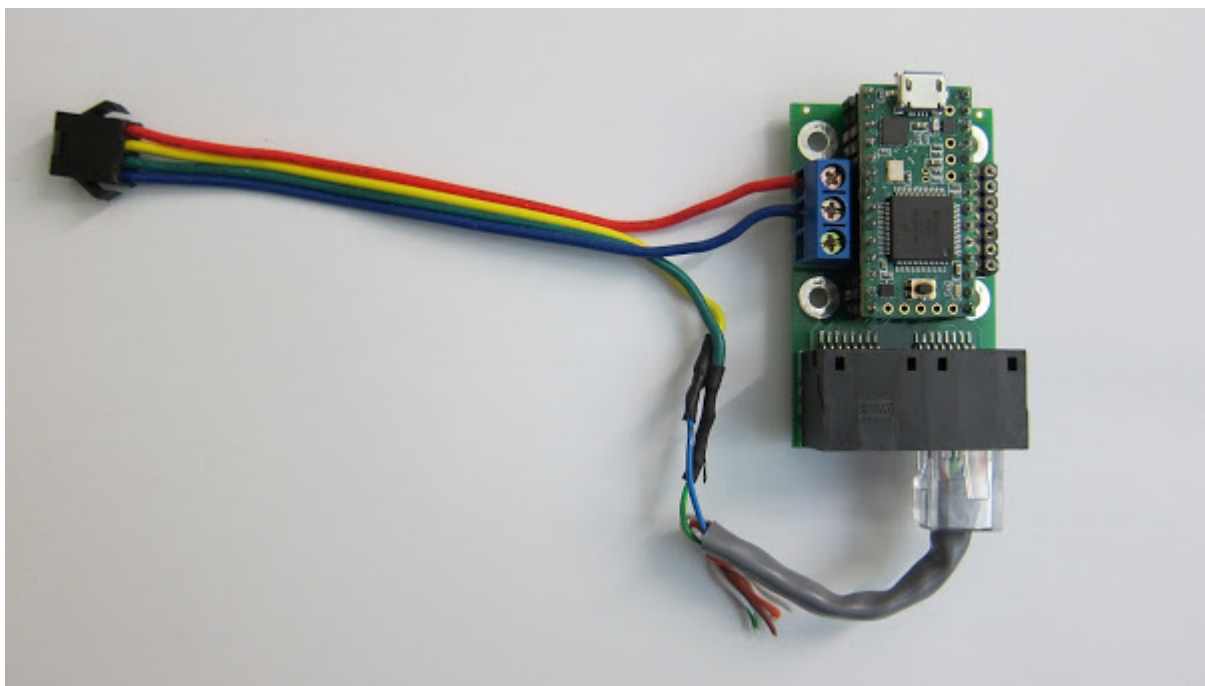


Photo by Steve Caress

Sync Signal

The sync signal allows 2 or 3 boards to tightly synchronize their LED update times, when fed by USB communication which may have slightly different delays or latency to each board.

Because this signal is simply connected to a Teensy pin through a 100 ohm resistor, a maximum of 3 boards may be used. To synchronize more boards, the master board would need a buffer (or multiple buffers) to transmit the sync signal to all of the other synchronized boards.

Alternately, the PC-side software can be modified to treat all boards as masters, so no SYNC connection is needed between them. On fast computers with good quality (Multi-TT) USB hubs, the USB latency should be very small, so you may not need to use the SYNC signal.