

Laser Barcode Scanner

User Manual

V1.0

This is a easily use manual for laser barcode scanner, if you need the more details about how to use, please download from our official website or get the manual from distributors.

Tutorial set

Scan need barcode function

For example: the scanner is set to Factory Default, USB-HID, Enter & Line.

 
1. Factory Default



2. Enter & Line



Data Interface Mode



USB-HID (*)



USB-COM



RS232



PS2

Note: USB-HID, USB-COM in the USB interface
PS2 in the PS2 interface
RS232 in the RS232 interface

Scanning Mode



Manually (*)

 


Automatic successive



Automatic flashing

Barcode Display Type



ON



OFF (*)

Language Setting



USA (*)



German



France

Keyboard Caps Lock Control



None (*)



Capitalize



Lower case

Suffix Shortcut Setting



Enter (*)



Line



Tab



Enter & Line



None

Sound Setting



OFF



High (*)

 


Medium



Low

Speed USB Setting



High (*)



Medium



Low

Note: USB upload content when something goes wrong, lower speed of USB

Induction Mode Setting



ON



OFF (*)

Note: Hold down the button 8 seconds time to open or close the induction

Raud Rate RS232 Setting



9600 (*)



19200



115200

Note: the asterisk(*) to the factory default

Software version number

