

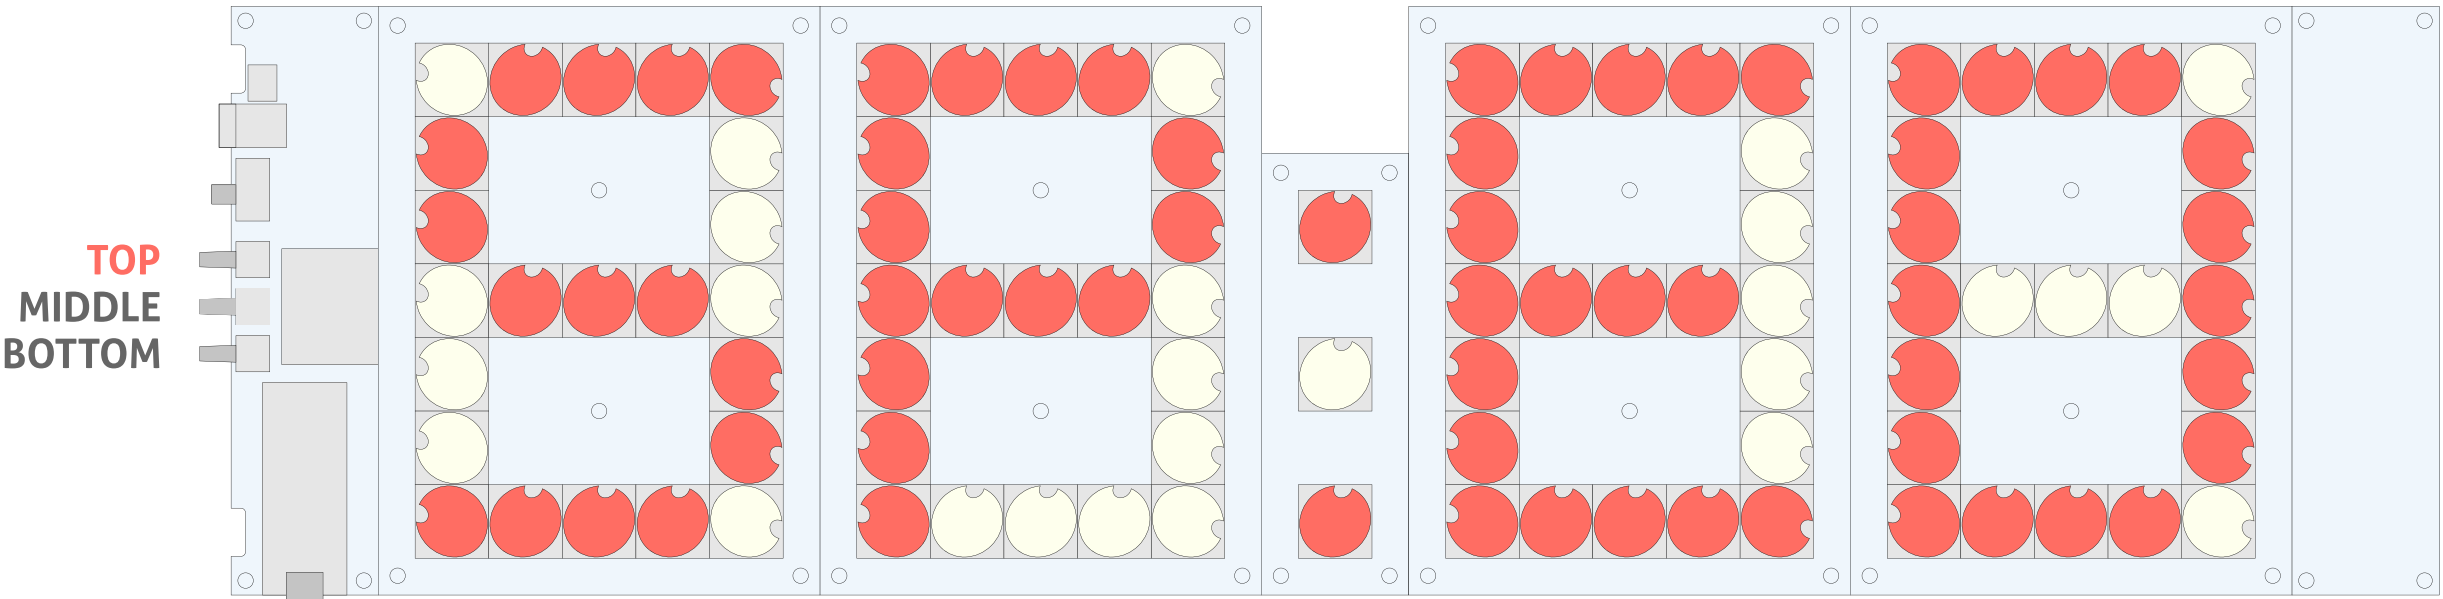
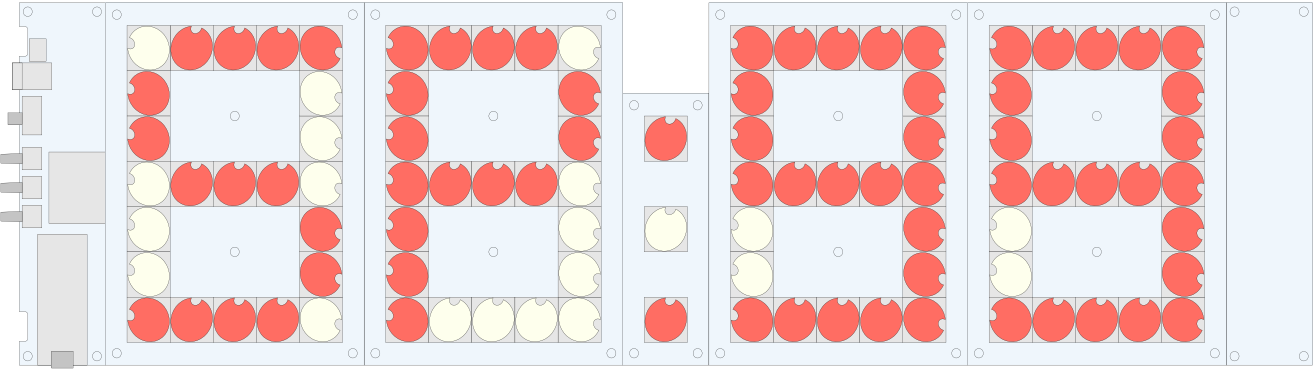
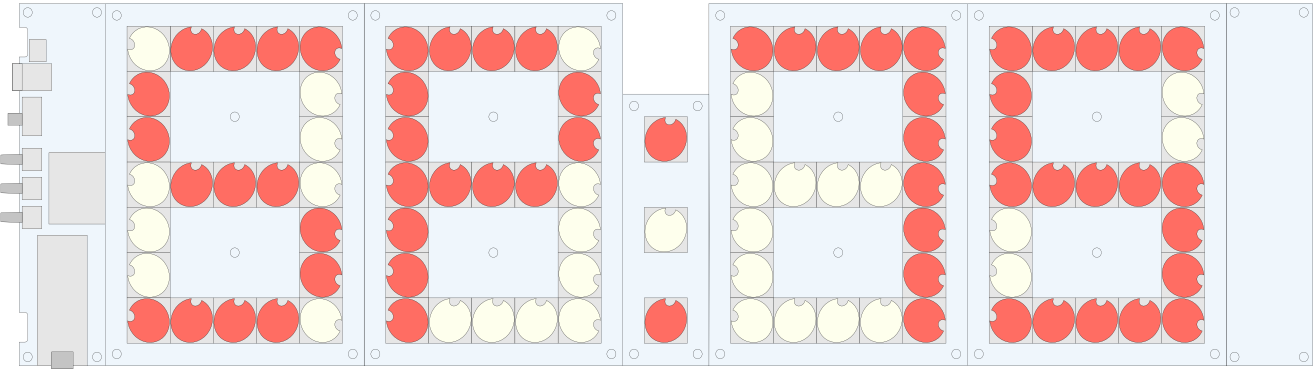
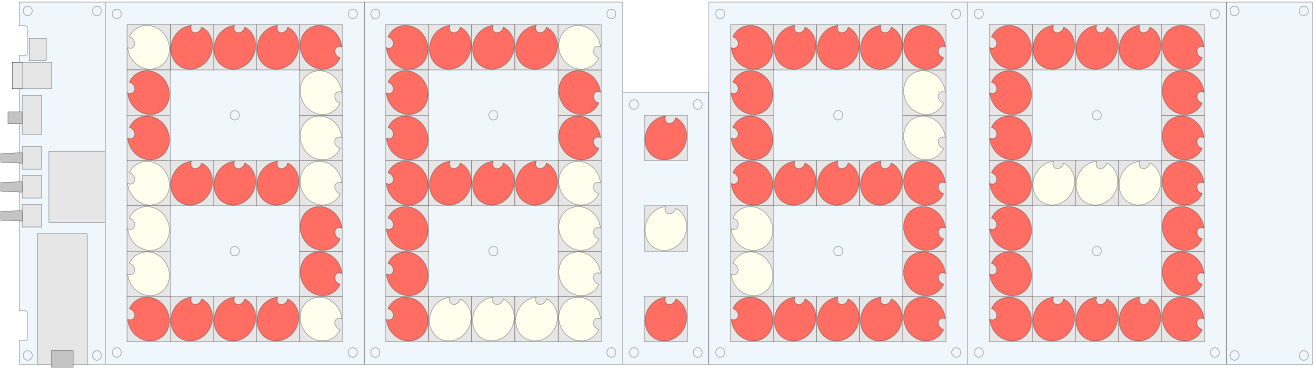
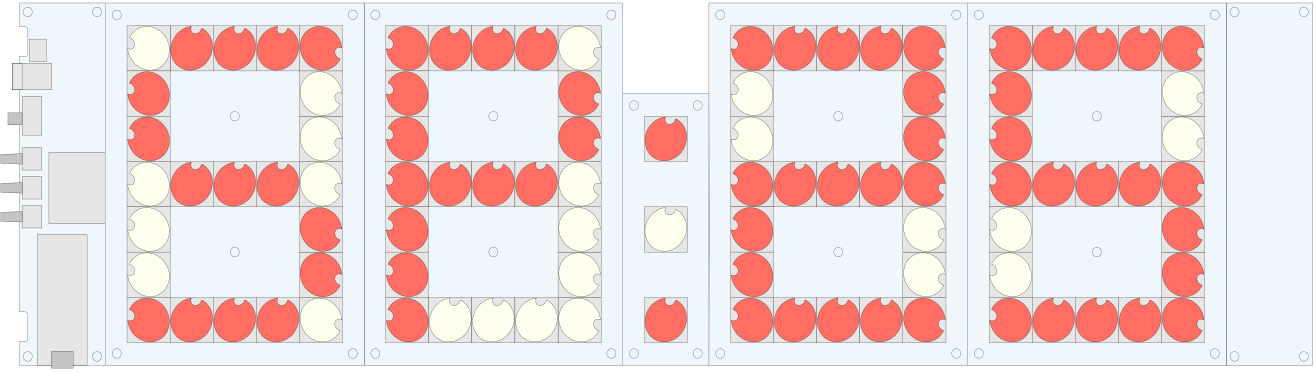
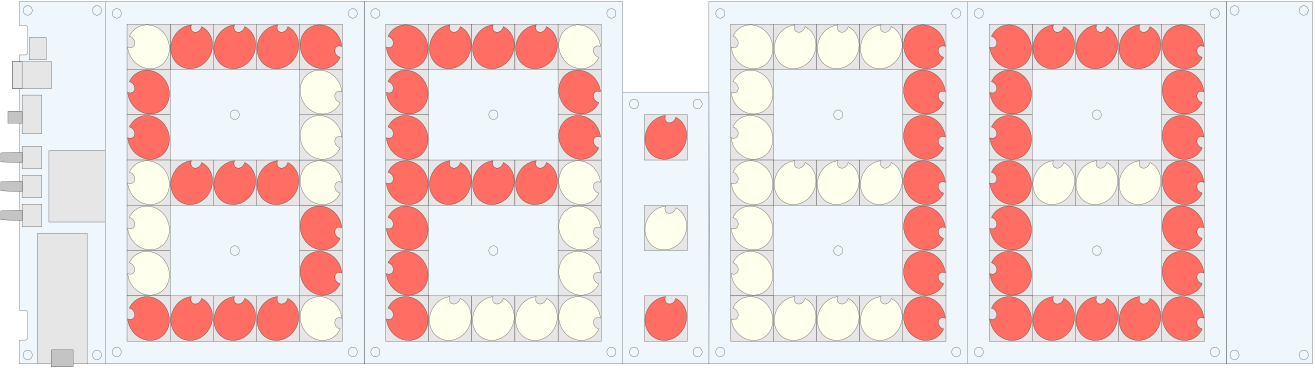


SPEED/DELAY SETTINGS

PRESS **TOP** BUTTON FOR **1 SECOND**
TO ENTER SPEED/DELAY SETTINGS MENU

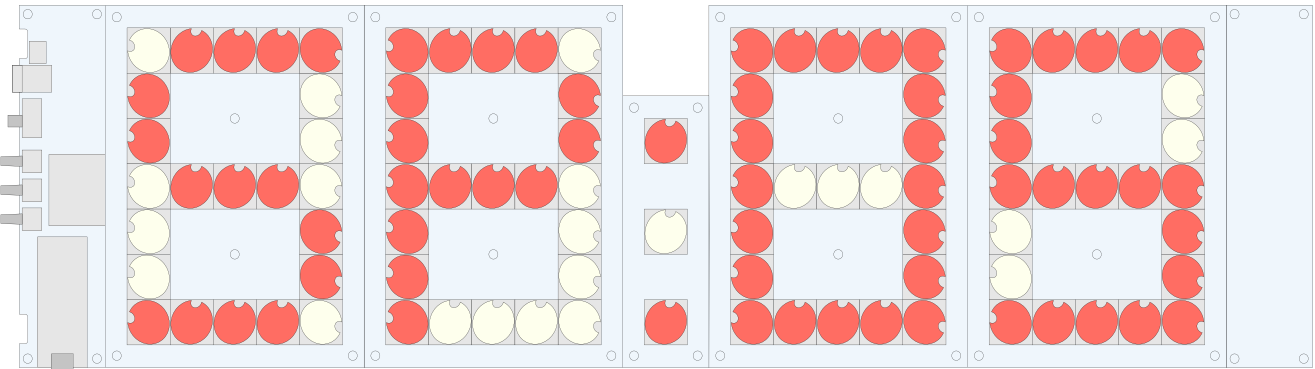

PRESS **TOP+** OR **BOTTOM-** BUTTON
TO SELECT SPEED/DELAY TIME
0, 5, 10, 25, 50, 75, 99ms

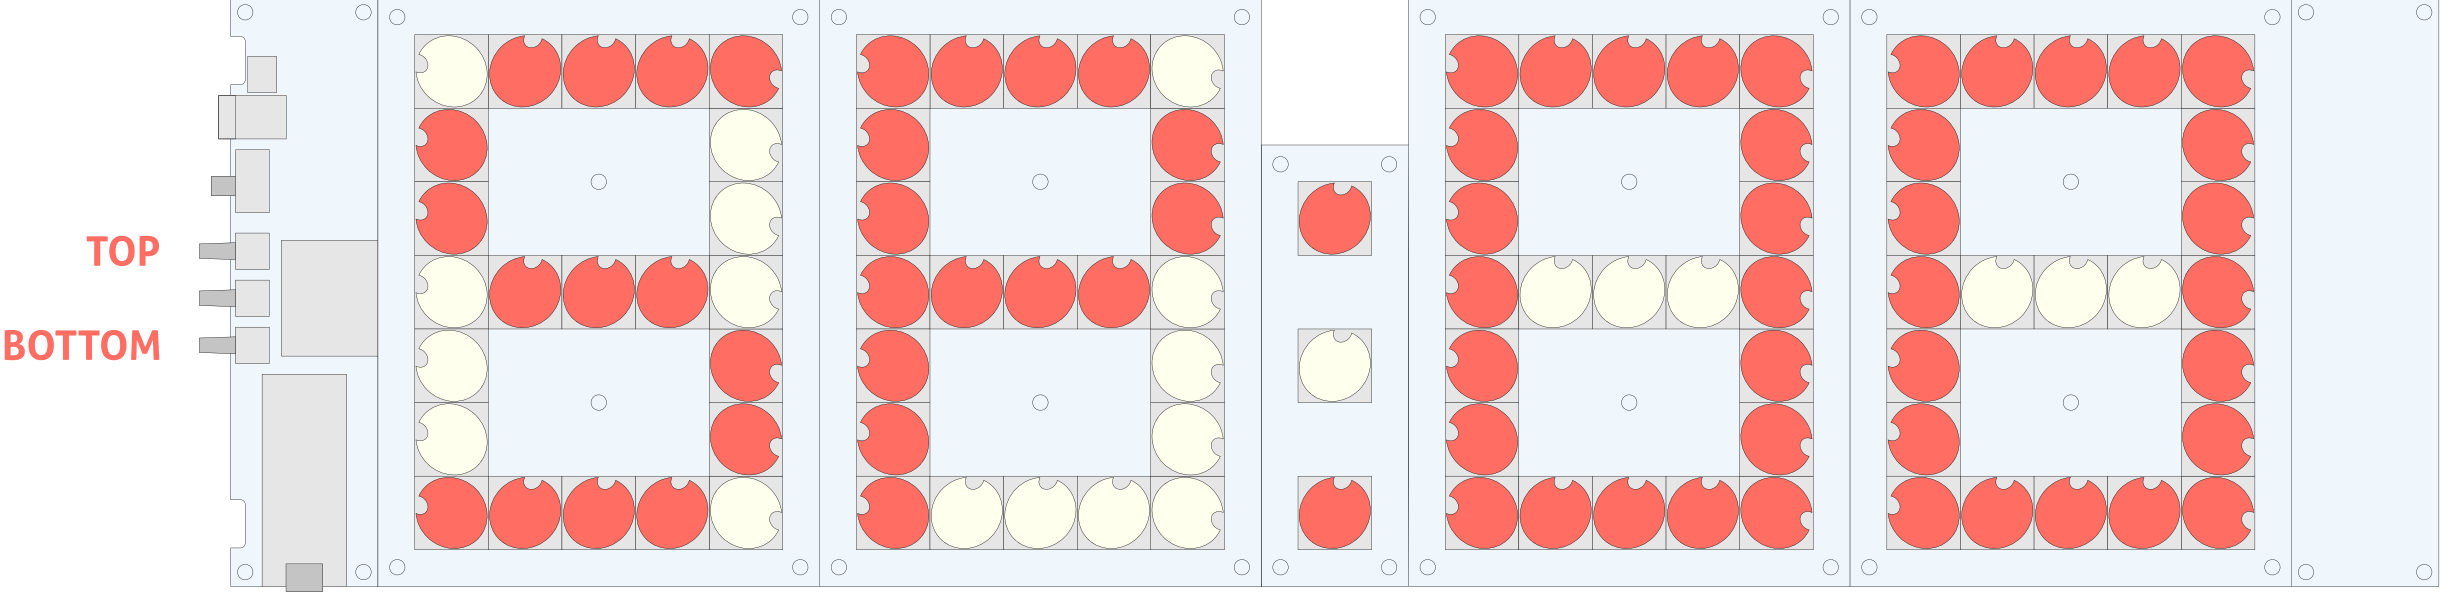

THEN PRESS **MIDDLE** BUTTON
FOR **1 SECOND**
TO SAVE YOUR SETTINGS
AND EXIT TO DISPLAY TIME

