

Name: Bhargavi Poyekar

UID: 2018130040

Batch: C

Date: 25/08/20

CEL 51, DCCN, Monsoon 2020

Lab 3: Learn usage of Packet Tracer

Objectives

- Install Packet Tracer from <https://www.ciscopods.com/install-packet-tracer-ubuntu/>
- Develop an understanding of the basic functions of Packet Tracer.
- Create/model a simple Ethernet network using two hosts and a hub.
- Observe traffic behavior on the network.
- Observe data flow of ARP broadcasts and pings.

Step 1: Create a logical network diagram with two PCs and a hub


The bottom left-hand corner of the Packet Tracer screen displays eight icons that represent device categories or groups, such as Routers, Switches, or End Devices.

Moving the cursor over the device categories will show the name of the category in the box. To select a device, first select the device category. Once the device category is selected, the options within that category appear in the box next to the category listings. Select the device option that is required.

- a) Select **End Devices** from the options in the bottom left-hand corner. Drag and drop two generic PCs onto your design area.
- b) Select **Hubs** from the options in the bottom left-hand corner. Add a hub to the prototype network by dragging and dropping a generic hub onto the design area.

- c) Select **Connections** from the bottom left-hand corner. Choose a **Copper Straight-through** cable type. Click the first host, **PC0**, and assign the cable to the **FastEthernet** connector. Click the hub, **Hub0**, and select a connection port, **Port 0**, to connect to **PC0**.
- d) Repeat Step c for the second PC, **PC1**, to connect the PC to **Port 1** on the hub.

*There should be green dots at both ends of each cable connection. If not, check the cable type selected.


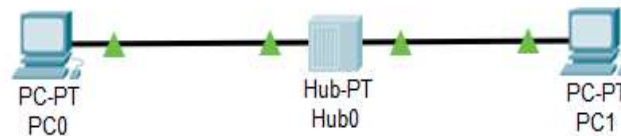


Step 1 completed.



Step 2: Configure host names and IP addresses on the PCs

- a) Click PC0. A PC0 window will appear.
- b) From the PC0 window, select the **Config** tab. Change the PC **Display Name** to **PC-A**. (An error message window will appear warning that changing the device name may affect scoring of the activity. Ignore this error message.) Select the **FastEthernet** tab on the left and add the IP address of **192.168.1.1** and subnet mask of **255.255.255.0**. Close the PC-A configuration window by selecting the **x** in the upper righthand corner.
- c) Click PC1.
- d) Select the **Config** tab. Change the PC **Display Name** to **PC-B**. Select the **FastEthernet** tab on the left and add the IP address of **192.168.1.2** and subnet mask of **255.255.255.0**. Close the PC-B configuration window.

For PC-A:

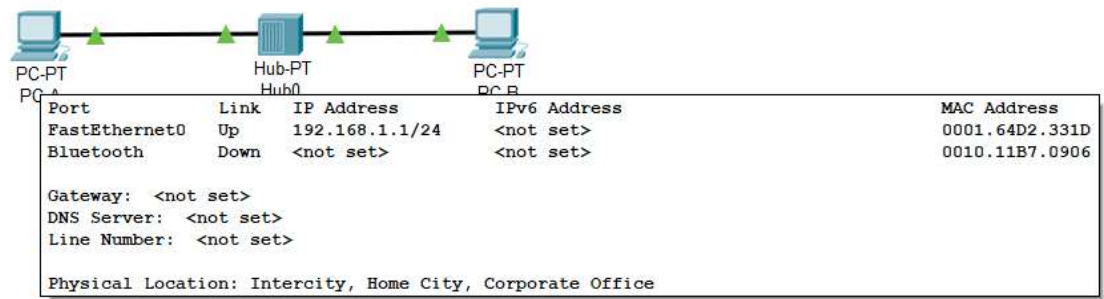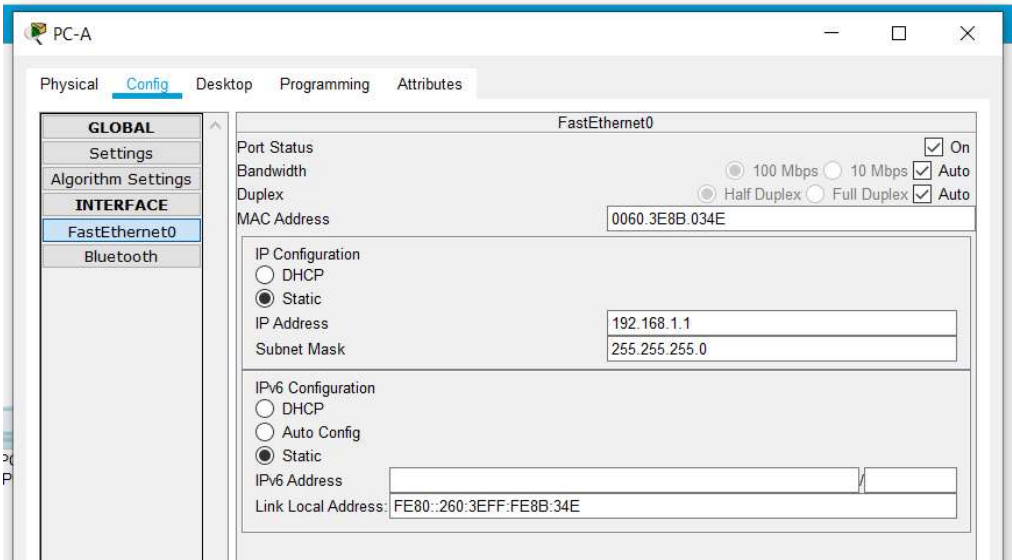


For PC-B:

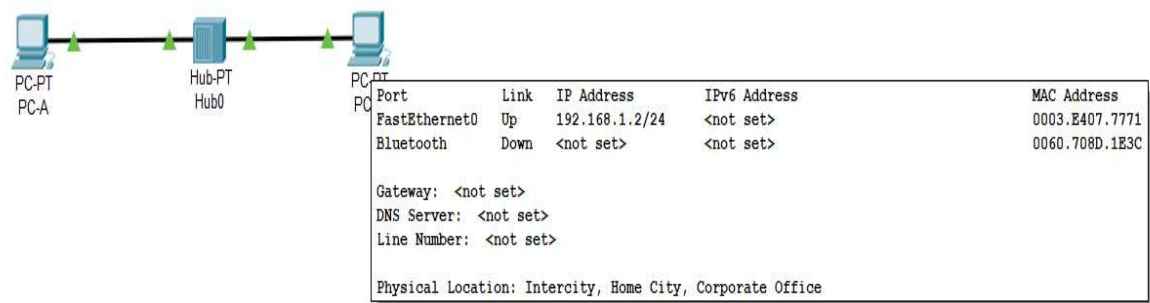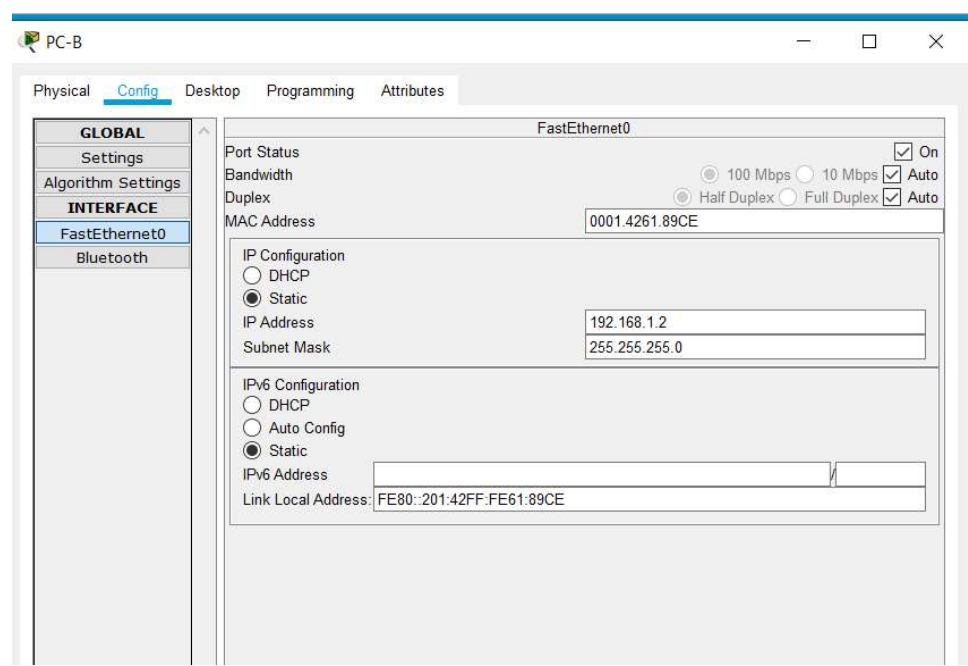

Step 3: Observe the flow of data from PC-A to PC-B by creating network traffic

- a) Switch to Simulation mode by selecting the tab that is partially hidden behind the Realtime tab in the bottom right-hand corner. The tab has the icon of a stopwatch on it.
- b) Click the Edit Filters button in the Edit List Filters area. Clicking the Edit Filters button will create a pop-up window. In the pop-up window, click the Show All/None box to deselect every filter. Select just the ARP and ICMP filters.

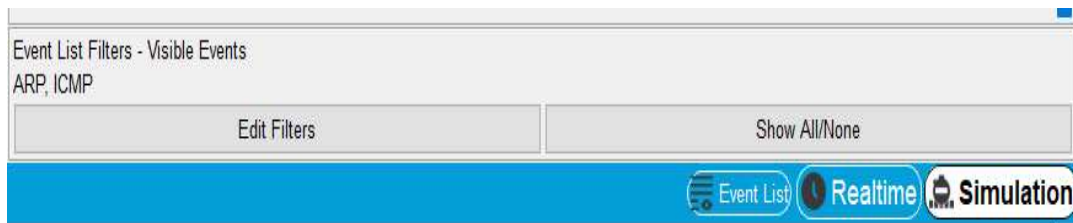

c) Select a Simple PDU by clicking the closed envelope on the right vertical toolbar. Move your cursor to the display area of your screen. Click PC-A to establish the source. Move your cursor to PC-B and click to establish the destination.


**Notice that two envelopes are now positioned beside PC-A. One envelope is ICMP, while the other is ARP. The Event List in the Simulation Panel will identify exactly which envelope represents ICMP and which represents ARP.

Before playing the simulation:


Vis.	Time(sec)	Last Device	At Device	Type
	0.000	--	PC-A	ICMP
	0.000	--	PC-A	ARP

d) Select Auto Capture / Play from the Play Controls area of the Simulation Panel. Below the Auto Capture / Play button is a horizontal bar, with a vertical button that controls the speed of the simulation. Dragging the button to the right will speed up the simulation, while dragging is to the left will slow down the simulation.

After Playing when ARP moving from PC-A to PC-B:

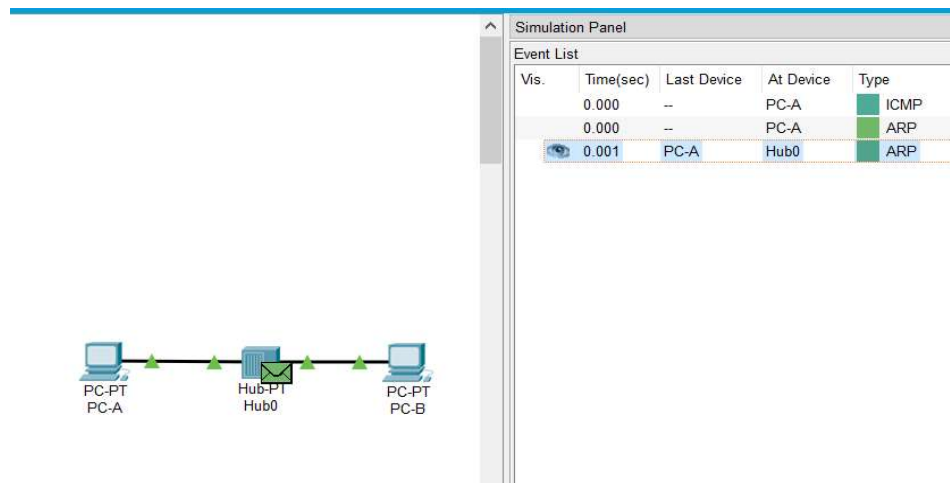


After ICMP is sent from PC-A to PC-B and then back to PC-B to PC-A

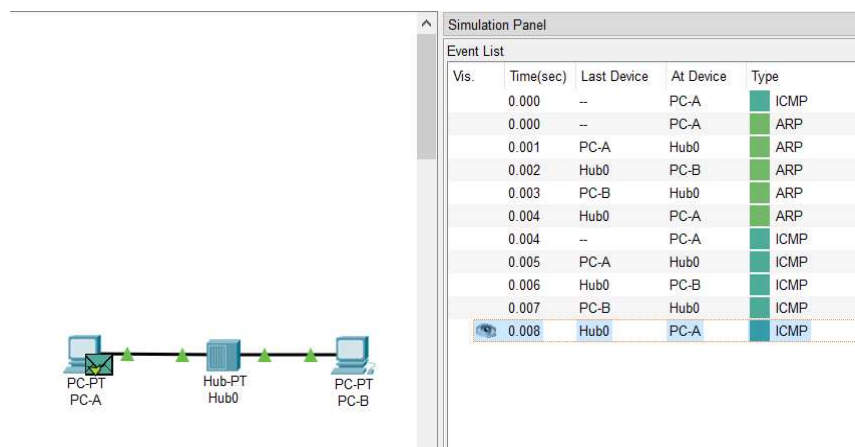

e) The animation will run until the message window No More Events appears. All requested events have been completed. Select OK to close the message box.


f) Choose the Reset Simulation button in the Simulation Panel. Notice that the ARP envelope is no longer present. This has reset the simulation but has not cleared any configuration changes or dynamic table entries, such as ARP table entries. The ARP request is not necessary to complete the ping command because PC-A already has the MAC address in the ARP table.

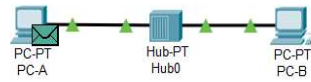

Event List				
Vis.	Time(sec)	Last Device	At Device	Type
	0.000	--	PC-A	ICMP

g) Choose the Capture / Forward button. The ICMP envelope will move from the source to the hub and stop. The Capture / Forward button allows you to run the simulation one step at a time. Continue selecting the Capture / Forward button until you complete the event.

Use of Capture button:

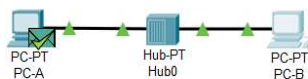


Simulation Panel				
Event List				
Vis.	Time(sec)	Last Device	At Device	Type
	0.000	--	PC-A	ICMP
	0.001	PC-A	Hub0	ICMP
	0.002	Hub0	PC-B	ICMP
	0.003	PC-B	Hub0	ICMP
	0.004	Hub0	PC-A	ICMP


h) Choose the Power Cycle Devices button on the bottom left, above the device icons.

i) An error message will appear asking you to confirm reset. Choose Yes. Now both the ICMP and ARP envelopes are present again. The Reset Network button will clear any configuration changes not saved and will clear all dynamic table entries, such as the ARP and MAC table entries.

Use of Power Cycle Devices to reset the network:

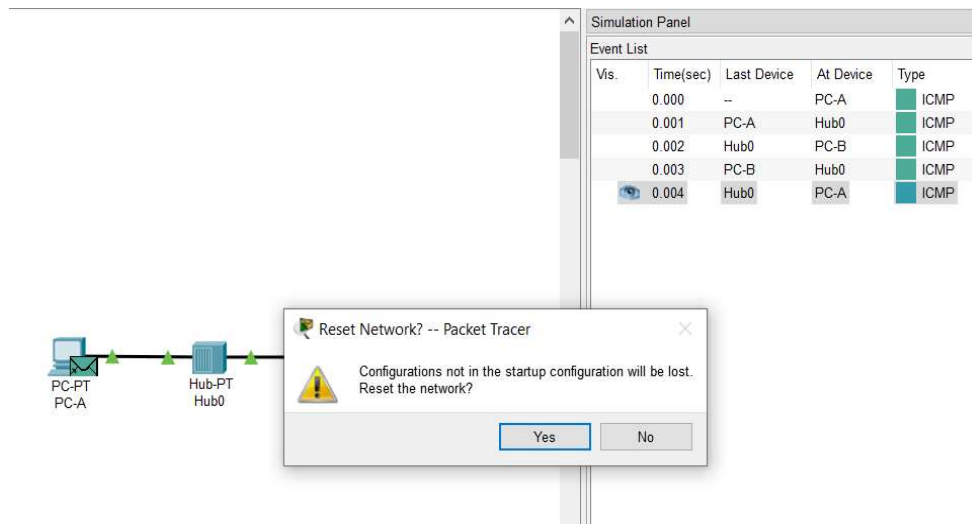

After resetting the network:

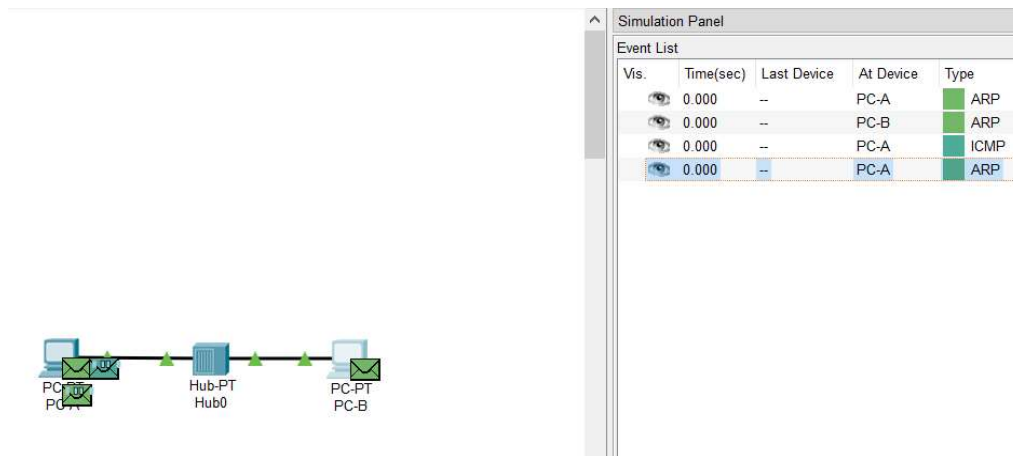


Step 4: View ARP Tables on each PC

a) Choose the Auto Capture / Play button to repopulate the ARP table on the PCs. Click OK when the No More Events message appears.

- b) Select the magnifying glass on the right vertical tool bar.
- c) Click PC-A. The ARP table for PC-A will appear. Notice that PC-A does have an ARP entry for PC-C. View the ARP tables for PC-B and PC-C as well. Close all ARP table windows.


ARP Table for PC-A:

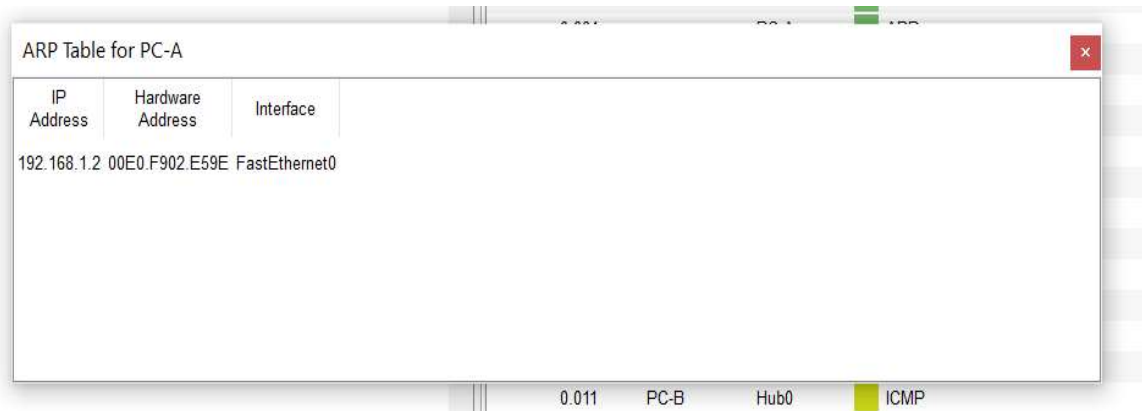

IP Address	Hardware Address	Interface
192.168.1.2	00E0.F902.E59E	FastEthernet0

- d) Click the Select Tool on the right vertical tool bar. (This is the first icon present in the toolbar.)
- e) Click PC-A and select the Desktop tab.
- f) Select the Command Prompt and type the command `arp -a` and press enter to view the ARP table from the desktop view. Close the PC-A configuration window.

ARP-Table from Desktop View:

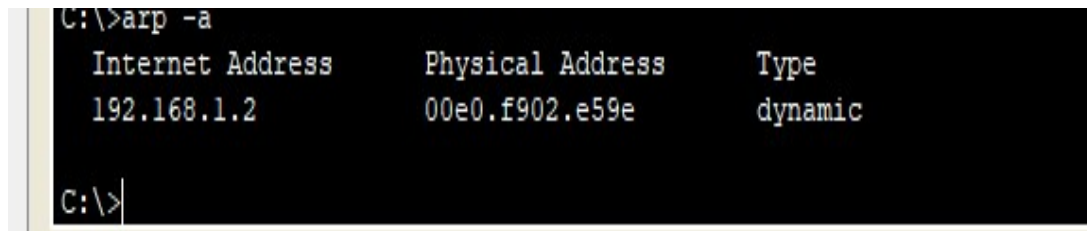


```
C:\>arp -a

Internet Address      Physical Address      Type
192.168.1.2          00e0.f902.e59e       dynamic

C:\>
```

- g) Examine the ARP table for PC-B.
- h) Close the PC-B configuration window.


ARP Table for PC-B:

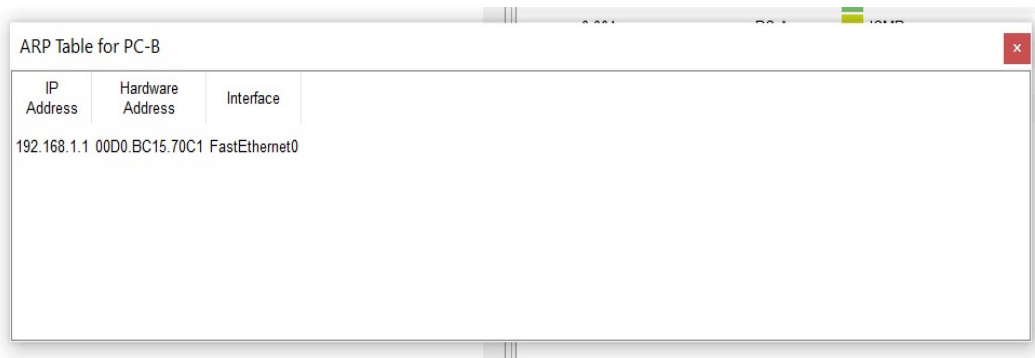

The screenshot shows a window titled "ARP Table for PC-B". It contains a table with three columns: "IP Address", "Hardware Address", and "Interface". There is one entry in the table.

IP Address	Hardware Address	Interface
192.168.1.1	00D0.BC15.70C1	FastEthernet0

ARP-Table from Desktop View:

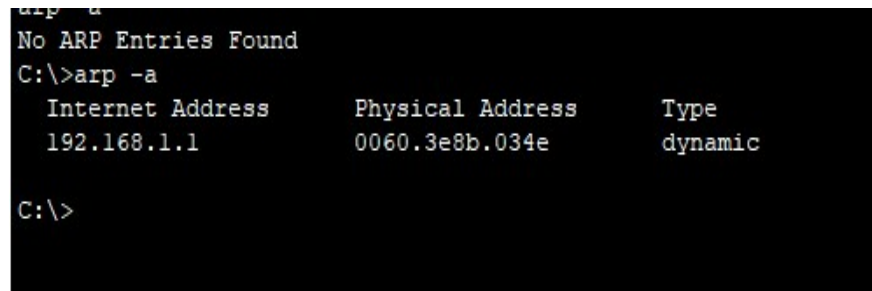


```
arp -a
No ARP Entries Found
C:\>arp -a
    Internet Address      Physical Address      Type
    192.168.1.1           0060.3e8b.034e       dynamic

C:\>
```

- i) Click the Check Results button at the bottom of the instruction window to verify that the topology is correct.

Checking Activity Results:

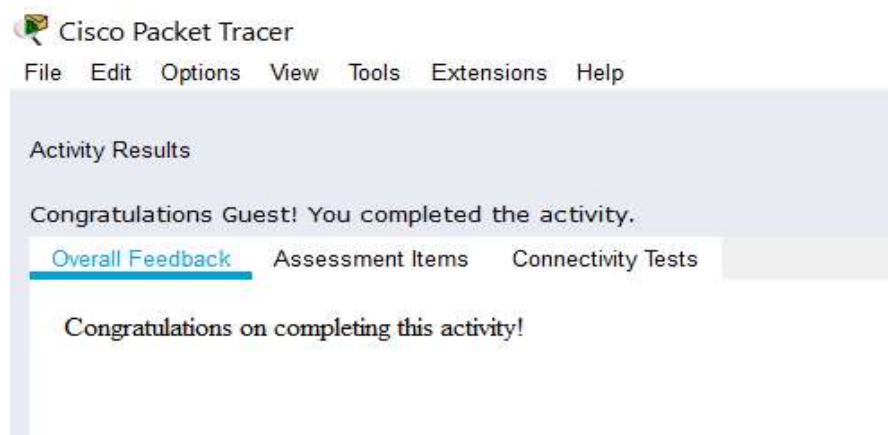

Deliverables:

Submit model schematic view along proper notations and the outcome of all steps you followed for this experiment, with proper description.