



Computer Disassembly, Reassembly & Labeling

By Jeanne Basayo and Nijhai Williams

Computer Chassis

- This is the First step into decomposing the PC. Remove the Case



Disk~Top

- Remove 2 Chords. **SATA POWER** & **SATA DATA**



Sand Disk or The SSD

- Remove 4 screws attached to it



SATA DATA & POWER CHORD

Remove the chords from both the
Motherboard and the DVD
Drive/Disk reader



POWER BUTTON

- Remove the **Power Button Chord** that Connects to the Mother Board




Audio Ports Plugs

- Remove the **Audio Ports Plugs** that Connects to the Motherboard



POWER SUPPLY

- Remove the **Power Supply Connectors** from the Motherboard

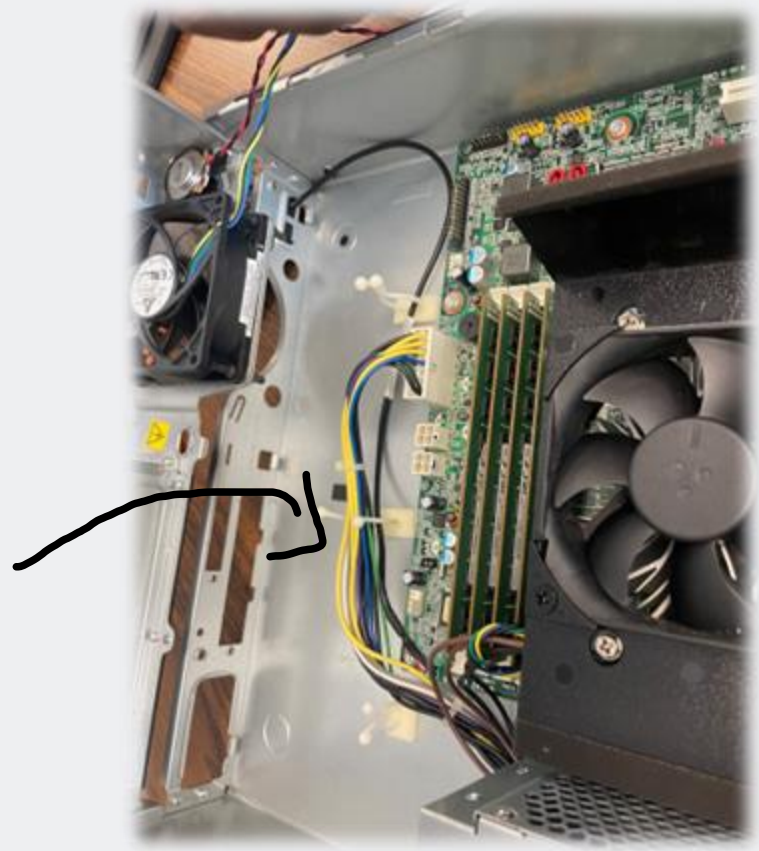

The Mother Board

- Here is the Mother Board in full



The Finished Project



REASSEMBLED

3:39
Wednesday, August 21

ViewSonic