

BIGTREETECH

Pad 7 V1.0

User Manual



Contents

Revision History	3
Product Profile	4
Specifications	4
Feature Highlights	4
Dimensions	5
Connectivity	6
Connection between Pad7, EBB36, and ADXL345	8
To Replace CB1 with CM4	9
To Remove the Bracket	11
To Work with a CB1	12
Download OS Image	12
To Download and Install the Writing Software	12
Start to Write OS	12
Using Raspberry Pi Imager	12
Using BalenaEtcher	14
System Settings	16
Setting Description	16
Setting up WiFi	16
Pad 7 Settings	17
Setting up Touch Feedback	18
Setting up SPI to CAN	20
Setting up ADXL345	20
To Work with a CM4	21
Setting up Backlight	21
Setting up Resolution and Touch	21
Setting up SPI to CAN	21
Setting up ADXL345	22

Shenzhen Big Tree Technology Co., Ltd.
BIGTREETECH

FAQ	23
CAN bus Not Working	23
ADXL345 Not Working	24
Cautions	25

Revision History

Version	Revisions	Date
01.00	Original	2023/03/25
01.01	Add tutorial for replacing CM4	2023/05/19

Product Profile

The BIGTREETECH Pad 7, a product of Shenzhen Big Tree Technology Co., Ltd., is a tablet equipped with pre-installed Klipper and KlipperScreen. The BTB headers have been engineered to provide users with the flexibility to select from various solutions, including CM4, CB1, and more.

Specifications


1. Dimensions: 185.7 x 124.78 x 39.5 mm
2. Display Viewing Area: 154.2 x 85.92 mm
3. Display: 7 inches, 1024 x 600 resolution, 60Hz refresh rate
4. Viewing Angle: 178°
5. Brightness: 500 Cd/m²
6. Input: DC 12V, 2A
7. Rated Power: 7.3W
8. Display Port: HDMI
9. Touch Port: USB-HID
10. PC Connection: Type-C (CM4 eMMC OS writing)
11. Interface: USB 2.0 x 3, Ethernet, CAN, SPI, SOC-Card
12. Core Board: BIGTREETECH CB1 v2.2, 1GB, accompanied by a SanDisk 32 GB memory card

Feature Highlights


1. The 7-inch IPS touch screen offers a wider field of view, high level of detail, and a comfortable user experience.
2. Features a built-in speaker, which allows you to adjust the volume with the volume buttons.
3. Having a 3.5mm headphone jack, which enables you to connect headphones or external speakers.
4. The touch experience is enhanced with vibration feedback.
5. The built-in light sensor adjusts the backlight brightness automatically based on the available light.

6. Incorporates the GT911 high-performance touch chip, which supports 5-point touch.
7. The bracket attaches securely to the back of the Pad 7 during storage and folding, thanks to the built-in magnets.


Dimensions

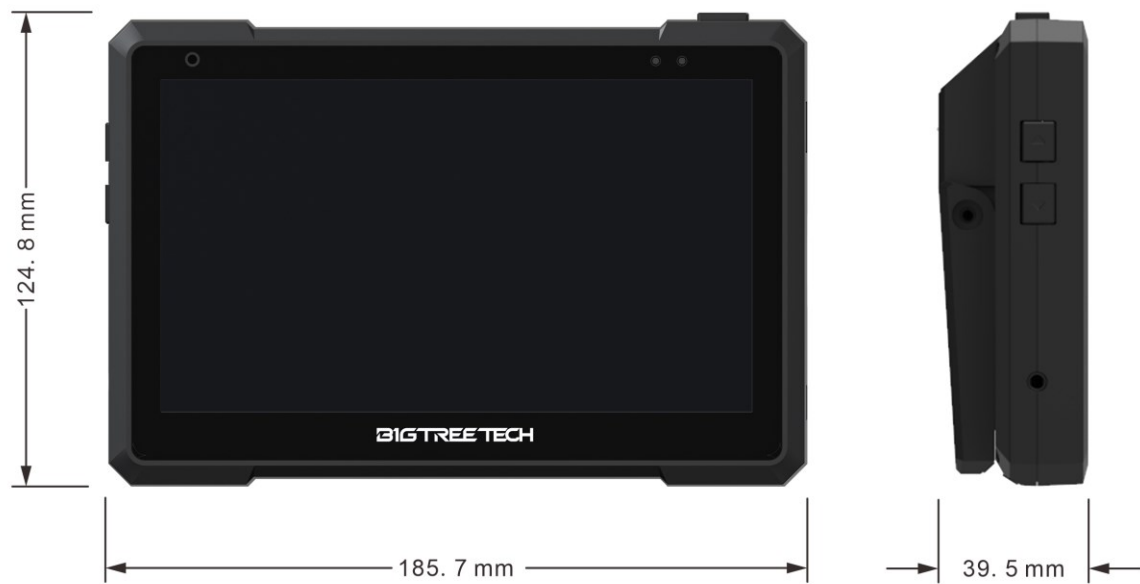

Connectivity

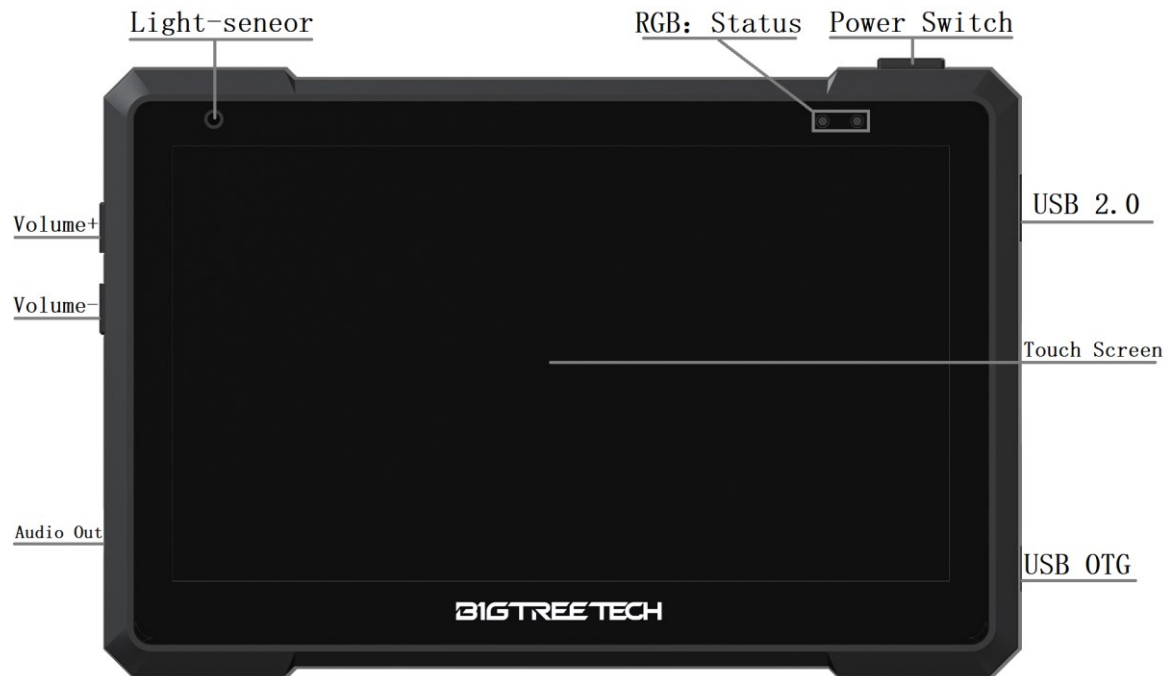


- Light-Sensor: built-in light sensor to automatically adjust the brightness of the backlight based on the intensity of ambient light.
- RGB: Status light.
- USB2.0: USB-Host peripheral interface.
- USB OTG: Communication interface with the host computer.
- Volume-: built-in speaker volume decrease.
- Volume+: Built-in speaker volume increase.

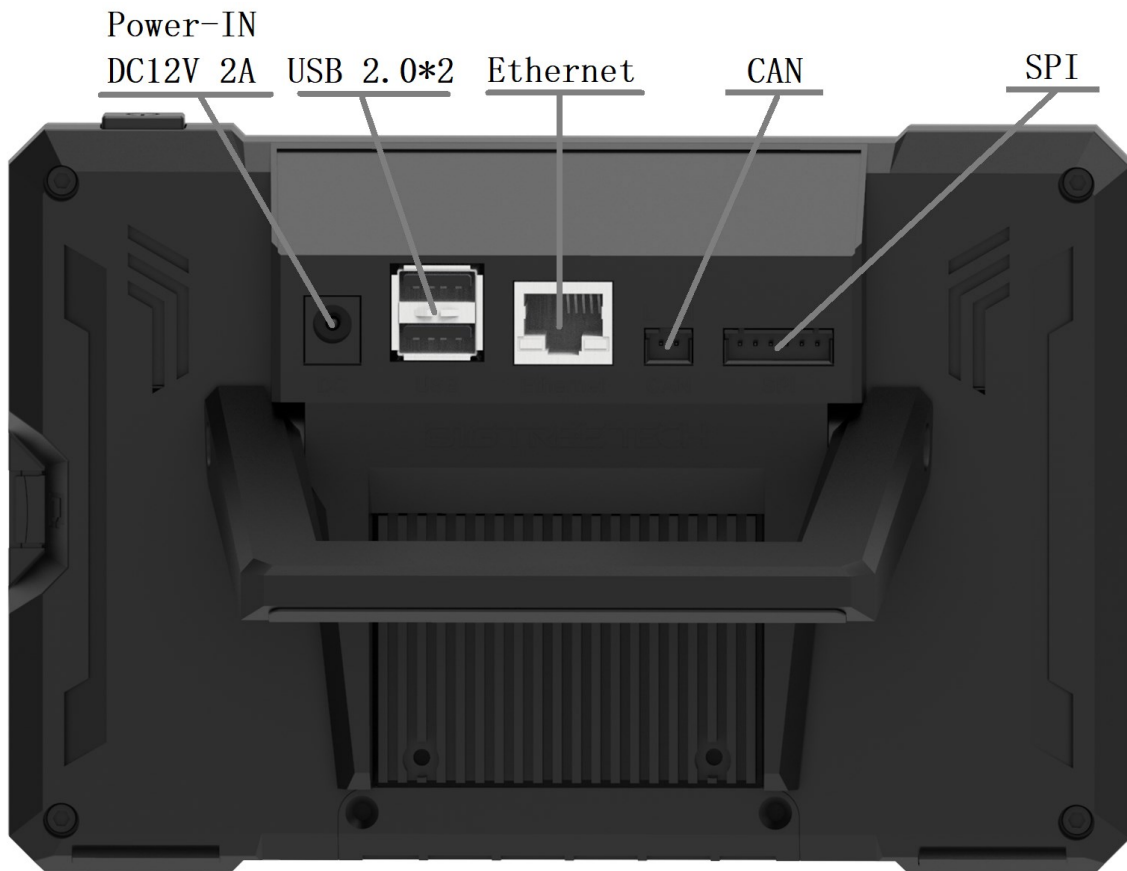

- Power-IN DC12V 2A: coming with a 12V 2A power adapter.
- USB2.0*2: USB host peripheral interface.
- Ethernet: RJ45 (CB1 supports 100M networking, CM4 supports Gigabit networking).
- CAN: CAN peripheral interface (MCP2515 SPI-CAN).
- SPI: SPI peripheral interface (can connect to ADXL345 accelerometer module).


Note: It is not possible to use the CAN interface and the ADXL345 accelerometer SPI interface simultaneously due to the MCP2515 SPI to CAN conversion.

Connection between Pad7, EBB36, and ADXL345

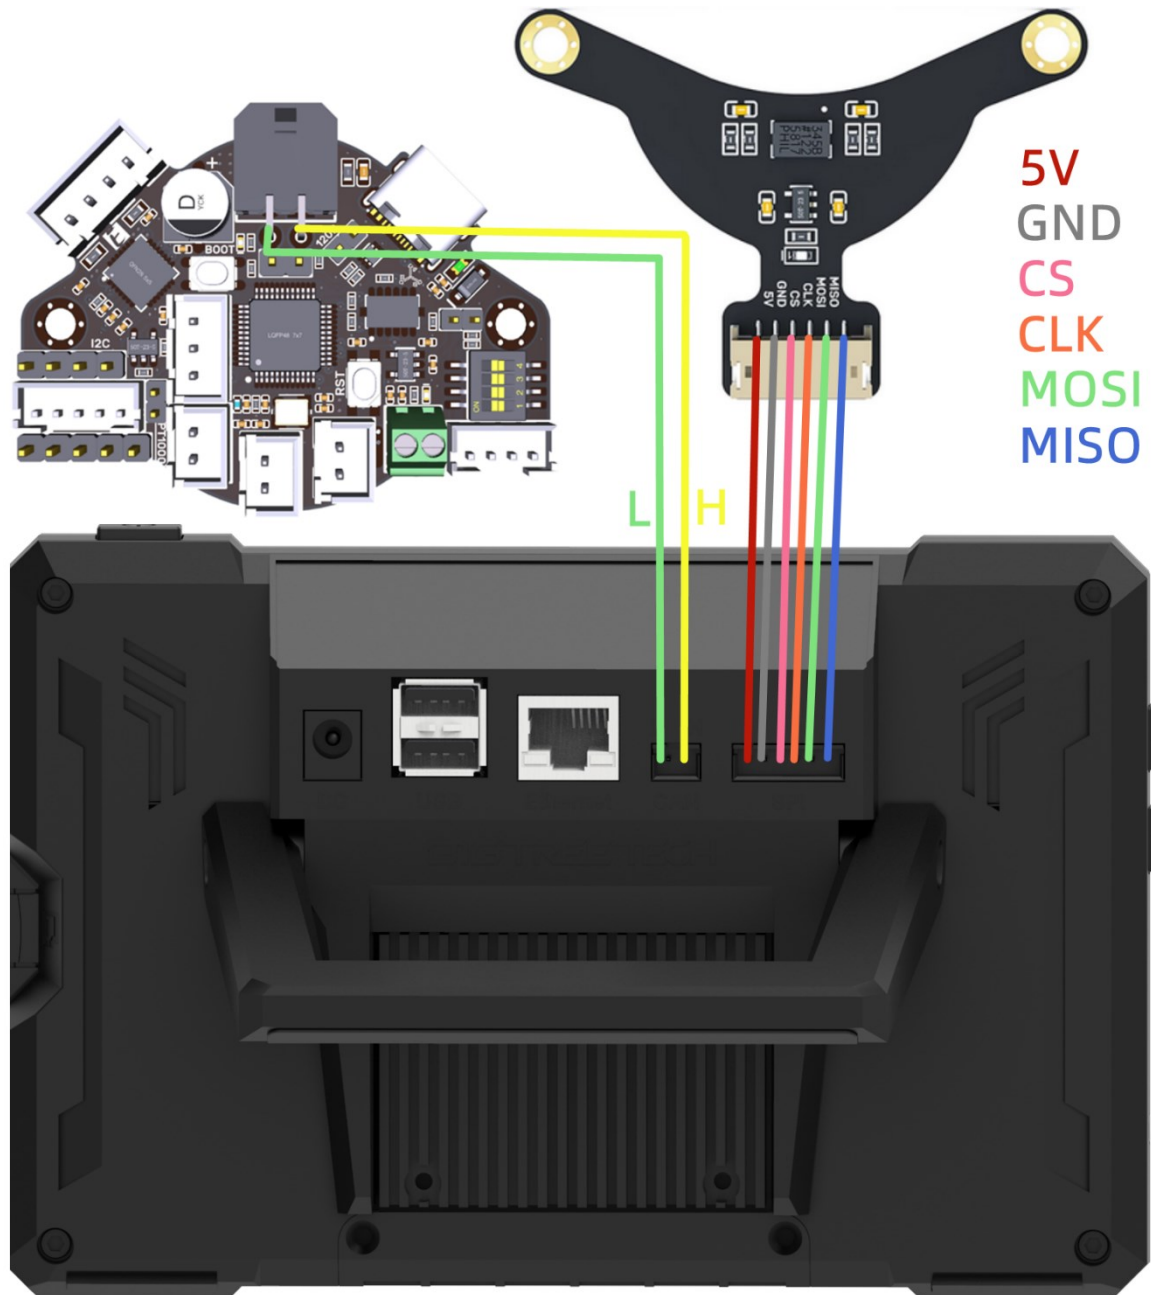

To Replace CB1 with CM4

1. Remove CB1.

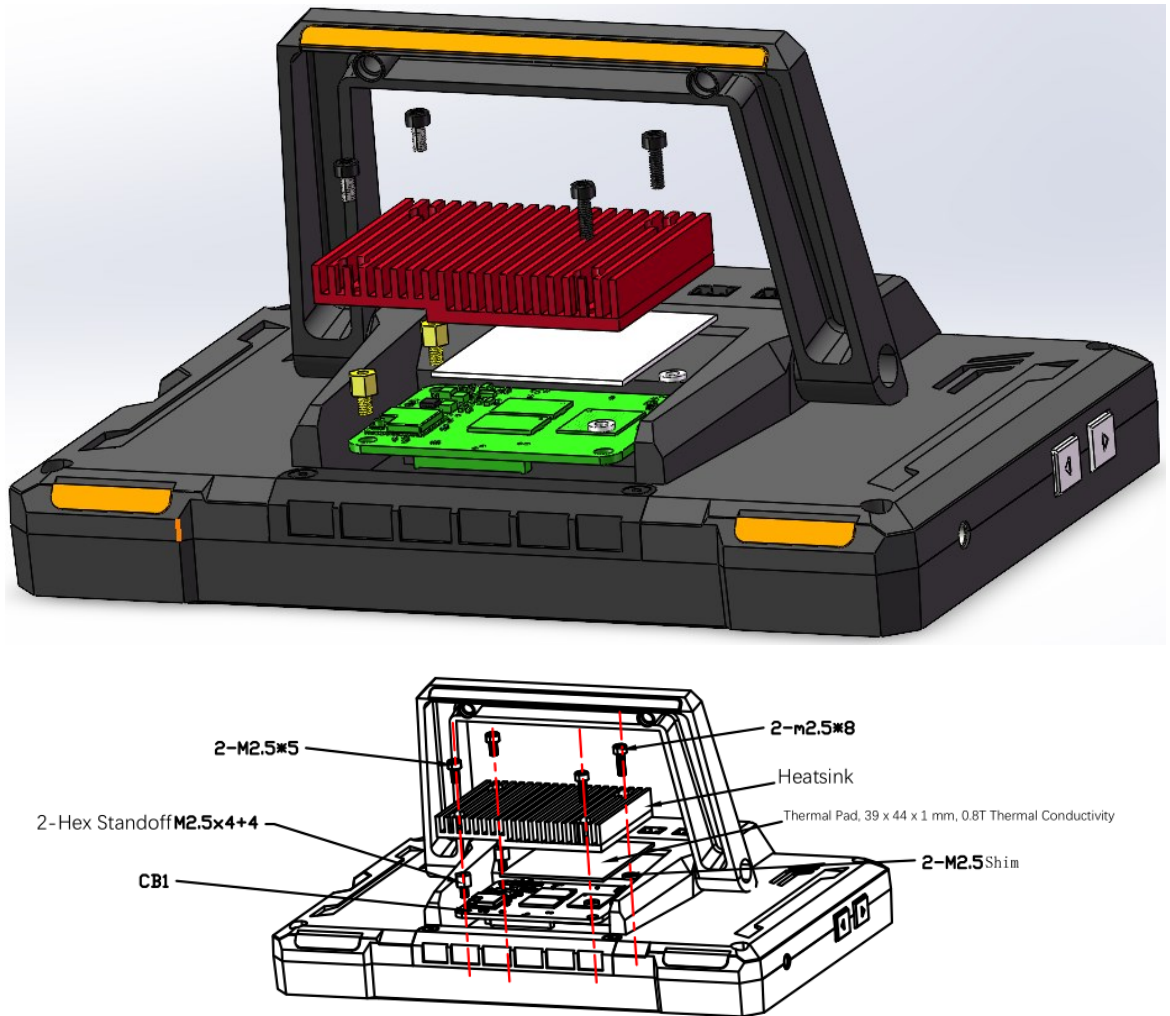

Remove the four screws and respectively remove the standoffs and accessories securing CB1 as illustrated.



Step 1: Use a screwdriver to remove the four screws securing the heatsink.

Step 2: Remove the heatsink and take off the attached thermal pad.

Step 3: Remove the 2-Hex Standoff M2.5 x 4 + 4.

Step 4: Detach CB1 -- exercise caution during disassembly to avoid damaging the BTB connector.

2. Install CM4.

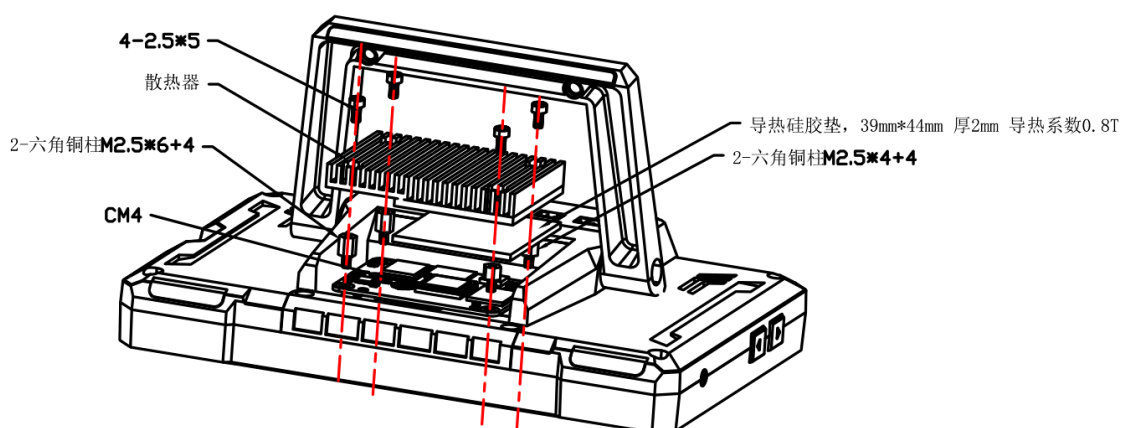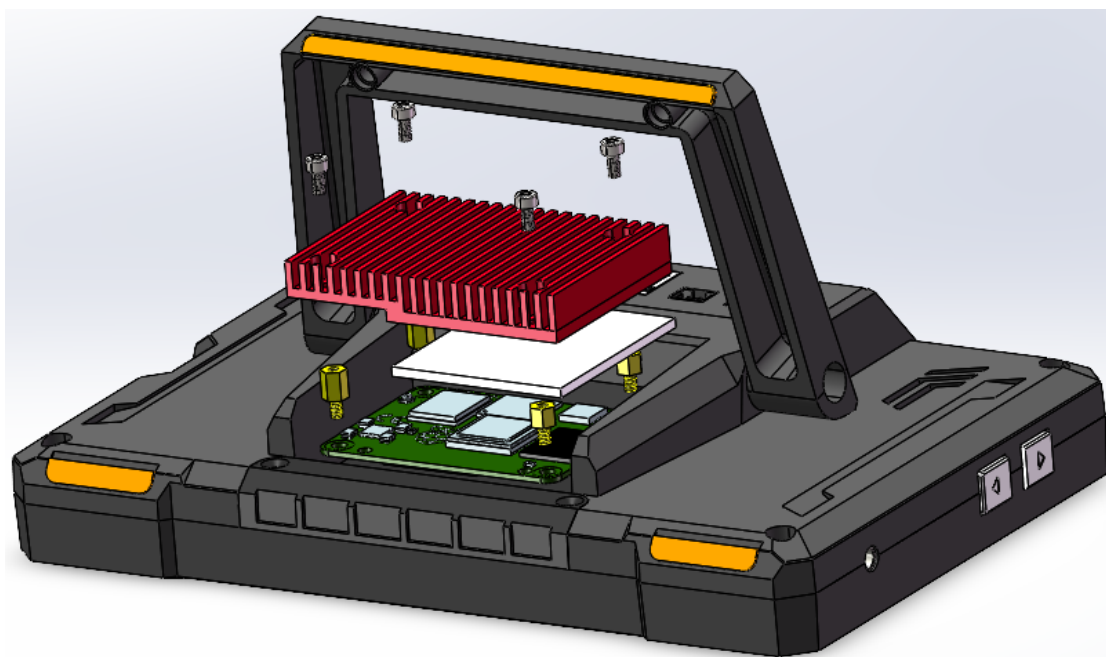

配件随带配件

杯头内六角螺丝 M2.5×5 黑色镀镍 12.9级 *4

六角铜柱M2.5×4+4 *2

六角铜柱M2.5×6+4 *2

导热硅胶垫, 39mm×44mm 厚2mm 导热系数0.8T *1

第一步: 扣上CM4——需扣合到位, 注意BTB座子方向

第二步: 左边拧上2-六角铜柱M2.5×6+4, 右边拧上2-六角铜柱M2.5×4+4, 固定CM4.

第三步: 将导热硅胶垫放置CM4芯片上与散热器中间





第四步: 拧上四颗2.5×5螺丝

Attention: Turn the sliding switch at the bottom to the CM4 position, refer to the red box position in the figure below;



To Remove the Bracket

1. Use a 3.0 mm hex key to loosen the two screws that secure the bracket in a counterclockwise direction.
2. Once the screws have been removed, gently pull the bracket away from the Pad 7.

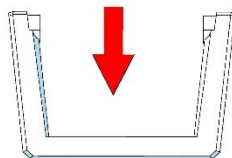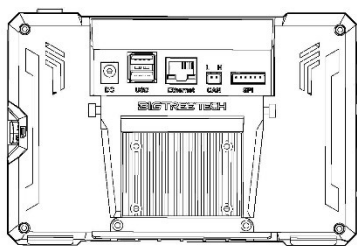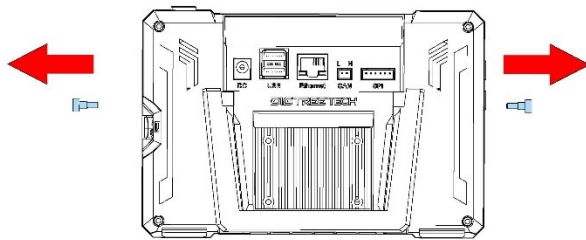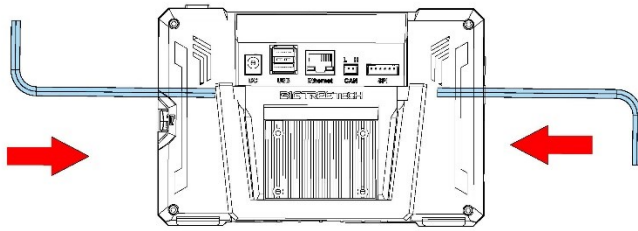

To Work with a CB1

Download OS Image

Only the OS image provided by BIGTREETECH is compatible with the CB1

<https://github.com/bigtreotech/CB1/releases>

It is recommended to use the CB1_Debian11_Klipper_xxxx.img.xz image file that contains "Klipper" in its name, rather than the image file with "minimal" in its name.

To Download and Install the Writing Software

Raspberry Pi Imager: <https://www.raspberrypi.com/software/>


BalenaEtcher: <https://www.balena.io/etcher/>

Note: You can choose to use either Raspberry Pi Imager or BalenaEtcher to write the OS image to the microSD card.


Start to Write OS

Using Raspberry Pi Imager

1. Insert microSD into your computer via a card reader.
2. Choose OS.

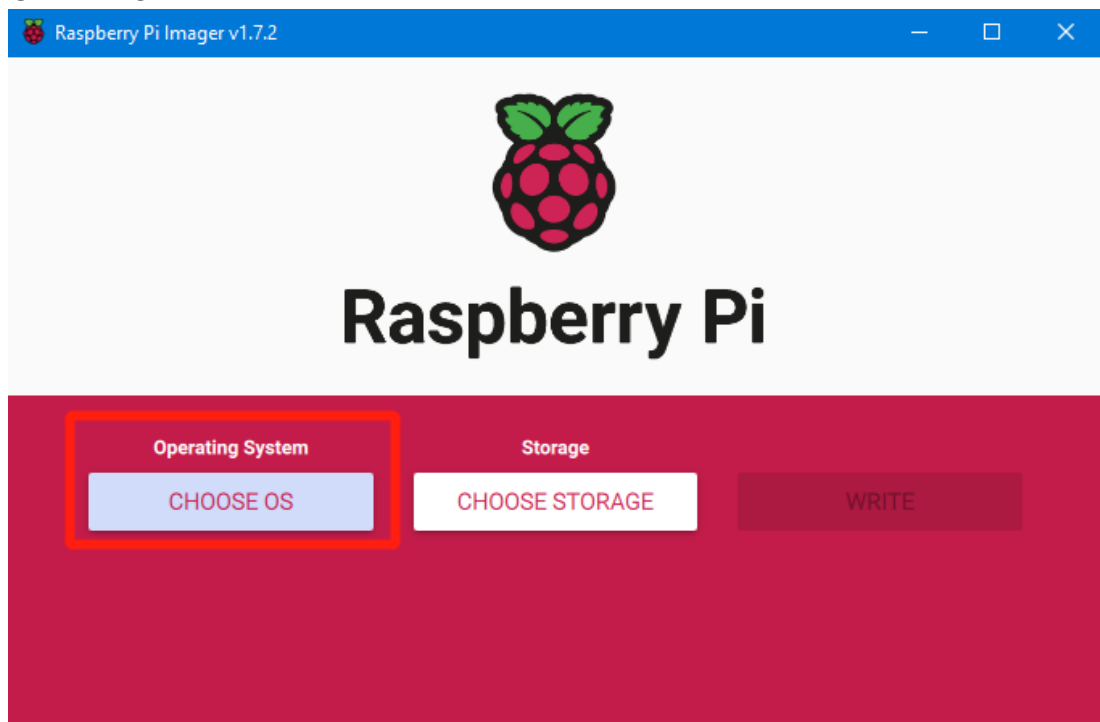


3. Select "Use custom", then select the downloaded image file.

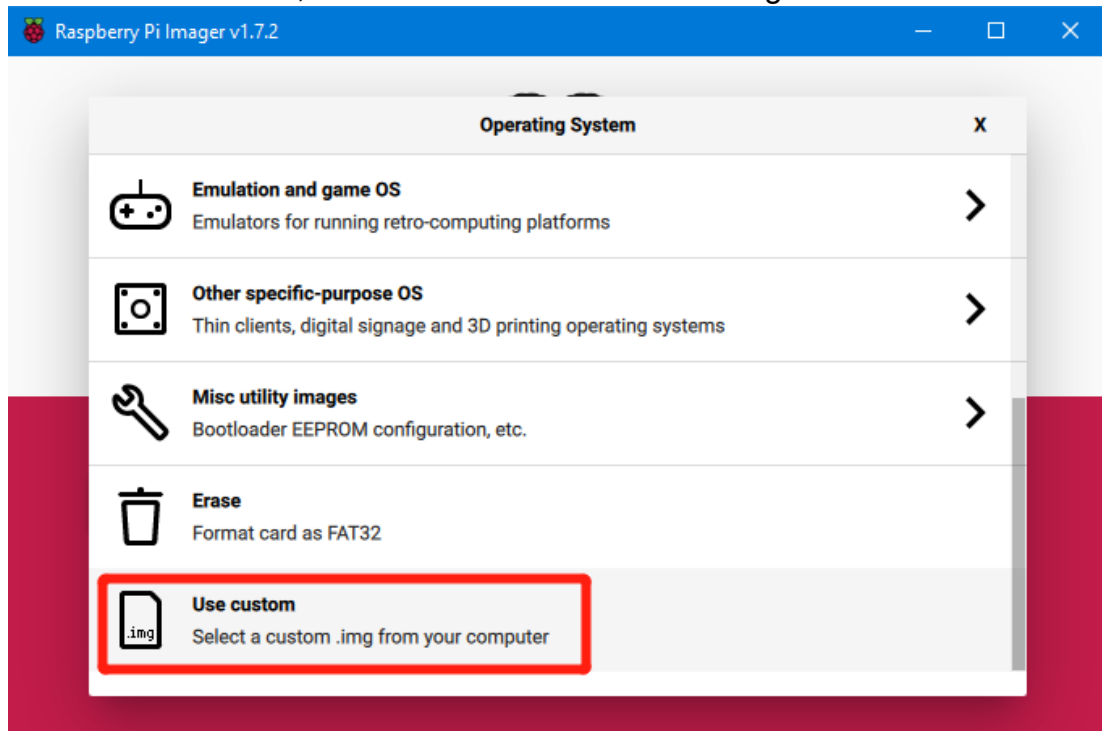

4. Select the microSD card and click "WRITE" (WRITE the image will format the microSD card. Be careful not to select the wrong storage device, otherwise the data will be formatted).




5. Wait for the writing process to complete..

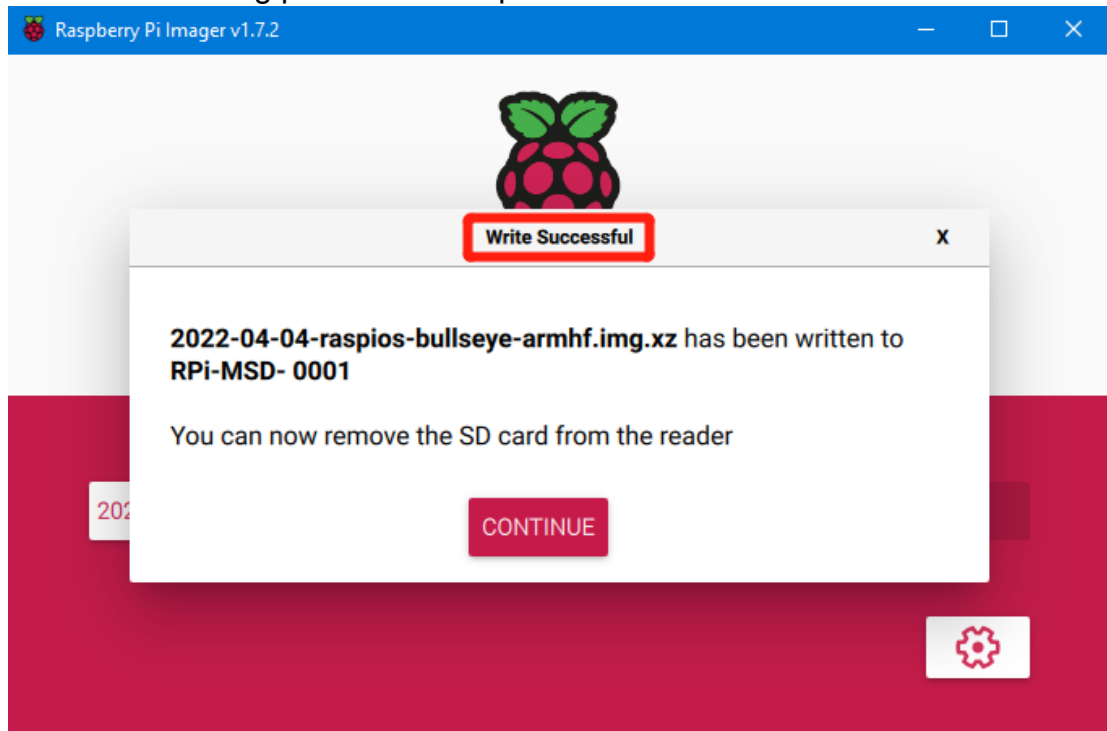

Using BalenaEtcher


1. Insert a microSD card into your computer via a card reader.
2. Select the downloaded image.

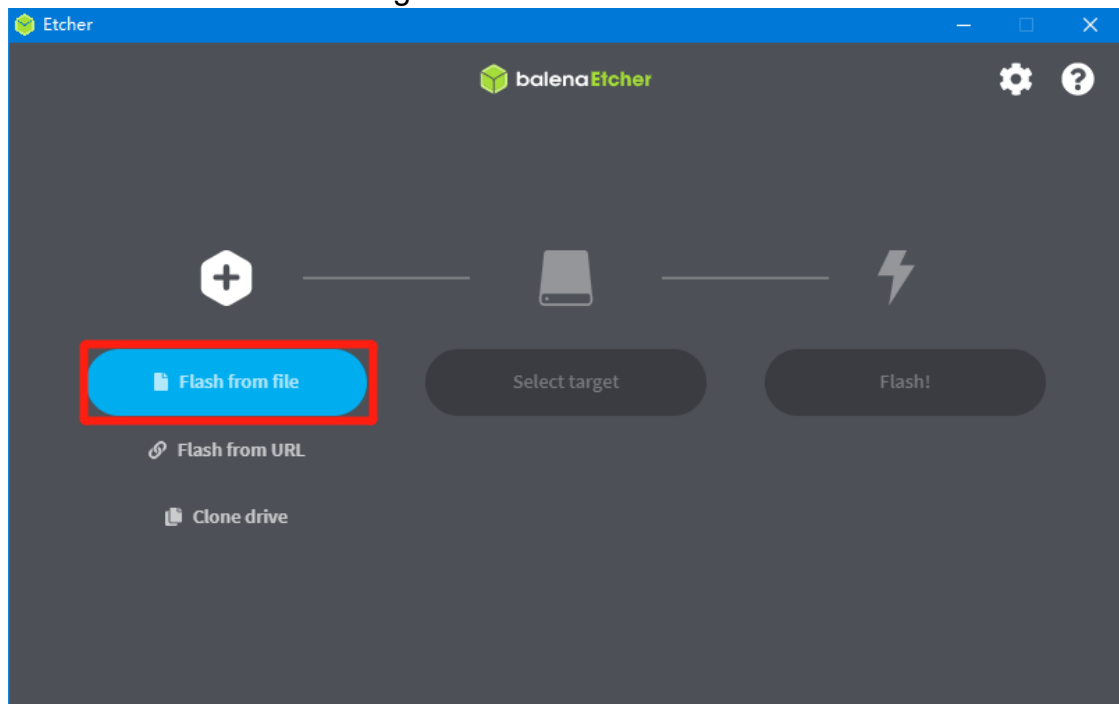

3. Select the microSD card and click "WRITE" (WRITE the image will format the microSD card. Be careful not to select the wrong storage device, otherwise the data will be formatted).



4. Wait for the writing process to complete..

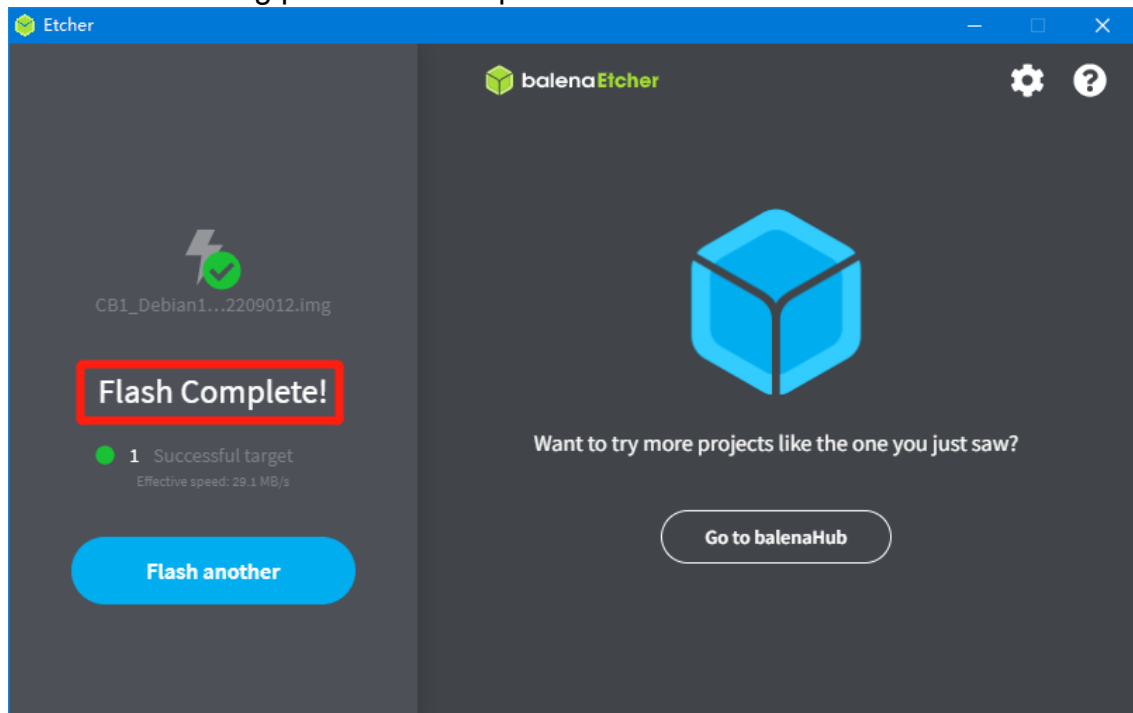


System Settings

Setting Description

In the configuration file, the '#' symbol represents a comment, and the system ignores any content that appears after the '#' symbol. As shown in the figure below:

#hostname="BTT-CB1" - This line is ignored by the system, and it is equivalent to not being present.

hostname="BTT-Pad7" - This line is recognized by the system, and the hostname is set to "BTT-Pad7".

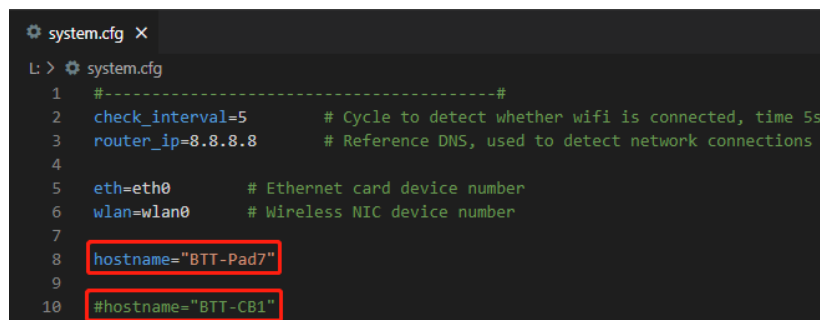


```
1 #-----#
2 check_interval=5      # Cycle to detect whether wifi is connected, time 5s
3 router_ip=8.8.8.8     # Reference DNS, used to detect network connections
4
5 eth=eth0              # Ethernet card device number
6 wlan=wlan0            # Wireless NIC device number
7
8 hostname="BTT-Pad7"
9
10 #hostname="BTT-CB1"
```

Setting up WiFi

Note: If you are using a wired connection, skip this step.

After the OS image has been burned onto the microSD card, a FAT32 partition that is recognized by the computer will be created on the card. Under this partition, there will be a configuration file named "system.cfg". Open this file, and replace WIFI-SSID with the actual name of your WIFI network, and PASSWORD with your actual WIFI password.

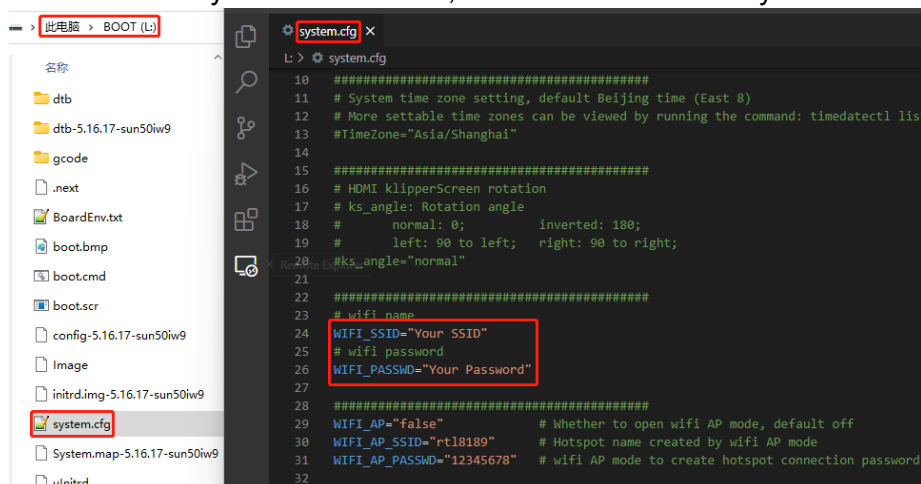

Pad 7 Settings

Open the "BoardEnv.txt" configuration file, and set the following parameters:


overlays=ws2812 light mcp2515 spidev1_1

ws2812: Enables the RGB light located in the upper right corner of the Pad 7.

light: Enables the PWM function for the LCD backlight.

mcp2515: Enables the MCP2515 SPI to CAN, which provides CAN functionality on the Pad 7.

spidev1_1: Enables the spidev1_1 to the system user space, allowing the Pad 7's SPI port to connect to an ADXL345 accelerometer module.

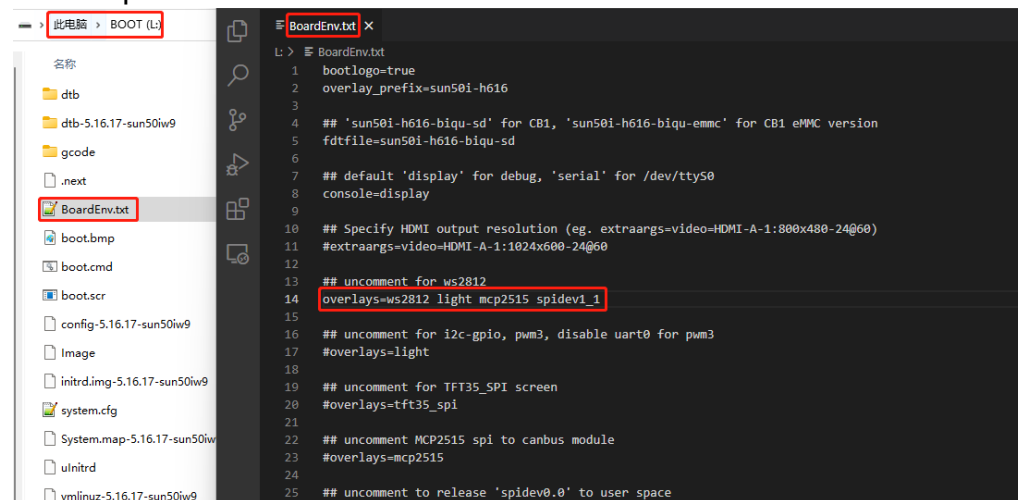


Open the "system.cfg" configuration file and modify the following settings:

BTT_PAD7="ON" # Enables Pad7 related scripts.

TOUCH_VIBRATION="OFF" # OFF: Disables vibration feedback. ON: Enables vibration feedback.

TOUCH_SOUND="ON" # OFF: Disables sound feedback, ON: Enables sound feedback.

AUTO_BRIGHTNESS="ON" # OFF Disables automatic backlight adjustment based on ambient light. ON: Enables automatic backlight adjustment based on ambient light.

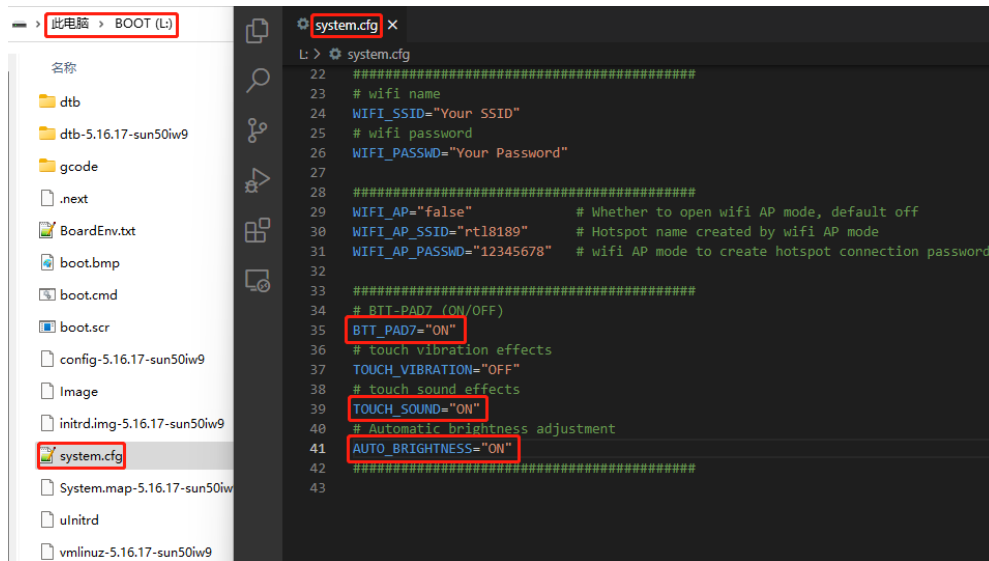


Note: The TOUCH_VIBRATION and TOUCH_SOUND settings require KlipperScreen support. If you want to use the touch feedback function, please follow the steps below to set up KlipperScreen.

Setting up Touch Feedback

Since KlipperScreen does not provide API interfaces for touch feedback, it is necessary to replace the official KlipperScreen with our modified version of KlipperScreen. Follow the steps below to replace the KlipperScreen:

1. Open the moonraker.conf file in Mainsail.

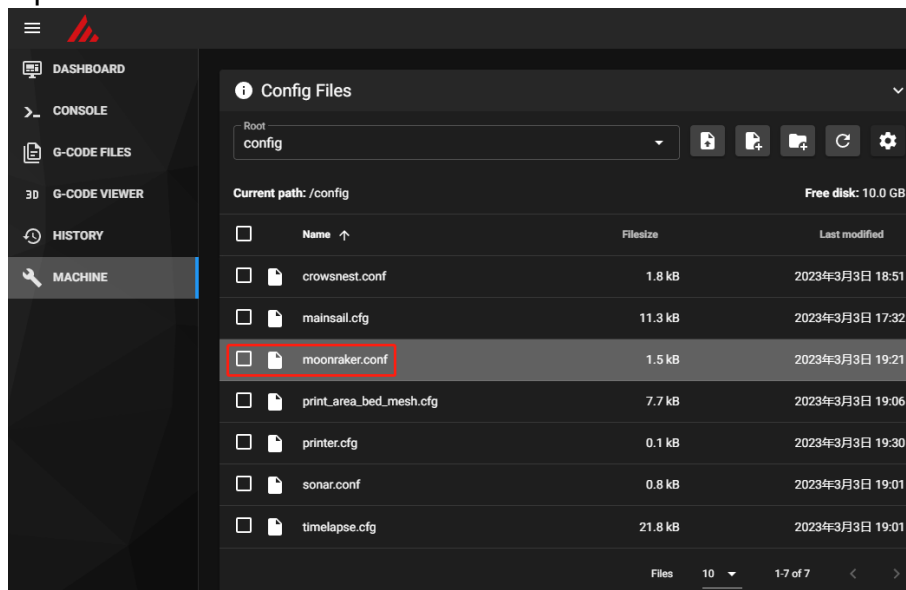


2. Change the origin of KlipperScreen from the official <https://github.com/jordanruthe/KlipperScreen.git> to:

<https://github.com/bigtreotech/KlipperScreen.git>


If you want to use the official version instead of BigTreeTech's, simply change the link back.

```
66 [update_manager KlipperScreen]
67 type: git_repo
68 path: ~/KlipperScreen
69 #origin: https://github.com/jordanruth/KlipperScreen.git
70 origin https://github.com/bigtreotech/KlipperScreen.git
71 env: ~/.KlipperScreen-env/bin/python
72 requirements: scripts/KlipperScreen-requirements.txt
73 install_script: scripts/KlipperScreen-install.sh
74 managed_services: KlipperScreen
```

3. Click the refresh button in the upper right corner of the Update Manager, then Hard Recovery KlipperScreen.

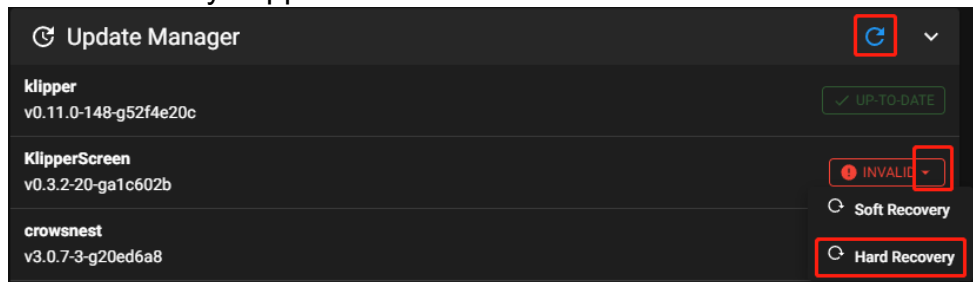

4. Wait for the update to complete.

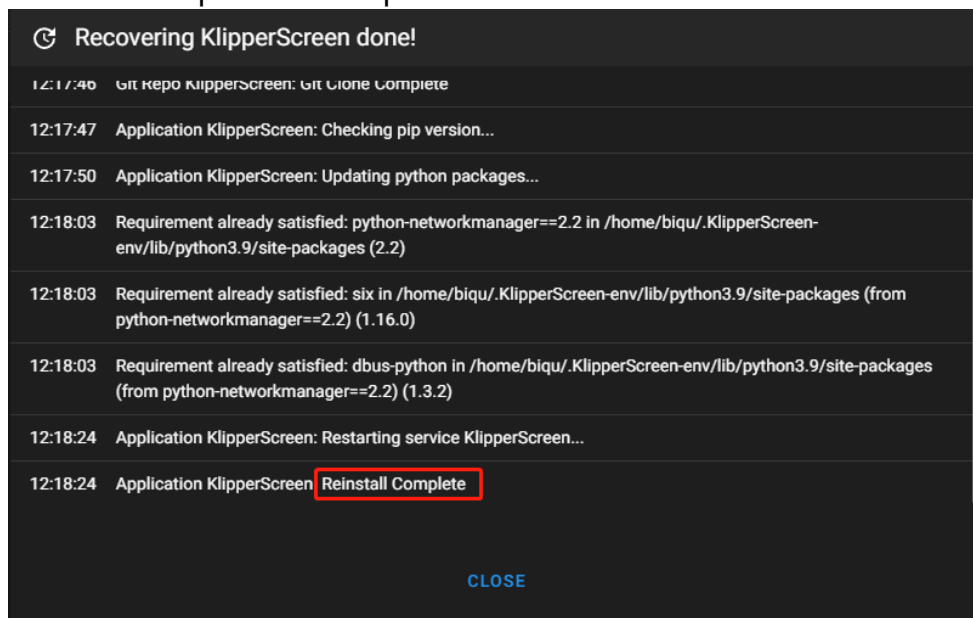

Setting up SPI to CAN

As explained in "Pad 7 Settings" section, set the overlays to include mcp2515 to enable the CAN functionality automatically after booting.

Setting up ADXL345

As explained in "Pad 7 Settings" section, set the overlays to include spidev1_1. After booting, the system user space should load spidev1.1. Add the following configuration to the printer.cfg file to use the ADXL345:

```
[mcu CB1]
serial: /tmp/klipper_host_mcu
```

```
[adxl345]
cs_pin: CB1:None
spi_bus: spidev1.1
axes_map: z,y,-x # Modify according to the actual orientation of the ADXL345
installed on the printer.
```

To Work with a CM4

We recommend using the OS image released by Mainsail:

<https://github.com/mainsail-crew/MainsailOS/releases>

The steps for burning the system are the same as with CB1.

Setting up Backlight

Note: The backlight IO of CM4 does not have PWM function, so it can only be set to maximum brightness.

1. Remove "console=serial0,115200" from /boot/cmdline.txt file (if it exists).
2. Remove enable_uart=1 from /boot/config.txt file (if it exists).
3. Add the following lines to /boot/config.txt file:
dtoverlay=gpio-led
dtparam=gpio=14,label=Pad7-lcd,active_low=1

Setting up Resolution and Touch

1. Add the following lines to /boot/config.txt file to specify the HDMI output resolution:

```
hdmi_group=2  
hdmi_mode=87  
hdmi_cvt 1024 600 60 6 0 0 0  
hdmi_drive=1
```

Some versions of the system disable USB by default to save power. To enable USB, add the following line to /boot/config.txt file. Also, Pad 7's touch function uses the USB HID protocol, so USB needs to be enabled.


```
dtoverlay=dwc2,dr_mode=host
```

Setting up SPI to CAN

Add the following lines to /boot/config.txt file:

```
dtparam=spi=on  
dtoverlay=mcp2515-  
can0,oscillator=12000000,interrupt=24,spimaxfrequency=1000000
```

Execute `sudo nano /etc/network/interfaces.d/can0` in the SSH terminal to edit the can0 file and check if the contents of the file are correct. The bitrate 1000000 represents the baud rate of the CAN bus and should be consistent with the settings in Klipper.

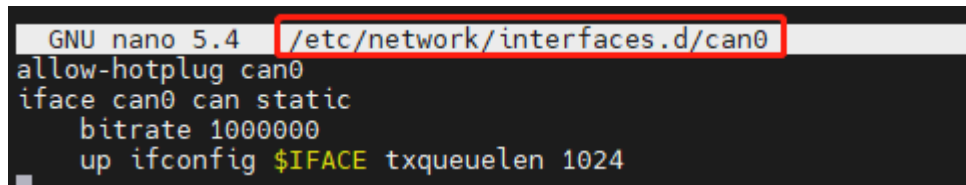

```
GNU nano 5.4 /etc/network/interfaces.d/can0
allow-hotplug can0
iface can0 can static
    bitrate 1000000
    up ifconfig $IFACE txqueuelen 1024
```

```
allow-hotplug can0
iface can0 can static
    bitrate 1000000
    up ifconfig $IFACE txqueuelen 1024
```

Setting up ADXL345

Add `dtparam=spi=on` to `/boot/config.txt` file. After booting, the system user space should load `spidev0.1`. Add the following configuration to the `printer.cfg` file to use the ADXL345:

```
[mcu CM4]
```

```
serial: /tmp/klipper_host_mcu
```

```
[adxl345]
```

```
cs_pin: CM4:None
```


```
spi_bus: spidev0.1
```

```
axes_map: z,y,-x # Modify according to the actual orientation of the ADXL345
installed on the printer.
```

FAQ

CAN bus Not Working

1. Check the CS-Choose switch inside Pad 7. When used with CB1, it should be set to the CB1 position, and when used with CM4, it should be set to the CM4 position.

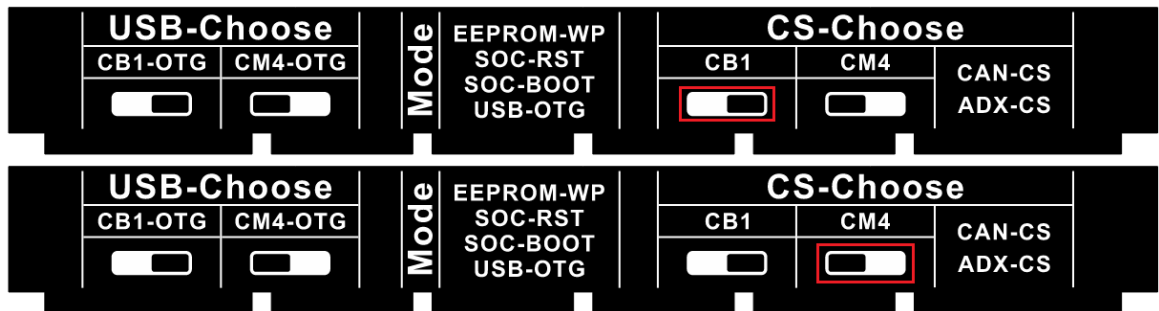

2. Check the H and L wiring of the CAN bus connection according to the "Connection between Pad7, EBB36, and ADXL345" section of this manual.
3. In the SSH terminal, execute the command "dmesg | grep can". The response should be "MCP2515 successfully initialized".

```
biqu@BTT-Pad7:~$ dmesg | grep can
[ 1.270593] mcp251x spi1.0 can0: MCP2515 successfully initialized.
[ 1.857602] can: controller area network core
[ 2.491651] mv64xxx_i2c 7081400.i2c: can't get pinctrl, bus recovery not supported
[ 8.739239] IPv6: ADDRCONF(NETDEV_CHANGE): can0: link becomes ready
biqu@BTT-Pad7:~$
```

4. In the SSH terminal, execute the command "sudo nano /etc/network/interfaces.d/can0" to edit the can0 file and check if the content of the file is normal. The bitrate 1000000 represents the CANbus baud rate, which should be consistent with the setting in Klipper.

```
GNU nano 5.4 /etc/network/interfaces.d/can0
allow-hotplug can0
iface can0 can static
    bitrate 1000000
up ifconfig $IFACE txqueuelen 1024
```


```
allow-hotplug can0
iface can0 can static
    bitrate 1000000
up ifconfig $IFACE txqueuelen 1024
```

5. In the SSH terminal, execute the command "ifconfig" to check if the can0 service exists. A normal situation is shown in the figure.

```
biqun@BTT-Pad7:~$ ifconfig
can0 flags=193<UP, RUNNING, NOARP> mtu 16
    unspec 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00 txqueuelen 1024 (UNSPEC)
    RX packets 0 bytes 0 (0.0 B)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 0 bytes 0 (0.0 B)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

ADXL345 Not Working

1. Check the CS-Choose switch inside Pad 7. When used with CB1, it should be set to the CB1 position, and when used with CM4, it should be set to the CM4 position.

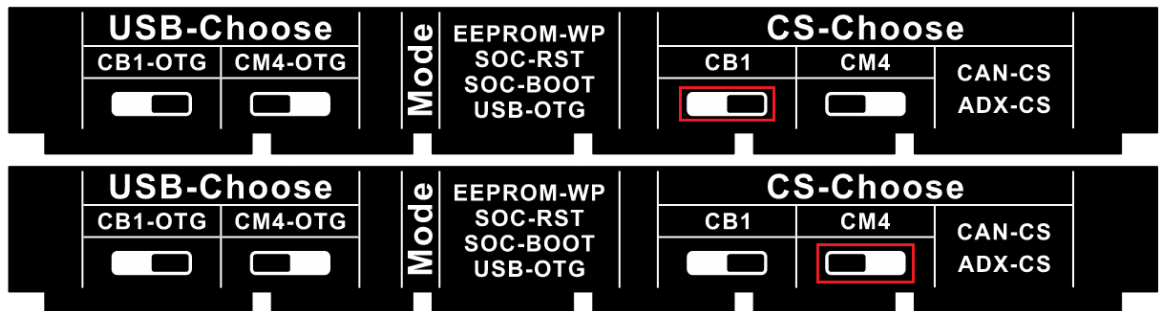

2. Check the wiring sequence of the SPI port according to the "Connection between Pad7, EBB36, and ADXL345" section of this manual.
3. In the SSH terminal, execute the command "ls /dev/spi*" to check if CB1 has a device named "spidev1.1" and if CM4 has a device named "spidev0.1".

```
biqun@BTT-Pad7:~$ ls /dev/spi*
/dev/spidev1.1
biqun@BTT-Pad7:~$
```

```
pi@raspberrypi:~$ ls /dev/spi*
/dev/spidev0.1
pi@raspberrypi:~$
```


Cautions

1. Do not attempt to hot-swap the TF card. Make sure it is properly inserted before powering on the device.
2. We advise customers not to disassemble the device as they may not be familiar with the internal structure, which can lead to internal circuit breakdown. Any problems caused by disassembling will not be covered by compensation.
3. If you need to replace the core board, follow the replacement steps provided (see "To Replace CB1 with CM4" section).
4. When wiring the SPI interface to the expansion module, pay close attention to the silkscreen to avoid short circuits.

If you require additional resources for this product, please visit <https://github.com/bigtreetech/> to find them. If you cannot find the resources you need, please reach out to our after-sales support team for assistance.

If you encounter any other issues while using this product, please don't hesitate to contact us. We will provide careful answers to your inquiries. We also welcome any feedback or suggestions you may have about our products, and we will consider them carefully. Thank you for choosing BIGTREETECH. Your support means a lot to us!