

<http://projects.ict.usc.edu/mxr/faast/>

Installation

To use FAAST, you will need to download and install the following software:

1. [OpenNI Unstable Build for Windows v1.0.0.25](#)
2. [PrimeSense NITE Unstable Build for Windows v1.3.0.18](#)
During NITE installation, enter the free license key from OpenNI: **0KOIk2JeIBYCIPWVnMoRKn5cdY4=**
3. Hardware drivers for your sensor (only one of the following)
 - Microsoft Kinect: [SensorKinect Module](#) – download Win32 installer from Bin folder
 - PrimeSensor: [PrimeSensor Module](#) – this does **NOT** work with the Kinect