



## GUESS TWSXHM Wireless Earphones User Manual

[Home](#) » [GUESS](#) » GUESS TWSXHM Wireless Earphones User Manual 

### Contents

- [1 GUESS TWSXHM Wireless Earphones](#)
- [2 Product Information](#)
- [3 Usage Instructions](#)
- [4 Specifications](#)
- [5 Product operating instructions](#)
- [6 Control](#)
- [7 FCC Warning](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

# GUESS

**GUESS TWSXHM Wireless Earphones**



## Specifications

- Wireless Headphones
- Model: 456%\*026-\*5:406/%

## Product Information

The Wireless Headphones provide high-quality sound and a comfortable fit for extended use. They feature advanced noise-cancellation technology and a long-lasting battery.

## Usage Instructions

### • Turning On/Off

To turn on the headphones, press and hold the power button until you see the indicator light. To turn off, repeat the same process.

### • Pairing with a Device

Activate Bluetooth on your device, then search for available devices and select the headphones to pair. Follow on-screen instructions if prompted for a pin.

### • Charging

Connect the headphones to a power source using the provided charging cable. The indicator light will show charging status.

## FAQ

### • Q: How long does the battery last?

A: The battery can last up to 12 hours on a full charge, depending on usage.

### • Q: How do I reset the headphones?

A: To reset the headphones, press and hold the power button and volume up button simultaneously for 10 seconds.

### • Q: Can I use the headphones while exercising?

A: Yes, the headphones are sweat-resistant and suitable for exercise activities.

Wireless Earphones  
STUDIO QUALITY SOUND

## User Manual

- Please read this manual carefully before use
- Different models, different graphics, pictures for reference only

## Specifications

BT Version	V5.4
Battery Earbuds	25 mAh * 2 earbuds
Battery Charging Case	250 mAh
Play Time	4 Hours
Charging Time	1.5 Hour
Standby Time	180 Days
Effective Distance	10m
Frequency Range	20HZ - 20KHZ
Impedance	32 Ω
Input	DC 5V / 20mA
Speakers	13mm Driver
Charging Connector	USB-C



Earphones



Earphones  
Charging Case × 1



Manual × 1



Type-C charging  
cable × 1

## Product operating instructions

### 1. Power on

Method 1: Open the case, the headphones will turn on automatically.

Method 2: Long touch the MF button of the headphones for 3-5s to turn on the headphones.

### 2. Power off

Method 1 : Put the headphones into the charging case directly and close the case to turn off.


Method 2 : When the left and right earphones are powered on, hold own the touch button for 4-6s to power off

the earphones. (not connected Connect to Bluetooth device)

### 3. Pairing to the BT device

Step 1: open the upper cover of the charging case, and the main and auxiliary headphones will automatically connected.

 Step 2: open the BT list of smart devices, search "GUESS TWS" and Connect.

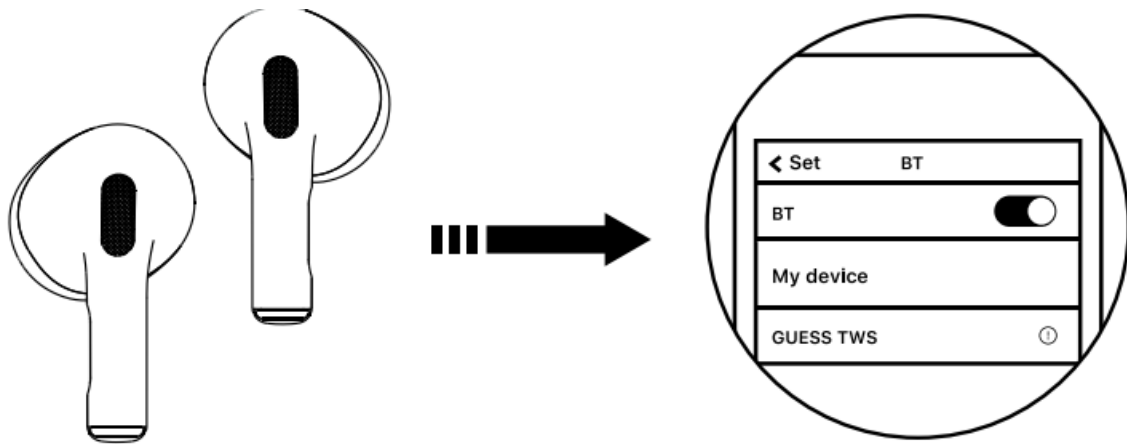


### Restore factory settings:

When a single headset is turned on and not paired with a mobile phone, and click the MF button 5 times to clear the pairing record, then turn off the Headphone.


### Control

 - Touch control button operating
- Music playing mode
- Left/Right headphone operating

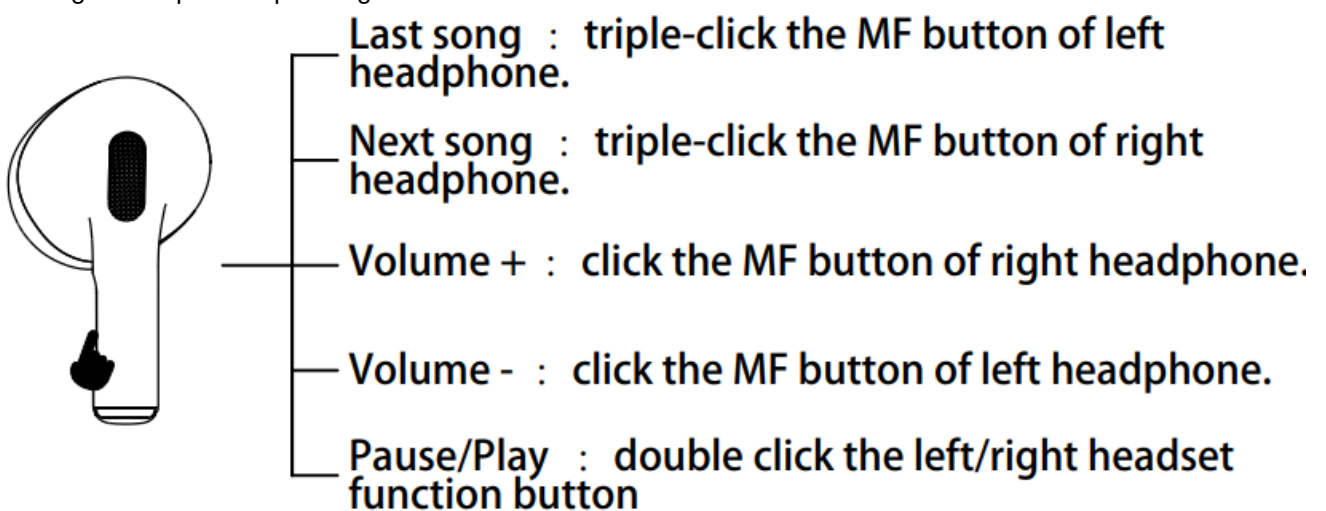

### • Hands free function

 
Left/ Right headphone operating ( incoming call)

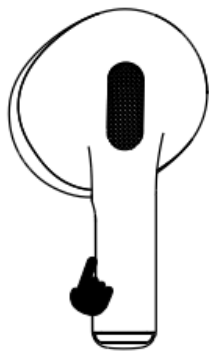

- Answer incoming call** : double click the left/right headset function button
- Reject:** press and hold the 2S headset function button
- Hang up:** double click the left/right headset function button

- Voice Assistant/Music mode/Game mode

 Left/ Right headphone operating

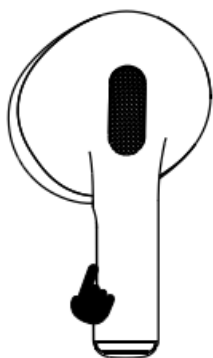

- Activation:** Press and hold the left headset function button for 2S to hear the "Tone" tone loosen
- The default startup mode is music  
Hold down the right earphone touch button for 2 seconds to switch to game mode, then hold down the right earphone touch button for 2 seconds to switch to music mode

#### Precautions:

1. Please be gentle when using this headphone. The maximum tolerance of the button is 250g. Excessive force will damage buttons.
2. Please align the USB port when plugging or pulling the USB cable in order to avoid damage to the USB cable and fail to charge the headset.
3. If you do not use the headset for long periods, please turn off the headset and be sure to store it in a dry place, free from extreme temperature conditions and dust.
4. Please do not vibrate or shock the headset violently, and do not let it fall down from high place.




#### Safety warnings

- Do not place any naked flame sources, such as lighted candles. Dispose of batteries responsibly and be aware of the environmental effects of battery disposal.
- Do not expose the batteries (batteries installed) to excessive heat, such as fire or the like.



#### Warning

- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- For your own safety, please be aware of your surroundings when using these headphones.

-  The symbol indicates DC Voltage



-  Recycling

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Designed in France. Made in China.

**WARNING:** This product can expose you to chemicals including Lead and Bisphenol A(BPA), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to

[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

FCC ID: 2A7J2-TWSXHM

## Documents / Resources



[GUESS TWSXHM Wireless Earphones](#) [pdf] User Manual

2A7J2-TWSXHM, 2A7J2TWSXHM, TWSXHM Wireless Earphones, TWSXHM, Wireless Earphones, Earphones

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.