


MANUAL VALVE OVERRIDE

To activate manual valve override

- ① Push and hold diverter **valve plunger**
- ② Push desired function

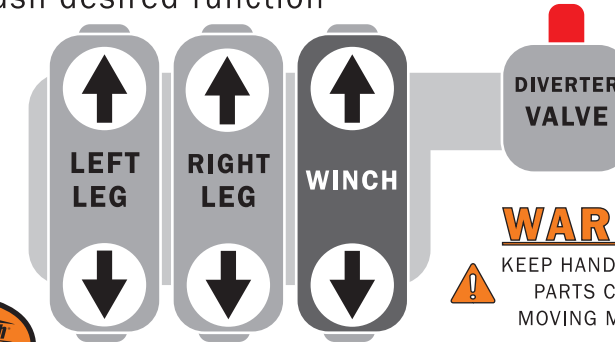

WARNING

KEEP HANDS AND BODY
PARTS CLEAR OF
MOVING MACHINERY




DOC0299

MANUAL VALVE OVERRIDE

To activate manual valve override

- ① Push and hold diverter **valve plunger**
- ② Push desired function

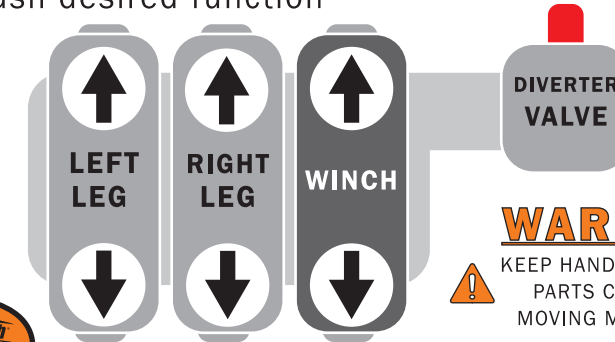

WARNING

KEEP HANDS AND BODY
PARTS CLEAR OF
MOVING MACHINERY




DOC0299

MANUAL VALVE OVERRIDE

To activate manual valve override

- ① Push and hold diverter **valve plunger**
- ② Push desired function

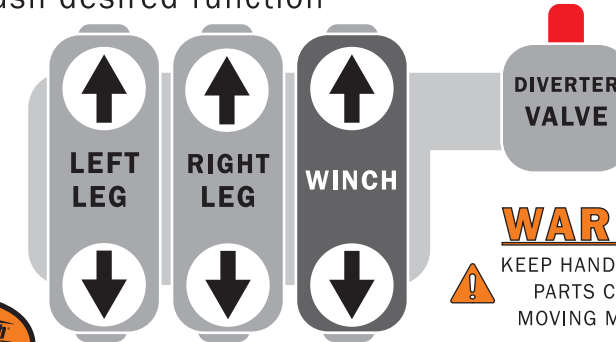

WARNING

KEEP HANDS AND BODY
PARTS CLEAR OF
MOVING MACHINERY




DOC0299

MANUAL VALVE OVERRIDE

To activate manual valve override

- ① Push and hold diverter **valve plunger**
- ② Push desired function

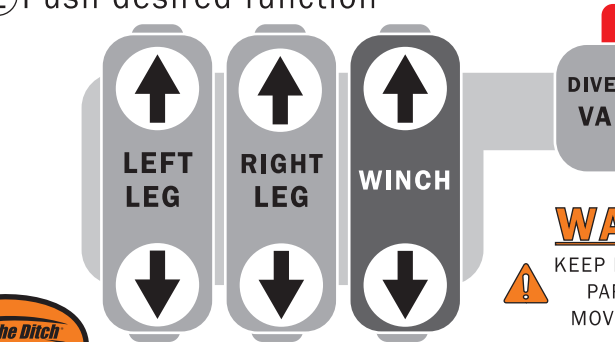

WARNING

KEEP HANDS AND BODY
PARTS CLEAR OF
MOVING MACHINERY




DOC0299

MANUAL VALVE OVERRIDE

To activate manual valve override

- ① Push and hold diverter **valve plunger**
- ② Push desired function

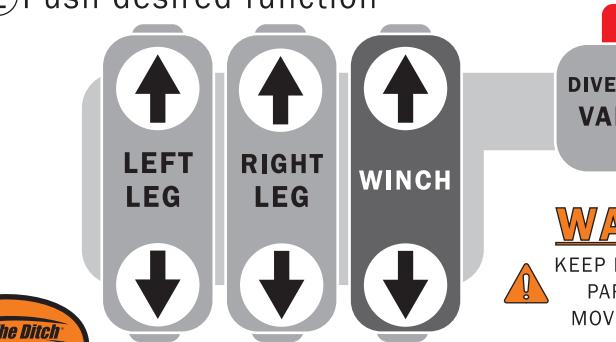

WARNING

KEEP HANDS AND BODY
PARTS CLEAR OF
MOVING MACHINERY



DOC0299