


In some case just change “ No line ending” to Both NL &CR and may have to be proper connect.

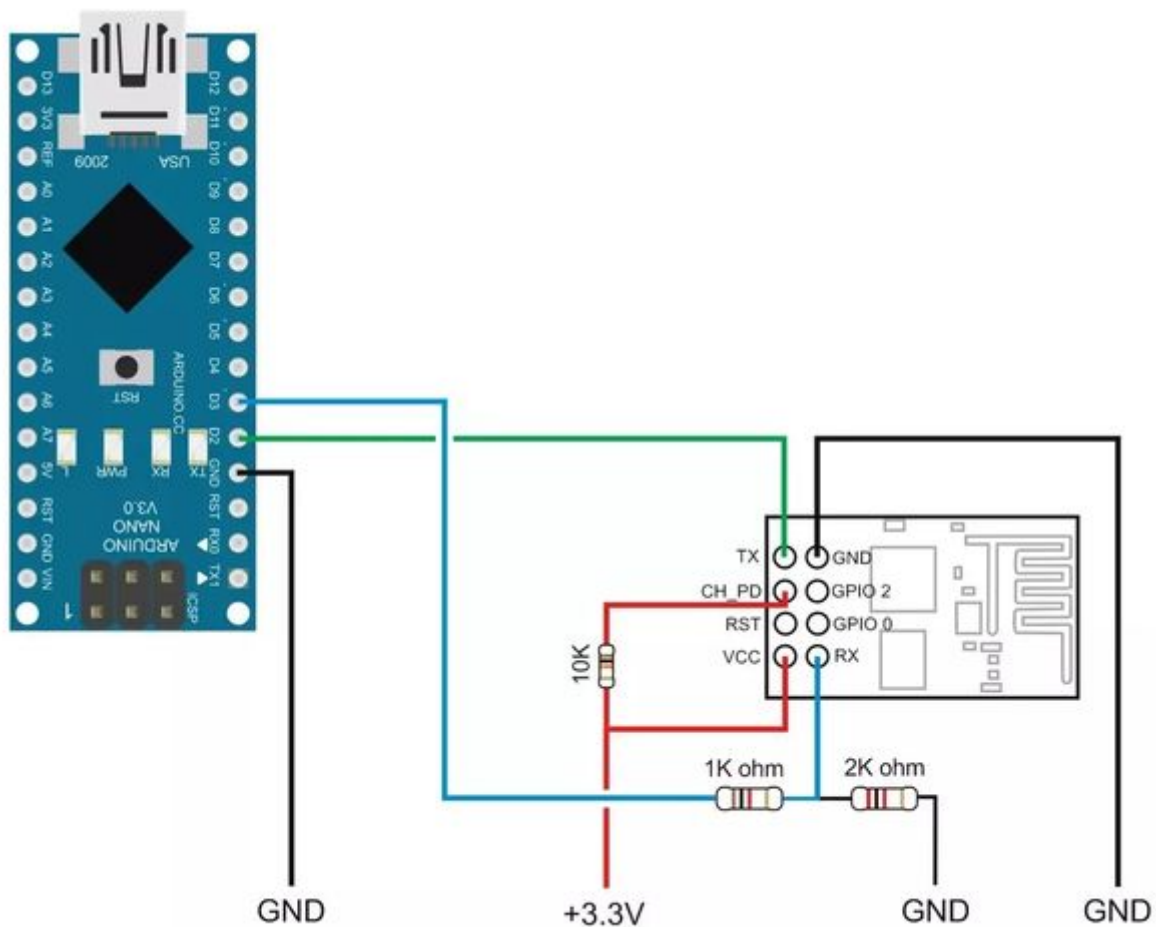

ref : <https://www.quora.com/Why-does-ESP8266-give-error-message-on-AT-command>