



LED

PN: B3332C035WXXXX

Thank you for purchasing the Bright33™ LED Lighting Fixtures!

TROUBLESHOOTING:

- Check that line voltage at fixture is correct.
- Ensure that there is voltage at lamp fixture wires. If there is no voltage, then check all connections.
- Check that fixture is grounded properly.

If fixture does not light:

- Check switch to ensure that there are no defects.
- Check fuse/circuit breaker for trips, then check wiring connections.

CLEANING AND MAINTENANCE:

CAUTION: Ensure fixture temperature is cool enough to touch. DO NOT clean or perform maintenance while fixture is energized.

- Clean lens and fixture with non-abrasive cleaning solution.
- Do not open fixture to clean LED. Do not touch the LED.
- Do not spray liquid directly on to LED, LED driver or wiring.

Please read carefully before installing fixture.

Save these instructions, as you may need them at a later date.

Please follow the following steps for installation. →



BRIGHT33™
CONTEMPORARY LED OVAL CEILING LIGHT
32" FIXTURE

INSTALLATION INSTRUCTIONS

1-800-316-2532

www.bright33.com

WARNINGS:



Turn power off before installation, inspection, or removal. Use all necessary precautions while performing this procedure.



Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.



Properly ground electrical enclosure. IT IS IMPERATIVE THAT THE OUTLET BOX BE PROPERLY GROUNDED.



DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, OTHERWISE SAFETY WILL BE COMPROMISED.




This Integrated LED Fixture™ has no lamp/bulb to replace.

GENERAL: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, contact and obtain the services of a qualified electrician. Use UL or IEC approved wire only for input/output connections.

Remove fixture and mounting components from the box, and make sure that no parts are missing, by referencing the illustration in the illustration instructions.

DIMMING: This product is compatible with most common residential type dimmers. Dimming performance will depend upon dimmer, dimmer settings (dimmers with adjustments to brightness range), wiring method, and number of LED modules. For best results, set dimmer position at maximum before adjusting to a lower light level.

Figure 1

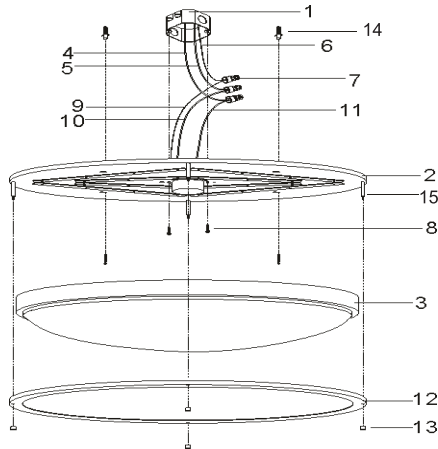

1. OUTLET BOX (NOT INCLUDED)
2. FIXTURE BASE
3. LENS COVER
4. WHITE SUPPLY WIRE
5. BLACK SUPPLY WIRE
6. SUPPLY GROUND WIRE
7. WIRE NUTS
8. FIXTURE SCREW
9. WHITE FIXTURE WIRE
10. BLACK FIXTURE WIRE
11. FIXTURE GROUND WIRE
12. DECORATIVE RING
13. DECORATIVE NUTS
14. CEILING ANCHOR
15. FIXTURE BASE SCREWS

5-YEAR LIMITED WARRANTY

LIMITED WARRANTY: Bright33™ Light Fixtures are warranted to be free and clear of defects in materials and workmanship for a period of five years from the date of purchase based on three hours of average usage per day for seven days a week. This warranty covers defects in manufacturing discovered while using the product as recommended by the manufacturer and does not apply to failures caused by acts of God or as a result of any abuse, misuse, abnormal use, or use in violation of any applicable standard, code, or instructions for use in installations.

If a Light Fixture fails due to a defect covered by this warranty, Stream33 Products LLC will either replace the product. To make a warranty claim, retain the failed products and send with proof of purchase, register receipt, your name and address to the following address within thirty (30) days of the failure

Bright33 is a subsidiary of
Stream33 Products LLC
350 Courtney Road
Sebring, Ohio 44672 USA



Form: AG
Version: 201605-AG1

© 2016 Stream33 Products LLC. All rights reserved.

- 1 SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
- 2 Remove contents from box. Ensure that no parts are missing. Reference the illustration included with this instruction manual.
- 3 Remove DECORATIVE RING(12) and LENS COVER(3) from FIXTURE BASE(2) by unscrewing the DECORATIVE NUTS(13) from FIXTURE BASE SCREWS(15).
- 4 Place the FIXTURE BASE(2) over the OUTLET BOX(1). Align the narrow end of the keyhole mounting slots from the FIXTURE BASE(2) with holes of the OUTLET BOX(1). Then, mark the location of the narrow end of each keyhole slot in the FIXTURE BASE(2) on the ceiling.
- 5 After removing the FIXTURE BASE(2) from the ceiling, drill 1/4" holes at each of the marked keyhole locations, from STEP 3. Into each hole, carefully insert an included CEILING ANCHOR(14).
- 6 Thread FIXTURE SCREWS(8) into each CEILING ANCHOR(14) location.
Be sure to only insert each of the FIXTURE SCREWS(8) half-way.
- 7 Pull the supply wires (4 & 5) and house ground wire (6) out from the outlet box (1). Locate BLACK AND WHITE SUPPLY WIRES(4&5) and the SUPPLY GROUND WIRE(6), and remove them from the OUTLET BOX(1).
- 8 Make the following wire connections (Fig.1), using the provided WIRE NUTS(7):
WHITE (-) SUPPLY WIRE (4) TO WHITE FIXTURE WIRE (9)
BLACK (+) SUPPLY WIRE (5) TO BLACK FIXTURE WIRE (10)
SUPPLY GROUND WIRE (6) TO FIXTURE GROUND WIRE (11)
If necessary, wrap all wire connections in electrical tape to ensure a secure connection.
- 9 Carefully tuck all wiring back into the OUTLET BOX(1).
- 10 Place the FIXTURE BASE(2) over OUTLET BOX(1) and feed the FIXTURE SCREWS(8) through keyhole slots.
- 11 Rotate the FIXTURE BASE(2) clockwise until the FIXTURE SCREWS(8) slide into the narrow end of the keyhole slots. Rotate until secure. Then, fasten FIXTURE SCREWS(8) tightly.
- 12 Place LENS COVER(3) into FIXTURE BASE(13) trough. Then, mount the DECORATIVE RING(12) over the FIXTURE BASE SCREWS(15). Secure both using the four included DECORATIVE NUTS(13).
- 13 Restore power at fuse box/circuit breaker. Check operation of Integrated LED Fixture™.
- 14 Installation complete.