



## CSR Synergy Bluetooth 18.2.0

HF – Hands-Free

API Description

November 2011



**Cambridge Silicon Radio Limited**

Churchill House  
Cambridge Business Park  
Cowley Road  
Cambridge CB4 0WZ  
United Kingdom

Registered in England and Wales 3665875

Tel: +44 (0)1223 692000

Fax: +44 (0)1223 692001

[www.csr.com](http://www.csr.com)



# Contents

<b>1</b>	<b>Introduction.....</b>	<b>6</b>
1.1	Introduction and Scope .....	6
1.2	Assumptions.....	6
<b>2</b>	<b>Description.....</b>	<b>7</b>
2.1	Introduction.....	7
2.2	Reference Model .....	7
2.3	Sequence Overview .....	8
<b>3</b>	<b>Interface Description.....</b>	<b>9</b>
3.1	Activation.....	9
3.2	Connection Establishment.....	9
3.2.1	Accept Connection from Hands-Free Gateway.....	9
3.2.2	Establishing a Connection to a Hands-Free Gateway .....	10
3.2.3	Accepting a Connection from a Headset Audio Gateway .....	11
3.2.4	Connection Establishment to a Headset Audio Gateway.....	11
3.2.5	Service Level Connection Completion.....	12
3.2.6	Using the Transparent AT feature in Connection Establishment.....	12
3.3	Call Handling .....	14
3.3.1	Incoming Call.....	14
3.3.2	Incoming Audio .....	14
3.3.3	Outgoing Audio .....	15
3.3.4	Outgoing Call Set-Up .....	15
3.3.5	AT-Command Handling.....	16
3.4	Connection Release.....	17
3.4.1	Connection Release.....	18
3.4.2	Peer Side Connection Release.....	18
3.4.3	Link Loss .....	19
3.5	Deactivation.....	20
3.6	Wide-Band Speech .....	20
<b>4</b>	<b>Hands-Free Primitives.....</b>	<b>21</b>
4.1	List of All Primitives .....	21
4.2	CSR_BT_HF_ACTIVATE .....	23
4.3	CSR_BT_HF_DEACTIVATE .....	26
4.4	CSR_BT_HF_CONFIG_LOW_POWER.....	27
4.5	CSR_BT_HF_CONFIG_AUDIO.....	29
4.6	CSR_BT_HF_SERVICE_CONNECT .....	30
4.7	CSR_BT_HF_CANCEL_CONNECT .....	32
4.8	CSR_BT_HF_DISCONNECT .....	33
4.9	CSR_BT_HF_AUDIO_CONNECT .....	34
4.10	CSR_BT_HF_AUDIO_ACCEPT_CONNECT .....	37
4.11	CSR_BT_HF_AUDIO_DISCONNECT .....	39
4.12	CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND .....	40
4.13	CSR_BT_HF_GET_ALL_STATUS_INDICATORS .....	41
4.14	CSR_BT_HF_GET_CURRENT_OPERATOR_SELECTION.....	42
4.15	CSR_BT_HF_GET_SUBSCRIBER_NUMBER_INFORMATION .....	43
4.16	CSR_BT_HF_GET_CURRENT_CALL_LIST.....	44
4.17	CSR_BT_HF_SET_EXTENDED_AG_ERROR_RESULT_CODE .....	45
4.18	CSR_BT_HF_SET_CALL_NOTIFICATION_INDICATION .....	46
4.19	CSR_BT_HF_SET_CALL_WAITING_NOTIFICATION .....	47
4.20	CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND .....	48

4.21 CSR_BT_HF_SET_STATUS_INDICATOR_UPDATE .....	49
4.22 CSR_BT_HF_SET_ECHO_AND_NOISE.....	50
4.23 CSR_BT_HF_SET_VOICE_RECOGNITION.....	51
4.24 CSR_BT_HF_BT_INPUT .....	52
4.25 CSR_BT_HF_GENERATE_DTMF.....	53
4.26 CSR_BT_HF_SPEAKER_GAIN_STATUS.....	54
4.27 CSR_BT_HF_MIC_GAIN_STATUS.....	55
4.28 CSR_BT_HF_DIAL .....	56
4.29 CSR_BT_HF_CALL_ANSWER .....	57
4.30 CSR_BT_HF_CALL_END .....	58
4.31 CSR_BT_HF_CALL_HANDLING.....	59
4.32 CSR_BT_HF_AT_CMD.....	61
4.33 CSR_BT_HF_SECURITY_IN / OUT .....	63
4.34 CSR_BT_HF_CALL_RINGING.....	65
4.35 CSR_BT_HF_C2C_SF.....	66
4.36 CSR_BT_HF_SET_C2C_AUDIO_CODEC .....	68
4.37 CSR_BT_HF_GET_C2C_ADPCM_LOCAL_SUPPORTED.....	69
4.38 CSR_BT_HF_SET_C2C_SAMPLE_RATE.....	70
4.39 CSR_BT_HF_C2C_PWR.....	71
4.40 CSR_BT_HF_C2C_BATT .....	72
4.41 CSR_BT_HF_C2C_SMS.....	73
4.42 CSR_BT_HF_C2C_TXT.....	74
4.43 CSR_BT_HF_INBAND_RING_SETTING_CHANGED.....	75
4.44 CSR_BT_HF_DEREGISTER_TIME .....	76
4.45 CSR_BT_HF_INDICATION_ACTIVATION.....	77
4.46 CSR_BT_HF_UPDATE_SUPPORTED_CODEC.....	78
<b>5 Document References.....</b>	<b>79</b>

## List of Figures

Figure 1: Reference model .....	7
Figure 2: Sequence overview .....	8
Figure 3: Accept connection from Hands-free Gateway .....	10
Figure 4: Locally initiated connection establishment sequence .....	10
Figure 5: Accepting a connection from a Headset Audio Gateway .....	11
Figure 6: Connection to a Headset Audio Gateway .....	11
Figure 7: Example of establishing a Service Level Connection .....	12
Figure 8: Example of establishing a Service Level Connection in Transparent AT mode .....	13
Figure 9: Incoming call received .....	14
Figure 10: Incoming audio with dynamic PCM mapping.....	15
Figure 11: Outgoing audio initiation .....	15
Figure 12: Outgoing call .....	16
Figure 13: Connection release sequence.....	18
Figure 14: Peer side connection release sequence .....	19
Figure 15: Abnormal connection release sequence due to link loss.....	19

## List of Tables

Table 1: Outgoing call setup dial AT-commands .....	15
---	----

Table 2: HF/HS upstream interpreted AT-commands .....	17
Table 3: HF/HS manager downstream specific AT- commands .....	17
Table 4: List of all primitives .....	22
Table 5: CSR_BT_HF_ACTIVATE Primitives .....	23
Table 6: CSR_BT_HF_DEACTIVATE Primitives .....	26
Table 7: CSR_BT_HF_CONFIG_LOW_POWER Primitives .....	27
Table 8: CSR_BT_HF_CONFIG_AUDIO Primitives .....	29
Table 9: CSR_BT_HF_SERVICE_CONNECT Primitives .....	30
Table 10: CSR_BT_HF_CANCEL_CONNECT Primitives .....	32
Table 11: CSR_BT_HF_DISCONNECT Primitives .....	33
Table 12: CSR_BT_HF_AUDIO_CONNECT Primitives .....	34
Table 13: CSR_BT_HF_AUDIO_ACCEPT_CONNECT Primitives .....	37
Table 14: CSR_BT_HF_AUDIO_DISCONNECT Primitives .....	39
Table 15: CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND Primitives .....	40
Table 16: CSR_BT_HF_GET_ALL_STATUS_INDICATORS Primitives .....	41
Table 17: CSR_BT_HF_GET_CURRENT_OPERATOR_SELECTION Primitives .....	42
Table 18: CSR_BT_HF_GET_SUBSCRIBER_NUMBER_INFORMATION Primitives .....	43
Table 19: CSR_BT_HF_GET_CURRENT_CALL_LIST Primitives .....	44
Table 20: CSR_BT_HF_SET_EXTENDED_AG_ERROR_RESULT_CODE Primitives .....	45
Table 21: CSR_BT_HF_SET_CALL_NOTIFICATION_INDICATION Primitives .....	46
Table 22: CSR_BT_HF_SET_CALL_WAITING_NOTIFICATION Primitives .....	47
Table 23: CSR_BT_HF_STATUS_INDICATOR_UPDATE Primitives .....	48
Table 24: CSR_BT_HF_SET_STATUS_INDICATOR_UPDATE Primitives .....	49
Table 25: CSR_BT_HF_SET_ECHO_AND_NOISE Primitives .....	50
Table 26: CSR_BT_HF_SET_VOICE_RECOGNITION Primitives .....	51
Table 27: CSR_BT_HF_BT_INPUT Primitives .....	52
Table 28: CSR_BT_HF_GENERATE_DTMF Primitives .....	53
Table 29: CSR_BT_HF_SPEAKER_GAIN_STATUS Primitives .....	54
Table 30: CSR_BT_HF_MIC_GAIN_STATUS Primitives .....	55
Table 31: CSR_BT_HF_DIAL Primitives .....	56
Table 32: CSR_BT_HF_CALL_ANSWER Primitives .....	57
Table 33: CSR_BT_HF_CALL_END Primitives .....	58
Table 34: CSR_BT_HF_CALL_HANDLING Primitives .....	59
Table 35: CSR_BT_HF_AT_CMD Primitives .....	61
Table 36: CSR_BT_HF_SECURITY_IN and CSR_BT_HF_SECURITY_OUT Primitives .....	63
Table 37: CSR_BT_HF_CALL_RINGING Primitives .....	65
Table 38: The HFG_C2C_SF primitives .....	66
Table 39: CSR_BT_HF_SET_C2C_AUDIO_CODEC Primitives .....	68
Table 40: CSR_BT_HF_GET_C2C_ADPCM_LOCAL_SUPPORTED Primitives .....	69
Table 41: CSR_BT_HF_SET_C2C_SAMPLE_RATE Primitives .....	70
Table 42: CSR_BT_HF_C2C_PWR Primitives .....	71
Table 43: CSR_BT_HF_C2C_BATT Primitives .....	72
Table 44: CSR_BT_HF_C2C_SMS Primitives .....	73
Table 45: CSR_BT_HF_C2C_TXT Primitive .....	74
Table 46: CSR_BT_HF_INBAND_RING_SETTINGS_CHANGED Primitive .....	75
Table 47: CSR_BT_HF_DEREGISTER_TIME Primitive .....	76
Table 48: CSR_BT_HF_ACTIVATION_INDICATION Primitive .....	77

Table 49: CSR_BT_HF_UPDATE_SUPPORTED_CODEEC Primitive .....	78
---	----

# 1 Introduction

## 1.1 Introduction and Scope

This document describes the message interface provided by the hands-free side of the Hands-Free Profile, henceforward called HF. This implementation also supports the headset side of the Headset Profile, henceforward called the HS. The HF requirements and functionality are specified in [HF], and the requirements and functionality for the HS are specified in [HS].

## 1.2 Assumptions

The following assumptions and preconditions are made in the following:

- There is a secure and reliable transport between the profile part, i.e. the HF/HS profile and the application layer

Knowledge of the Headset profile, HF profile and Hands-Free Profile Application Guideline [CCAP] is assumed since part of the functionality is application layer specific and must be implemented in the application layer.

## 2 Description

### 2.1 Introduction


The HF/HS manager supplies the interface for applications that should provide the functionality and conform to the hands-free side of the Hands-Free Profile and the Headset side of the Headset Profile. The HF is implemented as specified in the Hands-Free Profile [HF] with the addition of the requirements as specified in the Bluetooth® Hands-Free profile Application Guidelines [CCAP]. The HS is implemented as specified in [HS].

The HS/HF layer provides functionality for:

- Establishing and maintaining a service level connection between the HF profile layer and a peer device. The peer device must conform to the Hands-Free Gateway (HFG) side as defined in [HF]
- Establishing a connection to a peer device that conforms to the Headset Audio Gateway (HAG) as defined [HS]
- Sending and receiving AT-commands and result codes between a HF and a HFG
- Sending and receiving AT-commands and result codes between a HS and a HAG
- The application layer, i.e. automatic and transparent handling of low power modes

### 2.2 Reference Model

The application can interface to the HF/HS profile, the Security Controller, and the Service Discovery module. The Service Discovery module has an interface that can be used for searching for remote devices. The Security Controller has an interface that is used for bonding and pairing.

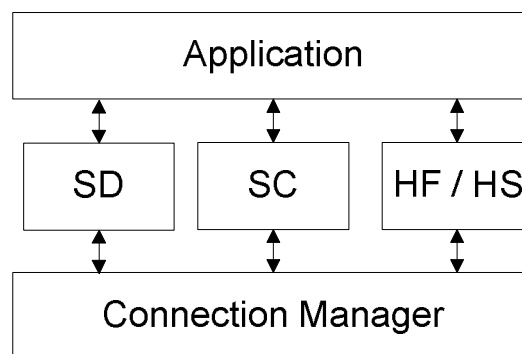


**Figure 1: Reference model**

Thus e.g. bonding, which is normally carried out before any other transaction, must be accomplished before setting up any transactions using the HF/HS interface as described below.

## 2.3 Sequence Overview

Figure 2 outlines the basic functionality of the HF/HS profile.

A normal scenario is that a connection between a HFG or a HAG and the HF/HS profile side is established after pairing of the devices. The connection can be established from both sides. Pairing is described in [SC] and is outside the scope of this document.

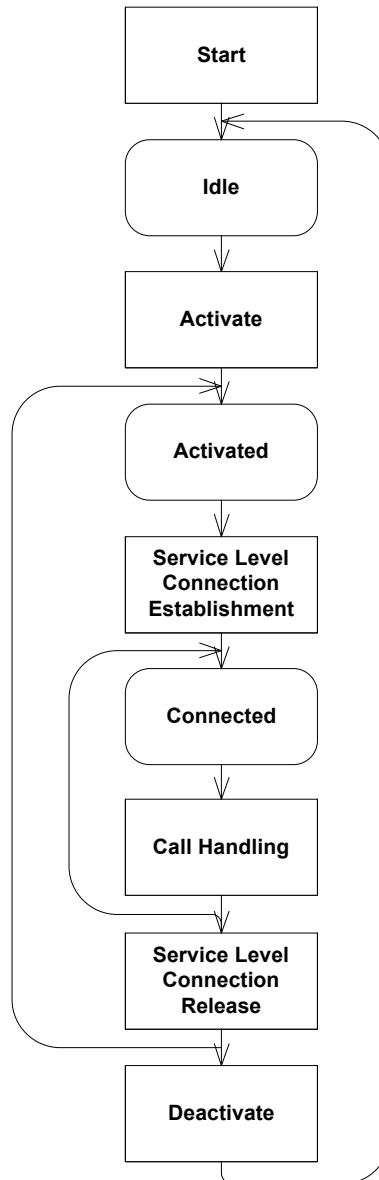

**Figure 2: Sequence overview**

Upon completion of the service level connection to a HFG a call can be initiated. Call handling includes AT-command exchange and setting up a full duplex audio channel between the two devices. Once a call is terminated the service level connection may be maintained for another call setup or may be released. If connection is made to a HAG, call handling is limited to answering a call and requesting audio.



## 3 Interface Description

### 3.1 Activation

Before the profile can be used, the application must send the CSR\_BT\_HF\_ACTIVATE\_REQ message to register which supported features the HF part is supporting and indicate if the HS part should support remote audio control. The `csr_bt_hf_prim.h` file holds some defines that can be added together to describe the capabilities of the HF profile.

During activation, it is possible for the application to specify whether the HS profile shall be supported or not by the HF/HS manager, and whether only HF connections and functionality or both HF and HS shall be available in the device.

When the profile has been activated the CSR\_BT\_HF\_ACTIVATE\_CFM message will be sent to the application.

### 3.2 Connection Establishment

Once the profile layer has been activated with the CSR\_BT\_HF\_ACTIVATE\_REQ message the HF/HS profile manager is able to accept a connection from a remote device or connect to another device.

Please note that whether or not the Bluetooth device will be discoverable, i.e. can be found by other Bluetooth devices, it must be controlled by the application. For more information, please refer to [CM]. After initialization of CSR Synergy Bluetooth the Bluetooth® device is set up to be discoverable.

The HF/HS manager stays connectable until a remote device has connected or the profile is deactivated by the application layer. The CSR\_BT\_HF\_SERVICE\_CONNECT\_IND is an indication that a connection is established.


Once a connection is established, the HF/HS profile will, transparently for the application layer, make use of low power modes according to the rules described in [CCAP] and [HS]; this implies use of sniff and park mode if supported by the HFG. The interface towards the application is identical whether or not the HFG supports low power modes.

Note: the application is not allowed to send any signals except CSR\_BT\_HF\_DISCONNECT\_REQ before it receives a CSR\_BT\_HF\_SERVICE\_CONNECT\_IND.

#### 3.2.1 Accept Connection from Hands-Free Gateway

If a HFG device connects to the HF/HS profile it will be indicated to the application with a CSR\_BT\_HF\_SERVICE\_CONNECT\_IND signal. Figure 3 shows two of the parameters returned in this signal (all parameters can be found in section 4.4). The result parameter indicates if the connection establishment was a success and the connectionType parameter will indicate which type of connection that has been established. When a HFG is connected the connectionType parameter will be CSR\_BT\_HF\_CONNECTION\_HF, which is defined in `csr_bt_hf_prim.h`. Another important parameter contained in the CSR\_BT\_HF\_SERVICE\_CONNECT\_IND is the connection ID, which shall be kept and used by the application for future communication through that specific connection.

When the application receives the CSR\_BT\_HF\_SERVICE\_CONNECT\_IND message a remote device is connected to the HF/HS profile and the initial service discovery of remote supported features and network has been carried out. These parameters are returned in the CSR\_BT\_HF\_SERVICE\_CONNECT\_IND.

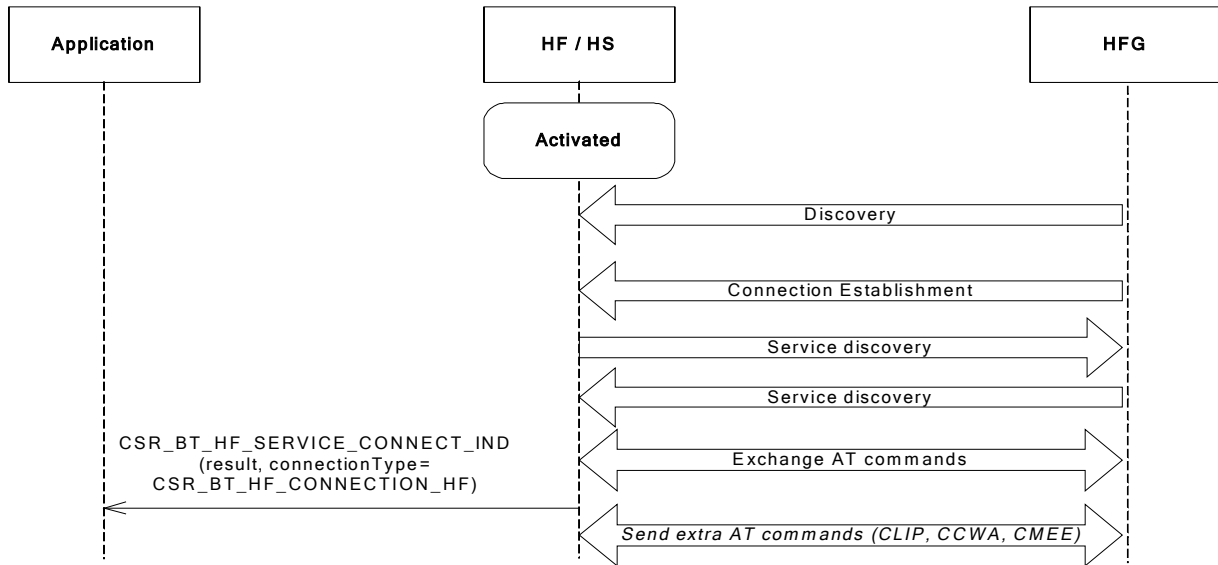


**Figure 3: Accept connection from Hands-free Gateway**

The rest of the AT sequence needed, before a complete service level connection is established, is sent by the profile layer after the CSR\_BT\_HF\_SERVICE\_CONNECT\_IND message has been sent to the application (see section 4.4).

### 3.2.2 Establishing a Connection to a Hands-Free Gateway

In addition to the accept connection presented above, it is also possible to initiate a connection to a remote HAG or HFG device. Sending a CSR\_BT\_HF\_SERVICE\_CONNECT\_REQ from the application will accomplish this. Upon receiving the CSR\_BT\_HF\_SERVICE\_CONNECT\_REQ the profile layer will perform a service discovery search on the device with the Bluetooth address specified in the request. The profile will search for both the HFG and the HAG service on the remote device. If a HFG is found (and no hands-free device is connected) the profile will connect to this service, otherwise it will try and connect to the HAG if this service is available on the remote device. Completion of the connection is indicated with a CSR\_BT\_HF\_SERVICE\_CONNECT\_CFM, the service that has been connected will be indicated.

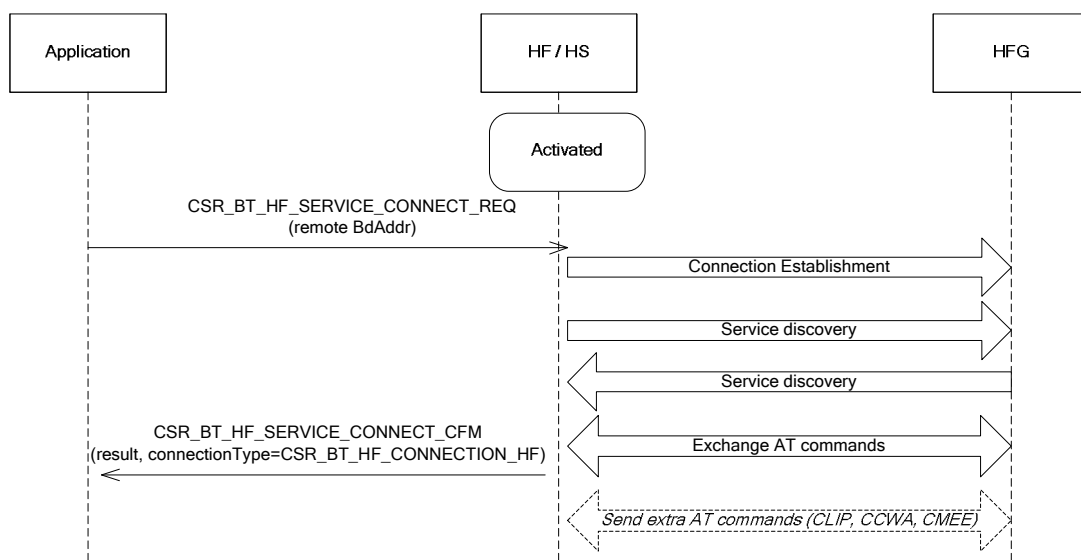

**Figure 4: Locally initiated connection establishment sequence**

Due to a race condition, it is possible that a CSR\_BT\_HF\_SERVICE\_CONNECT\_IND may be received with a Bluetooth® device address that is different from the one issued in the connect request.

### 3.2.3 Accepting a Connection from a Headset Audio Gateway

When a HAG connects to the HF/HS profile it is indicated to the application with a CSR\_BT\_HF\_SERVICE\_CONNECT\_IND. The connectionType parameter will be CSR\_BT\_HF\_CONNECTION\_HS (defined in csr\_bt\_hf\_prim.h), and the result parameter will hold a result code (defined in csr\_bt\_profiles.h).

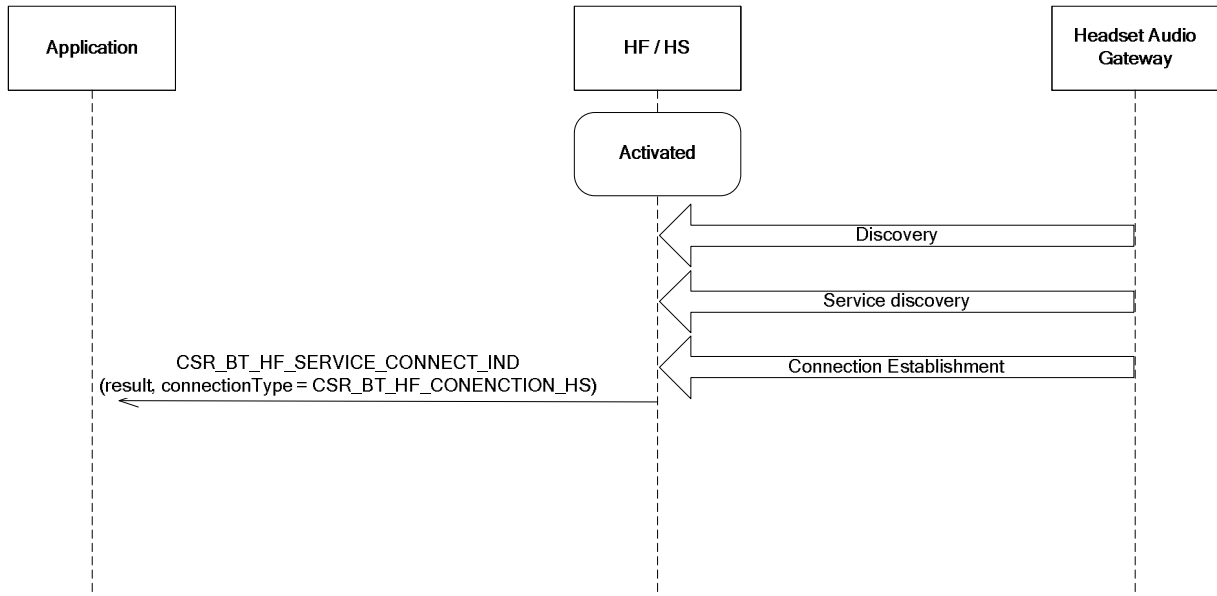


Figure 5: Accepting a connection from a Headset Audio Gateway

### 3.2.4 Connection Establishment to a Headset Audio Gateway

Connecting to a HAG device is done with the CSR\_BT\_HF\_SERVICE\_CONNECT\_REQ message.


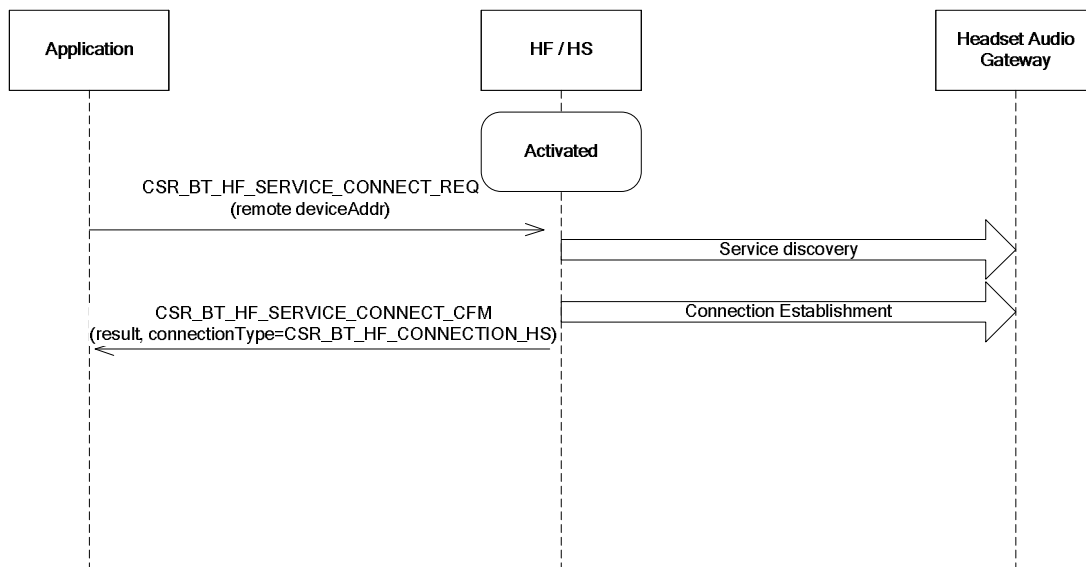


Figure 6: Connection to a Headset Audio Gateway

The remote device address in the connect request must be the address of a device with the Audio Gateway profile. If the remote device also supports HFG the HF/HS profile will connect to that service. In the scenario shown in Figure 6 the remote device only has the HAG service, and in this case the HF/HS profile will return a `CSR_BT_HF_SERVICE_CONNECT_CFM` where the `connectionType` parameter will be `CSR_BT_HF_CONNECTION_HS`.

### 3.2.5 Service Level Connection Completion

The [HF] specifies a series of AT commands that must be sent from the HF profile to the HFG before the Service Level Connection (SLC) has been established. The HF/HS profile sends these AT commands to the HFG and interprets the results. Figure 7 shows an example of establishing a SLC.

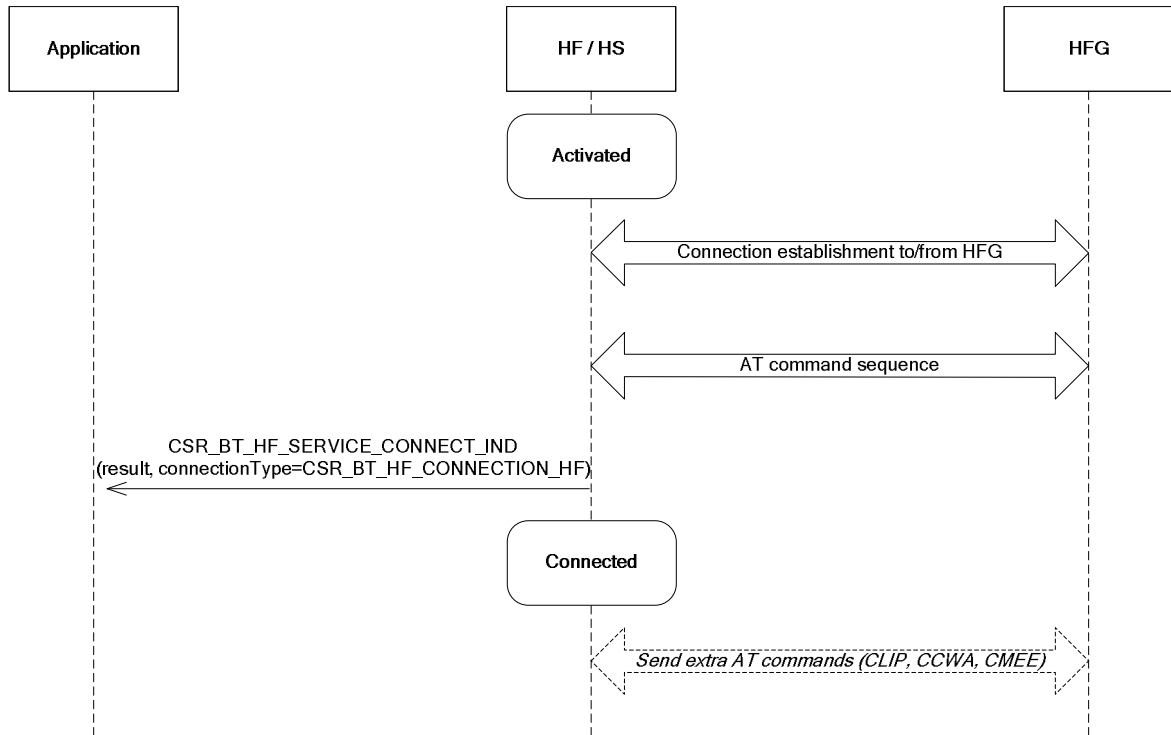

**Figure 7: Example of establishing a Service Level Connection**

During the establishment of SLC the HFG sends a list of supported Status Indicators and the current value of the indicators. The HF profile keeps the data received in these AT commands and delivers this information to the application in the `CSR_BT_HF_SERVICE_CONNECT_IND` (see chapter 4.4 for details).

Besides, if the HF has been activated without disabling automatic CLIP, CCWA and CMEE exchange and both parties claim support for these features, the commands needed to activate these features will be sent automatically to the HFG right after SLC establishment (see chapter 4.2 for details).

### 3.2.6 Using the Transparent AT feature in Connection Establishment

Normally the profile will handle the different AT-command sequences to complete a service level connection. However if the `CSR_BT_HF_AT_MODE_TRANSPARENT_ENABLE` bit is set in the config bitmask in Activation of the HF profile, then the application must perform the AT command exchange needed to establish an SLC.

When the basic serial communication is established, the HF Profile Specification requires that the HF issues a number of AT commands to inform about and request application layer specific information. The application layer must send any AT-commands using the `CSR_BT_HF_AT_CMD_REQ` command. Likewise the application layer will be receiving any responses from the HFG in a `CSR_BT_HF_AT_CMD_IND`. It is the responsibility of the application layer to interpret and validate the commands received. Figure 8 shows an example of how the

Service Level connection is established when the CSR\_BT\_HF\_AT\_MODE\_TRANSPARENT\_ENABLE config bit is set.

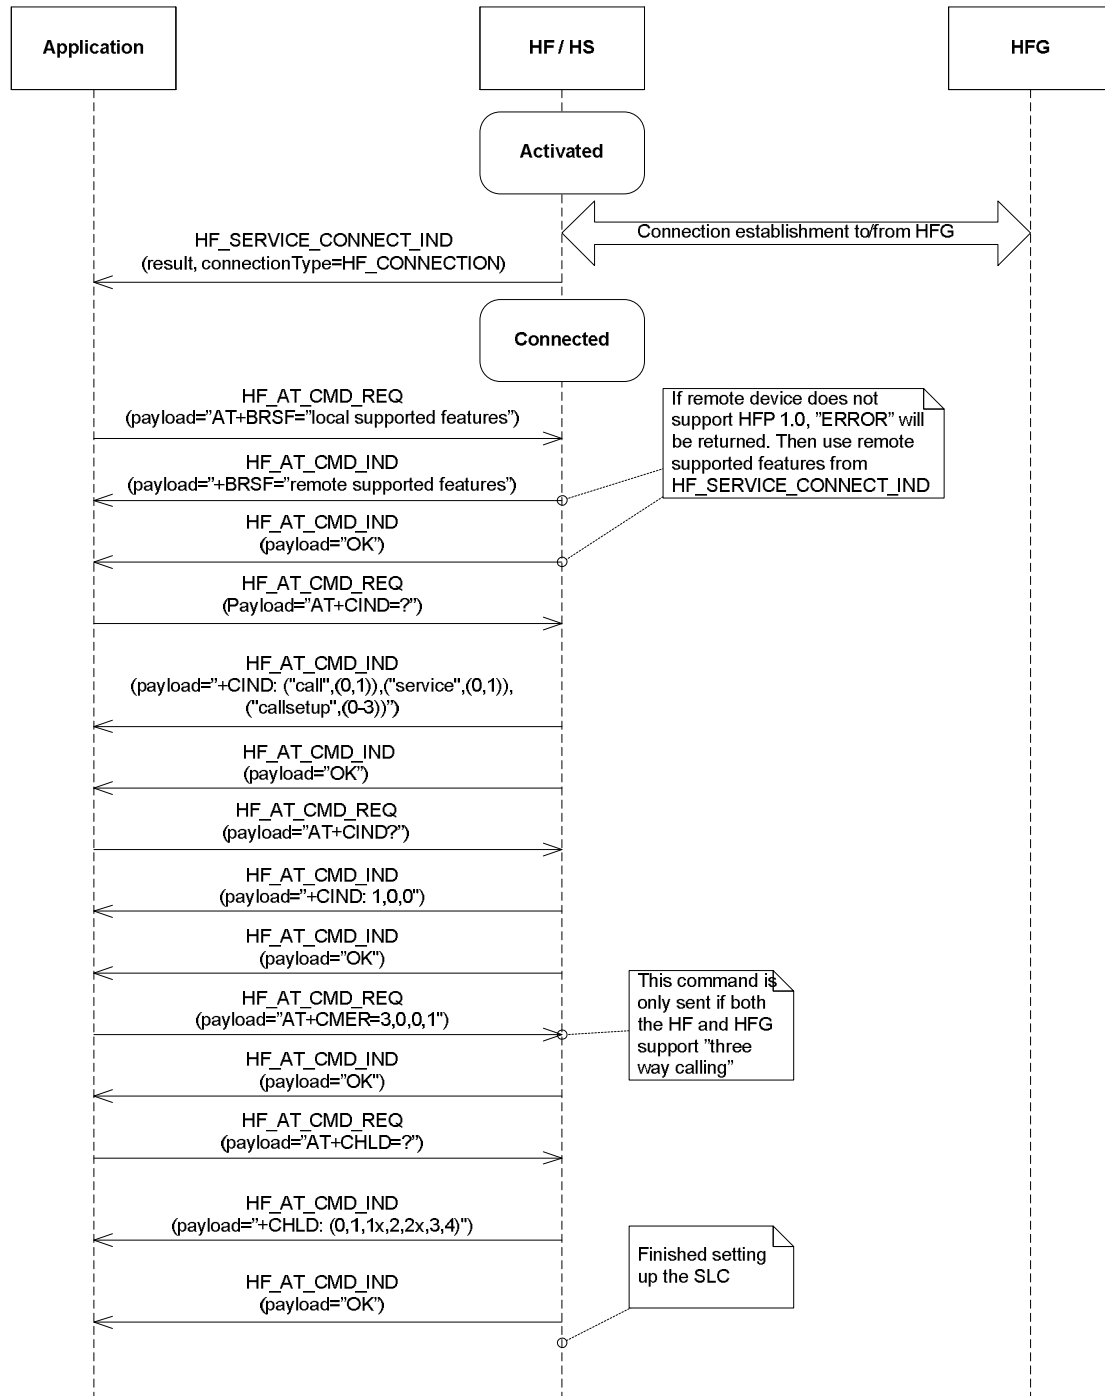


Figure 8: Example of establishing a Service Level Connection in Transparent AT mode

### 3.3 Call Handling

Once a connection is established, the application layer can initiate an outgoing call towards a HFG or HAG and a HFG or HAG can initiate incoming calls towards the HF/HS profile. The HF side of the HF/HS manager offers more advanced call handling features, since the HF profile offers more advanced features than the HS profile.

#### 3.3.1 Incoming Call

When the application is receiving an incoming call, it receives a CSR\_BT\_HF\_RING\_IND. When the application receives this signal it will contain the connectionType parameter, which will indicate if the ring is from a HFG or a HAG. If the connection is from a HAG the application can accept the call with the CSR\_BT\_HF\_ANSWER\_REQ or choose to ignore the ring and thereby reject the call.

If the connection is from a HFG, the application can either accept or reject the call. If the application layer wants to answer the call it sends a CSR\_BT\_HF\_ANSWER\_REQ to the HF manager and the call will be established from the HFG with or without audio. If the application for any reason wants to reject the call, a CSR\_BT\_HF\_REJECT\_REQ is returned to the HF/HS manager. If the call is rejected the service level connection is maintained and the HFG will return a CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND to the HF.

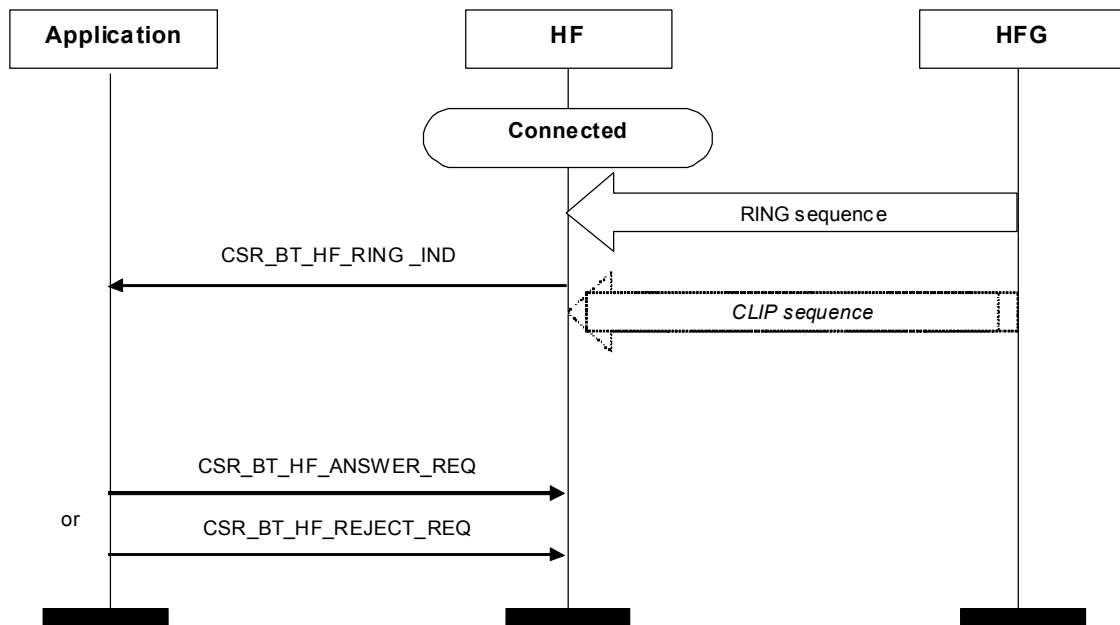


Figure 9: Incoming call received

If the HFG or HAG wants to make use of in-band ringing, audio can be connected before the ring signal is sent to the HF/HS manager. When audio is connected, the application will receive a CSR\_BT\_HF\_AUDIO\_IND command. If no in-band ring is used, audio can be connected upon answer from the application.

The application layer on the HFG side may also answer the call itself. The HFG application layer initiated answer is done by means of the +CIEV command, which will be received in a CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND.

#### 3.3.2 Incoming Audio

Upon reception of an incoming audio request, the HF application is given the possibility to decide whether to accept or reject the audio connection. As a step in the procedure, the application layer must decide whether to accept the connection and if so what audio settings are acceptable and choose a PCM slot to map the audio to.

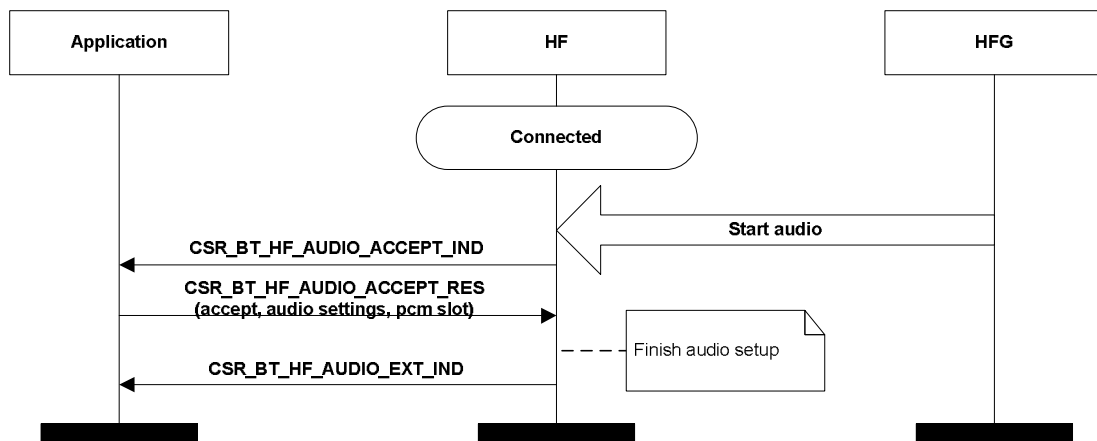


Figure 10: Incoming audio with dynamic PCM mapping

### 3.3.3 Outgoing Audio

The CSR\_BT\_HF\_AUDIO signals will include valid PCM information.

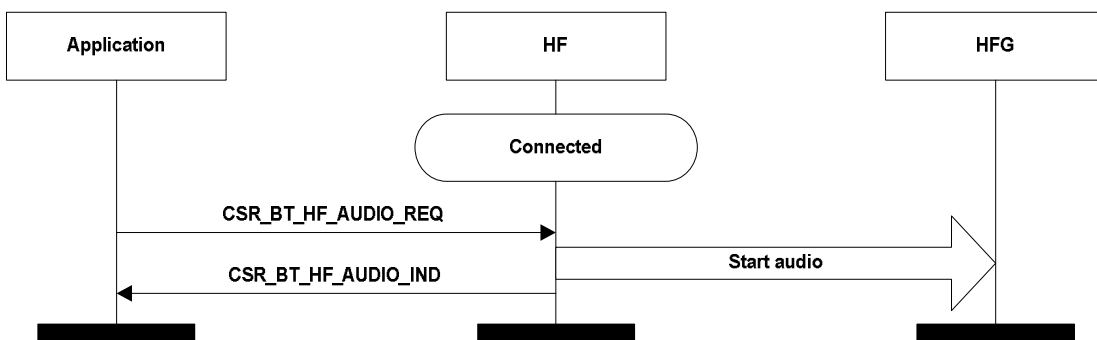


Figure 11: Outgoing audio initiation

### 3.3.4 Outgoing Call Set-Up

The HF can indicate the AG to start an outgoing call in three ways: commanding it to dial a specific number; to dial a number in a specific memory position; or to dial the last dialled number.

An application following the HF profile may start an outgoing call so by issuing the primitives CSR\_BT\_HF\_DIAL\_REQ, with the proper command as parameter as seen in Table 1.

Primitives	AT-command	Response
CSR_BT_HF_DIAL_REQ (CSR_BT_HF_DIAL_NUMBER)	ATDddd..dd	CSR_BT_HF_DIAL_CFM, +CIEV..., +CIEV...
CSR_BT_HF_DIAL_REQ (CSR_BT_HF_DIAL_MEMORY)	ATD>nnn	CSR_BT_HF_DIAL_CFM, +CIEV..., +CIEV...
CSR_BT_HF_DIAL_REQ (CSR_BT_HF_DIAL_REDIAL)	AT+BLDN	CSR_BT_HF_DIAL_CFM, +CIEV..., +CIEV...

Table 1: Outgoing call setup dial AT-commands

This interface will only be active during a hands free connection and not during a headset connection.

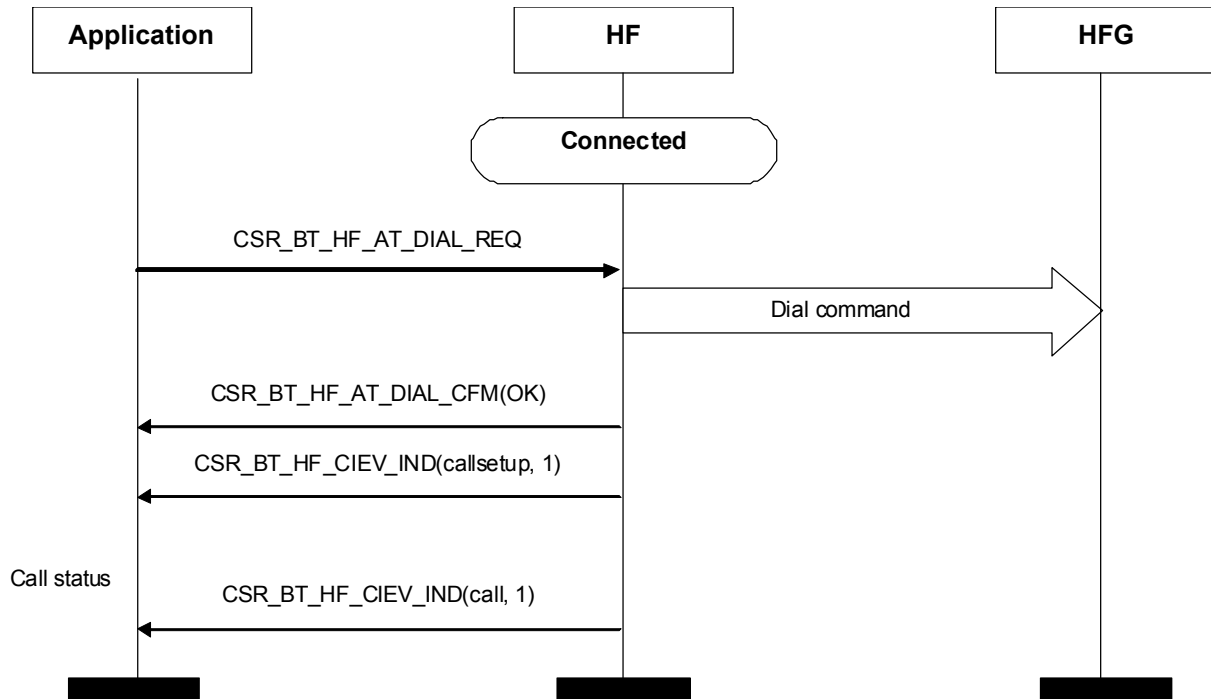


Figure 12: Outgoing call

During the call set-up process the application layer will continuously be updated from the HFG side with the current call status “+CIEV” command to the HF side. These commands will be forwarded to the application in the CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND signal. Further information can be found in [HF].

### 3.3.5 AT-Command Handling

The HF/HS is capable of interpreting the entire set of the AT-commands defined in the hands-free profile. It will parse the commands received and map them into different mail primitives as described in the next chapters. Besides the HF/HS profile allows the application to send and receive any AT command or response by using the CSR\_BT\_HF\_AT\_CMD\_REQ/\_IND primitives.

AT-command	HF signal primitive mapped to	Description
+BTRH	CSR_BT_HF_CALL_HANDLING_IND	Response & hold
+CHLD	NA (handled by the profile)	Hold capabilities information
+CIEV	CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND	Status change indication
+CLCC	CSR_BT_HF_GET_CURRENT_CALL_LIST_IND	Call list indication
+CME ERROR	This will be mapped to the corresponding signal depending on the operation being performed.	Error response from HFG
+CNUM	CSR_BT_HF_GET_SUBSCRIBER_NUMBER_INFORMATION_IND	Subscription number indication
+COPS	CSR_BT_HF_GET_CURRENT_OPERATOR_SELECTION_CFM	Operator name
RING	CSR_BT_HF_CALL_RINGING_IND	Incoming call
+VGM	CSR_BT_HF_MIC_GAIN_IND	Microphone gain



AT-command	HF signal primitive mapped to	Description
+VGS	CSR_BT_HF_SPEAKER_GAIN_IND	Speaker gain
+CLIP	CSR_BT_HF_CALL_NOTIFICATION_IND	CLIP information
+CCWA	CSR_BT_HF_CALL_WAITING_NOTIFICATION_IND	Call waiting
+BVRA	CSR_BT_HF_SET_VOICE_RECOGNITION_IND	Voice recognition
+BINP	CSR_BT_HF_BT_INPUT_CFM	Associate a phone number to a voice tag
+CIND	CSR_BT_HF_GET_ALL_STATUS_INDICATORS_CFM	Get the current status of all indicators supported
+BSIR	CSR_BT_HF_INBAND_RING_SETTING_CHANGED_IND	In-band ringing settings

**Table 2: HF/HS upstream interpreted AT-commands**

The HF/HS manager supports generic AT-command sending using the CSR\_BT\_HF\_AT\_CMD\_REQ. The application layer must compile the AT string and include it in the signal. Besides the CSR\_BT\_HF\_AT\_CMD\_REQ a number of specific commands are supplied in the HF interface; these are:

AT-command	Dedicated AT-command signal
ATA	CSR_BT_HF_CALL_ANSWER_REQ
AT+CHUP	CSR_BT_HF_CALL_END_REQ
AT+VGM	CSR_BT_HF_MIC_GAIN_STATUS_REQ
AT+VGS	CSR_BT_HF_SPEAKER_GAIN_STATUS_REQ
AT+CHLD or AT+BTRH	CSR_BT_HF_CALL_HANDLING_REQ
AT+COPS	CSR_BT_HF_GET_CURRENT_OPERATOR_SELECTION_REQ
ATD	CSR_BT_HF_DIAL_REQ
AT+CMEE	CSR_BT_HF_SET_EXTENDED_AG_ERROR_RESULT_CODE_REQ
AT+CLIP	CSR_BT_HF_SET_CALL_NOTIFICATION_INDICATION_REQ
AT+CCWA	CSR_BT_HF_SET_CALL_WAITING_NOTIFICATION_REQ
AT+NREC	CSR_BT_HF_SET_ECHO_AND_NOISE_REQ
AT+BVRA	CSR_BT_HF_SET_VOICE_RECOGNITION_REQ
AT+BINP	CSR_BT_HF_BT_INPUT_REQ
AT+VTS	CSR_BT_HF_GENERATE_DTMF_REQ
AT+CIND?	CSR_BT_HF_GET_ALL_STATUS_INDICATORS_REQ

**Table 3: HF/HS manager downstream specific AT- commands**

The dedicated signals are converted directly to the corresponding AT-commands and sent to the HFG.

In order to comply with the HF/HS specifications, the HF profile maintains a queue of AT commands to be delivered to the HFG. This is because there must not be more than one AT command pending between the two devices at any given time. This may cause a certain delay in the AT command delivery process.

### 3.4 Connection Release

Connection release for both the HF and HS part of the HF/HS manager is handled in the same way. The application specifies which connection that should be released in the connectionType parameter. When the

application receives a disconnection indication the connectionType parameter indicates which connection that has been released.

### 3.4.1 Connection Release

A service level connection is released by sending a CSR\_BT\_HF\_DISCONNECT\_REQ to the HF/HS manager. A disconnect request is always confirmed with a CSR\_BT\_HF\_DISCONNECT\_CFM, with result codes defined in csr\_bt\_profiles.h.

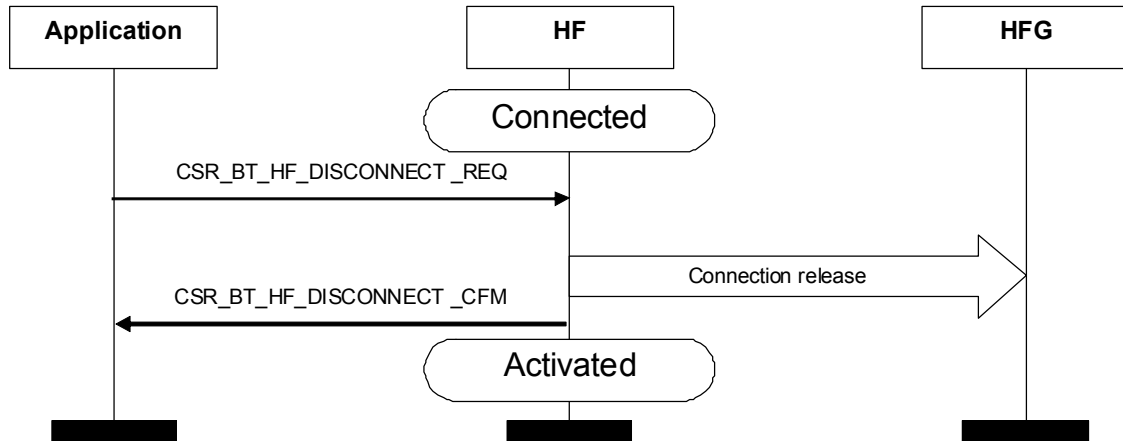


Figure 13: Connection release sequence

The application layer is not allowed to issue any new signals to the HF until the disconnect request is confirmed.


Please note that the disconnect command will release all resources and remove the Bluetooth® link between the HF and HFG or HS and HAG. To establish a new connection and setup a new call the procedures in 3.1, must be applied.

Due to race conditions it is possible that commands are received after the disconnect request has been sent. It is the responsibility of the application layer to handle these commands properly.

Note: The CSR\_BT\_HF\_DISCONNECT\_REQ signal will disconnect the RFCOMM link. According to the [HS] the Headset side should not disconnect the RFCOMM link. The HS should only use CSR\_BT\_HF\_AUDIO\_REQ(ON/OFF) to switch the audio on or off, and let the HAG disconnect the link if necessary. If all (e)SCO parameters are set to 0 in the audio on request, the best possible audio connection will be made. This is highly recommended. Only in extreme cases should tweaking the parameters from case to case manually be necessary. For changing the default settings globally, edit csr\_bt\_usr\_config.h. For other recommendations regarding minimum parameter requirements, see [HF]

### 3.4.2 Peer Side Connection Release

The HFG or HAG at the remote end may at any time release the connection. A peer side connection release is indicated in the CSR\_BT\_HF\_DISCONNECT\_IND signal.

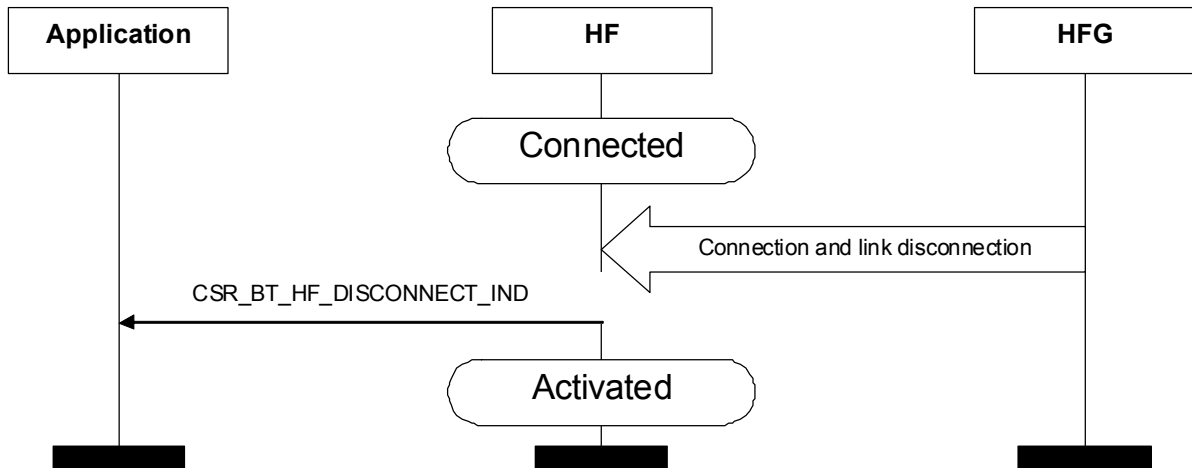


**Figure 14: Peer side connection release sequence**

When the CSR\_BT\_HF\_DISCONNECT\_IND is received no further signaling is possible until a new service level connection is established (see 3.1). After receiving the disconnect indication, the application layer cannot assume that the HFG part has maintained the state and history of the call.

### 3.4.3 Link Loss

It is possible that the physical link is closed due to an abnormal situation, e.g. radio interference or the devices getting out of coverage from each other. The HF manager will handle a link loss by informing the application layer via a CSR\_BT\_HF\_DISCONNECT\_IND with a result code indicating an abnormal situation. After receiving the disconnect indication, the application layer cannot assume that the HFG part has maintained the state and history of the call.

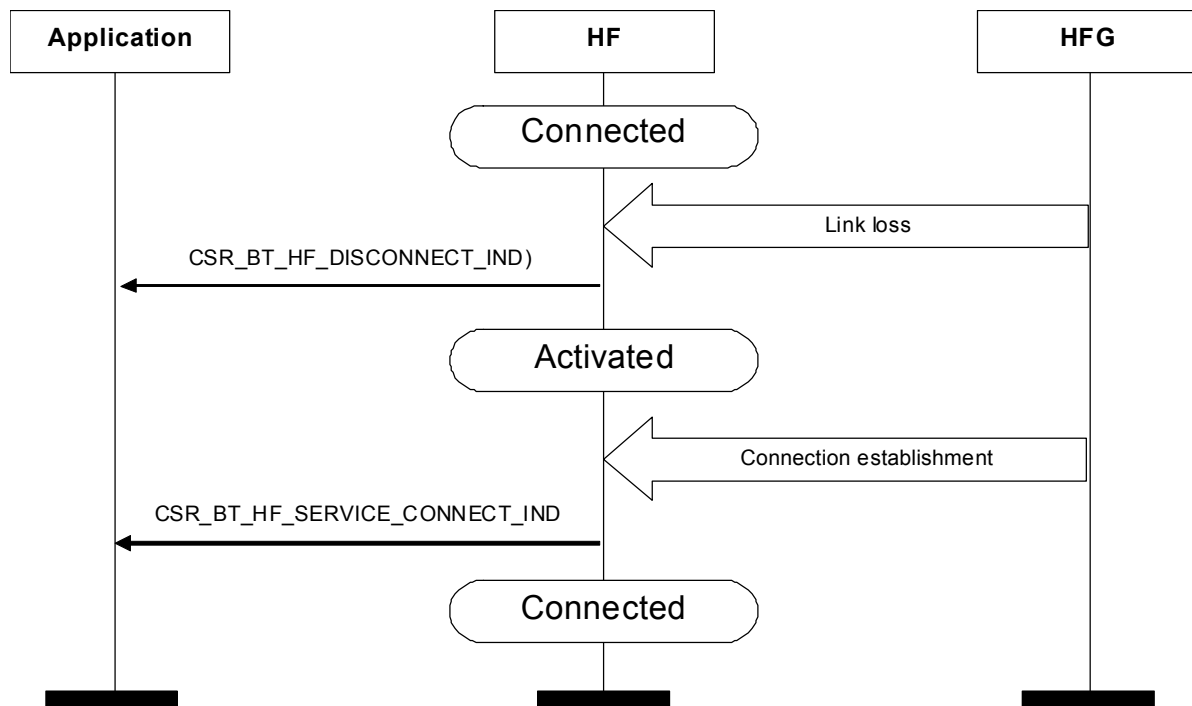

**Figure 15: Abnormal connection release sequence due to link loss**

The HF/HS profile manager automatically enters the activated state when disconnected, and will be ready to accept a reconnect from the HFG or the application may try and reconnect. If the abnormal disconnect occurs

during a call, it is the responsibility of the applications layer to reconnect audio and then the service level connection is established.

### 3.5 Deactivation

The application may deactivate the HF/HS manager at any time after the profile has been activated. This is done by sending the CSR\_BT\_HF\_DEACTIVATE\_REQ signal to the profile manager. This will make the HF/HS unregister both the HF and HS service record and cancel accepting connection on these server channels. After the profile has been deactivated, it will send the CSR\_BT\_HF\_DEACTIVATE\_CFM signal to the application. After this the application will not be able to send or receive any messages from the HF/HS profile until it has been activated again using the CSR\_BT\_HF\_ACTIVATE\_REQ..

### 3.6 Wide-Band Speech

The Wide-Band Speech (WBS) feature is an enhancement introduced in the HFP Bluetooth specification, version 1.6. To have access to this feature using the CSR Synergy BT implementation, the following conditions shall be met:

- The CSR chip used shall have DSP support
- The CSR Synergy BT code shall be compiled with the option "CSR\_DSPM\_ENABLE=1"
- The flag "CSR\_BT\_HF\_SUPPORT\_CODEC\_NEGOTIATION" shall be included in the "supportedFeatures" field of the HF\_ACTIVATE\_REQ primitive.

Only if the remote device supports WBS too, will it be possible to establish a WBS audio connection between the two devices. The WBS feature mandates support for two audio formats: CVSD and mSBC, where the first is a narrow band format and the second is a wide band format.

At times, it may be necessary to disable the use of one of the formats, for example because there are not enough resources available. The CSR\_BT\_HF\_UPDATE\_SUPPORTED\_CODEC\_REQ primitive allows to enable or disable individual codec formats at run-time.

## 4 Hands-Free Primitives

This section gives an overview of the primitives and parameters in the interface. Detailed information can be found in the corresponding `csr_bt_hf_prim.h` file.

To enable a fast integration process, library functions, which build each of the signals that are to be sent to the hands-free, are available. These are described in the library file `csr_bt_hf_lib.h`, which also defines the valid information elements that are to be included when sending a signal..

### 4.1 List of All Primitives

Primitives	Reference
CSR_BT_HF_ACTIVATE	See section 4.2
CSR_BT_HF_DEACTIVATE	See section 4.3
CSR_BT_HF_CONFIG_LOW_POWER	See section 4.4
CSR_BT_HF_CONFIG_AUDIO	See section 4.5
CSR_BT_HF_SERVICE_CONNECT	See section 4.6
CSR_BT_HF_CANCEL_CONNECT	See section 4.7
CSR_BT_HF_DISCONNECT_IND	See section 4.8
CSR_BT_HF_AUDIO_CONNECT	See section 4.9
CSR_BT_HF_AUDIO_ACCEPT_CONNECT	See section 4.10
CSR_BT_HF_AUDIO_DISCONNECT	See section 4.11
CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND	See section 4.12
CSR_BT_HF_GET_ALL_STATUS_INDICATORS	See section 4.13
CSR_BT_HF_GET_CURRENT_OPERATOR_SELECTION	See section 4.14
CSR_BT_HF_GET_SUBSCRIBER_NUMBER_INFORMATION	See section 4.15
CSR_BT_HF_GET_CURRENT_CALL_LIST	See section 4.16
CSR_BT_HF_SET_EXTENDED_AG_ERROR_RESULT_CODE	See section 4.17
CSR_BT_HF_SET_CALL_NOTIFICATION_INDICATION	See section 4.18
CSR_BT_HF_SET_CALL_WAITING_NOTIFICATION	See section 4.19
CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND	See section 4.20
CSR_BT_HF_SET_STATUS_INDICATOR_UPDATE	See section 4.21
CSR_BT_HF_SET_ECHO_AND_NOISE	See section 4.22
CSR_BT_HF_SET_VOICE_RECOGNITION	See section 4.23
CSR_BT_HF_BT_INPUT	See section 4.24
CSR_BT_HF_GENERATE_DTMF	See section 4.25
CSR_BT_HF_SPEAKER_GAIN_STATUS	See section 4.26
CSR_BT_HF_MIC_GAIN_STATUS	See section 4.27
CSR_BT_HF_DIAL	See section 4.28
CSR_BT_HF_CALL_ANSWER	See section 4.29
CSR_BT_HF_CALL_END	See section 4.30
CSR_BT_HF_CALL_HANDLING	See section 4.31
CSR_BT_HF_AT_CMD	See section 4.32
CSR_BT_HF_SECURITY_IN	See section 4.33
CSR_BT_HF_SECURITY_OUT	See section 4.33

Primitives	Reference
CSR_BT_HF_CALL_RINGING	See section 4.34
CSR_BT_HF_C2C_SF	See section 4.35
CSR_BT_HF_SET_C2C_AUDIO_CODEC	See section 4.36
CSR_BT_HF_GET_C2C_ADPCM_LOCAL_SUPPORTED	See section 4.37
CSR_BT_HF_SET_C2C_SAMPLE_RATE	See section 4.38
CSR_BT_HF_C2C_PWR	See section 4.39
CSR_BT_HF_C2C_BATT	See section 4.40
CSR_BT_HF_C2C_SMS	See section 4.41
CSR_BT_HF_C2C_TXT	See section 4.42
CSR_BT_HF_INBAND_RING_SETTING_CHANGED	See section 4.43
CSR_BT_HF_DEREGISTER_TIME	See section 4.44
CSR_BT_HF_INDICATION_ACTIVATION	See section 4.45
CSR_BT_HF_UPDATE_SUPPORTED_CODEC_REQ	See section 4.46
CSR_BT_HF_UPDATE_SUPPORTED_CODEC_CFM	See section 4.46

**Table 4: List of all primitives**

## 4.2 CSR\_BT\_HF\_ACTIVATE

Parameters										
Primitives	type	phandle	maxHFConnections	maxHSConnections	maxSimultaneousConnections	supportedFeatures	hfConfig	atResponseTime	resultCode	resultSupplier
CSR_BT_HF_ACTIVATE_REQ	✓	✓	✓	✓	✓	✓	✓	✓		
CSR_BT_HF_ACTIVATE_CFM	✓								✓	✓

Table 5: CSR\_BT\_HF\_ACTIVATE Primitives

### Description

This signal is used for registering the service record with the supported features available in the HF profile. The CSR\_BT\_HF\_ACTIVATE\_REQ message can be issued at any time by the application. However some restrictions apply:

- If the activation request is issued while ongoing connections exist, the number of allowed simultaneous connections in the signal must be equal or greater than the actual number of ongoing connections.
- The maximum number of HF connection must be equal or greater than the number of existing HF connections
- The maximum number of HS connections must be equal or greater than the number of actual HS connections.

### Parameters

type	The signal identity, CSR_BT_HF_ACTIVATE_REQ/ _CFM.
phandle	The identity of the calling process. It is possible to initiate the procedure by any higher layer process as the response is returned to phandle.
maxHFConnections	The maximum number of HFP simultaneous connections that shall be allowed. If set to 0, this means that the HF profile will not be active.
maxHSConnections	The maximum number of HSP simultaneous connections that shall be allowed. If set to 0, this means that the HS profile will not be active.
maxSimultaneousConnections	The maximum number of simultaneous connections allowed
supportedFeatures	This parameter is a bitmap representing the supported features in the Hands Free profile. The values are defined in the csr_bt_hf.h file.
hfConfig	<p>This parameter is used for enabling or disabling some features in the HS/HF manager. This shall be a value consisting of a bitmask enabling and/or disabling different features:</p> <ul style="list-style-type: none"> <li>• CSR_BT_HF_CNF_ENABLE_LOW_POWER_STATUS = 0x00000001 Send CSR_BT_HF_STATUS_LOW_POWER_IND when changes in LP-mode happen</li> <li>• CSR_BT_HF_CNF_DISABLE_LOW_POWER = 0x00000002 If set to '0' the HF device will request low power mode instead of waiting</li> </ul>

for the remote device to do it. This is default behavior.

- CSR\_BT\_HF\_CNF\_DISABLE\_REMOTE\_VOLUME\_CONTROL = 0x00000004  
If set to "1", the HSP will not support remote volume control. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_CMER\_UNDER\_SLC\_ESTABLISHMENT = 0x00000008  
If "1" then the HF will not ask for indicators from the HFG. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_CHLD\_UNDER\_SLC\_ESTABLISHMENT = 0x00000010  
If "1" the HF will not ask for CHLD capabilities from the HFG. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_CLIP\_UNDER\_SLC\_ESTABLISHMENT = 0x00000020  
If "1" the calling line identification feature will not be automatically enabled. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_CCWA\_UNDER\_SLC\_ESTABLISHMENT = 0x00000040  
If "1" the call waiting feature will not be automatically enabled. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_CMEE\_UNDER\_SLC\_ESTABLISHMENT = 0x00000080  
If "1" the extended error feature will not be automatically enabled. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_OUT\_SDP\_SEARCH = 0x00000100  
If '1' the HF will only perform remote server channel search during SDP search for outgoing SLC: neither remote version number, nor service name, nor network nor supported features will be asked for. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_OUT\_SERVICE\_NAME\_SEARCH = 0x00000200  
If '1' and CSR\_BT\_HF\_DISABLE\_OUT\_SDP\_SEARCH is '0', the remote service name will not be asked for during SDP for outgoing SLC. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_OUT\_NETWORK\_SEARCH = 0x00000400  
If '1' and CSR\_BT\_HF\_DISABLE\_OUT\_SDP\_SEARCH is '0', the remote "network" attribute will not be asked for during SDP for outgoing SLC. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_OUT\_SUP\_FEATURES\_SEARCH = 0x00000800  
If '1' and CSR\_BT\_HF\_DISABLE\_OUT\_SDP\_SEARCH is '0', the remote supported features attribute will not be asked for during SDP for outgoing SLC. Default is '0'
- CSR\_BT\_HF\_CNF\_DISABLE\_INC\_SDP\_SEARCH = 0x00001000  
If '1' no service search operation will be performed at all for incoming SLC. Default is '0'. If '0', at least the remote version number is retrieved.
- CSR\_BT\_HF\_CNF\_DISABLE\_INC\_SERVICE\_NAME\_SEARCH = 0x00002000  
If '1' and CSR\_BT\_HF\_DISABLE\_INC\_SDP\_SEARCH is '0' the remote service name attribute will not be retrieved during incoming SLC establishment.



- CSR\_BT\_HF\_CNF\_DISABLE\_INC\_NETWORK\_SEARCH=0x00004000  
If '1' and CSR\_BT\_HF\_DISABLE\_INC\_SDP\_SEARCH is '0' the remote network attribute will not be retrieved during incoming SLC establishment.
- CSR\_BT\_HF\_CNF\_DISABLE\_INC\_SUP\_FEATURES\_SEARCH=0x00008000  
If '1' and CSR\_BT\_HF\_DISABLE\_INC\_SDP\_SEARCH is '0' the remote supported features attribute will not be retrieved during incoming SLC establishment.
- CSR\_BT\_HF\_AT\_MODE\_TRANSPARENT=0x00010000  
If '1' then the HF profile will not handle any recieved AT commands, instead they will be passed directly to the application.

atResponseTime	Time in seconds that the device shall wait for response on an AT command sent. Default value is 2; minimum value is 2 (i.e. values lower than 2 in the activate signal will be ignored and the default value will be used).
resultCode	The result code of the operation. Possible values depend on the value of resultSupplier. If e.g. the resultSupplier == CSR_BT_SUPPLIER_CM then the possible result codes can be found in csr_bt_cm_prim.h. All values which are currently not specified in the respective prim.h file are regarded as reserved and the application should consider them as errors.
resultSupplier	This parameter specifies the supplier of the result given in resultCode. Possible values can be found in csr_bt_result.h

#### Library Function

```
void CsrBtHfActivateReqSend( CsrSchedQid thePhandle,
                             CsrUInt8    maxNumberOfHfConnections,
                             CsrUInt8    maxNumberOfHsConnections,
                             CsrUInt8    maxSimultaneousConnections,
                             CsrUInt32    theSupportedFeatures,
                             CsrUInt32    theHsConfig)
```

Phandle	The same as in the table above.
maxNumberOfHfConnections	The same as "maxHFConnections" above
maxNumberOfHsConnections	The same as "maxHSCConnections" above
maxSimultaneousConnections	The same as "maxSimultaneousConnections" above
supportedFeatures	The same as in the table above.
theHsConfig	The same as "hsConfig" in the table above.

#### Example

Here is an example of how to send the signal using the library function.

```
CsrBtHfActivateReqSend(APP_TASK, 2, 0, 2,
CSR_BT_HF_SUPPORT_CLI_PRESENTATION_CAPABILITY |
CSR_BT_HF_SUPPORT_CALL_WAITING_THREE_WAY_CALLING|CSR_BT_HF_SUPPORT_REMOTE_VOLUME
_CONTROL| CSR_BT_HF_SUPPORT_CODEC_NEGOTIATION,
CSR_BT_HF_CNF_DISABLE_AUTOMATIC_CCWA_ACTIVATION, 0).
```

### 4.3 CSR\_BT\_HF\_DEACTIVATE

Parameters			
Primitives	type	resultCode	resultSupplier
CSR_BT_HF_DEACTIVATE_REQ	✓		
CSR_BT_HF_DEACTIVATE_CFM	✓	✓	✓

**Table 6: CSR\_BT\_HF\_DEACTIVATE Primitives**

#### Description

This signal will deactivate the HS/HF profile.

#### Parameters

Type	The signal identity, CSR_BT_HF_DEACTIVATE_REQ/CFM.
resultCode	The result code of the operation. Possible values depend on the value of resultSupplier. If e.g. the resultSupplier == CSR_BT_SUPPLIER_CM then the possible result codes can be found in csr_bt_cm_prim.h. All values which are currently not specified in the respective prim.h file are regarded as reserved and the application should consider them as errors.
resultSupplier	This parameter specifies the supplier of the result given in resultCode. Possible values can be found in csr_bt_result.h

#### Library Function

```
void CsrBtHfDeactivateReqSend(void)
```

#### Example

Here is an example of how to send the signal using the library function.

```
CsrBtHfDeactivateReqSend()
```

## 4.4 CSR\_BT\_HF\_CONFIG\_LOW\_POWER

Parameters									
Primitives	type	connectionId	mask	currentMode	oldMode	wantedMode	remoteReq	resultCode	resultSupplier
CSR_BT_HF_CONFIG_LOW_POWER_REQ	✓	✓	✓						
CSR_BT_HF_STATUS_LOW_POWER_IND	✓	✓		✓	✓	✓	✓	✓	✓
CSR_BT_HF_CONFIG_LOW_POWER_CFM	✓								

Table 7: CSR\_BT\_HF\_CONFIG\_LOW\_POWER Primitives

### Description

The CSR\_BT\_HF\_CONFIG\_LOW\_POWER\_REQ signal will determine how the profile shall handle the low power mode. When the profile manager handles the request it will issue the CSR\_BT\_HF\_CONFIG\_LOW\_POWER\_CFM message to the application. Whenever there is a change in the low power status of the connection, the application will receive the CSR\_BT\_HF\_STATUS\_LOW\_POWER\_IND.

### Parameters

Type	The signal identity, CSR_BT_HF_CONFIG_LOW_POWER_REQ /IND/CFM.
connectionId	Connection identifier
Mask	Low power configuration bitmask. Can take the following values or a combination of them: <ul style="list-style-type: none"> <li>CSR_BT_HF_PWR_DISCONNECT_ON_NO_LP, 0x00000001. If enabled, disconnect the link if LP mode could not be entered</li> <li>CSR_BT_HF_PWR_DISABLE_PARK_ACP, 0x00000002. If enabled, do not accept park mode from the remote device</li> <li>CSR_BT_HF_PWR_DISABLE_SNIFF_REQ, 0x00000004. If set, disable local sniff and sniff sub-rate requests</li> <li>CSR_BT_HF_PWR_DISABLE_SNIFF_ACP, 0x00000008. If set, disable remote sniff and sniff sub-rate request</li> </ul>
currentMode	current low power mode
OldMode	old low power mode
wantedMode	wanted low power mode
remoteReq	If TRUE, the mode change was requested by remote peer
resultCode	The result code of the operation. Possible values depend on the value of resultSupplier. If e.g. the resultSupplier == CSR_BT_SUPPLIER_CM then the possible result codes can be found in csr_bt_cm_prim.h. All values which are currently not specified in the respective prim.h file are regarded as reserved and the application should consider them as errors.
resultSupplier	This parameter specifies the supplier of the result given in resultCode. Possible

values can be found in `csr_bt_result.h`

### Library Function

```
void CsrBtHfConfigLowPowerReqSend (CsrBtHfConnectionId  connectionId,  
                                   HfConfigLowPowerMask_t  mask)
```

### Example

Here is an example of how to send the signal using the library function.

```
CsrBtHfConfigLowPowerReqSend (conId, CSR_BT_HF_PWR_DISCONNECT_ON_NO_LP);
```

## 4.5 CSR\_BT\_HF\_CONFIG\_AUDIO

Parameters					
Primitives	type	connectionId	audioType	audioSettingLen	audioSetting
CSR_BT_HF_CONFIG_AUDIO_REQ	✓	✓	✓	✓	✓
CSR_BT_HF_CONFIG_AUDIO_CFM	✓				

**Table 8: CSR\_BT\_HF\_CONFIG\_AUDIO Primitives**

### Description

The HF profile ensures compliance with the Bluetooth specification regarding audio connections. However, the application has the possibility to establish or accept incoming audio connections that use other settings than the ones specified in the Bluetooth spec by means of the primitive CSR\_BT\_HF\_CONFIG\_AUDIO\_REQ. In the case of outgoing connections, if the connection establishment fails, the HF profile will fall back to use the settings specified in Ref. [HF].

### Parameters

type	The signal identity, CSR_BT_HF_CONFIG_AUDIO_REQ/CFM.
connectionId	The identification number of the connection.
AudioType	The type of data contained in the pointer below. The different types available are defined in csr_bt_hf_prim.h.
audioSettingLen	Length of the data in the pointer below in bytes, in a 16-bit value
*audioSetting	Pointer to audio configuration data of the type specified in the field audioType above.

### Library Function

```
void CsrBtHfAudioConfigReqSend(CsrBtHfConnectionId connectionId,
                               CsrBtHfAudioType audioType,
                               CsrUInt8 *audioSetting,
                               CsrUInt16 audioSettingLength)
```

connectionId	The same as in the table above.
audioType	The same as in the table above.
*audioSetting	The same as in the table above.
audioSettingLen	The same as in the table above.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfAudioConfigReqSend(connectionId,
CSR_BT_HF_AUDIO_PREFERED_SAMPLE_RATE_SETUP,
    *sampleRateConfig,
sizeof(CsrBtHfAudioPreferedSampleRateType));
```

If the Wide-Band speech feature is supported, the code needs to be compiled with the "CSR\_USE\_DSPM" flag enabled. In that case, it is possible to configure how to route the audio and to configure the audio routing itself before the audio is connected. Some audio configuration parameters can also be set AFTER the audio connection has been established. For instance, the audio gain. This is only relevant if the chip uses DSP. For more information about this please refer to the chip documentation.

## 4.6 CSR\_BT\_HF\_SERVICE\_CONNECT

Parameters														
Primitives	type	deviceAddr	supportedFeatures	network	serviceName	connectionType	connectionId	indicatorSupported	indicatorValue	chldString	remoteversion	resultCode	resultSupplier	btConnId
CSR_BT_HF_SERVICE_CONNECT_REQ	✓	✓				✓								
CSR_BT_HF_SERVICE_CONNECT_IND	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
CSR_BT_HF_SERVICE_CONNECT_CFM	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Table 9: CSR\_BT\_HF\_SERVICE\_CONNECT Primitives

### Description

Setup and establish a connection between a HFG and a HF or a HS and a HAG specified by the Bluetooth® address. Please note that before a complete service level connection is established a number of AT-commands must be exchanged. An example of a string given in the "chldString" field is:

(0,1,1x,2,2x,3,4)

This means that the HFG that has been connected supports the following commands [GSM02.30]:

- 0 Releases all held calls or sets User Determined User Busy (UDUB) for a waiting call.
- 1 Releases all active calls (if any exist) and accepts the other (held or waiting) call.
- 1x Releases a specific active call X.
- 2 Places all active calls (if any exist) on hold and accepts the other (held or waiting) call.
- 2x Places all active calls on hold except call X with which communication shall be supported.
- 3 Adds a held call to the conversation.
- 4 Connects the two calls and disconnects the subscriber from both calls

The application sends a CSR\_BT\_HF\_SERVICE\_CONNECT\_REQ in order to start the establishment of a connection. When it is established, the profile sends the CSR\_BT\_HF\_SERVICE\_CONNECT\_CFM back to the application. In the case of an incoming connection, the profile manager will send a CSR\_BT\_HF\_SERVICE\_CONNECT\_IND instead.

### Parameters

type The signal identity, CSR\_BT\_HF\_SERVICE\_CONNECT\_REQ/IND/CFM.

deviceAddr The Bluetooth® device address to which a connection must be established. The deviceAddr is of type BD\_ADDR\_T which again is defined as:

```
typedef struct
{
```

```

CsrUInt24 lap; /* Lower Address Part 00..23 */
CsrUInt8 uap; /* upper Address Part 24..31 */
CsrUInt16 nap; /* Non-significant 32..47 */
} BD_ADDR_T;

```

supportedFeatures	If a connection was established to a HFG this parameter will describe the supported features of the remote device represented as a bitmap. The values are defined in the <code>csr_bt_hf.h</code> file ( <code>CSR_BT_HFG_SUPPORT_XXX</code> ). If a HAG is connected this parameter will be 0.
Network	If a connection is established to a HFG this parameter will indicate the supported network of the HFG. This parameter, which is of type <code>CsrUInt8</code> , will be 0 if connected to a HAG.
serviceName	Text defined by the HF service record. The contents will be a string that is 0-terminated.
connectionType	Indicates which type of connection that has been established. A connection to a HFG will be indicated with the value <code>CSR_BT_HF_CONNECTION_HF</code> and a connection to a HAG will be indicated with a <code>CSR_BT_HF_CONNECTION_HS</code> . If the connect request fails an error code will be returned in the result parameter, and the connectionType will be <code>CSR_BT_HF_CONNECTION_UNKNOWN</code> . The value <code>CSR_BT_HF_CONNECTION_UNKNOWN</code> shall be used if both HF and HS connections are allowed to be established. The values used in the connectionType parameter is defined in <code>csr_bt_hf_prim.h</code>
connectionId	Unique value used for identifying the connection. The type is <code>CsrBtHfConnectionId</code> . The value <code>0xFFFFFFFF</code> ( <code>CSR_BT_HF_CONNECTION_ALL</code> ) is used for denoting "ALL_CONNECTIONS"
indicatorSupported	Pointer to a 0-terminated comma separated string with the indicators supported by the HFG and their range.
indicatorValue	Pointer to a 0-terminated comma separated string with the current status of the indicators supported by the HFG.
ChldString	String that describes the call hold and multiparty services available in the HFG as shown above.
remoteVersion	remote device's supported version of the spec
resultCode	The result code of the operation. Possible values depend on the value of <code>resultSupplier</code> . If e.g. the <code>resultSupplier == CSR_BT_SUPPLIER_CM</code> then the possible result codes can be found in <code>csr_bt_cm_prim.h</code> . All values which are currently not specified in the respective <code>prim.h</code> file are regarded as reserved and the application should consider them as errors.
resultSupplier	This parameter specifies the supplier of the result given in <code>resultCode</code> . Possible values can be found in <code>csr_bt_result.h</code>
btConnId	Identifier used when moving the connection to another AMP controller, i.e. when calling the <code>CsrBtAmpmMoveReqSend</code> -function.

### Library Function

```

void CsrBtHfServiceConnectReqSend(deviceAddr_t deviceAddr, ConType_t
                                connectionType)

```

deviceAddr      The same as in the table above.

connectionType      The same as in the table above

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfServiceConnectReqSend(deviceAddr, connectionType)
```

## 4.7 CSR\_BT\_HF\_CANCEL\_CONNECT

Parameters		
Primitives	type	deviceAddr
CSR_BT_HF_CANCEL_CONNECT_REQ	✓	✓

**Table 10: CSR\_BT\_HF\_CANCEL\_CONNECT Primitives**

### Description

The CSR\_BT\_HF\_CANCEL\_CONNECT\_REQ signal is used for stopping a connection operation previously started from the application, before it has actually been established. When the connection establishment is successfully stopped, the profile will return the CSR\_BT\_HF\_SERVICE\_CONNECT\_IND signal with a proper result code. Please note that in some situations where the CSR\_BT\_HF\_CANCEL\_CONNECT\_REQ and the CSR\_BT\_HF\_SERVICE\_CONNECT\_IND signals cross, the connection is actually established, and the application will have to disconnect it.

### Parameters

type	The signal identity, CSR_BT_HF_CANCEL_CONNECT_REQ.
deviceAddr	The Bluetooth® device address to which a connection must be established. The deviceAddr is of type BD_ADDR_T which again is defined as: <pre>typedef struct {     CsrUInt24 lap; /* Lower Address Part 00..23 */     CsrUInt8 uap; /* upper Address Part 24..31 */     CsrUInt16 nap; /* Non-significant 32..47 */ } BD_ADDR_T;</pre>

### Library Function

```
void CsrBtHfCancelConnectReqSend(deviceAddr_t deviceAddr)
```

deviceAddr      The same as in the table above.

### Example

Here is an example of how to send the request signal using the library function. This example requests disconnection of all existing connections.

```
CsrBtHfCancelConnectReqSend(devAddress);
```



## 4.8 CSR\_BT\_HF\_DISCONNECT

Parameters				
Primitives	type	connectionId	reasonCode	reasonSupplier
CSR_BT_HF_DISCONNECT_REQ	✓	✓		
CSR_BT_HF_DISCONNECT_IND	✓	✓	✓	✓
CSR_BT_HF_DISCONNECT_CFM	✓	✓	✓	✓

**Table 11: CSR\_BT\_HF\_DISCONNECT Primitives**

### Description

The CSR\_BT\_HF\_DISCONNECT\_REQ signal is used for disconnecting a HF or HS connection, which is indicated in the connectionId parameter. When the connection is closed the profile will return the CSR\_BT\_HF\_DISCONNECT\_CFM signal with a result code and a connection Id parameter. If the connection is disconnected without the application asking for it, the message used will be the CSR\_BT\_HF\_DISCONNECT\_IND instead.

### Parameters

type	The signal identity, CSR_BT_HF_DISCONNECT_REQ/IND/CFM.
connectionId	Unique identifier for the connection that was disconnected. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF (CSR_BT_HF_CONNECTION_ALL) is used for denoting "ALL_CONNECTIONS"
reasonCode	The reason code of the operation. Possible values depend on the value of reasonSupplier. If e.g. the reasonSupplier == CSR_BT_SUPPLIER_CM then the possible reason codes can be found in csr_bt_cm_prim.h. All values which are currently not specified in the respective prim.h files are regarded as reserved and the application should consider them as errors.
reasonSupplier	This parameter specifies the supplier of the reason given in reasonCode. Possible values can be found in csr_bt_result.h

### Library Function

```
void CsrBtHfDisconnectReqSend(CsrBtHfConnectionId connectionId)
```

connectionId      The same as in the table above.

### Example

Here is an example of how to send the request signal using the library function. This example requests disconnection of all existing connections.

```
CsrBtHfDisconnectReqSend(0xFFFFFFFF)
```

## 4.9 CSR\_BT\_HF\_AUDIO\_CONNECT

Parameters \ Primitives	type	connectionId	audioParametersLength	*audioParameters	scoHandle	pcmSlot	pcmRealloc	linkType	txInterval	weSco	rxPacketLength	txPacketLength	airMode	codecUsed	sampleRate	resultCode	resultSupplier
CSR_BT_HF_AUDIO_CONNECT_REQ	✓	✓	✓	✓		✓	✓										
CSR_BT_HF_AUDIO_CONNECT_IND	✓	✓			✓	✓		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
CSR_BT_HF_AUDIO_CONNECT_CFM	✓	✓			✓	✓		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Table 12: CSR\_BT\_HF\_AUDIO\_CONNECT Primitives

### Description

Request for audio establishment. The audio must be controlled by the application due to the interface for external audio, e.g. GSM.

If the application has issued the CSR\_BT\_HF\_CONFIG\_AUDIO\_REQ primitive to set the audio quality prior to the CSR\_BT\_HF\_AUDIO\_CONNECT\_REQ message, then the settings given in the configuration message will be used by the HF. Thus, the application decides the audio quality. Please note that a higher quality requires more bandwidth and more power consumption from the battery. If the CSR\_BT\_HF\_CONFIG\_AUDIO\_REQ has not been issued, it is up to the profile to decide the best quality available at the given time.

### Parameters

Type	The signal identity, CSR_BT_HF_AUDIO_CONNECT_REQ/IND.
connectionId	The connection to request audio on.
audioParametersLength	Number of entries in the audioParameters pointer. NB: This parameter is currently reserved for future usage and should hence be set as 0.
*audioParameters	Specifies which SCO/eSCO parameters to use in the connection establishment. If NULL the default Audio parameters from csr_bt_usr_config.h or CSR_BT_HF_CONFIG_AUDIO_REQ are used.  This pointer is of the type CsrBtHfgAudioLinkParameterListConfig and is described below.  NB: This parameter is currently reserved for future usage and should hence be set as NULL.
scoHandle	SCO handle if routed internally
pcmSlot	Pcm slot to use
pcmRealloc	If TRUE, then reallocate automatically if pcm-slot chosen is in use
LinkType	Link type used in the audio connection (0x00 = SCO, 0x02 = eSCO)

txInterval	Transmission interval in baseband slots (Set to zero for SCO links)
WeSco	Retransmission window in baseband slots (Set to 0 for SCO links)
rxPacketLength	RX packet length in bytes for eSCO connection (Set to 0 for SCO links)
txPacketLength	TX packet length in bytes for eSCO connection (Set to 0 for SCO links)
AirMode	The air mode: 0x00 = my-law; 0x01 = A-law; 0x02 = CVSD; 0x03 = Transparent data
codecUsed	Codec used for the audio connection established
sampleRate	Sample rate used for the audio connection established
resultCode	The result code of the operation. Possible values depend on the value of resultSupplier. If e.g. the resultSupplier == CSR_BT_SUPPLIER_CM then the possible result codes can be found in csr_bt_cm_prim.h. All values which are currently not specified in the respective prim.h file are regarded as reserved and the application should consider them as errors.
resultSupplier	This parameter specifies the supplier of the result given in resultCode. Possible values can be found in csr_bt_result.h

### Library Function

```
void CsrBtHfAudioConnectReqSend(CsrBtHfConnectionId connectionId, CsrUInt8
                                audioParametersLength,
                                CsrBtHfAudioLinkParameterListConfig
                                audioParameters, CsrUInt8 pcmSlot,
                                CsrBool pcmRealloc)
```

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfAudioConnectReqSend(conId, 0, NULL, 0x01, FALSE)
```

### Examples for generic (e)SCO packet bit patterns:

The packet type support for negotiating the audio quality is specified in a 2 octet bit pattern as shown here.

						3EV5	2EV5	3EV3	2EV3	EV5	EV4	EV3	HV3	HV2	HV1
--	--	--	--	--	--	------	------	------	------	-----	-----	-----	-----	-----	-----

Note that the EDR eSCO packets (2EV3, 3EV3, 2EV5 and 3EV5) have their enable bits inverted. The grayed out section are bits reserved for future use and their setting is irrelevant for the application interfacing the hands-free profile manager. In the examples below the reserved bits are set to 1.

#### Enable all:

Should all packets be available for while negotiating the quality setting for the audio link between devices, the HV bits and EV bits should be set. The fact that the EDR eSCO packets have their enable bits inverted means that they should not be set to enable them.

Set HV1 + HV2 + HV3 + EV3 + EV4 + EV5 and not 2EV3 + 3EV3 + 2EV5 + 3EV5

1111110000111111 = 0xFC3F

For setting this bit pattern, the following packet definitions from hci.h should be combined:

```
HCI_ESCO_PKT_HV1 | HCI_ESCO_PKT_HV2 | HCI_ESCO_PKT_HV3 | HCI_ESCO_PKT_EV3 |
HCI_ESCO_PKT_EV4 | HCI_ESCO_PKT_EV5
```

#### Specifying only SCO:

Should only SCO packets be available, the HV and the EDR eSCO bits should be set.

Set HV1 + HV2 + HV3 and 2EV3 + 3EV3 + 2EV5 + 3EV5

111111111111000111 = 0xFFC7

For setting this bit pattern, the following packet definitions from hci.h should be combined:

HCI\_ESCO\_PKT\_HV1 | HCI\_ESCO\_PKT\_HV2 | HCI\_ESCO\_PKT\_HV3 | HCI\_ALL\_MR\_ESCO

#### Specifying only eSCO:

Should only the eSCO packet types be available, the EV bits should be set and the EDR eSCO bits should not.

Set EV3 + EV4 + EV5 and not 2EV3 + 3EV3 + 2EV5 + 3EV5

1111110000111000 = 0xFC38

For setting this bit pattern, the following packet definitions from hci.h should be combined:

HCI\_ESCO\_PKT\_HV1 | HCI\_ESCO\_PKT\_HV2 | HCI\_ESCO\_PKT\_HV3

Description of the type CsrBtHfAudioLinkParameterListConfig;

packetType	Specifies which SCO/eSCO packet types to use
txBandwidth	Specifies the maximum Transmission bandwidth to use
rxBandwidth	Specifies the maximum Receive bandwidth to use
maxLatency	Specifies the maximum Latency to use.
voiceSettings	Specifies the voice coding used in the transmission. Eg. Cvsd or Transparent.
reTxEffort	Specifies the Retransmission setting to use.

## 4.10 CSR\_BT\_HF\_AUDIO\_ACCEPT\_CONNECT

Parameters								
Primitives	type	connectionId	linkType	acceptResponse	*acceptParameters	acceptParametersLength	pcmSlot	pcmReassign
CSR_BT_HF_AUDIO_ACCEPT_CONNECT_IND	✓	✓	✓					
CSR_BT_HF_AUDIO_ACCEPT_CONNECT_RES	✓			✓	✓	✓	✓	✓

Table 13: CSR\_BT\_HF\_AUDIO\_ACCEPT\_CONNECT Primitives

### Description

The CSR\_BT\_HF\_AUDIO\_ACCEPT\_CONNECT\_IND is sent to the application layer during the initiation of a remotely initiated audio connection. The application layer must then send a CSR\_BT\_HF\_AUDIO\_ACCEPT\_CONNECT\_RES to the HF profile in order to decide whether to accept an incoming audio connection, and if so what settings to accept and which PCM port the incoming connection must be mapped to.

Note that the dynamic PCM port selection will only work if PSKEY\_HOSTIO\_MAP\_SCO\_PCM is set to FALSE.

Note also that the contents of the “acceptParameters” may be overruled with default values in the HF profile in case an eSCO/SCO connection exists beforehand, as the settings already used for the existing connection might have an influence on what settings are possible in the new one.

### Parameters

Type	The signal identity, CSR_BT_HF_AUDIO_ACCEPT_CONNECT_IND/RES.
connectionId	The identification number of the connection.
LinkType	Specifies SCO/eSCO
acceptResponse	The HCI response code from profile can be one of the following: HCI_SUCCESS, HCI_ERROR_REJ_BY_REMOTE_NO_RES, HCI_ERROR_REJ_BY_REMOTE_PERS Note: If this is not HCI_SUCCESS then the incoming SCO/eSCO connection will be rejected
acceptParameters	Specifies which SCO/eSCO parameters to accept. If NULL the default ACCEPT SCO parameters from csr_bt_usr_config.h or CSR_BT_HF_CONFIG_AUDIO_REQ are used.  This pointer is of the type CsrBtHfgAudioIncomingAcceptParameters and is described below.
acceptParametersLength	Shall be 1 if acceptParameters != NULL, otherwise 0
pcmSlot	Map this audio connection to the specified PCM slot. Range is 0-4, where 0 means that audio will be routed through CSR Synergy Bluetooth, and 1-4 corresponds to PCM slot 1-4 on the BlueCore chip. If the parameter is set to

CSR\_BT\_PCM\_DONT\_CARE defined in csr\_bt\_profiles.h, the first available PCM slot will be assigned.

pcmRealloc

Automatically assign another pcm-slot if pcmSlot given in this response is already in use. The resulting pcmSlot will be informed in the CSR\_BT\_HF\_AUDIO\_IND.

### Library Function

```
void CsrBtHfAudioAcceptConnectResSend( CsrBtHfConnectionId    connectionId ,
                                       hci_error_t acceptResponse,
                                       CsrBtHfAudioIncomingAcceptParameters
                                       *acceptParameters, CsrUInt8
                                       acceptParametersLength
                                       CsrUInt8 pcmSlot,
                                       CsrBool pcmRealloc)
```

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfAudioAcceptConnectResSend(indPrim->connectionId, HCI_SUCCESS, NULL,
1, TRUE)
```

Description of the type CsrBtHfAudioIncomingAcceptParameters:

packetTypes	Specifies which SCO/eSCO packet types to accept
txBandwidth	Specifies the maximum Transmission bandwidth to accept
rxBandwidth	Specifies the maximum Receive bandwidth to accept
maxLatency	Specifies the maximum Latency to accept
contentFormat	Specifies which SCO/eSCO content format to accept
reTxEffort	Specifies the Retransmission setting to accept.

## 4.11 CSR\_BT\_HF\_AUDIO\_DISCONNECT

Parameters							
Primitives	type	connectionId	scoHandle	resultCode	resultSupplier	reasonCode	reasonSupplier
CSR_BT_HF_AUDIO_DISCONNECT_REQ	✓	✓	✓				
CSR_BT_HF_AUDIO_DISCONNECT_CFM	✓	✓	✓	✓	✓		
CSR_BT_HF_AUDIO_DISCONNECT_IND	✓	✓	✓			✓	✓

**Table 14: CSR\_BT\_HF\_AUDIO\_DISCONNECT Primitives**

### Description

The application can release an audio connection by means of the CSR\_BT\_HF\_AUDIO\_DISCONNECT\_REQ primitive. When the connection is actually released, the profile will send a confirm message back to the application. However, if the audio connection is released by the remote device, or due to a link loss, the profile will send a CSR\_BT\_HF\_DISCONNECT\_IND to the application instead, to inform it about the release of the connection.

### Parameters

Type	The signal identity, CSR_BT_HF_AUDIO_DISCONNECT_REQ /IND/CFM
connectionId	The identification number of the connection.
scoHandle	Sco handle if routed internally.NB: If this parameter is set as 0xFFFF in the CSR_BT_HF_AUDIO_DISCONNECT_REQ the profile will disconnect all established audio connections to the associated connectionId and it will send a CSR_BT_HF_AUDIO_DISCONNECT_CFM for each audio connection that is disconnected. Otherwise, it should be set to the right scoHandle as received in a respective CSR_BT_HF_AUDIO_CONNECT_IND/CFM.
resultCode	The result code of the operation. Possible values depend on the value of resultSupplier. If e.g. the resultSupplier == CSR_BT_SUPPLIER_CM then the possible result codes can be found in csr_bt_cm_prim.h. All values which are currently not specified in the respective prim.h file are regarded as reserved and the application should consider them as errors.
resultSupplier	This parameter specifies the supplier of the result given in resultCode. Possible values can be found in csr_bt_result.h
reasonCode	The reason code of the operation. Possible values depend on the value of reasonSupplier. If e.g. the reasonSupplier == CSR_BT_SUPPLIER_CM then the possible reason codes can be found in csr_bt_cm_prim.h. All values which are currently not specified in the respective prim.h files are regarded as reserved and the application should consider them as errors.
reasonSupplier	This parameter specifies the supplier of the reason given in reasonCode. Possible values can be found in csr_bt_result.h

Here is an example of how to send the request signal using the library function.

```
CsrBtHfAudioDisconnectReqSend(indPrim->connectionId, 0xFFFF)
```

## 4.12 CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND

Parameters					
	type	connectionId	index	value	*name
Primitives					
CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND	✓	✓	✓	✓	✓

**Table 15: CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND Primitives**

### Description

Whenever there is a change in any of the indicators supported by the HFG device, such as incoming call, outgoing call process, battery status, roaming or signal status, etc. the HFG will send the "+CIEV=" response code. The HF profile maps this response code into the signal CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND and sends it to the application.

### Parameters

Type	The signal identity, CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
indicatorSupported	Pointer to a string with the list of indicators supported by the HFG
Index	The index value into the CIND string
value	Value of the status indicator
*name	Name of the status indicator



### 4.13 CSR\_BT\_HF\_GET\_ALL\_STATUS\_INDICATORS

Parameters					
	type	connectionId	indicatorSupported	indicatorValue	cmeeResultCode
Primitives					
CSR_BT_HF_GET_ALL_STATUS_INDICATORS_REQ	✓	✓			
CSR_BT_HF_GET_ALL_STATUS_INDICATORS_CFM	✓	✓	✓	✓	✓

**Table 16: CSR\_BT\_HF\_GET\_ALL\_STATUS\_INDICATORS Primitives**

#### Description

Used for requesting an update on all the status indicators supported by the remote device.

#### Parameters

type	The signal identity, CSR_BT_HF_GET_ALL_STATUS_INDICATOR_REQ/CFM
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
indicatorSupported	Pointer to a string with the list of indicators supported by the HFG
indicatorValue	Pointer to a string with the actual values of the indicators supported by the HFG
cmeeResultCode	The result of the query, e.g. CSR_BT_CME_SUCCESS. The specific values are defined in the csr_bt_hf.h file.

#### Library Function

```
void CsrBtHfGetAllStatusIndicatorsReqSend(CsrBtHfConnectionId connectionId)
```

connectionId      The same as in the table above.

#### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfGetAllStatusIndicatorsReqSend(conId)
```

#### 4.14 CSR\_BT\_HF\_GET\_CURRENT\_OPERATOR\_SELECTION

Parameters							
Primitives	type	connectionId	mode	format	forceResendingFormat	copsString	cmeeResultCode
CSR_BT_HF_GET_CURRENT_OPERATOR_SELECTION_REQ	✓	✓	✓	✓	✓		
CSR_BT_HF_GET_CURRENT_OPERATOR_SELECTION_CFM	✓	✓				✓	✓

**Table 17: CSR\_BT\_HF\_GET\_CURRENT\_OPERATOR\_SELECTION Primitives**

##### Description

This is the request for operator network name. Sending the CSR\_BT\_HF\_COPS\_REQ to the HF will cause the HF to set up the HFG to answer in to “long format alphanumeric” and afterwards it will ask for the network operator name. Setting up the format is only necessary once for each service level connection; however the application can force the profile to set the format by using the field “forceResendingFormat”. The completion of the process will be informed to the application by sending the CSR\_BT\_HF\_COPS\_CFM.

##### Parameters

Type	The signal identity, CSR_BT_HF_COPS_REQ/CFM.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting “CSR_BT_HF_CONNECTION_ALL”
Mode	The mode of the network operation. This parameter should always be set to ‘3’
Format	Specifies the format of the network operator string. This parameter, which is a single character, should always be set to ‘0’
forceResendingFormat	If TRUE, then the format of the answer will be set previous to the inquiry for the operator name.
copsString	Pointer to a 0-terminated string with the network operator name, e.g. “CSR Bluetooth”.
cmeeResultCode	The result of the query, e.g. CSR_BT_AT_COMMAND_OK. The parameter is of the type CsrUInt8 and the specific values are defined in the csr_bt_hf.h file.

##### Library Function

```
void CsrBtHfCopsReqSend( CsrUInt8 mode,
                        CsrUInt8 format,
                        CsrBool forceResendFormat,
                        CsrBtHfConnectionId connectionId)
```

connectionId	The same as in the table above.
Mode	The same as in the table above.
Format	The same as in the table above.
forceResendFormat	The same as in the table above

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfCopsReqSend('3','0',FALSE,0)
```

## 4.15 CSR\_BT\_HF\_GET\_SUBSCRIBER\_NUMBER\_INFORMATION

Parameters				
	type	connectionId	cnumString	cmeResultCode
<b>Primitives</b>				
CSR_BT_HF_GET_SUBSCRIBER_NUMBER_INFORMATION_REQ	✓	✓		
CSR_BT_HF_GET_SUBSCRIBER_NUMBER_INFORMATION_CFM	✓	✓		✓
CSR_BT_HF_GET_SUBSCRIBER_NUMBER_INFORMATION_IND	✓	✓	✓	

**Table 18: CSR\_BT\_HF\_GET\_SUBSCRIBER\_NUMBER\_INFORMATION Primitives**

### Description

The gateway response when inquired about the subscriber number information. When the gateway answers with the subscriber number, the profile issues the CSR\_BT\_HF\_GET\_SUBSCRIBER\_NUMBER\_IND to the application with the information received. For each subscriber identity received from the gateway, the profile will deliver it to the application in a separate CSR\_BT\_HF\_GET\_SUBSCRIBER\_NUMBER\_IND message. When the gateway send “OK” or “ERROR” either after having sent the subscriber information or without having sent it (i.e. if no information is available), the profile will issue the CSR\_BT\_HF\_GET\_SUBSCRIBER\_NUMBER\_CFM.

### Parameters

type	The signal identity, CSR_BT_HF_GET_SUBSCRIBER_NUMBER_INFORMATION_REQ/CFM/IND.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting “CSR_BT_HF_CONNECTION_ALL”
cnumString	Pointer to the 0-terminated alphanumeric string received from the gateway, which contains the number, e.g. “123456789” and type of number and service, as described in [GSM 07.07].
cmeResultCode	The result of the query, e.g. CSR_BT_CME_SUCCESS. The specific values are defined in the csr_bt_hf.h file.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfGetSubscriberNumberInformationReqSend(0);
```

## 4.16 CSR\_BT\_HF\_GET\_CURRENT\_CALL\_LIST

Parameters				
Primitives	type	connectionId	clccString	cmeResultCode
CSR_BT_HF_GET_CURRENT_CALL_LIST_REQ	✓	✓		
CSR_BT_HF_GET_CURRENT_CALL_LIST_IND	✓	✓	✓	
CSR_BT_HF_GET_CURRENT_CALL_LIST_CFM	✓	✓		✓

**Table 19: CSR\_BT\_HF\_GET\_CURRENT\_CALL\_LIST Primitives**

### Description

These primitives are used for getting information about the calls present at the gateway and their respective status, using the AT command AT+CLCC, as specified in [GSM 07.07]. The application sends the CSR\_BT\_HF\_GET\_CURRENT\_CALL\_LIST\_REQ message and for each call present at the gateway, it will receive a CSR\_BT\_HF\_GET\_CURRENT\_CALL\_LIST\_IND with information about the call. When the whole operation is completed and the application has received information about all existing calls, it will receive the CSR\_BT\_HF\_GET\_CURRENT\_CALL\_LIST\_CFM signal.

### Parameters

type	The signal identity, CSR_BT_HF_GET_CURRENT_CALL_LIST_REQ / CFM / IND.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
ClccString	Pointer to a 0-terminated alphanumeric string which contains the call information as received from the gateway. For details about the contents, see [GSM 07.07].
cmeResultCode	The result of the query, e.g. CSR_BT_CME_SUCCESS. The specific values are defined in the csr_bt_hf.h file.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfGetCurrentCallListReqSend(0);
```

## 4.17 CSR\_BT\_HF\_SET\_EXTENDED\_AG\_ERROR\_RESULT\_CODE

Parameters				
Primitives	type	connectionId	enable	cmeResultCode
CSR_BT_HF_SET_EXTENDED_AG_ERROR_RESULT_CODE_REQ	✓	✓	✓	
CSR_BT_HF_SET_EXTENDED_AG_ERROR_RESULT_CODE_CFM	✓	✓		✓

**Table 20: CSR\_BT\_HF\_SET\_EXTENDED\_AG\_ERROR\_RESULT\_CODE Primitives**

### Description

This signal is used for enabling or disabling the use of extended error codes by the gateway device. The HF device will send the command AT+CMEE=1 for enabling this feature, and the AT+CMEE=0 for disabling it. If enabled, the HFG will use extended error codes to notify the HF the outcome of an operation.

### Parameters

type	The signal identity, CSR_BT_HF_SET_EXTENDED_AG_ERROR_RESULT_CODE_REQ / CFM
cmeResultCode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results have not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
Enable	Boolean to determine whether the feature shall be enabled or disabled.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfSetExtendedAgErrorResultCodeReqSend(0, TRUE);
```

## 4.18 CSR\_BT\_HF\_SET\_CALL\_NOTIFICATION\_INDICATION

Parameters					
	type	connectionId	enable	cmeeResultCode	clipString
<b>Primitives</b>					
CSR_BT_HF_SET_CALL_NOTIFICATION_INDICATION_REQ	✓	✓	✓		
CSR_BT_HF_SET_CALL_NOTIFICATION_INDICATION_CFM	✓	✓		✓	
CSR_BT_HF_CALL_NOTIFICATION_IND	✓	✓			✓

**Table 21: CSR\_BT\_HF\_SET\_CALL\_NOTIFICATION\_INDICATION Primitives**

### Description

This CSR\_BT\_HF\_SET\_CALL\_NOTIFICATION\_INDICATION\_REQ signal is used for enabling or disabling the calling line identification feature, depending on the value of the parameter “enable”. The HF will send the AT+CLIP command towards the HFG. When the enabling or disabling operation has been performed, the application will receive a CSR\_BT\_HF\_SET\_CALL\_NOTIFICATION\_INDICATION\_CFM with the corresponding result code. Upon reception of an incoming call, if the feature is enabled, the application will receive a CSR\_BT\_HF\_CALL\_NOTIFICATION\_IND message containing a string with the calling party’s information as specified in [GSM07.07].

### Parameters

type	The signal identity, CSR_BT_HF_SET_CALL_NOTIFICATION_INDICATION_REQ / CFM or CSR_BT_HF_CALL_NOTIFICATION_IND
cmeeResultCode	Error code returned by the HFG. Values defined in csr_bt_hf.h and the type of the received error code is a CSRUint8.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting “CSR_BT_HF_CONNECTION_ALL”
Enable	Boolean to determine whether the feature shall be enabled or disabled.
ClipString	Pointer to a 0-terminated alphanumeric string which contains the CLIP information as received from the gateway. For details about the contents, see [GSM 07.07].

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfSetCallNotificationIndicationReqSend(0, TRUE);
```

## 4.19 CSR\_BT\_HF\_SET\_CALL\_WAITING\_NOTIFICATION

Parameters					
Primitives	type	connectionId	enable	cmeeResultCode	ccwaString
CSR_BT_HF_SET_CALL_WAITING_NOTIFICATION_REQ	✓	✓	✓		
CSR_BT_HF_SET_CALL_WAITING_NOTIFICATION_CFM	✓	✓		✓	
CSR_BT_HF_CALL_WAITING_NOTIFICATION_IND	✓	✓			✓

**Table 22: CSR\_BT\_HF\_SET\_CALL\_WAITING\_NOTIFICATION Primitives**

### Description

This CSR\_BT\_HF\_SET\_CALL\_WAITING\_NOTIFICATION\_REQ signal is used for enabling or disabling the ability at the HFG to indicate that an incoming call is waiting while engaged in another call already. This feature will be enabled or disabled, depending on the value of the parameter “enable”. The HF will send the AT+CCWA command towards the HFG. When the enabling or disabling operation has been performed, the application will receive a CSR\_BT\_HF\_SET\_CALL\_WAITING\_NOTIFICATION\_CFM with the corresponding result code. Upon reception of a waiting call, if the feature is enabled, the application will receive a CSR\_BT\_HF\_CALL\_WAITING\_NOTIFICATION\_IND message containing a string with the calling party’s information as specified in [GSM07.07].

### Parameters

Type	The signal identity, CSR_BT_HF_SET_CALL_WAITING_NOTIFICATION_REQ / CFM or CSR_BT_HF_CALL_WAITING_NOTIFICATION_IND
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting “CSR_BT_HF_CONNECTION_ALL”
Enable	Boolean to determine whether the feature shall be enabled or disabled.
cmeeResultCode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results has not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.
ccwaString	Pointer to a 0-terminated alphanumeric string which contains the call waiting information as received from the gateway. For details about the contents, see [GSM 07.07].

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfSetCallWaitingNotificationReqSend(0, TRUE);
```

## 4.20 CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND

Parameters					
Primitives	type	connectionId	index	value	name
CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND	✓	✓	✓	✓	✓

**Table 23: CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE Primitives**

### Description

The CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND signal is the HF/HS profile interpretation of the “+CIEV” AT command sent from the HFG to the HF. While establishing a SLC the HF/HS profile receives a list of status indicators that are supported by the HFG and a list with the current status of each indicator. During service level connection establishment the HF/HS profile will send a CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND for each supported status indicator. Furthermore the HF/HS profile will send a CSR\_BT\_HF\_STATUS\_INDICATOR\_UPDATE\_IND each time it receives a “+CIEV” command from the HFG.

### Parameters

type	The signal identity, CSR_BT_HF_STATUS_INDICATOR_UPDATE_IND.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting “CSR_BT_HF_CONNECTION_ALL”
Index	Index value in the CIND string
value	The value of the status indicator. The specific parameter values are present in the file csr_bt_hf.h and it is of the type CsrUInt8.
name	Pointer to a string containing the name of the status indicator. E.g. “service”, “call”, “callsetup”, “signal”, “roam”, “battchg” or “callheld”.

**NOTE:** It is strongly recommended that the HF device issues the “CSR\_BT\_HF\_GET\_CURRENT\_CALL\_LIST\_REQ” command whenever the “call”, “callsetup” and “callheld” indicators are received and several calls are involved. Due to limitations in the specification, this is the only way to precisely determine what particular call is in what particular state (i.e. active, incoming or held).



## 4.21 CSR\_BT\_HF\_SET\_STATUS\_INDICATOR\_UPDATE

Parameters	type	connectionId	enable	cmeeResultCode
<b>Primitives</b>				
CSR_BT_HF_SET_STATUS_INDICATOR_UPDATE_REQ	✓	✓	✓	
CSR_BT_HF_SET_STATUS_INDICATOR_UPDATE_CFM	✓	✓		✓

**Table 24: CSR\_BT\_HF\_SET\_STATUS\_INDICATOR\_UPDATE Primitives**

### Description

It is possible to enable or disable the status indication feature in the remote HFG device at run time. To do that, the application needs to use the CSR\_BT\_HF\_SET\_STATUS\_INDICATOR\_UPDATE\_REQ message. Per default, the status indication feature is enabled at SLC establishment. But if the HF application does not want to receive indications such as call setup status, call status, battery status, etc...for some reason, it shall use the request signal mentioned. The profile will send a confirmation message back when the operation has been performed.

### Parameters

type	The signal identity, CSR_BT_HF_SET_STATUS_INDICATOR_UPDATE_REQ/CFM
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
Enable	Boolean to determine whether the feature shall be enabled or disabled.
cmeeResultcode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results have not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.

## 4.22 CSR\_BT\_HF\_SET\_ECHO\_AND\_NOISE

Parameters				
Primitives	type	connectionId	enable	cmeeResultCode
CSR_BT_HF_SET_ECHO_AND_NOISE_REQ	✓	✓	✓	
CSR_BT_HF_SET_ECHO_AND_NOISE_CFM	✓	✓		✓

**Table 25: CSR\_BT\_HF\_SET\_ECHO\_AND\_NOISE Primitives**

### Description

This CSR\_BT\_HF\_SET\_ECHO\_AND\_NOISE\_REQ signal is used for enabling or disabling the echo and noise reduction functionalities in the HFG, depending on the value of the parameter “enable”. The HF will send the AT+NREC command towards the HFG. When the enabling or disabling operation has been performed, the application will receive a CSR\_BT\_HF\_SET\_ECHO\_AND\_NOISE\_CFM with the corresponding result code.

### Parameters

Type	The signal identity, CSR_BT_HF_SET_ECHO_AND_NOISE_REQ / CFM
cmeeResultCode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results have not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting “CSR_BT_HF_CONNECTION_ALL”
enable	Boolean to determine whether the feature shall be enabled or disabled.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfSetEchoAndNoiseReqSend(0, TRUE);
```

## 4.23 CSR\_BT\_HF\_SET\_VOICE\_RECOGNITION

Parameters					
Primitives	type	connectionId	start	cmeResultCode	started
CSR_BT_HF_SET_VOICE_RECOGNITION_REQ	✓	✓	✓		
CSR_BT_HF_SET_VOICE_RECOGNITION_CFM	✓	✓		✓	
CSR_BT_HF_SET_VOICE_RECOGNITION_IND	✓	✓			✓

**Table 26: CSR\_BT\_HF\_SET\_VOICE\_RECOGNITION Primitives**

### Description

This CSR\_BT\_HF\_SET\_VOICE\_RECOGNITION\_REQ signal is used for starting or stopping a voice recognition operation, depending on the value of the parameter “start”. The HF will send the AT+BVRA command towards the HFG. When the start or stop operation has been performed, the application will receive a CSR\_BT\_HF\_SET\_VOICE\_RECOGNITION\_CFM with the corresponding result code.

### Parameters

Type	The signal identity, CSR_BT_HF_SET_VOICE_RECOGNITION_REQ / CFM
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting “CSR_BT_HF_CONNECTION_ALL”
start	Boolean to determine whether the operation shall be started or stopped.
cmeResultCode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results have not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.
started	Voice recognition input sequence in the AG is started/stopped.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfSetVoiceRecognitionReqSend(0, TRUE);
```

## 4.24 CSR\_BT\_HF\_BT\_INPUT

Parameters					
Primitives	type	connectionId	dataRequest	dataRespString	cmeResultCode
CSR_BT_HF_BT_INPUT_REQ	✓	✓	✓		
CSR_BT_HF_BT_INPUT_CFM	✓	✓		✓	✓

**Table 27: CSR\_BT\_HF\_BT\_INPUT Primitives**

### Description

This CSR\_BT\_HF\_BT\_INPUT\_REQ signal is used for requesting a phone number attached to a voice tag. The HF sends the AT+BINP=1 message to the HFG as specified in [HF]. When the operation is performed, the application will receive a CSR\_BT\_HF\_BT\_INPUT\_CFM message with a string containing the number if any, and with a proper result code.

### Parameters

Type	The signal identity, CSR_BT_HF_BT_INPUT_REQ / CFM
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
dataRequest	According to [HF] this can only be 1 so far: request a phone number attached to a voice tag. Any other values are not specified for the hands-free profile, but this is open for future extensibility.
dataRespString	Pointer to a 0-terminated alphanumeric string which contains the information received from the gateway as specified in [HF]
cmeResultCode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results have not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfBtInputReqSend(0, TRUE);
```

## 4.25 CSR\_BT\_HF\_GENERATE\_DTMF

Parameters				
Primitives	type	connectionId	dtmf	cmeResultCode
CSR_BT_HF_GENERATE_DTMF_REQ	✓	✓	✓	
CSR_BT_HF_GENERATE_DTMF_CFM	✓	✓		✓

**Table 28: CSR\_BT\_HF\_GENERATE\_DTMF Primitives**

### Description

This CSR\_BT\_HF\_GENERATE\_DTMF\_REQ signal is used for requesting the HFG to generate a DTMF tone during a call. The HF sends the AT+VTS command to the HFG. When the operation is performed, the application will receive a CSR\_BT\_HF\_GENERATE\_DTMF\_CFM message with a proper result code.

### Parameters

type	The signal identity, CSR_BT_HF_GENERATE_DTMF_REQ / CFM
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
dtmf	The DTMF tone to generate. This is the ASCII representation of the values 0-9, * or #.
cmeResultCode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results have not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfGenerateDTMFReqSend(0, '1');
```

## 4.26 CSR\_BT\_HF\_SPEAKER\_GAIN\_STATUS

Parameters				
Primitives	type	gain	connectionId	cmeeResultCode
CSR_BT_HF_SPEAKER_GAIN_STATUS_REQ	✓	✓	✓	
CSR_BT_HF_SPEAKER_GAIN_STATUS_CFM	✓		✓	✓
CSR_BT_HF_SPEAKER_GAIN_IND	✓	✓	✓	

**Table 29: CSR\_BT\_HF\_SPEAKER\_GAIN\_STATUS Primitives**

### Description

The CSR\_BT\_HF\_SPEAKER\_GAIN\_IND indicates a change in speaker volume from the HFG or HAG. The CSR\_BT\_HF\_SPEAKER\_GAIN\_STATUS\_REQ may be used for controlling the speaker gain in the HF or HS and inform the HFG or HAG so it can synchronize its own gain values with the ones in the HF device. In this case, the HF will send the AT+VGS command to the gateway and when the gateway has handled it and responded to it, the application will receive the CSR\_BT\_HF\_SPEAKER\_GAIN\_STATUS\_CFM message with the appropriate result code.

### Parameters

type	The signal identity, CSR_BT_HF_SPEAKER_GAIN_STATUS_REQ/CFM or CSR_BT_HF_SPEAKER_GAIN_IND.
gain	Value for volume setting. The range must be in the interval 0 to 15 (both included). It is possible to define a maximum value. This can be set using the MAX_VGS_VALUE in the csr_bt_hf_prim.h file. The parameter is of the type CsrUInt8.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
cmeeResultCode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results have not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.

### Library Function

```
void CsrBtHfSpeakerGainStatusReqSend ( CsrUInt8    gain,
                                       CsrBtHfConnectionId theConnectionId)
```

gain	The same as in the table above.
theConnectionId	The same as "conenctionId" in the table above

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfSpeakerGainStatusReqSend(8, 0)
```

## 4.27 CSR\_BT\_HF\_MIC\_GAIN\_STATUS

Parameters				
	type	gain	connectionId	cmeResultCode
Primitives				
CSR_BT_HF_MIC_GAIN_STATUS_REQ	✓	✓	✓	
CSR_BT_HF_MIC_GAIN_STATUS_CFM	✓		✓	✓
CSR_BT_HF_MIC_GAIN_IND	✓	✓	✓	

**Table 30: CSR\_BT\_HF\_MIC\_GAIN\_STATUS Primitives**

### Description

The CSR\_BT\_HF\_MIC\_GAIN\_IND indicates a change in microphone volume from the HFG or HAG. The CSR\_BT\_HF\_MIC\_GAIN\_STATUS\_REQ may be used for controlling the microphone gain in the HF or HS and inform the HFG or HAG so it can synchronize its own gain values with the ones in the HF device. In this case, the HF will send the AT+VGM command to the gateway and when the gateway has handled it and responded to it, the application will receive the CSR\_BT\_HF\_MIC\_GAIN\_STATUS\_CFM message with the appropriate result code.

### Parameters

type	The signal identity, CSR_BT_HF_MIC_GAIN_STATUS_REQ/CFM or CSR_BT_HF_MIC_GAIN_IND.
gain	Value for volume setting. The range must be in the interval 0 to 15 (both included). It is possible to define a maximum value. This can be set using the MAX_VGM_VALUE in the csr_bt_hf_prim.h file. The parameter is of the type CsrUInt8.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
cmeResultCode	Cme error result code of the operation if success (the AG responded OK) the result is CME_SUCCESS. Any other result code means the operation failed if CMEE results have not been enabled and ERROR response from the AG will be mapped to CME_AG_FAILURE.

### Library Function

```
void CsrBtHfMicGainStatusReqSend (CsrUInt8 gain, CsrBtHfConnectionId
                                theConnectionId)
```

Gain	The same as in the table above.
theConnectionId	The same as "connenctionId" in the table above

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfMicGainStatusReqSend(8, 0)
```

## 4.28 CSR\_BT\_HF\_DIAL

Parameters					
Primitives	type	connectionId	command	number	cmeeResultCode
CSR_BT_HF_DIAL_REQ	✓	✓	✓	✓	
CSR_BT_HF_DIAL_CFM	✓	✓			✓

Table 31: CSR\_BT\_HF\_DIAL Primitives

### Description

This signal is used by the HF/HS to request that the gateway shall make an outgoing call. The call can be to a specific number, to a number stored in the memory of the gateway or to the last dialled number. The type of call is specified with the field "command". Once the message has been handled by the gateway and it has responded to it, the application will receive the CSR\_BT\_HF\_DIAL\_CFM message with an appropriate result code.

### Parameters

type	The signal identity, CSR_BT_HF_DIAL_REQ/_CFM.
connectionId	Unique identifier for the connection where the call shall be rejected. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
Command	This field can take three different values (all of them defined in csr_bt_hf_prim.h): <ol style="list-style-type: none"> <li>CSR_BT_HF_DIAL_NUMBER (0x00) The call shall be made to a given number, contained in the string "number"</li> <li>CSR_BT_HF_DIAL_MEMORY (0x01) The call shall be made to a number stored in the gateway's memory in the position given in the string "number"</li> <li>CSR_BT_HF_DIAL_REDIAL (0x02) The call shall be made to the last dialled number and the "number" field will be a NULL pointer</li> </ol>
number	Pointer to a 0-terminated alphanumeric string with information as described above.
cmeeResultCode	Error code returned by the HFG. Values defined in csr_bt_hf.h and the type of the received error code is a CSRUint8.

### Library Function

```
void CsrBtHfDialReqSend(CsrBtHfConnectionId connectionId,
                        CsrBtHfDialCommand command,
                        CsrCharString *number)
```

connectionId	The same as in the table above.
command	The same as in the table above.
Number	The same as in the table above.

### Example

Here is an example of how to send the request signal using the library function:

```
CsrBtHfDialReqSend(0x00, CSR_BT_HF_DIAL_REDIAL, NULL)
```



## 4.29 CSR\_BT\_HF\_CALL\_ANSWER

Parameters			
Primitives	type	connectionId	cmeeResultCode
CSR_BT_HF_CALL_ANSWER_REQ	✓	✓	
CSR_BT_HF_CALL_ANSWER_CFM	✓	✓	✓

**Table 32: CSR\_BT\_HF\_CALL\_ANSWER Primitives**

### Description

This signal is used by the HF/HS for answering an incoming call.

### Parameters

Type	The signal identity, CSR_BT_HF_CALL_ANSWER_REQ/_CFM.
connectionId	Unique identifier for the connection where the call shall be rejected. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
cmeeResultCode	Error code returned by the HFG. Values defined in csr_bt_hf.h and the type of the received error code is a CSRUint8.

### Library Function

```
void CsrBtHfAnswerReqSend(CsrBtHfConnectionId connectionId)
```

connectionId      The same as in the table above.

### Example

Here is an example of how to send the request signal using the library function.

```
CsrBtHfAnswerReqSend(0x00)
```

### 4.30 CSR\_BT\_HF\_CALL\_END

Parameters			
Primitives	type	connectionId	cmeeResultCode
CSR_BT_HF_CALL_END_REQ	✓	✓	
CSR_BT_HF_CALL_END_CFM	✓	✓	✓

**Table 33: CSR\_BT\_HF\_CALL\_END Primitives**

#### Description

The CSR\_BT\_HF\_CALL\_END\_REQ signal is used for rejecting incoming calls or interrupting an already ongoing call process. If this signal is used on an HF connection it will be mapped to the AT command AT+CHUP; if used on a HS connection, it will be mapped to the AT+CKPD=200 command. When the gateway responds to any of the commands mentioned, the application will receive the CSR\_BT\_HF\_CALL\_END\_CFM message.

#### Parameters

Type	The signal identity, CSR_BT_HF_CALL_END_REQ / CFM.
connectionId	Unique identifier for the connection where the call shall be rejected. The type is <code>CsrBtHfConnectionId</code> . The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
cmeeResultCode	Error code returned by the HFG. Values defined in <code>csr_bt_hf.h</code> and the type of the received error code is a <code>CSRUint8</code> .

#### Library Function

```
void CsrBtHfCallEndReqSend(CsrBtHfConnectionId connectionId)
```

#### Example

Here is an example of how to send the signal using the library function.

```
CsrBtHfCallEndReqSend(0xFFFFFFFF)
```

### 4.31 CSR\_BT\_HF\_CALL\_HANDLING

Parameters						
Primitives	type	connectionId	Command	Index	event	cmeeResultCode
CSR_BT_HF_CALL_HANDLING_IND	✓	✓	✓		✓	
CSR_BT_HF_CALL_HANDLING_REQ	✓	✓	✓	✓		
CSR_BT_HF_CALL_HANDLING_CFM	✓	✓				✓

**Table 34: CSR\_BT\_HF\_CALL\_HANDLING Primitives**

#### Description

The application may perform outgoing calls, answer or reject incoming calls, put calls on hold and/or retrieve them, etc... The outcome of these operations will be communicated to the application too.

#### Parameters

type	The signal identity; CSR_BT_HF_CALL_HANDLING_REQ/___CFM/___IND
connectionId	Unique value used for identifying the connection. The type is <code>CsrBtHfConnectionId</code> . The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
command	<p>The value representing the call operation requested. The commands that can be used are defined in <code>csr_bt_hf_prim.h</code>:</p> <ul style="list-style-type: none"> <li>• CSR_BT_RELEASE_ALL_HELD_CALL (0x00). Sends AT+CHLD=0</li> <li>• CSR_BT_RELEASE_ACTIVE_ACCEPT (0x01). Sends AT+CHLD=1</li> <li>• CSR_BT_RELEASE_SPECIFIED_CALL (0x02). Sends AT+CHLD=1x</li> <li>• CSR_BT_HOLD_ACTIVE_ACCEPT (0x03). Sends AT+CHLD=2</li> <li>• CSR_BT_REQUEST_PRIVATE_WITH_SPECIFIED (0x04). Sends AT+CHLD=2x</li> <li>• CSR_BT_ADD_CALL (0x05). Sends AT+CHLD=3.</li> <li>• CSR_BT_CONNECT_TWO_CALLS (0x06). Sends AT+CHLD=4.</li> <li>• CSR_BT_BTRH_PUT_ON_HOLD (0x07). Sends AT+BTRH=0</li> <li>• CSR_BT_BTRH_ACCEPT_INCOMING (0x08). Sends AT+BTRH=1</li> <li>• CSR_BT_BTRH_REJECT_INCOMING (0x09). Sends AT+BTRH=2</li> <li>• CSR_BT_BTRH_READ_STATUS (0x0A). Sends AT+BTRH?</li> </ul> <p>The parameter is of the type <code>callHandlingCommand_t</code>. For more information about these AT commands, please see [HF].</p>
index	Value (x) that determines what call the command aims to when issuing AT+CHLD=2x or AT+CHLD=1x
event	<p>The value representing the response code received from the HFG about a call operation requested or a call operation performed at the HFG without being requested from the HF. The possible values that can be received are defined in <code>csr_bt_hf_prim.h</code>:</p> <ul style="list-style-type: none"> <li>• CSR_BT_BTRH_INCOMING_ON_HOLD (0x00). Received +BTRH:0</li> <li>• CSR_BT_BTRH_INCOMING_ACCEPTED (0x01). Received +BTRH:1</li> <li>• CSR_BT_BTRH_INCOMING_REJECTED (0x02). Received +BTRH:2</li> </ul> <p>The parameter is of the type <code>callHandlingEvent_t</code>. For more information about these AT commands, please see [HF].</p>

**cmeeResultCode**      Error code returned by the HFG. Values defined in `csr_bt_hf.h` and the type of the received error code is a `CSRUint8`.

### Library Function

```
void CsrBtHfCallHandlingReqSend(callHandlingCommand_t command,  
                                CSRUint8 index,  
                                CsrBtHfConnectionId connectionId)
```

### Example

Here is an example of how to send the signal using the library function.

```
CsrBtHfCallHandlingReqSend(CSR_BT_RELEASE_ALL_HELD_CALL,0x00,0x00)
```

## 4.32 CSR\_BT\_HF\_AT\_CMD

Parameters				
Primitives	type	connectionId	atCmdString	cmeResultCode
CSR_BT_HF_AT_CMD_IND	✓	✓	✓	
CSR_BT_HF_AT_CMD_CFM	✓	✓		✓
CSR_BT_HF_AT_CMD_REQ	✓	✓	✓	

Table 35: CSR\_BT\_HF\_AT\_CMD Primitives

### Description

An AT-command is received or sent by the application layer. The data must be/is compiled as sent/received on the air interface, i.e. no interpretation takes place in the HF/HS manager. The application issues the CSR\_BT\_HF\_AT\_CMD\_REQ in order to send an AT command towards the gateway device. When the remote device sends response codes to the local device, the application will receive a CSR\_BT\_HF\_AT\_CMD\_IND containing a string with the response code received. However, when the remote device responds with a result code to a command issued by the local device, the HF manager will send the CSR\_BT\_HF\_AT\_CMD\_CFM to the application.

The application layer is responsible for command validation and control.

### Parameters

Type	The signal identity, CSR_BT_HF_AT_CMD_IND/CFM/REQ.
connectionId	Unique value used for identifying the connection. The type is <code>CsrBtHfConnectionId</code> . The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
*atCmdString	<p>AT-command bytes as received from the HF/HS manager. The pointer shall point to an allocated string that is 0-terminated. It is up to the sender of the AT-command to format the payload correctly, hence, the received payload cannot be expected to be AT-formatted according to specification.</p> <p>It is the responsibility of the receiving layer to free the contents of the payload parameter. This means that the application has to free the contents of the CSR_BT_HF_AT_CMD_IND's payload parameter.</p>
cmeResultCode	The result of the query, e.g. CSR_BT_CME_SUCCESS. The specific values are defined in the <code>csr_bt_hf.h</code> file.

### Library Function

```
void CsrBtHfAtCmdReqSend( CsrUInt16 len,
                          CsrUInt8 *payload,
                          CsrBtHfConnectionId
                          connectionId)
```

Len	The length of the string to send in bytes including the NULL terminator.
*payload	The same as "atCmdString" in the table above.
connectionId	The same as connectionId in the table above

### Example

Here is an example of how to send the signal using the library function.

```
char *str;
str = CsrPmalloc(11);
CsrMemCpy(str, "AT+BTRH=2\r\0",11);
CsrBtHfAtCmdReqSend(10, (CsrCharString*) str, 0x00)
```

**Note that the application must not send new AT commands (neither using the CSR\_BT\_HF\_AT\_CMD\_REQ message nor via the rest of the API primitives) on a determined connection as long as the previous one has not been answered by the remote device.**

### 4.33 CSR\_BT\_HF\_SECURITY\_IN / OUT

Parameters					
Primitives	type	appHandle	secLevel	resultCode	resultSupplier
CSR_BT_HF_SECURITY_IN_REQ	✓	✓	✓		
CSR_BT_HF_SECURITY_IN_CFM	✓			✓	✓
CSR_BT_HF_SECURITY_OUT_REQ	✓	✓	✓		
CSR_BT_HF_SECURITY_OUT_CFM	✓			✓	✓

**Table 36: CSR\_BT\_HF\_SECURITY\_IN and CSR\_BT\_HF\_SECURITY\_OUT Primitives**

#### Description

Applications that wish to change the enforcement to a specific profile security level, i.e. authentication, encryption and/or authorisation, can use this API to set up the security level for *new* connections. Note that this API is for the local device only and can be used from within any state.

The *CSR\_BT\_SECURITY\_IN\_REQ* signal sets up the security level for new incoming connections. Already established or pending connections are not altered.

The *CSR\_BT\_SECURITY\_OUT\_REQ* signal sets up the security level for new outgoing connections. Already established and pending connections are not altered. Note that *authorisation* should not be used for outgoing connections as that may be confusing for the user – there is really no point in requesting an outgoing connection and afterwards having to authorise as they are both locally-only decided procedures.

Note, that any attempts to set security to a less secure level than the mandatory security level will be rejected. See *csr\_bt\_profiles.h* for mandatory security settings. The default settings used by CSR Synergy Bluetooth are set to require authentication and encryption.

Note that if MITM protection is requested and the remote device does not have the required IO capabilities, pairing/bonding will fail and connections to the remote device *cannot* be made. See [SC] for further details.

#### Parameters

type	Signal identity CSR_BT_HF_SECURITY_IN/OUT_REQ/CFM
appHandle	Application handle to which the confirm message is sent.
secLevel	<p>The application must specify one of the following values:</p> <ul style="list-style-type: none"> <li>CSR_BT_SEC_DEFAULT : Use default security settings</li> <li>CSR_BT_SEC_MANDATORY : Use mandatory security settings</li> <li>CSR_BT_SEC_SPECIFY : Specify new security settings</li> </ul> <p>If CSR_BT_SEC_SPECIFY is set the following values can be OR'ed additionally:</p> <ul style="list-style-type: none"> <li>CSR_BT_SEC_AUTHORISATION: Require authorisation</li> <li>CSR_BT_SEC_AUTHENTICATION: Require authentication</li> <li>CSR_BT_SEC_SEC_ENCRYPTION: Require encryption (implies</li> </ul>

authentication)

- CSR\_BT\_SEC\_MITM: Require MITM protection (implies encryption)

resultCode	The result code of the operation. Possible values depend on the value of resultSupplier. If e.g. the resultSupplier == CSR_BT_SUPPLIER_CM then the possible result codes can be found in csr_bt_cm_prim.h. All values which are currently not specified in the respective prim.h file are regarded as reserved and the application should consider them as errors.
resultSupplier	This parameter specifies the supplier of the result given in resultCode. Possible values can be found in csr_bt_result.h



#### 4.34 CSR\_BT\_HF\_CALL\_RINGING

Parameters	type	connectionId
Primitives		
CSR_BT_HF_CALL_RINGING_IND	✓	✓

Table 37: CSR\_BT\_HF\_CALL\_RINGING Primitives

##### Description

Indicates an incoming call from the HFG or HAG side, the application can accept or reject the call.

##### Parameters

Type	The signal identity, CSR_BT_HF_CALL_RINGING_IND.
connectionId	Unique value used for identifying the connection. The type is <code>CsrBtHfConnectionId</code> . The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"

### 4.35 CSR\_BT\_HF\_C2C\_SF

Parameters						
Primitives	type	connectionId	number	value	*indicators	indicatorsLength
CSR_BT_HF_C2C_SF_REQ	✓	✓	✓	✓		
CSR_BT_HF_C2C_SF_IND	✓	✓			✓	✓

Table 38: The HFG\_C2C\_SF primitives

#### Description

**Note:** The possibility to change the codec using CSR to CSR proprietary commands is deprecated and will be removed from the implementation. It is therefore recommended not to indicate support for the CSR\_BT\_C2C\_ADPCM\_IND or the CSR\_BT\_C2C\_SAMPLE\_RATE\_IND parameters.

This signal is used for two things. The CSR\_BT\_HF\_C2C\_SF\_IND signal reports what CSR2CSR features the gateway supports. The request is used for enabling/disabling a particular CSR2CSR feature locally and let the gateway know about it, such that it will be used when the gateway offers support for it.

Note that this signal can be sent as soon as the HF profile has been activated and before any service level connections are present. The HF will store the desired setting and automatically enable it if the application has previously requested a feature.

**Note:** In order for a feature to be usable both the HFG and the HF must enable it, so it may BE necessary for the application to keep track of the HFG indicators. If the application sends CSR2CSR requests that have not been agreed on by both the HF and HFG, the HF will ignore the messages.

#### Parameters

type	Signal identity CSR_BT_HF_C2C_SF_REQ/IND.
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId. The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"
number	<p>The CSR2CSR indicator index which should be enabled/disabled. The following compiler defines can be found in the header file <i>csr_bt_hf.h</i>:</p> <ul style="list-style-type: none"> <li>CSR_BT_C2C_NAME_IND Index 1, transfer names with call waiting and rings (clip). This is not needed anymore, as the HFG will send the name information automatically whenever available, regardless of whether this feature is enabled or not.</li> <li>CSR_BT_C2C_TXT_IND Index 2, support for unsolicited text</li> <li>CSR_BT_C2C_SMS_IND Index 3, support for SMS arrival notification and text transfer</li> <li>CSR_BT_C2C_BAT_IND Index 4, battery charge level notifications</li> </ul>

- CSR\_BT\_C2C\_PWR\_IND  
Index 5, power status notifications
- CSR\_BT\_C2C\_ADPCM\_IND  
Index 6, audio codec settings. Can be set to a bitmask built with the values:
  - 0x01 CVSD
  - 0x02 2-bit ADPCM
  - 0x04 4-bit ADPCM
- CSR\_BT\_C2C\_SAMPLE\_RATE\_IND  
Index 7, audio data sampling rate. Can be set to a bitmask built with the values:
  - 0x01 8 KHz
  - 0x02 16 KHz

value	The value of the given indicator. A value of “0” (zero) means off while a “1” (one) is on. In the case of the CSR_BT_C2C_ADPCM_IND and CSR_BT_C2C_SAMPLE_RATE_IND, the values can be any of the above mentioned, or 0 if none is supported. Note that the value is transferred as a real value, <i>not</i> an ASCII character.
*indicators	<p>When the application receives the supported/enabled features from the HFG, they are packed into an array of characters. This is the pointer for that array, and must be CsrPfree()’ed after use by the application.</p> <p>The indicator indexes are the same as explained above in the <i>number</i> parameter.</p> <p><b>Note:</b> It is critical that the application does not try to decode indexes that exceed the <i>indicatorsLength</i> or indicator indexes that are unknown for the application.</p>
indicatorsLength	The length of the <i>indicators</i> array. There shall be made no assumptions on the length of the array, as new CSR2CSR features may be added in the future without warning.

### Library Function

```
void CsrBtHfC2cSfReqSend( CsrBtHfConnectionId    connectionId,
                          CsrUInt8               number,
                          CsrUInt8               value    )
```

All parameters are as described above in the signal primitive details.

### 4.36 CSR\_BT\_HF\_SET\_C2C\_AUDIO\_CODEC

Parameters			
Primitives	type	connectionId	value
CSR_BT_HF_SET_C2C_AUDIO_CODEC_REQ	✓	✓	✓
CSR_BT_HF_SET_C2C_AUDIO_CODEC_IND	✓	✓	✓

Table 39: CSR\_BT\_HF\_SET\_C2C\_AUDIO\_CODEC Primitives

#### Description

**Note:** This signal and the possibility to change the codec using CSR to CSR proprietary commands is deprecated and will be removed from the implementation. It is recommended not to use it.

It is possible for the HF application to change the codec to be used for audio connections to a remote CSR based gateway, if it also supports this feature. The change will only take place if there is support for it in the HW. During audio connection establishment, the HF and HFG will then negotiate the codec to use: CVSD, 2-bit ADPCM or 4-bit ADPCM. The application may indicate support for more than one codec.

It is strongly recommended that application does not request change of codec settings unless they are absolutely positive that the new settings are supported by the HW/FW platform used. The application can find out by means of the primitive CSR\_BT\_HF\_GET\_C2C\_ADPCM\_LOCAL\_SUPPORTED\_REQ (see chapter 0)

#### Parameters

type	Signal identity CSR_BT_HF_SET_C2C_AUDIO_CODEC_REQ/IND
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId.
value	<p>This field is a bitmask that consists of one of the following values, or a combination of them:</p> <ul style="list-style-type: none"> <li>0x01 CVSD</li> <li>0x02 2-bit ADPCM</li> <li>0x04 4-bit ADPCM</li> </ul>

#### Library Function

```
void CsrBtHfSetC2CAudioCodecReqSend (CsrBtHfConnectionId connectionId,
                                     CsrUint8 value)
```

connectionId	The same as in the table above
value	The same as in the table above. The values mentioned above are also defined in csr_bt_hf_prim.h.

### 4.37 CSR\_BT\_HF\_GET\_C2C\_ADPCM\_LOCAL\_SUPPORTED

Parameters	type	result
<b>Primitives</b>		
CSR_BT_HF_GET_C2C_ADPCM_LOCAL_SUPPORTED_REQ	✓	
CSR_BT_HF_GET_C2C_ADPCM_LOCAL_SUPPORTED_IND	✓	✓

**Table 40: CSR\_BT\_HF\_GET\_C2C\_ADPCM\_LOCAL\_SUPPORTED Primitives**

#### Description

**Note:** This signal and the possibility to change the codec using CSR to CSR proprietary commands is deprecated and will be removed from the implementation. It is recommended not to use it.

The HF application can find out whether the HW/FW platform supports ADPCM audio by means of this primitive. This operation should be performed prior to trying to change the codec settings.

#### Parameters

type                      Signal identity CSR\_BT\_HF\_GET\_C2C\_ADPCM\_LOCAL\_SUPPORTED\_REQ/IND

result                    TRUE if ADPCM audio is supported; FALSE otherwise

#### Library Function

```
void CsrBtHfGetC2CAdpcmLocalSupportedReqSend(void)
```

## 4.38 CSR\_BT\_HF\_SET\_C2C\_SAMPLE\_RATE

Parameters			
Primitives	type	connectionId	value
CSR_BT_HF_SET_C2C_SAMPLE_RATE_REQ	✓	✓	✓
CSR_BT_HF_SET_C2C_SAMPLE_RATE_IND	✓	✓	✓

Table 41: CSR\_BT\_HF\_SET\_C2C\_SAMPLE\_RATE Primitives

### Description

**Note:** This signal and the possibility to change the codec using CSR to CSR proprietary commands is deprecated and will be removed from the implementation. It is recommended not to use it.

The rate used for sampling audio data during an audio connection can be set from the application. This is done with the CSR\_BT\_HF\_SET\_C2C\_SAMPLE\_RATE\_REQ primitive. This operation should only be performed if the HW/FW platform used supports it. Beware that this primitive can be used as soon as the HF profile has been activated and no connection is required before using it.

The primitive CSR\_BT\_HF\_SET\_C2C\_SAMPLE\_RATE\_IND is sent to the application immediately after an audio connection has been established to indicate the sample rate actually used for that connection. This will only be the case if the application has used the CSR\_BT\_HF\_SET\_C2C\_SAMPLE\_RATE\_REQ previously.

### Parameters

type	Signal identity CSR_BT_HF_SET_C2C_SAMPLE_RATE_REQ /IND
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId.
value	This field is a bitmask that consists of one of the following values, or a combination of them: <ul style="list-style-type: none"> <li>0x01 8 KHz</li> <li>0x02 16 KHz</li> </ul>

### Library Function

```
void CsrBtHfSetC2CSampleRateReqSend (CsrBtHfConnectionId connectionId,
                                     CsrUInt8 value)
```

connectionId	The same as in the table above.
value	The same as in the table above. The values mentioned above are also defined in csr_bt_hf.h.

### 4.39 CSR\_BT\_HF\_C2C\_PWR

Parameters				
Primitives	type	connectionId	value	cmeeResultCode
CSR_BT_HF_C2C_PWR_REQ	✓	✓	✓	
CSR_BT_HF_C2C_PWR_CFM	✓	✓		✓

**Table 42: CSR\_BT\_HF\_C2C\_PWR Primitives**

#### Description

If the CSR to CSR power source feature is enabled at both ends in a HF connection, then the HF device may inform the HFG about the power source used. The application can use the CSR\_BT\_HF\_C2C\_PWR\_REQ message to do this. The primitive CSR\_BT\_HF\_C2C\_PWR\_CFM is sent to the application when the gateway device has acknowledged the message.

#### Parameters

type	Signal identity CSR_BT_HF_C2C_PWR_REQ /CFM
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId.
value	This field consists of one of the following values: <ul style="list-style-type: none"> <li>0x01 Battery poswered</li> <li>0x02 External power source</li> </ul>
cmeeResultCode	The result of the query, e.g. CSR_BT_CME_SUCCESS. The specific values are defined in the csr_bt_hf.h file.

#### Library Function

```
void CsrBtHfC2CPowerReqSend (CsrBtHfConnectionId connectionId,
                             CsrUInt8 value)
```

connectionId	The same as in the table above.
value	The same as in the table above.

#### 4.40 CSR\_BT\_HF\_C2C\_BATT

Parameters Primitives	type	connectionId	value	cmeeResultCode
CSR_BT_HF_C2C_BATT_REQ	✓	✓	✓	
CSR_BT_HF_C2C_BATT_CFM	✓	✓		✓
CSR_BT_HF_C2C_BATT_IND	✓	✓		

Table 43: CSR\_BT\_HF\_C2C\_BATT Primitives

##### Description

If the CSR to CSR battery level in headset feature is enabled at both ends in a HF connection, then the HF device shall inform the HFG about the power source used. The application can use the CSR\_BT\_HF\_C2C\_BATT\_REQ message to do this. The primitive CSR\_BT\_HF\_C2C\_BATT\_CFM is sent to the application when the gateway device has acknowledged the message. Besides, the remote device may ask for the current battery level in the headset at any time during the connection. If it does, the application will receive a CSR\_BT\_HF\_C2C\_BATT\_IND message, which must be answered with a CSR\_BT\_HF\_C2C\_BATT\_REQ.

##### Parameters

type	Signal identity CSR_BT_HF_C2C_BATT_REQ /CFM
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId.
value	This field can take values in the range 0-9, 0 meaning empty battery and 9 meaning full battery.
cmeeResultCode	The result of the query, e.g. CSR_BT_CME_SUCCESS. The specific values are defined in the csr_bt_hf.h file.

##### Library Function

```
void CsrBtHfC2CBattReqSend (CsrBtHfConnectionId connectionId,
                             CsrUInt8 value)
```

connectionId	The same as in the table above.
value	The same as in the table above.



#### 4.41 CSR\_BT\_HF\_C2C\_SMS

Parameters					
Primitives	type	connectionId	index	cmeeResultCode	smsString
CSR_BT_HF_C2C_GET_SMS_REQ	✓	✓	✓		
CSR_BT_HF_C2C_GET_SMS_CFM	✓	✓		✓	✓
CSR_BT_HF_C2C_SMS_IND	✓	✓	✓		

Table 44: CSR\_BT\_HF\_C2C\_SMS Primitives

##### Description

If the CSR to CSR SMS feature is enabled at both ends in a HF connection, then the HFG device may inform the HF about the reception of a new SMS. The application will receive a CSR\_BT\_HF\_C2C\_SMS\_IND message in this case, which will contain the index of the SMS in the gateway's storage. The HF can use the primitive CSR\_BT\_HF\_C2C\_GET\_SMS\_REQ in order to retrieve an SMS from the remote device's storage. Once the HFG has answered to this request, the application will receive the message CSR\_BT\_HF\_C2C\_GET\_SMS\_CFM that contains a result code and, if the request has been successful, a pointer to a string containing the SMS requested.

##### Parameters

type	Signal identity CSR_BT_HF_C2C_SMS_REQ /CFM /IND
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId.
index	This is the index of the SMS in the HFG storage. The type is CsrUInt8
cmeeResultCode	The result of the query, e.g. CSR_BT_CME_SUCCESS. The specific values are defined in the csr_bt_hf.h file.
smsString	Pointer to a 0-terminated string containing the SMS retrieved as sent from the HFG.

##### Library Function

```
void CsrBtHfSetC2CGetSmsReqSend (CsrBtHfConnectionId connectionId,
                                CsrUInt8      index)
```

connectionId	The same as in the table above.
index	The same as in the table above.

## 4.42 CSR\_BT\_HF\_C2C\_TXT

Parameters			
Primitives	type	connectionId	txtString
CSR_BT_HF_C2C_TXT_IND	✓	✓	✓

**Table 45: CSR\_BT\_HF\_C2C\_TXT Primitive**

### Description

If the CSR to CSR TXT feature is enabled at both ends in a HF connection, then the HFG device may send a text message to the HF. The application will receive a CSR\_BT\_HF\_C2C\_TXT\_IND message with a NULL-terminated string containing the text received from the remote device.

### Parameters

type	Signal identity CSR_BT_HF_C2C_TXT_IND
connectionId	Unique value used for identifying the connection. The type is CsrBtHfConnectionId.
txtString	Pointer to a 0-terminated string containing the SMS retrieved as sent from the HFG.

#### 4.43 CSR\_BT\_HF\_INBAND\_RING\_SETTING\_CHANGED

Parameters			
	type	inbandRingingActivated	connectionId
<b>Primitives</b>			
CSR_BT_HF_INBAND_RING_SETTINGS_CHANGED_IND	✓	✓	✓

**Table 46: CSR\_BT\_HF\_INBAND\_RING\_SETTINGS\_CHANGED Primitive**

##### Description

The HF application is informed of any changes in the in-band ring tones setting at the HFG.

##### Parameters

type	Signal identity CSR_BT_HF_INBAND_RINGING_IND
inbandRingingActivated	TRUE if the HFG sends in-band ringtones; otherwise FALSE
connectionId	Unique value used for identifying the connection. The type is <code>CsrBtHfConnectionId</code> . The value 0xFFFFFFFF is used for denoting "CSR_BT_HF_CONNECTION_ALL"

#### 4.44 CSR\_BT\_HF\_DEREGISTER\_TIME

Parameters			
Primitives	type	waitSeconds	result
CSR_BT_HF_DEREGISTER_TIME_REQ	✓	✓	
CSR_BT_HF_DEREGISTER_TIME_CFM	✓		✓

Table 47: CSR\_BT\_HF\_DEREGISTER\_TIME Primitive

##### Description

Whenever a connection is established from a remote device, the HF profile will remove the service record used for that connection from the local service database. This is done to avoid other remote devices trying to connect to the local channel in that specific service record. However, some devices try to read some of the features stored in the service record even after the connection has been established. Therefore, the HF application may want to keep the service record for some time after connection for interoperability purposes. The profile provides an interface to do that: the CSR\_BT\_HF\_DEREGISTER\_TIME\_REQ and CFM messages allow the application to determine the number of seconds that the profile must wait before removing the service record from the local service database. Per default, this time is 0, and the service record will be removed immediately after connection establishment.

**BEWARE:** As long as the service record exists in the service database, any other remote devices will be able to get information from it, and try to connect to the local device with the information in it. These attempts to connect will fail as long as there is an active connection on it!

##### Parameters

type	Signal identity CSR_BT_HF_DEREGISTER_TIME_REQ /CFM
waitSeconds	Number of seconds to wait.
result	Result of the operation: CSR_BT_CME_SUCCESS if the operation succeeds

##### Library Function

```
void CsrBtHfSetDeregisterTimeReqSend (waitSeconds)
```

## 4.45 CSR\_BT\_HF\_INDICATION\_ACTIVATION

Parameters				
Primitives	type	connectionId	indicatorBitMask	result
CSR_BT_HF_INDICATOR_ACTIVATION_REQ	✓	✓	✓	
CSR_BT_HF_INDICATOR_ACTIVATION_CFM	✓	✓		✓

**Table 48: CSR\_BT\_HF\_ACTIVATION\_INDICATION Primitive**

### Description

When a Hands free connection exists between a remote gateway and the local HF device, the user may want to avoid receiving some indicators that it does not use. In this case, it can request that those indicators are not sent from the GW by issuing the CSR\_BT\_HF\_INDICATOR\_ACTIVATION\_REQ. This operation will take effect for the active service level connection and only for as long as the connection is established. If the connection is released, and a new connection is established between the same two devices, the indicators will all be active again. Besides, the HF cannot disable the “call”, “call-setup” and “call-held” indicators.

### Parameters

type	Signal identity CSR_BT_HF_INDICATOR_ACTIVATION_REQ /CFM
connectionId	Index of the connection that this primitive shall be executed on
indicatorBitMask	Bit mask with the indicators to enable/disable. If bit 0 has the value ‘1’, then the first indicator supported by the HFG in the “cindString” received in the CSR_BT_HF_SERVICE_CONNECT_IND/CFM message will be enabled. If it is 0, the indicator will be disabled. And so on for all the indicators supported by the remote device. This field is of type CsrUInt16.
result	Result of the operation: CSR_BT_CME_SUCCESS if the operation succeeds

### Library Function

```
void CsrBtHfIndicatorActivationReqSend(indicatorBitMask, connectionId)
```

#### 4.46 CSR\_BT\_HF\_UPDATE\_SUPPORTED\_CODEC

Parameters						
Primitives	type	codecMask	enable	sendUpdate	resultSupplier	result
CSR_BT_HF_UPDATE_SUPPORTED_CODEC_REQ	✓	✓	✓	✓		
CSR_BT_HF_UPDATE_SUPPORTED_CODEC_CFM	✓				✓	✓

**Table 49: CSR\_BT\_HF\_UPDATE\_SUPPORTED\_CODEC Primitive**

##### Description

If the Hands-free device supports the codec negotiation feature (enabled at activation time), it is possible to enable and/or disable specific CODECS at run-time. When the application enables a particular codec, it will be available for use for audio connections with remote gateway devices. The hands-free profile will indicate this to the remote devices. Likewise, when the application disables a CODEC, it will become unavailable.

##### Parameters

type	Signal identity CSR_BT_HF_UPDATE_SUPPORTED_CODEC_REQ /CFM
codecMask	A bit mask specifying which codecs are to be affected. See definitions in csr_bt_hf.h.
enable	Boolean to determine whether the codecs specified shall be enabled (TRUE) or disabled (FALSE).
sendUpdate	Boolean to specify whether the change in codec support should be send over to the AG, if TRUE the update will be send. It is recommended to always send the update at least on codec upgrades.
result	Result of the operation: CSR_BT_RESULT_CODE_HF_SUCCESS if the operation succeeds
resultSupplier	This parameter specifies the supplier of the result given in resultCode. Possible values can be found in csr_bt_result.h

##### Library Function

```
void CsrBtHfUpdateSupportedCodecReqSend(codec, enable)
```

## 5 Document References

Document	Reference
Bluetooth® Core Specification v.1.1, v.1.2 and v.2.0, profile section N/A	[BT]
CSR Synergy Bluetooth, SC – Security Controller API Description, Document no. api-0102-sc, profile section N/A	[SC]
The Bluetooth® Specification, Hands-free Profile, ver. 1.5 2005-08-01	[HF]
The Bluetooth Specification, Headset profile, version 1.2 2008-Dec-18	[HS]
Bluetooth® Hands-Free Profile Application Guidelines, profile section N/A	[CCAP]
CSR Synergy Bluetooth. CM – Connection Manager API Description, doc. no. api-0101-cm, profile section N/A	[CM]
Digital cellular telecommunications system (Phase 2+); Man-Machine Interface (MMI) of the Mobile Station (MS)  (GSM 02.30 version 7.1.0 Release 1998), profile section N/A	[GSM02.30]
AT command set for GSM Mobile Equipment (ME)  (GSM 07.07), profile section N/A	[GSM07.07]

## Terms and Definitions

BlueCore®	Group term for CSR's range of Bluetooth wireless technology chips
Bluetooth®	Set of technologies providing audio and data transfer over short-range radio connections
CSR	Cambridge Silicon Radio
HF	Hands-Free
HS	Headset
HFG	Hands-free Gateway
HAG	Headset Audio Gateway
SLC	Service Level Connection
UniFi™	Group term for CSR's range of chips designed to meet IEEE 802.11 standards



## Document History

Revision	Date	History
1	26 SEP 11	Ready for release 18.2.0

## TradeMarks, Patents and Licences

Unless otherwise stated, words and logos marked with <sup>™</sup> or <sup>®</sup> are trademarks registered or owned by CSR plc or its affiliates. Bluetooth<sup>®</sup> and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc. and licensed to CSR. Other products, services and names used in this document may have been trademarked by their respective owners.

The publication of this information does not imply that any licence is granted under any patent or other rights owned by CSR plc.

CSR reserves the right to make technical changes to its products as part of its development programme.

While every care has been taken to ensure the accuracy of the contents of this document, CSR cannot accept responsibility for any errors.

## Life Support Policy and Use in Safety-critical Compliance

CSR's products are not authorised for use in life-support or safety-critical applications. Use in such applications is done at the sole discretion of the customer. CSR will not warrant the use of its devices in such applications.

## Performance and Conformance

Refer to [www.csrsupport.com](http://www.csrsupport.com) for compliance and conformance to standards information.