

Abbreviations The following terms are used as abbreviations in this manual.

Abbreviation	Explanation
ABS	Anti-lock brake system
AFS	Adaptive front writing system
ASSY	Assembly
AVS	Adaptation System
ECT	electronic control transmission
ECU	Electronic control unit
EPS	Electric power steering
FR	Front side
J/B	Junction block
J/C	Junction connector
LH	Left side (left hand)
OCV	Oil control valve
RH	Right hand (right hand)
RR	rear side
R/B	relay lock
SW	switch
VSC	Vehicle stability control
VSV	Vacuum switch valve