


★ HD connection

Using an HDMI Cable

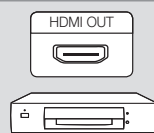


DVD / Blu-ray player
/ HD Cable Box / HD
STB (Set-Top-Box)
satellite receiver

★ HD connection

Using an HDMI to DVI Cable



Device

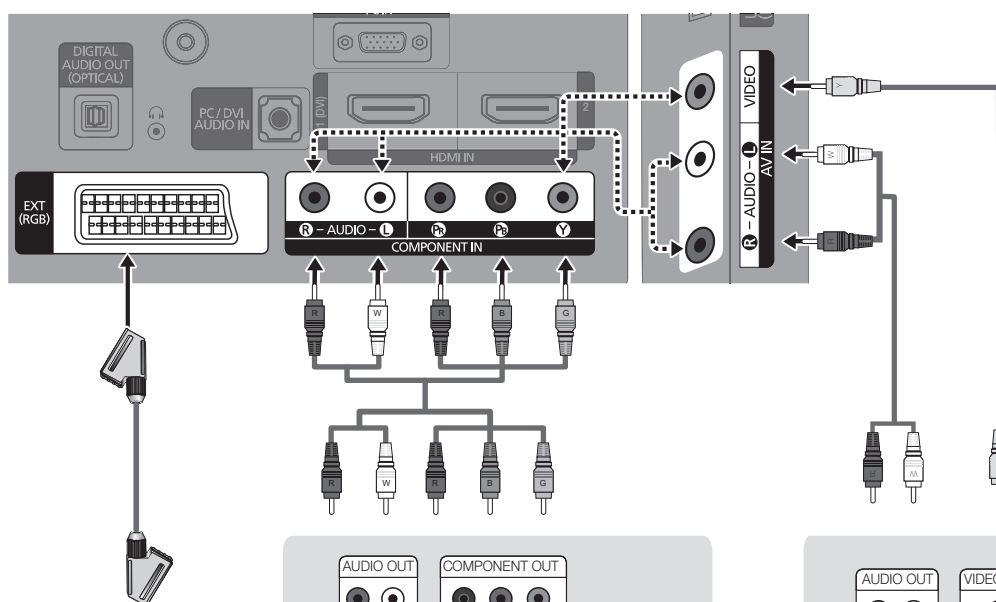

Device

 
EXT

Using a Scart Cable



DVD, Blu-ray player,
cable box, STB satellite
receiver, VCR

Using a Component Cable



Device

Using an Audio/Video Cable

 
Component connection

Plasma TV

QUICK SETUP GUIDE

The Supplied Accessories

- Remote Control & Batteries (AAA x 2)
- Owner's Instructions
- Quick Setup Guide
- Cleaning Cloth
- Power Cord



• Blanking Bracket




• Cable Tie




• Ferrite Core for Power Cord (2EA)

See separate guide for installing the stand.

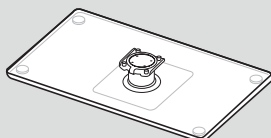

• Stand (1EA)

 

• Guide Stand (1EA)




(M4 X L12)

• Screws (8EA)

Ferrite Core for Power Cord: The ferrite cores are used to shield the cables from interference. When connecting a cable, open the ferrite core and clip it around the cable near the plug as shown in the figure.

- Distance between the ferrite core and one end of the cord put into the TV set

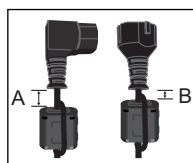


- A : below 50 mm
- B : below 20 mm




BN68-02794A-00

Installing the Stand


Preset

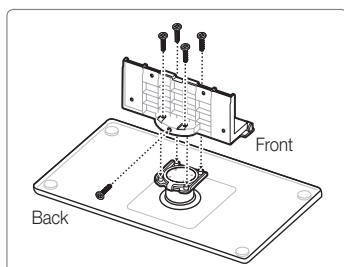

Step 1

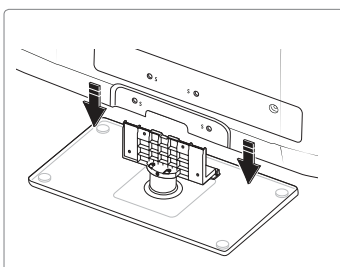

Step 2

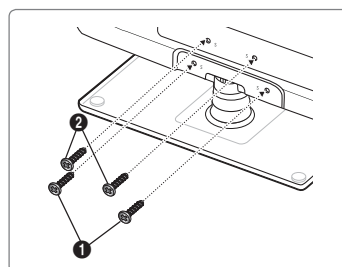

Preset: Place the Guide Stand and Cover Neck onto the stand and fasten it using the screws. Applicable to models (Depending on the model)


Step 1. Connect the Guide Stand to the Stand using five screws (M4 X L12) as shown.

- Make sure to distinguish between the front and back of the Stand and Guide Stand when assembling them.
- Make sure that at least two persons lift and move the PDP TV.
- Stand the product up and fasten the screws. If you fasten the screws with the PDP TV placed down, it may lean to one side.


Step 2. Fasten two screws (M4 X L12) at position ①, and then fasten two screws (M4 X L12) at position ②.

- Stand the product up and fasten the screws. If you fasten the screws with the PDP TV placed down, it may lean to one side.

Using the remote control buttons

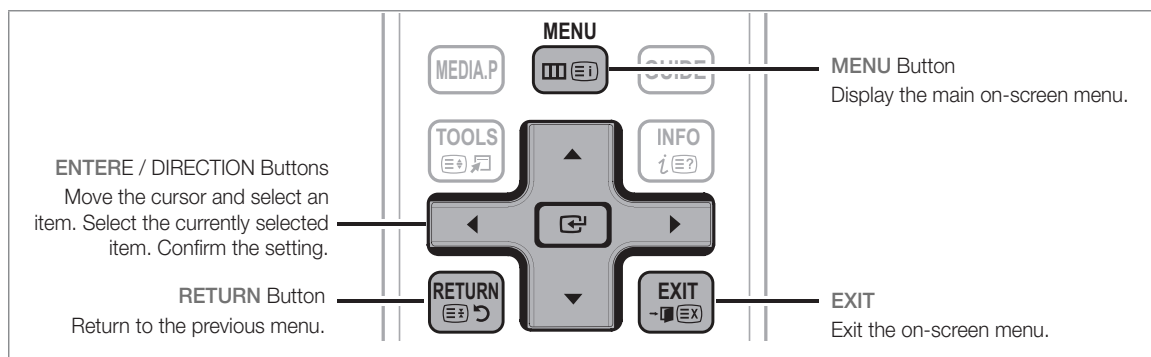

Installing Batteries in the Remote Control

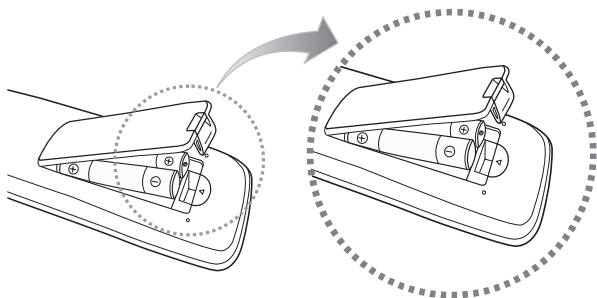


NOTE

- Use the remote control within 23 feet from the TV.
- Bright light may affect the performance of the remote control. Avoid using nearby special fluorescent light or neon signs.
- The colour and shape may vary depending on the model.

Plug & Play

When the TV is initially powered on, basic settings proceed automatically and subsequently. If you want to reset this feature, press the **MENU** button to display menu. You can set the Plug & Play by selecting 'Setup → Plug & Play'.

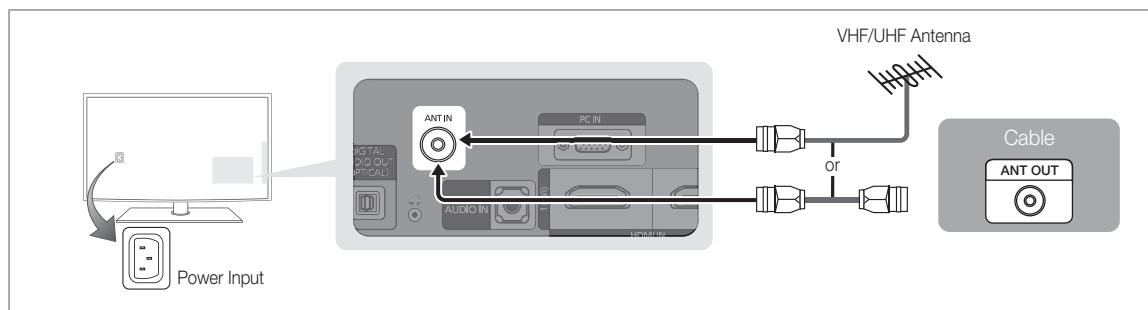

On the screen, you can set as follows.

The each step may vary depending on the Antenna source.

