

Software Loading Manager to HMI API

update_count() - Int

- The number of software updates that are available

update_count_changed(int) - Signal

- A signal emitted when the number of available updates changes

update_state() - Enum

- The current state of the updates see

update_state_changed(enum) - Signal

- Emitted when update_state() changes

approve()

- The user has approved the pending updates

retry()

- The user has indicated that they should retry the installation after an error

details()

- A list of the currently outstanding packages. Includes the name/version and whether they are ready, installing or downloading.

error_message() - string

- A user-visible error to display if update_state is 'error'

