

## Software Loading Manager to HMI API

update\_count() - Int

- The number of software updates that are available

update\_state() - Enum

- The current state of the updates see

update\_state\_changed(enum, count) - Signal

- Emitted when update\_state() or update\_count() changes

approve(list of package ids)

- The user has approved these pending updates

retry()

- The user has indicated that they should retry the installation after an error

details()

- A list of the currently outstanding packages

details\_changed(package id, status)

- An item in the details() list has changed state

error\_message() - string

- A user-visible error to display if update\_state is 'error'

