

# Fisher-Price®



- Please keep this instruction sheet for future reference, as it contains important information.
- Requires three "AA" batteries (included) for operation.
- Batteries included are for demonstration purposes only.
- Adult assembly is required for battery replacement.
- Tool required for battery replacement: Phillips screwdriver (not included).

- 此说明书包含重要信息，请保留以备日后察看。
- 本产品采用3节五号电池（包装内含）。
- 此电池仅作演示用途。
- 需由成人组装。
- 电池更换所需工具：十字螺丝刀（包装内不含）。

**fisher-price.com**  
**fisher-price.com.cn**



service.fisher-price.com

**Taiwan:** Mattel Taiwan Corporation, 9F, No.188, Nan King East Road, Sec.5, Taipei, Taiwan  
Customer Care line:

**0800-212-797**

**美泰兒股份有限公司**  
台北市南京東路五段188號9樓  
免付費諮詢專線:  
**0800-212-797**

**Hong Kong:** Mattel East Asia Ltd., Room 1106-08, South Tower, World Finance Centre, Harbour City, 17 Canton Road, Tsimshatsui, HK, China  
Customer Care line:  
**+852 - 3185 6500**

**香港九龍尖沙咀廣東道十七號**  
**海港城環球金融中心南座十一**  
**樓一一零六至八室**  
免付費諮詢專線:  
**+852 - 3185 6500**

Mattel Barbie (Shanghai) Trading Co., Ltd. Room 2201, 2207, 22/F., Ascendas Plaza, 333 Tian Yao Qiao Road, Shanghai 200030, P.R.C.


**美太芭比(上海)貿易有限公司**  
上海市天鈞橋路333號2201、  
2207室  
中国消費者免費諮詢專線:  
**800-820-6939**

**Malaysia & Singapore:** Mattel Southeast Asia Pte Ltd, Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Resort, 47410 Petaling Jaya. Customer Care line: **+603-3341 9052** (Malaysia), **+65-62350667** (Singapore)

## Battery Replacement 电池更换

**Note:** A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the back of the toy to be sure. If the plastic tab is still attached, open the fasteners on the back of the toy and pull to remove the tab. Close the fasteners and throw the plastic tab away.

**注意:** 玩具附有一张塑料标签以便店内演示之用。检查玩具背面确认此标签是否被移除。如果标签仍然附于玩具上, 则松开玩具背面的紧固件并将其拉起以移除标签。闭合紧固件, 并将标签丢弃。

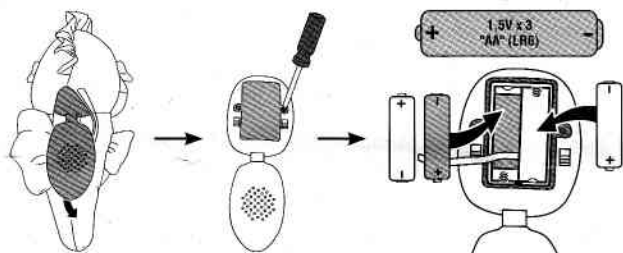

**For best performance, we recommend that you replace the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.**

- Open the fasteners on the back of the toy.
- Pull the sound box out of the toy to access the battery compartment.
- Loosen the screws in the battery compartment door. Remove the battery compartment door and the exhausted batteries.
- Pull tether strap to remove batteries. Discard the batteries.

- Replace tether strap in bottom of battery compartment.
- Insert three "AA" (LR6) **alkaline** batteries. Make sure the bottom battery is inserted **on top of** the tether strap.
- Replace the battery compartment door and tighten the screw.
- Fit the sound box back into the toy and close the fasteners.
- If the product begins to operate erratically you may need to reset the electronics. Slide the power switch off and then back on.
- When sounds or lights become faint or stop, it's time for an adult to change the batteries!

# Battery Replacement 电池更换

为获得最佳的使用效果，建议您使用3节全新的五号(LR6)碱性电池更换此玩具自带的电池。

- 松开玩具背面的紧固件。
- 将音箱从玩具中拿出，以便打开电池盒。
- 松开电池盒盖上的螺丝，并将盖子移开，取出电量耗尽的电池。
- 拉动系带拿出电池。将电池丢弃。
- 将系带放回电池盒底部。
- 放入3节五号(LR6)碱性电池。确保底部的电池位于系带的上方。
- 盖回电池盒盖并旋紧螺丝。
- 将音箱放回玩具内部，闭合紧固件。
- 如果玩具出现操作异常，您可能需要重启电源。关闭电源开关后重新打开。
- 当声音或灯光变得微弱或消失时，需由成人更换电池。

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Battery Replacement 电池更换

## 电池安全信息

在特殊情况下，电池可能会渗漏液体，该液体会导致化学烧伤或产品损坏。为避免电池液体渗漏：

- 请勿将新旧电池混用；请勿将不同类型的电池，如碱性电池，标准（碳锌）电池或充电（镍镉）电池混合使用。
- 如电池盒内的图示放入电池。
- 如长时间不使用，请将电池取出。耗尽的电池应从玩具中取出。安全弃置电池。请勿燃烧销毁本品，因为可能会导致本品内的电池漏液或爆炸。
- 切勿造成电源端短路。
- 仅使用推荐的电池或同类型的电池。
- 非充电类电池不能充电。
- 充电电池须在充电前应从玩具中取出。
- 如果使用可取出及可充电的电池，必须在成人监护下充电。

# Care 保养


- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- 用干净湿布蘸取温和的肥皂水擦拭玩具。切勿浸泡。



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.
- 为保护环境，切勿将此产品与生活垃圾一同丢弃（2002/96/EC）。回收建议和设施请咨询当地有关部门。

# Soothe Baby with Lullabies and Ocean Sounds

## 用摇篮曲和大海的声音安抚宝宝。

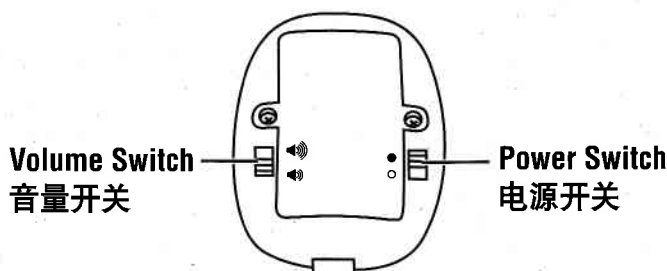

- Open the fasteners on the back of the toy to access the sound box.
- Pull the sound box out to access the switches.
- Slide the power switch ON ●.
- Adjust the volume switch to low volume 🔊 or high volume 🔊.
- Fit the sound box back inside the toy and close the fasteners.
- Squeeze the belly on the sea horse for lights and music.

**Hint:** If you cannot see the lights, open the fasteners and adjust the sound box to align the light with the sea horse tummy.

- When you are finished playing with the toy, open the fasteners and slide the power OFF ○.

- 松开玩具背面的紧固件找到音箱。
- 将音箱拉出找到开关。
- 将电源开关调到“开”●。
- 将音量开关调至低音量 🔊 或者高音量 🔊。
- 将音箱放回玩具中，闭合紧固件。
- 挤压海马的肚子以开启灯光和音乐。

**提示:** 如果您看不到灯光，则松开紧固件，调整音箱将灯光对准海马的肚子。

- 玩具使用完毕后，松开紧固件将电源调到“关”○的位置