

防水袋说明书

“Nereus”数码相机防水套是崭新的数码相机防水设备。防尘，防水，防风沙，防雨雪，适合于户外，海滩，水池，水底拍摄使用，让您的相机获得充分保护，并可尽享水中拍摄乐趣，是户外运动必备的标准装备。

特点：

- 确保 20 米以内防水
- 紫外线涂层聚碳酸酯镜片
- 透明柔软外罩支持相机各种操作
- 崭新密封封条，保证防水效果
- 通过防水测试
- 可对应大部分小型数码相机

环保（一手塑胶原料）防 UV，防花，防水，安全，坚硬，开合镜头设计，容易清理，容许相机镜头伸缩。

产地：中国

规格：

DC-WP10	尺寸：156*114* 34	重量：87g
DC-WP20	尺寸：172*101* 34	重量：84g
DC-WP100	尺寸：172*114* 23.5	重量：80g
DC-WP400	尺寸：201*126* 34	重量：94g
DC-WP1	尺寸：172*101 *15	重量：53g

材质：

压条：塑料，不锈钢

防水套：PVC，TPU

镜头：聚碳酸酯，硅胶

使用前注意购买后请根据以下步骤检查产品是否有任何损坏：

1. 打开保护套之封口
2. 放入任何纸张
3. 把封口紧闭
4. 将保护套放入水中摇晃及挤压
5. 打开封口并检查纸张有没有被沾湿
6. 如发现纸张沾湿，请停止使用，如产品属新购买，请与代理商联络并安排更换

本公司将不负责任何因使用不当时引起之损失

使用时注意：

1. 请于每次使用前作防水测试
2. 请避免任何猛烈撞击及远离利器以免产品受到损坏并影响其功能，请勿将产品长期于猛烈阳光下暴晒
3. 使用时产品内外或会出现雾气，为免影响相片质素，上水后请把镜头盖打开清除雾气

使用后注意为免水份倒流入，使用后请紧记把袋擦干，然后袋口向下取出相机。

如想作更专业或在更深水底下拍摄，请购买指定及专业之防水产品。



使用步骤：



如有需要，将适合的相机垫圈⑥放进防水套①里，卡在内壁筒里



将相机放进防水套①里



将防水压条②③固定在防水套①的封口处，注意对齐螺丝孔位



将螺母④拧紧



尽量将防水套扫平，把多余的空气挤出，然后把镜头盖⑤紧紧的旋在筒外，就可以使用了。



完成

Digital Camera Waterproof Bag User Manual

"Nereus" Digital Camera Waterproof Bag is the new generation of waterproof bag for digital camera. It has features of dustproof, waterproof, wind and sand proof, rain and snow proof, and is suitable for outdoor, beach, swimming pool and under water usage. While ensuring full protection to your camera, it makes you enjoy the fun of picture shooting under water, and is the necessary standard equipment for outdoor activities.

Features:

- Waterproof within 20 meters
- UV protected polycarbonate lens
- Transparent soft cover supporting all kinds of operation of camera
- Brand new sealing strip assuring waterproof effect
- Qualified for waterproof tests
- Suitable for most small digital cameras

Environmental (first hand plastic raw material), UV protection, anti-scratch, waterproof, safe, hard, lens open-close design, easy to clean, lens extension possible

Origin of manufacture: China

Specification:

DC-WP10	Size: 156*114* 34	Weight: 87g
DC-WP20	Size: 172*101* 34	Weight: 84g
DC-WP100	Size: 172*114* 23.5	Weight: 80g
DC-WP400	Size: 201*126* 34	Weight: 94g
DC-WP1	Size: 172*101 *15	Weight: 53g

Material:

Waterproof strip: plastic, stainless steel

Waterproof cover: PVC, TPU

Lens: polycarbonate, colloidal silica

Please follow the following procedures and check the parts for any damages before use:

1. Open the waterproof bag
2. Put any paper inside
3. Seal the opening
4. Put the waterproof bag in water; shake and press it
5. Open the bag and check if the paper is wet
6. If the paper is wet, please do not use it. If the product is newly purchased, please contact your local dealer and arrange for exchange.

Our company is not responsible for any damage from misuse.

Please note for following when using:

1. Please make waterproof test before each use.
2. Please avoid any impact and leave away from sharp objects that might damage its functions. Please do not place under direct sun light.
3. When using, if the product has fog inside or outside the cover, to avoid influence to picture shooting quality, please get out of water and clean the fog.

Please wipe the bag clean and take the camera out with the opening downwards to avoid water from getting inside the bag.

For professional underwater shooting or for deeper water, please purchase appointed professional waterproof products.



- | | |
|-------------------------------------|---|
| 1. Waterproof cover | 1 |
| 2. Waterproof strip A | 1 |
| 3. Waterproof strip B | 1 |
| 4. Screws | 3 |
| 5. Lens cover | 1 |
| 6. Camera cushion ring (thick/thin) | 2 |
| 7. Holder strip | 1 |
| 8. Lens cleansing cloth | 1 |
| 9. User Manual | 1 |

Operation Procedure:



If needed, put the appreciate camera cushion ring⑥ into waterproof cover①, and plug inside the inner tube



Put the camera into the waterproof cover①



Fix the waterproof strip②③onto the sealing position of waterproof cover①, please note to align the holes into right position



Tighten the screws④



Flat the waterproof cover and empty excess air, and tighten lens cover⑤, and it is ready for use.



Finish

防水袋の取扱書

「Nereus」デジタルカメラの防水カバーは、新しいデジタルカメラ用の防水設備である。防塵、防水、防砂塵、防風、防雨や防雪で、アウトドア、砂浜、池、水底での撮影に適合し、貴方のカメラを十分に守ってあげて、かつ水中でも撮影の楽しみを十分楽しんでいただける。これはアウトドアでの運動に必ず必要な標準装備である。

特徴:

- ・20メートル以内に防水することを確保する
- ・紫外線コーティングのポリカーボネートレンズ
- ・透明で柔軟なカバーでカメラの各種操作を支持できる
- ・新しい密封条で、防水効果を保証する
- ・防水テストに合格した
- ・ほとんどの小型デジタルカメラに対応できる。

環境保護(新しいプラスチック原料)、UV カット、かすり傷防止、防水、安全、硬い、開閉レンズの設計で整理しやすい。そしてカメラのレンズの伸縮を許す

産地: 中国

規格:

DC-WP10	寸法: 156*114* 34	重量: 87g
DC-WP20	寸法: 172*101* 34	重量: 84g
DC-WP100	寸法: 172*114* 23.5	重量: 80g
DC-WP400	寸法: 201*126* 34	重量: 94g
DC-WP1	寸法: 172*101 *15	重量: 53g

材質:

密封条: プラスチック、ステンレス
防水カバー: PVC, TPU
レンズ: ポリカーボネート、シリカゲル

購買後、以下の手順により製品にいかなる損壊があるかどうかをチェックしてから使用してください。

1. 保護カバーをあげる
2. いかなる紙を入れる
3. 密封する
4. 保護カバーを水に入れて揺れたり、押ししたりする
5. 保護カバーをあけて紙がぬれたかどうかをチェックする
6. 紙がぬれたと発見したら、使用を停止してください。もしも新しく購入された製品だったら、取次商と連絡して、交換するように手配する。

本公司はいかなる使用不当により招いた損失に対して責任をとらない。

使用注意:

1. 使用するたびに、まず防水テストをしてください。
2. 製品が損壊されなく、機能に差し支えないために、いかなる猛烈な衝撃を回避し、鋭利な刃物から離れ、長い間に猛烈な日光に当たらないでください。
3. 使用するとき、製品の内外は霧が出るかもしれない。写真の品質に影響をあたらないために、水から出た後、レンズ蓋を開けて霧を拭いてください。

使用後、水分の逆戻りを回避するために、防水袋を拭いてから、下向いてカメラを取り出してください。

もっとプロで或いはもっと深い水底で撮影したい場合、指定する及びプロの防水製品を購入してください。



使用手順:



必要なとき、適合のカメラのワッシャー⑤を防水カバー①に入れて、筒の内壁に固定する



カメラを防水カバー①に入れる



防水密封条②を防水カバー①③の密封する所に固定する。ネジの位置を正確に合わせるように注意する












をしっかりねじ ④









できるだけ防水カバーを平らにして、必要以上の空気を排出する。それから、レンズ蓋⑤をしっかり筒の外にねじれば、使用できる。



終わりの

	 DC-WP10	 DC-WP20	 DC-WP100	 DC-WP400	 DC-WP1	 DC-WP500
	(IXUS, IXY) 810S/950IS 600/500/450 430/400/330 300a/300 (Powershot) \$60/70/80/300/330 400/ 410 A70/75/80/85/95 100/200/300/310 400/410/420/430 450/460/470/850IS	(IXUS, IXY) 40/50/55/60/65/70/75 /80IS/85IS/90IS/400/430 /500/700/750/800IS/ 850IS/860IS/950IS/960IS /970IS/1000/900T iZoom/iE/II/II sV2/V3 (Powershot SD) 200/300/400/500/ 550/600/630/650 700/800/900/950IS/ 1000/2000IS	(IXUS, IXY) 90/80/75/70/65/60/ 55/50/40/30/10 i/iis/iis/i/zoom/izoom/ V3/V2/L/L2/300/330 30a/200a/D320/S100 S200/850IS/860IS/900IS/ 910IS/IXY Wireless (Powershot) \$D30/40/430/450 600/630/100/110/750/ 800IS/870IS/1000 \$230/200/110/100/300 A400/450/460/550	(Powershot SD) A10/20/30/40 50/60/70/75 80/85/95 510/520/530 540/550/560/ 570IS/580/590IS 610/620/630/640 700/710IS 720IS \$45/5060/70/80		(Powershot) G9 , G7 , G6, G5, A710 IS , A640, A630, A620, A610, A650 IS, A720 IS, A700
Nikon	Coolpix 2200/3200/3700 4100/4200/4600 5200/5600/5900 7600/7900 P1/2/3/4/60 L2/3/4/6/16/18	Coolpix 5200/210/500/510/ 520/550/600/700 L2/3/4/6/10/11/12/ 14/1516/18 \$100/200/500 L10/11/12	Coolpix 3700/4100/4600 \$100/200/500 L10/11/12	Coolpix 2000/2100/2200/ 3100/3200/4100/ 4300/4800/5000/ 5100/5400/8000/885 P1/2 /50/5000/5100 L1/5	Coolpix 2500/3500 \$1/2/3/5/6/7/7c/ 8/9/50/50c/51/ 51c/52/52c	
	(Kenox, Digimax) V3/4/5/6/700/800 A4/5/6/7/40/50/400 D4/5/6/7/103 V5/6/10/20/50 Cyver410,X80 VLUU/NV10/NV8/ 20/15 \$85/800/1000	(Kenox, Digimax) X70 L6/70/73/74w/77/ 700 NV10/11/20/24HD \$630/700/1000/ 1030/1050	(Kenox, Digimax) U-CA5/4/3 X1/15wide/60/80 Q1/2/25wide L50/L55W/A55W/60/ 73/L74wide/L80/700 A50W \$500/600/630/700/ 730/830/850/1030 VLUU L730/830	(Kenox, Digimax) 360/370/420/430 530/V50/V70 D60/370/430/470 510/530/610/3000 3100/4000 a5/7/UX4 Cyver300/400 X85	(Kenox, Digimax) #1/#1mp3 #11PMP IS/ISOmp3 I6PMP/7 K50/D512S VLUU NV3/L83T/ 17/85/16/18/170	
OLYMPUS	Camedia C-500Z/480Z/370 60Z/315/470Z/ X-450/350/550 1/2/3 FE120/170/310 (m, Stylus) 500/D-535/545/800 595Z	Camedia C-170/180/470Z/600/ 500 FE-5500/150/160/180/ 190/200/230/300/320/ 330/340/350 (m, Stylus) 710/740/750/760/300/ 400/410/1000/780/600/ 700/810/1000/1200 D-630Z	Camedia FE-130/140/170/180 200/210/220/230/240/ 250/270/280/290 C-315Z/310Z (m, Stylus) 10/15/20/25/30/40 40digital/300/400/500 /600/700/780/800/ 820/830 Digital S/Min/Verve S	Camedia C1Z2/40/70Z/350Z 460/7000Z/5000Z/ 5500SZ X-200/250 FE100/110 (m, Stylus) 500/D-535/545 595Z SP310/320/350	Camedia AZ1 FE 5500 LR 300 SP 700 (m, Stylus) 700sw/1720sw 725sw/730sw 850sw/1030sw	
FUJIFILM	Finepix A345/350/600/850 F10Z/11/20/30/47 420/650/401/2410Z/ 420Z/31td/40td/45td/ 50td E550/900Z	Finepix F440Z/450Z/455Z/10Z/ 100td/112/20Z/30Z/ 40td/460/47td/470/ 480/50td/700/31td A203/303/345Z/350Z/ 400/500 J10/50 V10	Finepix A340/330/310 303/203/700/600/ 500/510/610/800 F460/470/480	Finepix 2600Z/2650 A600/610/820/ 900/920 F601Z/610Z E500/510/900 M 603	Finepix 300/400/50i Z1Z/3/5td/10td/ 100td/20td/200td A101/200/201 F 40Z	
PENTAX	(Optio) 30/60/330/430/ 330RS/430RS/550/ 555/ E10/20/30/X \$40/45/50/55/60	(Optio) 50 55R/52/6/7/5/4/10/12/ 4/5/5V/V30/40/45/50/ 55/60 T10/20/30/60 A10/20/30/36 E40 L36	(Optio) M10/20/30/40 E10/20/40	(Optio) \$30/33L/33LF 330GS/555/ 230/750Z	(Optio) 33WR W 10/20/P/PI	
	Photosmart M307/407/437/ 527/537 R507/707/717			Photosmart M517/636/735 812/935 R817		

						
	DC-WP10	DC-WP20	DC-WP100	DC-WP400	DC-WP1	DC-WP500
SONY	(Cybershot) DSC-P100/120/200/ 72/92 W100/1/5/7 \$800	(Cybershot) DSC-P100/120/200/ 10/150/2/5/73/8/93 W100/130/150/170/ 200/300/300/35/50/55/ 70/80/90 N1/2 F707 \$650/700/750	(Cybershot) DSC-S40/S600/L1 W30/35/40/50/55 70/80/90/100/200 \$500/650/700	(Cybershot) DSC-P12/5/7/9/ 71/72/92 \$60/90/75/85 W1/5/7/12/15 V1	(Cybershot) DSC-T1/3/5/7/9/10/ 11/20/30/33/50/70/ 100/200/300/2 F717/828/77 U10/20/30/40 P32/43/51 540/600	(Cybershot) DSC-S800,
Kodak	(Easyshare) ONE/753/633 LSE/C663/C613/ 663 JOC L-108	(Easyshare) V530/550/803/1003	(Easyshare) C763/743/653/643/ 533 Le743 M853/873	(Easyshare) C300/310/330/340/ 360/653/663/813/ X4300/ X4200 DX321S/3500/3600/3700/ 3900/4330/6340/6440/ 7440/7630 V100R/1273/550Z/570Z/ 603/610/750Z/760 L420/443/632/743 Z730/760		(Easyshare) Z1085 IS, Z1285
SANYO	(Xacti VP C) Mz31 S1/3/4	(Xacti VP C) AZ3/MZ3/S6	(Xacti VP C) \$60/7/6/4/3/1 E7		(Xacti VP C) A5/E6 J1/2/4	
KONICA MINOLTA	(REVIO) KD-200Z/300Z (Dimage) E323	(REVIO) KD-300Z/400Z (Dimage) E40/50/500 F100/200 G400/500/530/600		(Dimage) F100/200/300 \$304/404/414 E223 (REVIO)KD-3300	(Dimage) X/X1/X20/X21/X31/ X50/X60/Xg/X/Xt	
KYOCERA	Fine cam S3 Yashica EZ Digital 5030		Yashica EZ Digital 5031	Fine cam L3/30/3v/4/4v \$4/3R/5R/3L		
RICOH	Caprio RZ1/R1/RR660/RR211 RR630/GR-D G3/3M/3S/4/4W	Caprio GR/R11/X/X100/X8 R1/1v/2/3/4/5/6/7/8/ 30/40/50/RR30/RR530		Caprio GX8/GX/RX G4 wide/RR30 RR230/G600		Caprio R8, R7, R6, R5, R4, R3, R40
CASIO	QVR61/51/41/40 4/3 EXZ10/110/120	\$100/500/600/600D 770/880/10 EXZ75/70/60/57/55/20/ 50/40/30/54/3500/200/ 600/700/750/1000/9/ 1050/1200SR/10/100/ 1080/110/120/1200/	EXZ60/70/75/77	EX-P700/600 XP 700 QV 5700	Exslim Ex M20/1/2 \$20/3/2/1 EX-V7/8	
Panasonic	DMC LC33/43 LS1/80 LZ10/6/7/8	DMC Fx100/01/07/1/2/30/ 33/36/5/50/520/55/ 7/8/9 F1/77/S20/S3/S5 LS 2	DMC 07/10/12/30/33/50/55 F1/7 LS2/1	DMC LZ1/2 LC80/70/50/20/5	D-snap As10	DMC LX1, LX2, LX3
ETC.	Minox Dc8111 Rollei Prego DP8300/6300 5300/DT3200 Mach power DX-550 Polaroid PDC3370 Praktica DC24.3 BenQ DCC40/C50 Toshiba Alegretto 3310	Rollei Prego Dp4200 BenQ DC E53/520/510 Hitachi imaga HDC-531 Leica C-Lux1	To shiba Alegretto 3330 Hyundai DC-4300 Epson L-400/300 Leica C-Lux1/2	Praktica DC24.4 Toshiba POR5300 Premire Dc2302 3306/5330 Kenko Z510 BenQ DC DC5330/S30 Kocom KDC-330 HyundaiHD-530 Hitachi HDC-331	Che-ez Foxz2 Che-ez moni-me	Leica D-LUX 3, D-LUX 2 Sigma DP-1

如有任何印刷错误漏或翻译上的误差，望广大用户谅解。产品设计与规格如有更改，恕不另行通知。

www.nereus.com.hk