


## 5-BALLS-IN-LINE

IS ENERGIZED BY ROCKET SPECIAL RELAY, THRU SWITCH ON OUTHOLE RELAY OR SCORE MOTOR CAM SW. 3B.

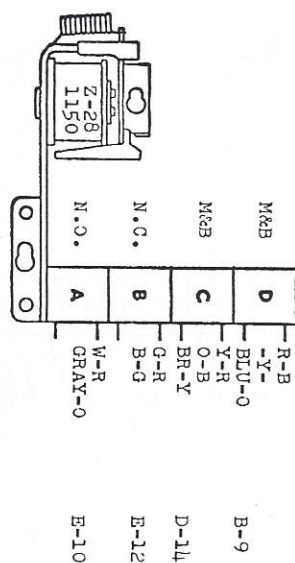

OPENS IN CIRCUIT TO LEFT & RIGHT CAPTIVE BALL LANE LITERS, AND CLOSSES TO #1 LOOPING BALLS 1,000 PT. LITE.


OPENS IN CIRCUIT TO 100 POINT RELAY AND CLOSSES TO 1,000 POINT RELAY.

IN CIRCUIT TO ROCKET SPECIAL RELAY, THRU SWITCHES IN LEFT AND RIGHT CAPTIVE BALL LANES.

IN HOLD CIRCUIT TO THIS RELAY.

## 25¢

IS ENERGIZED BY 25¢ COIN SWITCH.

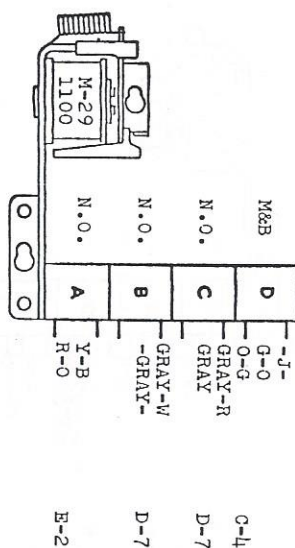

OPENS IN CIRCUIT TO KNOCKER COIL AND CLOSSES TO RUN SCORE MOTOR.


PULSES CREDIT S.U. COIL, THRU "25¢ ADJUSTMENT JACK".

ENERGIZES CREDIT S.U. COIL, THRU IMPULSE CAM SWITCH C.

IN HOLD CIRCUIT TO THIS RELAY.

## 10¢

IS ENERGIZED BY 10¢ COIN SWITCH (BLU-BR AND Y-R); IF 10¢ ADJUSTMENT JACK IS IN "2 PLAYS" OR "3 PLAYS" POSITION.

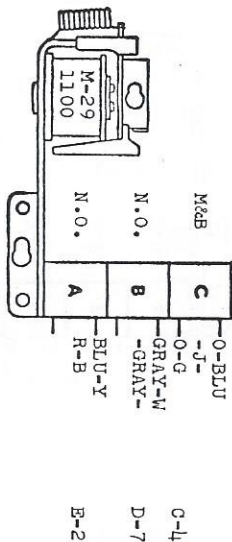


OPENS IN CIRCUIT TO KNOCKER COIL AND CLOSSES TO RUN SCORE MOTOR.

ENERGIZES CREDIT S.U. COIL, THRU IMPULSE CAM SWITCH C.

IN HOLD CIRCUIT TO THIS RELAY.

## SKYLAB

IS ENERGIZED BY SERIES CIRCUIT THRU SWITCHES ON S-K-Y-L-A AND B RELAYS.

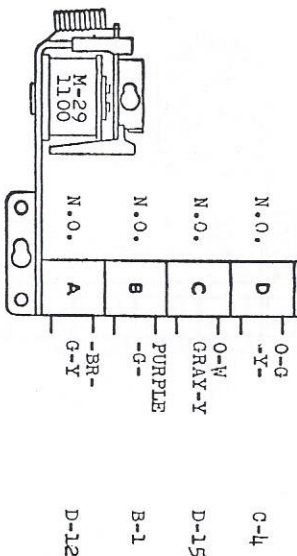

RUNS SCORE MOTOR.

IN CIRCUIT TO PULSE ADVANCE UNIT S.U. COIL.

ENERGIZES SKYLAB RELAY BANK RESET COIL, THRU CAM SWITCH 2B.

HOLD CIRCUIT TO THIS RELAY, THRU CAM SWITCH 5C.